



1) Unpack the Cryo-Gun and connect the provided CO2 line/hose. Attach the end with the smaller fitting to the Cryo-Gun. Hand tighten first and then tighten with an adjustable wrench.



2) After positioning the CO2 tank in a nearby, stable location, attach the hose end with the larger fitting to the CO2 tank, making sure the plastic O-ring seal is in place inside the hose fitting. Hand tighten and then tighten with wrench.

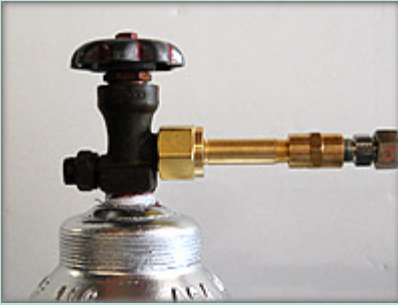

3) After you make sure all the fittings on the CO2 tank are tight, open the valve on the tank. Check for any leakage.

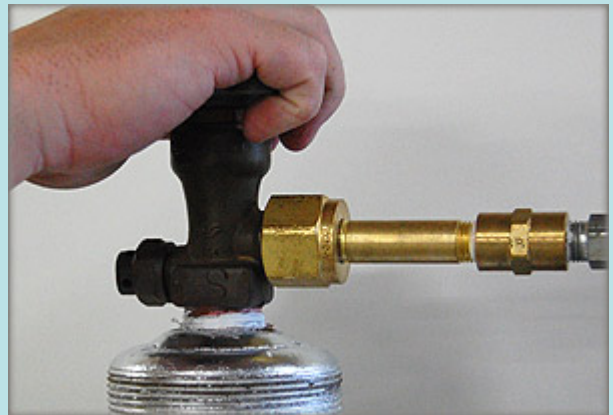

4) Depress the trigger on the Cryo-Gun whenever you want to release CO2. The Cryo-Gun will recoil slightly each time the trigger is pulled.

NOTE: After use, close the valve on the CO2 tank, and bleed any remaining gas in the line through the Cryo and then you can safely detach the hose from the CO2 tank.