

Low or under run heels in the hind feet

Stephen E. O'Grady DVM, MRCVS

INTRODUCTION

Low or under run heels affecting the health of the foot or as a cause of lameness are often overlooked in the hind feet¹. Very little information has been published on the effects of low or damaged heels in the hind limbs. Horses with structural damage to the heels of the hind foot will suffer the same consequences associated with the hoof capsule as noted in the front feet but the hind feet do not appear to be affected with the diseases of the internal structures of the foot as noted in the forefeet and appear to have a better chance for structural improvement. This difference may be due to the

overall anatomy of the hind limbs and the propulsive function of the hind feet versus the weight bearing function of the forefeet. Damage to the structures of the hind feet may be well advanced before lameness is noted. Under run or collapsed heels in the hind feet may lead to a subtle bilateral lameness which is often attributed to hock, stifle or back pain. Often, part of the therapy for hind limb lameness is to raise the heels of the hind feet regardless of the conformation of the hind foot. Long egg bar shoes or egg bar shoes with wedge pads are generally used for this purpose, however, there is absolutely no

documentation that confirms heel elevation exerts any significant influence on any part of the hind limb anatomy above the distal interphalangeal (DIP) joint². Furthermore, heel elevation applied to the hind feet with existing low heels or under run heels will create excessive pressure and damage the heel structures further, leading to an additional lameness problem.

CLINICAL EXAMINATION OF THE FOOT

Abnormal conformation of the hind feet is easy to recognize. When looking at the limb from

Continued on Page 2

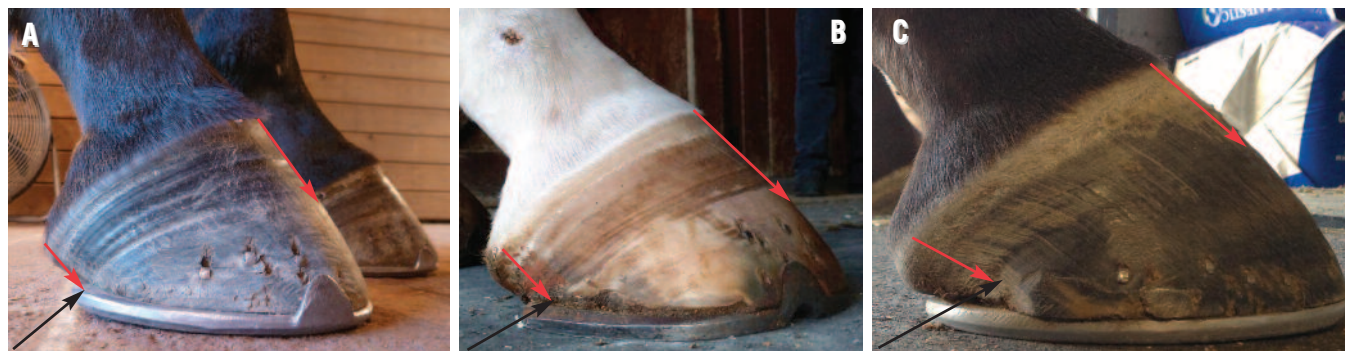


Figure 1. Hind feet with a low heel – A is the early stage, B is more advanced and C is severe. Note the red arrows showing the disparity in the growth rings and the 'bull nose' forming. The black arrow denotes the end of the heel.

Continued from Cover

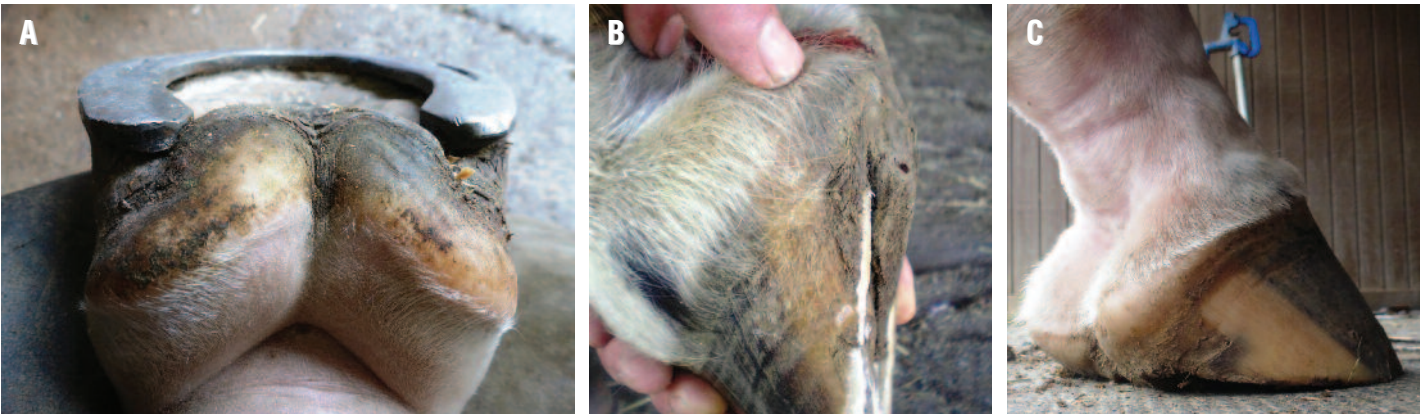


Figure 2. Figure 2A shows the position of the frog prolapsed between the branches of the shoe. Note the frog positioned below the hoof wall when the shoe is removed (Fig 2B) and the horse standing on the frog when the foot is on the ground (Fig 2C).

the side, the digit will show a broken back hoof-pastern axis. The slope of the coronary band from the toe to the heel will have an acute angle at the heel and the bulbs of the heels will have a ‘knob’ shaped appearance which can be seen lying against the shoe. There will be a disparity in the growth rings below the coronet from the toe to the heel and the dorsal hoof wall will assume a “bull nosed” appearance (Figure 1). Looking at the foot from behind, the frog is often situated well below the hoof wall and the frog can be seen to prolapse down between the two branches of the shoe (Figure 2). The shape of the



Figure 3. Note the ‘trough’ present between the apex of the frog and the inner margin of the shoe.

frog is generally large from the constant stimulation with the ground. Upon removing the shoe, the end of the heel of the hoof wall is located well forward from the base of the frog and the horn tubules will be parallel with the ground. The hoof wall at the heel will be thin, there will be no angle of the sole, and the bars may be absent. When the foot is placed on the ground, total weight bearing will be placed on the frog and many horses are reluctant to stand on the frog when the opposing limb is lifted off the ground. Viewing the toe area on the ground surface of the foot, there will be a large “trough” noted between the apex of the frog and the inner branch of the shoe instead of a smooth transition of the sole from the frog to the sole wall junction (Figure 3). Hoof testers placed on either side of the heel at the angle of the sole will often elicit a painful response and the structures will deform.

RADIOGRAPHS

A lateral radiograph of the hind foot will show a broken back hoof pastern axis with the middle phalanx (P2) being pushed plantar

and distally relative to the distal phalanx (P3) during weight bearing (Figure 4). This places excessive stresses on the plantar section of the joint capsule. The solar margin

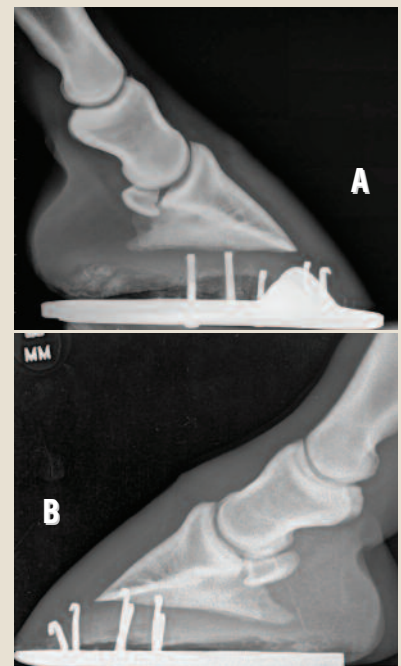


Figure 4. Figure 4A is moderate low heel conformation while figure 4B is severe. Note the position of P2 relative to P3 on both radiographs. This places the load on the palmar section of the foot. Also note the ‘knob’ appearance at the heel bulb.

(plantar angle) of the distal phalanx is lower than the dorsal margin of the distal phalanx. The sole depth below the dorsal margin of the distal phalanx is markedly increased relative to the sole depth at the heel and the perimeter of the distal phalanx can be seen migrating toward the dorsal hoof wall. This is what causes the “bull nose” appearance of the dorsal hoof wall. The soft tissue structures in the plantar section are noted to be lying against the shoe.

FARRIERY

Damage to the heels of the hind feet is easier to improve than in the forefeet, possibly due to the anatomy and the difference of the load encountered on the hind limbs. The severity or the distortion of the hind feet will obviously be proportional to the amount of time the condition has been present and thus harder to resolve. The first part of the farriery is to address the frog being located below the hoof wall. If severe, the horse should be taken out of work and allowed to go without hind shoes briefly (as little as 5-7 days may be all that is necessary). The shoes are removed and the hoof wall is trimmed from quarter to quarter according to the sole depth (Figure 5). The horse is then kept on a firm surface, thus placing pressure on the frog which quickly assumes the same plane as the heels on either side.

If the horse needs to continue in work and wear shoes, the approach can be modified. The hind shoes are removed a day or two before the horse is due to be shod and the foot is trimmed as described above. A degree pad is cut out to fit the foot and secured to the foot with brown gauze and elastic tape. The horse is placed in a stall on a firm surface for 24-48 hours.

When the wedge pad is removed, the frog and the hoof wall will be on the same plane, forming a flat even surface which includes the frog and both heels. The horse is then shod paying strict attention to



Figure 5. Excess hoof wall is removed from toe quarter to toe quarter. This will decrease sole depth at the toe and improve the angle of the solar border of the distal phalanx with the ground.



Figure 6. Ground surface and side view of a hind foot shod with a Kerckhaert SX-8 shoe. Red lines show the placement of the shoe and the dimensions of the foot being as wide as it is long. Note the smooth transition of the sole from the apex of the frog dorsally. Also note the breakover created in the shoe. Side view shows the placement of the shoe and the shoe extending marginally beyond the heels of the hoof capsule (Courtesy of Jeff Ridley, CJF).




STEEL TRIUMPH SERIES
The Premier Shoe for a
Variety of Disciplines »

Additional
thickness in
sizes 0 - 3



Steel Triumph Clipped
and Unclipped

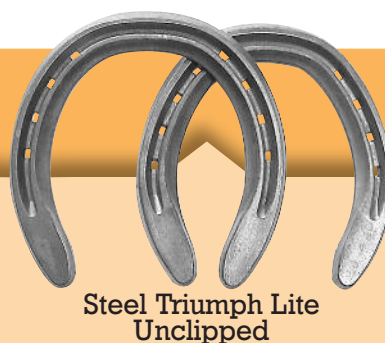

Steel Triumph Lite
Unclipped

the trim. Any additional horn at the heels can be removed so the heels of the hoof wall are solid and approach the base of the frog, being careful to keep the frog and both heels in the same plane. When the hoof wall and the frog are on the same plane, the load is shared across the plantar section of the foot. A shoe can now be fitted and applied. We fit shoes to the hind feet the same as the front where a line is drawn across the widest part of the foot and the shoe is fitted so the line is placed in the middle of the shoe³. In the hind feet, the branches of the shoe may extend marginally beyond the end of the heels (Figure 6). Breakover should be created in the hind shoe either by forging or using a hand grinder beginning at the inner margin of the shoe and tapering toward the periphery of the shoe. Placing breakover in the shoe should be no different than the front feet as the biomechanics remain the same. A recent paper in the literature showed a smoother shift in the center of pressure and a more fluent hoof enrollment using a rolled toe shoe on the hind feet⁴. In order to keep the frog and hoof wall on the same plane or if mild heel elevation is necessary, a metal or aluminum heel plate or a leather wedge can be placed under the shoe at the heels as long as the shoe is fitted in the manner described above. This will concentrate the load across the frog and heels rather than behind the heels which is the case with a long shoe or trailers. This is usually a temporary measure and can be discontinued once the heels have stabilized.

CONCLUSIONS

Damage to the heels of the hind feet is much easier to resolve or improve than in the fore feet. This could be due to the anatomy of the hind limb along with the shape and function of the hind feet. Once the frog has been repositioned and the heel structures have grown, attention to the foot prep is necessary to keep the frog and heels of the hoof wall in the same plane. The trim, along with the size and placement of the shoe, are equally important in maintaining the health of the heels of the hind feet. ■

References

1. O'Grady, S.E., Poupard, D.E. Proper Physiologic Horseshoeing. *Vet Clin North Am Equine Pract.* 2003; 19:2:333-344.
2. Bushe T, Turner TA, Poulos PW, Harwell NM: The effect of hoof angle on coffin, pastern, and fetlock joint angle. in *Proceedings of 33rd Annual Convention of Am Assoc of Equine Practnr*, 1987: 689-699.
3. O'Grady, S.E. Guidelines for Trimming the Equine Foot: A Review. *Proc 55th Annu Conv Am Assoc Equine Practnr*, 2009: 218-225.
4. Spaak B, et al. Toe modifications in hind feet shoes optimize hoof-enrollment in sound Warmblood horses at trot. *EVJ* 2013;45:485-489.

Dr. Steve O'Grady is a veterinarian and a farrier. He operates Northern Virginia Equine which is a referral practice devoted to therapeutic farriery located in Marshall, VA.

Disclaimer: Dr. O'Grady has no financial interest in Farrier Products Distribution (FPD) but routinely uses their products in his veterinary practice.

GLOSSARY OF FARRIER TERMS USED IN THIS ARTICLE

Anatomical term

Phalanx

Common name

Bone

Description

Any of the principal bones of the digit

Anatomical term

Distal Phalanx

Common name

Coffin Bone, P3, Pedal bone

Description

Bone enclosed within hoof capsule

Anatomical term

Distal Interphalangeal Joint (DIP)

Common name

Coffin Joint

Description

The joint between the middle (DIP) and the distal (P3) phalanx which includes the navicular bone

Anatomical term

Plantar

Common name

Direction

Description

The caudal facing aspect of the hind limb from the tarsus (hock) distally (toward the ground).

Anatomical term

Distally

Common name

Direction

Description

Distant or downward from the long axis of the body.

Thankful

By Michelle Nicolaides

Last year we took what may be our last "Family Vacation" since our daughter will be going to college and working. Also my 98 year old Grandmother who travels with us and is an inspiration. She defies time every day for the rest of her life and when you ask Grandma what the secret is to staying young she will tell you it is not a secret but Happiness. As I was climbing the stairs to the apartment where we would be staying, there hung a sign at the top. It read; "There is always, always, always something to be thankful for." I thought about that for quite a while and decided that it was exactly right. I'm thankful every day for everything in my life, good and bad as I have always learned and grown stronger from both.

Every year at Thanksgiving my family sits around the dinner table and each of us tells one thing that we are thankful for. It is a really interesting experience to see everyone think about it. I'm not sure that most people think often enough about what there is to be thankful for, I know I don't. Yesterday I sat and made a list of all the things I am thankful for. It was an enlightening experience. Everyone should take a few minutes and make their own personal list no matter the time of year. I believe that in difficult times, digging in and finding out that we have so much to be thankful for can help us gain strength to continue forward, opening our minds to newer and better things to come, and the all important change. The power of thought is really incredible.

Here are a few of the things on my personal "Thankful" list:

Immediate Family - For support, love, understanding, and someone to stand by me no matter what

Extended Family - (Aunts, Uncles, Cousins, etc.) The opportunity to get to know and interact with people from many different walks of life, personalities, characters, and styles that I would not normally cross paths with in my circle of life.

Being American - There really isn't anywhere else better in the world

Animals - Good for your soul, mind, attitude, and experiencing unconditional love.

Dirt - Life comes from it in so many ways.

Challenges - So much can be learned and gained from these, good or bad. Strength and Character is built with these.

Opportunities - Work, Play, Love, Business, Life. There are so many if I keep my senses open to recognize these, take the good and leave the bad, and work hard to make them successful.

I had twenty two things on my list of things to be thankful for in about 10 minutes. Time well spent. I think I could have easily written twenty two

more. I hope you will take some time and make your own list.

I am extremely thankful for all of the customers, vendors, friends, acquaintances and tradesmen that I have crossed paths with since opening Empire Farrier Supply in 1999. It is an awesome opportunity to build relationships, be helped and be helpful to so many people. So, "Thank You" for being part of our family. I look forward to providing you with excellent service, kindness, friendship, and your supplies for many years to come.

I wish you and yours a great holiday season and a successful New Year.



EMPIRE FARRIER SUPPLY

SERVICE YOU CAN COUNT ON

TEMECULA, CA

42065 Zevo Dr. #15,
Temecula, CA 92590
877-EFS-3367

SALINAS, CA

15881 Toro Hills Ave,
Salinas, CA 93908
831-455-2500

www.empirefarriersupply.com
info@empirefarriersupply.com

**MANURE, MUD AND DEBRIS...
NOT UNDER THIS PAD!**

Equi-Pak|Soft completely seals,
supports and protects.

Vettec
HOOF CARE

United States • 5500 East Hennessy Road • Denver, California 80231 • USA • 1-800-461-8639 Europe • Zandvoort 14 • NL-3540 ED Utrecht • The Netherlands • +31(0)30 241 1825 www.vettec.com

THE NATURAL ANGLE is published to provide you with new and useful information about the industry. It is published through a cooperative effort of Vector and Liberty Horseshoe Nails, Bloom Forge, FPD, Kerckhaert Shoes, Vettec, Bellota, Mercury and your supplier.

Articles in this publication are the property of *The Natural Angle* and cannot be reprinted without express permission. For information concerning reprints, please contact Dan Burke, FPD, P.O. Box 1328, Shelbyville, KY 40066 or Email: fpd@farrierproducts.com.

If you have questions, comments or ideas concerning the articles published in the *Natural Angle*, please contact your distributor. We welcome your input. *The Natural Angle* is designed and edited by Graphic Response. ■

INTRODUCING

FPD's Field Guide for Farriers

FPD's Field Guide for Farriers gives you a useful on-the-go guide to the best horseshoes, nails and tools for various disciplines with tips and videos on how best to use them.



scan code with your smart phone

www.farrierproducts.com/fieldguide




View FPD's Field Guide on your desktop, laptop or mobile device!

New Online Video Clips

Visit farrierproducts.com/farriery/video.html to watch new videos including, "Installation of Expander Wheels," "Grinding Attachments," and "Replacement of the Hoof Buffer Bladder."

Webinar a Success

On October 15, 2013, FPD hosted its first public webinar, "Trimming and Evaluation of the Equine Hoof," With Michael Wildenstein, CJF, FWCF, (Hons). Mike presented a step-by-step explanation of the concepts he thinks are critical to making good choices for the trimming process. These steps include establishing sole depth, heel height, and a number of important ideas regarding the evaluation of the limb and hoof before beginning the trim process. **If you missed this program, you can view the recording at farrierproducts.com/webinars.**

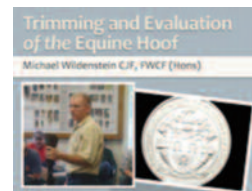

Bold Cut



BELLOTA RAPTOR

The Bellota Raptor Rasp is 1/2-inch wider than the other Bellota rasps, providing a greater cutting surface. It features a maximum cut on the rasp side and a coarse cut on the file side.



FIRST CLASS
U.S. POSTAGE
PAID
HAGERSTOWN, MD 21740
PERMIT NO. 184

Empire Farrier Supply
42065 Zevo Dr. #15
Temecula, CA 92590
Return Service Requested