



## **Kollectaball Mini Assembly Instructions**

Thank-you for purchasing a Kollectaball Mini Ball Collector. The Mini is the fastest portable ball collector and easy and fun to use. It can pick up to 40 balls in seconds and can easily be emptied into a ball cart or machine.


The Mini comes unassembled to allow for more cost-effective and safer shipping. Assembly will require roughly 40 minutes for a first-time assembler.

IF YOU REQUIRE ASSEMBLY ASSISTANCE, WE ARE HERE TO HELP. CALL TOLL FREE **1-888-985-1009** OR EMAIL **info@rcssports.com**




Before assembly, the following tools are required:

1. Protective Eye wear
2. Flat Head Screwdriver
3. Pliers



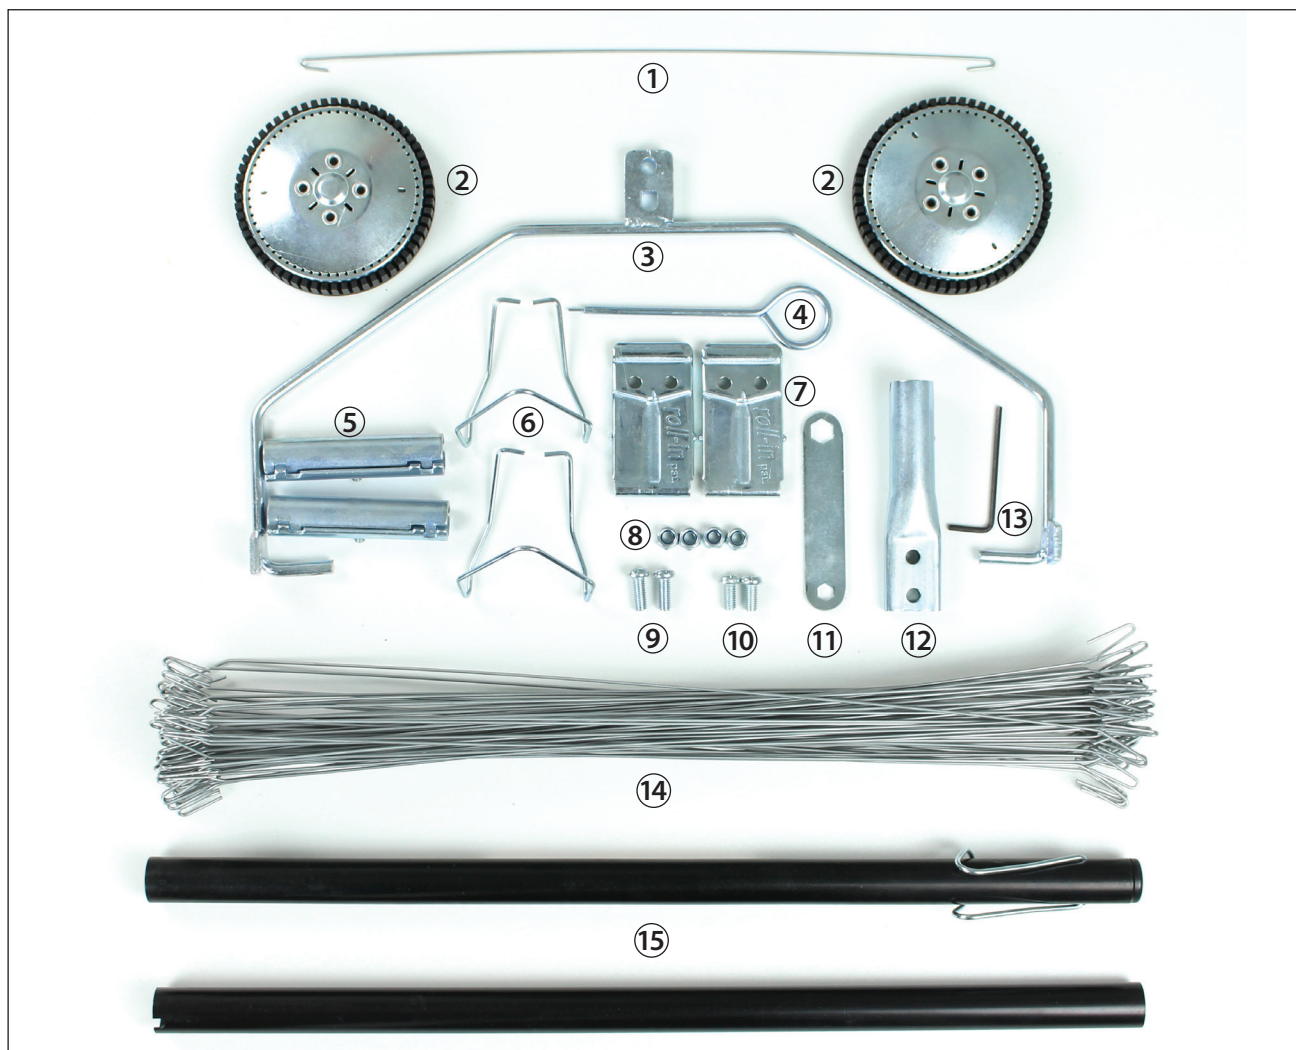


- |                                  |                          |                     |                      |
|----------------------------------|--------------------------|---------------------|----------------------|
| 1. Tension Wire                  | 5. Coupler x 2           | 9. Long Screw x 2   | 13. Allen Key        |
| 2. Wire Mounting Disk (R090) x 2 | 6. Wire Opener x 2       | 10. Short Screw x 2 | 14. Wire (R101) x 62 |
| 3. Cage Holder (R182)            | 7. Wire Opener Plate x 2 | 11. Wrench          | 15. Handle x 2       |
| 4. Wire Removal Tool (R062)      | 8. Lock Nut (R137) x 4   | 12. Connector       |                      |

## STEP 1: Assembling the Cage

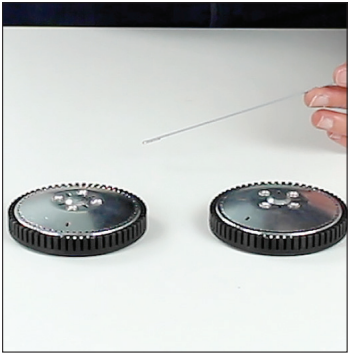

Take the centre tensioning bar and push one end into one of the four slits in the centre of the wire mounting disc.  
Repeat on the other wire mounting disc.

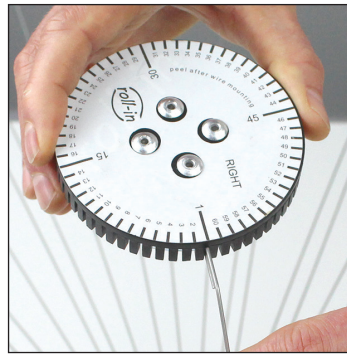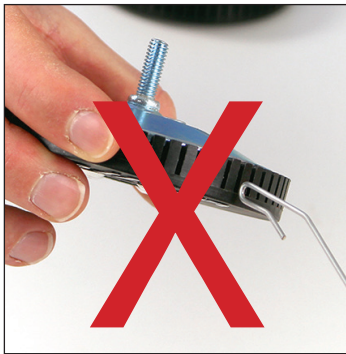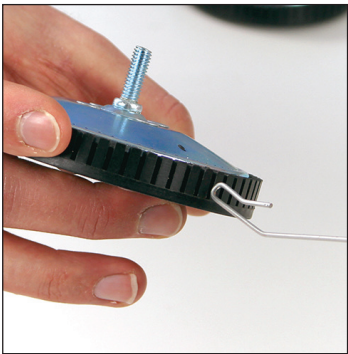

The numbered white sticker on the mounting disk helps to indicate the next available slot. Insert one wire (R101) as shown into slot #1 on the mounting disk. You will hear it click into place. **DO NOT INSERT THE WIRE UPSIDE DOWN.** Being careful not to miss any slots, continue inserting wires in numeric order until all 60 slots are full. Take the second disk, face the silver section of each disk towards each other, then insert the other end of the wires into the 60 slots in numeric order. Remove the white stickers and store the 2 extra wires in case damaged wires need to be replaced in the future.

## STEP 2: Assembling the Handle



Insert one coupler at the end of the handle. Insert the other handle into the end of coupler. Tighten using the allen key provided.  
Insert the second coupler at the end of the handle and attach the connector. Tighten with the allen key.




### STEP 3: Cage Holder and Handle Assembly



Insert the cage holder into the connector and tighten with the long screws (#9) and lock nuts provided.





Attached the 2 wire opener plates with short screws (#10) and lock nuts provided to the sides of the cage holder as shown. One screw per plate.

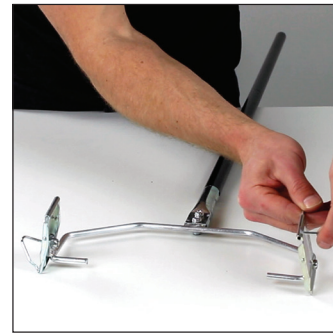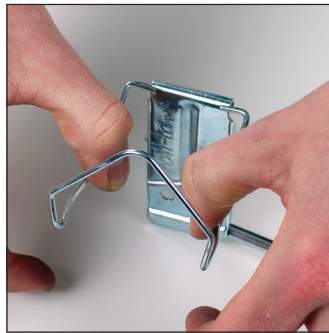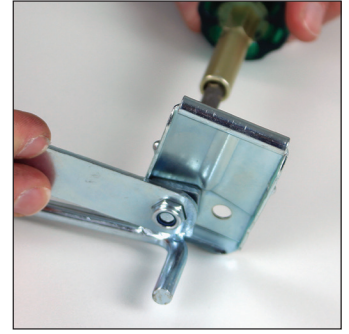


Insert the wire opener into the plates as shown.

### STEP 4: Attaching the Cage to the Cage Holder

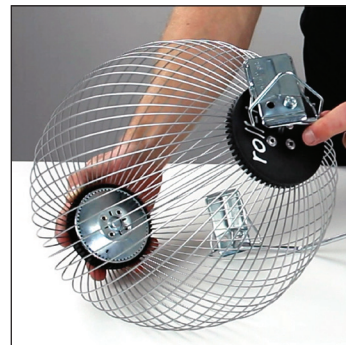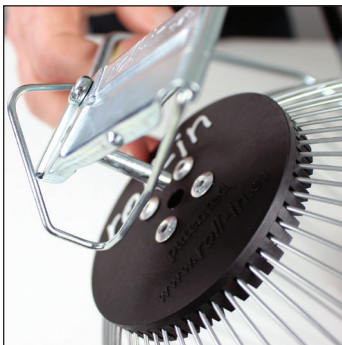

Align the holes on the ends of the cage with the cage holder and squeeze into place.

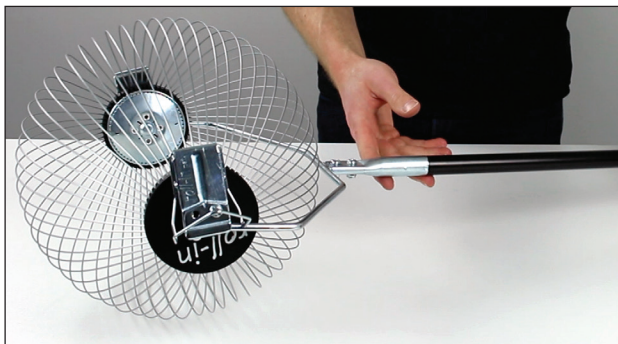

***You are  
now ready  
to enjoy  
your  
Kollektaball!***