

510 DUNK | MANUAL

The Pulsar 510 Dunk: double the versatility in one sleek package. The electronic nectar collector features two coil options and a glass airpath for the fullest flavor experience, or pair the 750mAh battery with your favorite 510 cart. Dip it or rip it - anytime, anywhere. Dare to Dunk!

SPECS:

Battery Capacity: 750mAh
Voltage: 2.4V / 2.8V / 3.3V (2.0V Pre-heat)
Charging: USB-C
Resistance: 0.5-0.65 Ω

KIT INCLUDES:

- 1 x Pulsar 510 Dunk Battery - 750mAh
- 1 x Ceramic Dual Coil Tip
- 1 x Ceramic Tube Coil Tip
- 2 x Silicone Tip Covers
- 1 x Detachable Silicone Mouthpiece
- 1 x Glass Airpath Tube
- 1 x USB-C Charging Cable
- 5 x Isopropyl Alcohol Cleaning Swabs
- 1 x H2O Whip Silicone Connector for 14/19mm Female Water Pipe Fitting - 12in

POWER ON/OFF:

Click the button 5 times within 1.5 seconds to turn the Power on or off. The device will automatically power on to the last voltage setting selected. The light of the corresponding voltage will flash 1 time (See: Change Voltage Setting).

PRE-HEATING:

Click the button 2 times to start preheating at 2.0V. During pre-heating, the lights will flash in alternating colors. The lights will cut off after 15 seconds. Press the button once during pre-heating to cancel.

CHANGE VOLTAGE SETTING:

Click the button 3 times within 1.5 seconds to change the voltage setting. The corresponding light will flash 3 times.

- Green light: 2.4V
- Blue light: 2.8V
- Red light: 3.3V


PROTECTION FEATURES:

Power < 3.2V (±0.05V), Press the power button to turn off the output. When the battery is about to die, the light will flash 10 times. Charge before continuing use. Unit will automatically shut off after 10 minutes of inactivity.

CHARGING FEATURES:

Red light - Charging, Green Light - Fully charged
If the light isn't on, the battery is not charging.
When the battery is filled, it stops charging and the green light will remain on.

QUICK START INSTRUCTIONS:

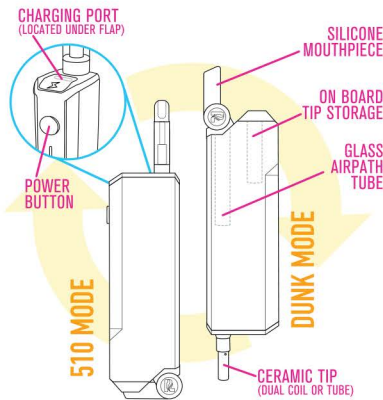

DUNK FUNCTION:

1. Turn the device on by pressing the power button 5 times.
2. Select preferred temp by pressing power button 3 times. (Green 2.4V / Blue 2.8V / Red 3.3V)
3. Attach either the ceramic dual coil tip or the ceramic tube tip. (Note: Use dual coil tip for heavier clouds; use ceramic tube tip for maximum flavor)
4. Screw the desired coil tightly onto the device and remove the silicone tip cover.

5. Ceramic Dual Coil or Tube Tip Use - Pre-heat the coil for 5 seconds before starting your session. Once the tip is primed, insert into concentrate at a 45 degree angle, slowly moving back and forth in a dragging motion while inhaling.
6. When finished with the session, simply place the silicone tip cover onto the tip and unscrew. Place the tip back into the tip storage, located underneath the mouthpiece.


510 CARTRIDGE FUNCTION:

1. Place the 510-threaded cartridge onto the device. Screw in firmly but not tight.
2. Turn the device on by pressing the power button 5 times.
3. Select your preferred temp by pressing power button 3 times. (Green 2.4V / Blue 2.8V / Red 3.3V)
4. Pre-heat the cartridge atomizer by pressing the power button 2 times. Preheat cycle lasts 17 seconds.
5. Your cartridge is now primed for use. Press the button on demand and enjoy your experience!

PULSAR PRO TIPS:

1. Less is more. Never shove the coil directly into the concentrate. This will clog the airpath.
2. Press button once to view current power level (Green - Full / Blue - Medium / Red - Low)
3. Always allow the tip to cool before storing back into the onboard storage container.
4. Always store the tip with the silicone sleeve.

H2O FUNCTION:

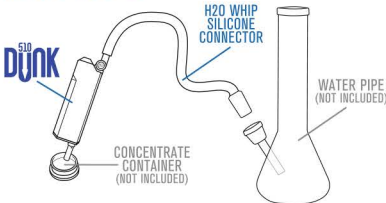

Dunk Function - Place the H2O whip connector onto the mouthpiece of the Pulsar 510 Dunk. Place the other end into any 14 or 19mm female water pipe fitting, then follow the Dunk function instructions and pull through the water pipe to activate and achieve your perfect session.

510 Function - Place the H2O whip connector onto the mouthpiece of the Pulsar 510 Dunk. Place the cartridge into the 510 connection. Follow cartridge pre-heat instructions and attach to the water pipe to activate, then press the power button and inhale through the water pipe to enjoy your session.

CLEANING TIPS:

1. If the air pathway becomes clogged, power on the device with the tip attached. While pressing the power button down, blow out the clog stuck in the tip onto a paper towel. Repeat a few times until you notice all of the excess oil is removed from the tip of the device.

2. To clean the removable glass airpath tube, remove the tip and the mouthpiece to expose the glass tube. Once removed, clean glass tubing with 91% isopropyl alcohol. Rinse with water and let fully dry before inserting back into the device.
3. To clean the air pathway, remove the glass tube. Using isopropyl alcohol swabs, crack the swab tip on one end to let the alcohol move to the opposite end tip. Insert moistened tip into the airpath, moving back and forth until clean. Air dry completely before re-inserting the glass airpath tube.
4. Repeat the above step for cleaning the silicone mouthpiece.

IMPORTANT SAFETY WARNINGS:

Do not expose to extreme temperatures or direct sunlight. Do not drop the device or accessories. Do not drop or submerge in any liquid. Do not modify the electronics in any way. This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty.



Scan the QR code for the most current version of the manual or go to

<https://www.pulsarvaporizers.com/pages/manuals>

PULSAR® Manufactured by Pulsar®
ENJOY HIGHER CULTURE™ Asheville, NC 28806
Designed in USA, Made in China