

Thank you for purchasing the Pulsar® APX Volt V3! In order to ensure safe use, please read all instructions and safety warnings before operating. Failure to follow instructions may result in injury and may void your warranty.

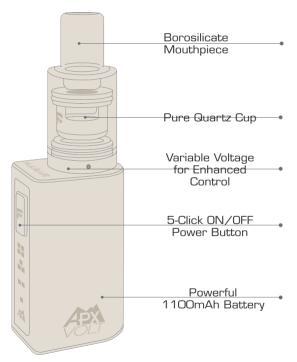

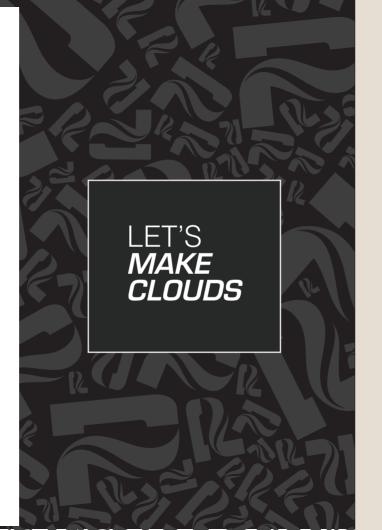

FEATURES

Pure Quartz Cup Chamber Enchanced LED Display 2-Click Hands-free Power Mode

TECH SPECS

Size: 32mm x 23mm x 94mm Input: DC 5V/1.0A Battery Capacity:1100mAh Class A Lithium Battery Atomizer Resistance: 0.4Ω Battery Recharge Cycle Count: 300


GRAF DISP	RANGE SETTINGS	
	3.	7V
	3.5	2V
	2.8V	
	2.	5V











PulsarVaporizers.com





PU-0277-20

CHARGING THE DEVICE

- IMPORTANT: You will need to fully charge your Pulsar® APX Volt prior to use. Allow approximately 3 hours for the first full charge. NEVER charge the device for more than 24 hours. Allow approximately 1.5 hours for additional recharges.
- A 5V/1.5 Amp USB AC wall adapter is required for charging the
 device. Using the included USB-C charge cord, set the Pulsar APX
 Volt on its side while charging. Do not let the unit dangle from the
 cord. This puts pressure on the charger plug which can result in the
 unit not charging fully. It is also recommended to NEVER charge the
 device from an automobile power source. Failure to follow warnings
 contained within this manual can result in property damage or
 personal injury and may void the warranty.
- The APX Logo LED will show a charging connection is made by slowly flashing red until fully charged. The indicator will change to solid green when completely charged.
- The device will deliver approximately 1.5 hours of continuous power, depending on use.
- · Battery level display:
- Green APX Logo = 100-60% Power Level
- Orange APX Logo = 60-20% Power Level
- Red APX Logo = 20-0% Power Level
- Low Battery: APX Logo LED will flash alternating red & green 3 times and the device will not power on.

HOW TO LOAD & OPERATE

- 1. Turn the unit on by pressing the button rapidly 5 times.
- The atomizer can be loaded either prior to heating or after the coils have been warmed
- Press the power button 3 times quickly to cycle through preset voltages. Desired voltage level is set when LED stops flashing.
- 4. Do not overfill. ¼ gram max product is suggested.
- Press and hold power button or 2 rapid clicks for hands-free power mode.
- 6. Once your concentrate melts (around 5 seconds), inhale.
- 7. Turn the unit off by pressing the power button rapidly 5 times.

PRO TIPS

- Once the product is loaded into the quarts cup, heat until fully melted. This primes product for optimal use and flavor.
- Wipe quartz cup clean with cotton swap between each session to maintain flavor.
- Do not turn Volt on its side or upside down when concentrate is heated. It can spill, and can cause injury as well as waste product.

HOW TO CLEAN THE MOUTHPIECE

The glass mouthpiece on the top has a friction fit and can easily be removed by pulling it away from the vape body with light force.

- Pour enough isopropyl alcohol into a soaking container to cover the glass mouthpiece.
- Place the mouthpiece in the container with isopropyl alcohol for one hour.
- 3. Remove and wipe with a cleaning wipe.
- 4. Rinse in cold water and dry with a hand towel or paper towel.

HOW TO CLEAN THE COIL CHAMBER

Since the heating element uses a coil-less heating pad, there is no worry of having to avoid touching exposed heating coils. These steps can be performed while the mouthpiece is soaking.

- Make sure the vape unit is turned off and the heating coil element is cool.
- Use an alcohol filled cotton swab or lightly dip a dry cleaning swab in 91% isopropyl alcohol.
- 3. Use the swab to wipe the inside of the coil chamber until clean.
- 4. Unthread and remove the coil from the vape body.
- 5. Use the cleaning swab to wipe the 510 threading of the vape body.
- 6. Re-assemble vaporizer and dry-fire before use.

CLEANING NOTES

- Do not use cleaning solutions, solvents, or other chemicals when cleaning the device. Doing so will result in undesirable tastes or smells and can cause potential health hazards.
- It is a good idea to clean the unit after each use to avoid excessive build-up, which will interfere with the taste and function of the device and may affect warranty status.

IMPORTANT SAFETY WARNINGS

- Do not expose to extreme temperatures or direct sunlight.
- · Do not drop the device or accessories.
- Do not drop or submerge in any liquid.
- · Do not modify the electronics in any way.
- This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty.