

Thank you for purchasing the Pulsar[®] APX Wax V3! In order to ensure safe use, please read all instructions and safety warnings before operating. Failure to follow instructions may result in injury and may void your warranty.



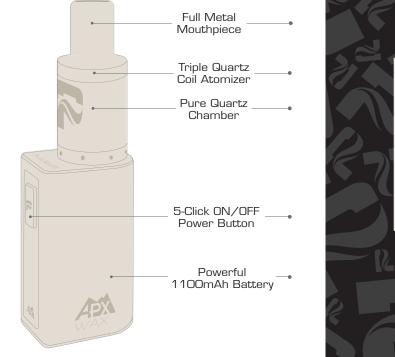

FEATURES Pure Quartz Cup Chamber Triple Quartz Coils Enhanced LED Display 2-Click Hands-free Power Mode

TECH SPECS Size: 32mm x 23mm x 94mm Input: DC 5V/1.0A Battery Capacity:1100mAh Class A Lithium Battery Atomizer Resistance: 0.7Ω Battery Recharge Cycle Count: 300

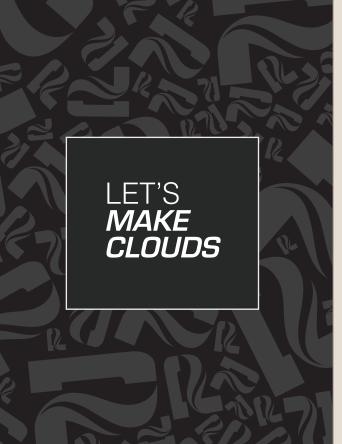







CHARGING THE DEVICE

- IMPORTANT: You will need to fully charge your Pulsar[®] APX Wax prior to use. Allow approximately 3 hours for the first full charge. NEVER charge the device for more than 24 hours. Allow approximately 1.5 hours for additional recharges.
- A 5V/1.5 Amp USB AC wall adapter is required for charging the device. Using the included USB-C charge cord, set the Pulsar APX Wax on its side while charging. Do not let the unit dangle from the cord. This puts pressure on the charger plug which can result in the unit not charging fully. It is also recommended to NEVER charge the device from an automobile or laptop power source. Failure to follow warnings contained within this manual can result in property damage or personal injury and may void the warranty.
- The APX Logo LED will show a charging connection is made by slowly flashing red until fully charged. The indicator will change to solid green when completely charged.
- The device will deliver approximately 1.5 hours of continuous power, depending on use.
- · Battery level display:
- Green APX Logo = 100-60% Power Level
- Orange APX Logo = 60-20% Power Level
- *Red* APX Logo = 20-0% Power Level
- Low Battery: APX Logo LED will flash alternating red & green 3 times and the device will not power on.

HOW TO LOAD & OPERATE

- Turn the unit on by pressing the button rapidly 5 times.
 The atomizer can be loaded either prior to heating or after the coils have been warmed.
- 3. Do not overfill. 1/4 gram max product is suggested.
- 4. Press and hold power button or 2 rapid clicks for hands-free power mode.
- 5. Once your concentrate melts (around 5 seconds), inhale.
- 6. Turn the unit off by pressing the power button rapidly 5 times.

ATTENTION! Do not touch the coils with metal dab tools while the power button is engaged.

PRO TIPS

- Before using the APX Wax, first fully charge the unit, and then heat the empty atomizer several times. This will burn off any impurities collected during manufacturing.
- To load the atomizer, you can place your concentrate directly on the cool quartz coils, prior to heating; or you can prime your coils by gently preheating them, and placing your concentrate on the slightly warmed coils.
 Once loaded, begin heating, and observe the vapor amount inside the glass chamber to gauge the size cloud you would like to inhale.
 Always allow unit to reheat for 5 seconds after the coils have cooled.

HOW TO CLEAN THE MOUTHPIECE

The metal mouthpiece on the top has a friction fit and can easily be removed by pulling it away from the vape body with light force.

- 1. Pour enough isopropyl alcohol into a soaking container to cover the metal mouthpiece.
- Place the mouthpiece in the container with isopropyl alcohol for one hour.
- 3. Remove and wipe with a cleaning wipe.
- 4. Rinse in cold water and dry with a hand towel or paper towel.

HOW TO CLEAN THE COIL CHAMBER

These steps can be performed while the mouthpiece is soaking.

- With mouthpiece removed, hold vape battery with attached coil upside down and power the unit on to heat up and remove any residual product in the coil chamber.
- 2. Let the unit cool.
- Use an alcohol filled cotton swab or lightly dip a dry cleaning swab in 91% isopropyl alcohol.
- Use the swab to wipe the outside and rim of the coil chamber without touching the heating elements.
- 5. Unthread and remove the coil from the vape body.
- 6. Use the cleaning swab to wipe the 510 threading of the vape body.7. Re-assemble vaporizer.

CLEANING NOTES

- Do not use cleaning solutions, solvents, or other chemicals when cleaning the device. Doing so will result in undesirable tastes or smells and can cause potential health hazards.
- It is a good idea to clean the unit after each use to avoid excessive build-up, which will interfere with the taste and function of the device and may affect warranty status.

IMPORTANT SAFETY WARNINGS

- · Do not expose to extreme temperatures or direct sunlight.
- · Do not drop the device or accessories.
- · Do not drop or submerge in any liquid.
- · Do not modify the electronics in any way.
- This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty.