

Do not use cleaning solutions, solvents, or other chemicals when cleaning the device. Doing so will result in undesirable tastes or smells and can cause potential health hazards. It is a good idea to clean the unit after each use to avoid excessive build-up, which will interfere with the taste and function of the device and may affect warranty status.

IMPORTANT SAFETY WARNINGS

Do not expose to extreme temperatures or direct sunlight.
Do not drop the device or accessories.
Do not drop or submerge in any liquid.
Do not modify the electronics in any way.
This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty.



Scan the QR code for the most current version of the manual **or go to**

<https://www.pulsarvaporizers.com/pages/manuals>

FEATURES

- Full Temp Control
- Session Timer
- Cash Mode
- OLED Display
- Isolated Airpath
- On Board Stir Stick
- Aluminum Chamber
- Haptic Feedback
- Auto Shut-Off

TECH SPECS

Size: 1.2 x 1 x 4.3 inches (31 x 25 x 110mm)
Input: DC .5V,1.5A
Battery Capacity: 2100mAh Class A Lithium Battery
Temperature Control Range: 320-430°F in 1 degree increments.
Battery Recharge Cycle Count: 300

PULSAR
ENJOY HIGHER CULTURE™




PulsarVaporizers.com

PU-0474-22




PULSAR
APX
PRO
VAPE

Thank you for purchasing the Pulsar® APX Pro Vape!
In order to ensure safe use, please read all instructions and safety warnings before operating. Failure to follow instructions may result in injury and may void your warranty.

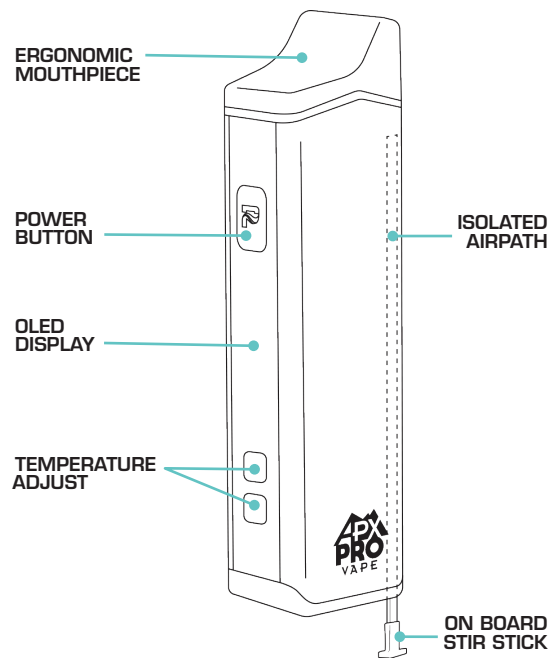


CHARGING THE DEVICE

- **IMPORTANT:** You will need to fully charge your Pulsar APX Pro Vape prior to use. Allow approximately 3 hours for the first full charge. NEVER charge the device for more than 24 hours. Allow approximately 1.5 hours for additional re-charges.
- A 5V/1.5 Amp USB AC wall adapter is required for charging the device. Using the included USB charge cord, set the Pulsar APX Pro Vape on its side while charging. Do not let the unit dangle from the cord. This puts pressure on the charger plug which can result in the unit not charging fully. It is also recommended to NEVER charge the device from an automobile power source. Failure to follow warnings contained within this manual can result in property damage or personal injury and may void the warranty.
- The battery symbol will show on the screen when a charging connection is made. The battery symbol will be full when the battery is charged.
- The device will deliver approximately 1.5 hours of continuous power, depending on use.
- Battery power level display:

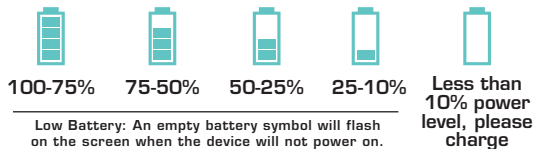

HOW TO USE

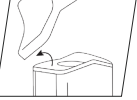1. With the Pulsar APX Pro Vape upright and the button facing you, lightly pull on the mouthpiece towards you until it is released. 
2. For best results, fill the chamber with ground material halfway to three-quarters full. Use the On Board Stir Stick with the tamping end to lightly and neatly pack the chamber. Do not pack too tightly. This allows for even heat distribution and makes it easier to stir throughout the vape session.
3. Once loaded, replace the mouthpiece and turn the unit on by pressing the power button rapidly 5 times (5 Clicks for ON/OFF).
4. The Pulsar APX Pro Vape returns to the last set temperature when powered on. To change the temperature before or during a session, tap the up or down button until you get to your desired temperature. Hold down the up or down button to cycle through the temperatures faster. Release the button on the desired setting and allow the Pulsar APX Pro Vape to adjust to the new temperature.
Cash Mode: Hold down the power button and the chamber temperature will increase by 20 degrees to get the most out of your session. When you release the button, it will return to the normal setting.
5. The device will begin heating immediately. The top number is your selected temperature. The lower number is the actual temperature of the chamber. When the bottom number reaches the desired temp the Haptic Feedback feature will alert you that the Pulsar APX Pro Vape has reached the desired temperature.
6. Allow the device to continue heating for approximately 5 seconds longer before inhaling. This ensures the herbs in the chamber are evenly heated, maximizing efficiency.

7. **Adjustable Session Timer:** With the device on, press and hold the power button and the up arrow for 2 seconds, then select between 5 pre-set session timers: 180, 210, 240, 270, or 300 seconds. The default session time is 240 seconds, or 4 minutes.
8. After your session ends, the device will power down and the haptic feedback will alert you that the session has ended. You can end the session at any time by pressing the button 5 times.

PULSAR PRO TIPS

- Occasionally stir herbs and allow the chamber to reheat for 5 seconds between each inhale.
- To maximize efficiency, whenever possible, allow the unit to cool completely.
- Be sure to turn the unit off when you are done to preserve the material.

CLEANING INSTRUCTIONS

1. Remove the mouthpiece.
2. Tap out the material from the chamber or use the On Board Stir Stick to remove.
3. Use the included cleaning brush to sweep the remaining residue from the chamber.
4. A cotton swab and isopropyl alcohol can be used to clean stubborn residue. Do not pour alcohol directly into the chamber. Allow the chamber to fully air dry before use.
5. Pull the silicone off the bottom of the mouthpiece and place the small silver screen and ceramic airpath into alcohol to clean any build up. You can also use alcohol and a cotton swab to remove stubborn build up. Once clean, allow all parts to air dry before reassembly.
6. Put the mouthpiece back onto the body and the device is now ready for storage or use.