



# Axial Mini eNail Kit Manual

Thank you for purchasing the Pulsar<sup>®</sup> Elite Series Axial Mini eNail to vaporize any concentrate! In order to ensure safe use, please read all instructions and safety warnings before operating. Failure to follow instructions may result in damage or injury and may void your warranty.

## WARNING:

Use with caution. Must be 18 years of age or older to operate. Coil element becomes extremely hot. Do not touch once powered on. Do not leave unattended while powered on. Do not attempt to change the shape of the already formed coil in any way. Do not leave the unit on for longer than 5 continuous hours. Do not let any liquids, waxes or gels touch coil. Do not use a temperature setting higher than 1200°F. Do not customize or modify unit internally or externally. Failure to follow cautionary tips may void warranty.

## This Kit Includes:

- Pulsar Elite Series Axial Mini eNail Power and Temperature Control Box with Digital Screen
- Accommodates 25mm Nails
- 5ft. Removable Power Cord
- 4ft. Heating Coil Cord
- Quartz/Titanium Hybrid Nail
- Titanium Carb Cap
- 2 Silicone Stability Rings

## Technical Specifications:

Digital Display with Push Button Controls  
Rear On/Off Switch  
Temperature: 0°F-1200°F  
Voltage: 90-150v  
Power: 150w




**Set-Up:** Unscrew your chosen bucket from the hybrid nail; insert into the Axial coil and reassemble the hybrid nail. Plug the coiled heater into the control box. Plug power cord into the control box and connect to a power outlet. Carefully fit and insert nail into chosen glass concentrate rig. Make sure all water and nail assemblies are well-matched and securely placed for use. *Special note:* When using the quartz Axial banger accessory, use the included silicone ring to adhere the banger to the coil for extra stability. Press the power switch on the back of the control box to turn the unit ON/OFF.

## How to Set Temperature:

Use the up and down arrows to set the desired temperature. Unit has a range of 0°F to 1200°F. Hold the button down to increase number changing speed. The numbers will flash ten times indicating desired temperature is set. Note that unit will automatically heat to last temperature used once turned back on; it is not necessary to press the Set button. Place desired concentrate onto the unit and inhale gently, cover the nail with provided carb cap as needed.

**WARNING:** Coil and nail will get extremely hot during operation. Allow to completely cool before touching.

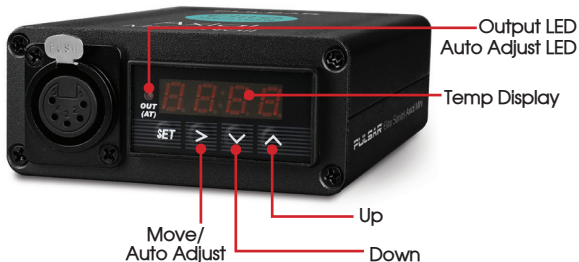

## Important Safety Warnings

Do not expose to extreme temperature or direct sunlight. Do not drop the unit or accessories. Do not submerge in any liquid. Do not modify the electronics in any way. Please allow the full cool down time between cycles or cleaning. Pulsar Elite Series eNails and accessories are intended for adults only. Do not sell, provide, or allow access to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. Pulsar products are not medical devices and are not intended to diagnose, treat, mitigate, cure or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, or personal injury.

## Limited Warranty

The Pulsar Elite Series is guaranteed from manufacturer defects or malfunction from date of purchase for a period of 6 months for the heating cord, and 1 year for the control box. This limited warranty protects against manufacturer defect under normal use and does not apply to normal wear & tear; improper use; accidental damage from dropping or submerging in liquid; improper cleaning; neglect; or any other damage that is not a result of defective materials or workmanship. If your Pulsar Elite Series qualifies for servicing, we will repair or replace, at our discretion and expense, any defective parts or materials. Purchaser must provide a copy of the original dated sales receipt and may be required to provide shipping to return defective parts or materials. We intend to complete all repairs/replacements within 7 business days, although this timeframe may vary depending on shipping, replacement part availability, or other related factors. The lawful and proper use of this device is a condition of sale. Any improper use of the Pulsar Elite series will void the warranty. Warranty is non-transferable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. *Important Note: All nails are disposable attachments. Once a nail is used, no warranty coverage or replacement will be offered.*

For warranty servicing, please visit:

[PulsarVaporizers.com](http://PulsarVaporizers.com)