

PULSAR® FLOW



USER MANUAL

Thank you for purchasing the Pulsar® Flow! In order to ensure safe use, please read all instructions and safety warnings before operating. Failure to follow instructions may result in injury and may void your warranty.

Friendly User Tips:



- For best results, fill chamber halfway or more, but do not pack tightly. This allows for even heat distribution and room to stir your herbal blends if necessary throughout usage.
- Once the vaporizer reaches desired temperature, allow 30 seconds before using. This ensures the herbs in the chamber are evenly heated, maximizing efficiency.
- Always allow unit to reheat for 5 seconds between each inhale.
- To maximize efficiency, whenever possible after using allow unit to cool, and then stir herbs before the next cycle.
- The Silicone Screen Assembly in the mouthpiece helps provide a smoother vaping experience, please be sure to clean it periodically.
- Be sure to turn off the unit when you are done by pressing the on/off button 5 times within 2 seconds.

Kit Contents:

- Dry Herb Convection Vaporizer
- Micro USB Cable
- Stir Tool
- Cleaning Brush
- Extra Silicone Mouthpiece Insert
- Cleaning Pad
- Gift Box

1


PULSAR® FLOW OVERVIEW

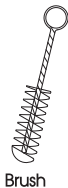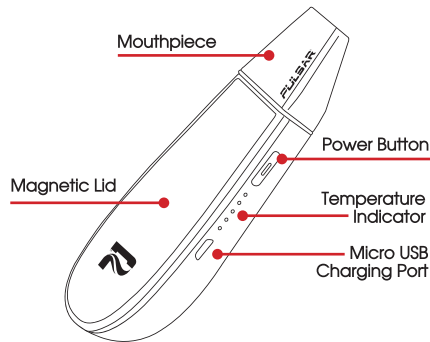

Brush



Stir Tool

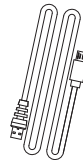

USB Cable

2

TECH SPECS

- Size: 128.90mm*31.50mm*38.50mm
- Input: DC.5V,1A
- Battery Capacity & Output: 1600mAh Class A Lithium Battery
- Quartz chamber
- Heating time: 40 seconds
- 5 Temperature Control Range Settings: 356, 374, 392, 410 and 428
- Temperature Indicator
 - Red Light: Heating up
 - Green light: Device ready
- Micro USB Charging Port
- 4-Minute Safety Auto Shut off
- Battery recharges Cycle count: 300

CHARGING INSTRUCTIONS

- Battery Power & Charging Indication Power Button Displays:
 - Green: 100%-60% charge
 - Orange: 60-20% charge
 - Red: 20-0% charge
 - Low Battery: Alternating red & green LED flashing 3 times and default to turn off.

IMPORTANT: You will need to fully charge your Pulsar® Flow before using it. Insert charger plug into unit & the other end into a dedicated USB port or wall socket if using AC wall adapter (Not included!). Set Pulsar® Flow on its side – do not let unit dangle from charge cord. This puts pressure on the charger plug that can result in the unit not charging fully.

- Battery Charge Time: Allow approximately 3 hours for the first full charge. Do not charge for more than 24 hours. Additional charges time: Approx 1.5 hours
- Please note: Battery indication light will show charging connection is made by slowly flashing red until fully charged, at which point will stay solid green.

3

- Low battery indication: When battery requires charging, the battery icon will show red and will not heat.
- AC Wall Adapter: Use ONLY Pulsar® brand AC Wall Adapters! Failure to follow warnings contained within this manual can result in property damage or personal injury, and may void the warranty.

The Pulsar® Flow battery will deliver approximately 1.5 hours of continuous power, depending on use. Both the battery and chargers are designed to prevent overcharging. **ONLY USE APPROVED PULSAR® CHARGERS!** Failure to do so can damage the battery, which can result in property damage or personal injury and may void the warranty.

Using Pulsar® Flow

1. After loading - Turn the unit on pressing the button rapidly 5 times.
2. To change the temperature press and hold button for 3 seconds – the temperature light will begin to rotate through the temp settings until you let go to confirm setting.
3. Unit will begin heating immediately, Temperature indicator will display red until desired temperature is reached, then change to green. Also the haptic feedback function will vibrate when the unit is ready for use.

To change heat setting during use, push & hold the button 3 seconds to select desired temperature. Allow the Pulsar® Flow to adjust the temperature, and then continue vaping.

IMPORTANT Usage Tips:

- Your Pulsar® Flow is equipped with a 4-minute auto-shutoff timer to prevent waste and overheating
- Always allow unit to cool 5 minutes between cycles whenever possible, you may turn the unit back on immediately to finish any herbal blends left in the chamber
- Pulsar® Flow will automatically return to the last temperature setting used
- Occasionally stir herbs and allow chamber to reheat for 5 seconds between each inhale

4

HOW TO LOAD



1. Remove mouthpiece & lid



2. Load herbs loosely




3. Replace mouthpiece & lid

5

CLEANING INSTRUCTIONS



Remove the material from chamber. Use the cleaning brush to sweep the remaining residue from chamber

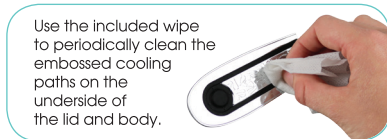

Use the included wipe to periodically clean the embossed cooling paths on the underside of the lid and body.

6

IMPORTANT Cleaning tips:

- Do not use cleaning solutions, solvents, or other chemicals when cleaning your Pulsar® Flow. Doing so can result in undesired tastes or smells and can cause potential health hazards.
- It is a good idea to check the unit after each use to avoid excessive build up, which will interfere with the function of your Pulsar® Flow Vaporizer and can affect your warranty status.

Important Safety Warnings:

Do not expose to extreme temperature or direct sunlight.
Do not drop the Pulsar® Flow or accessories.
Do not drop or submerge in any liquid.
Do not modify the electronics in any way.
Please allow the full 5-minute cool down between cycles whenever possible.

Only charge using Pulsar® brand chargers and Pulsar brand accessories. Pulsar® Flow is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. Pulsar® Flow is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, or personal injury.

Limited Warranty :

Pulsar® Flow is guaranteed from manufacturer defects or malfunction from the original date of purchase for a period of 6 months. This limited warranty protects against manufacturer defects under normal use and does not apply to normal wear and tear, improper use, and accidental damage from dropping or submerging in liquid, improper cleaning, neglect, or any other damage that is not a result of defective materials or workmanship. If your Pulsar® Flow qualifies for servicing, we will repair or replace, at our discretion and expense, any defective parts or materials. Purchaser must provide a copy of the original dated sales receipt and may be required to provide shipping to return defective parts or materials. We intend to complete all repairs/replacements within 7 business days, although this timeframe may vary depending on shipping, replacement part availability, or other related factors. The lawful and proper use of this device is a condition of sale. Any improper use of the Pulsar® Flow will void the warranty. Warranty is non-transferable. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

For warranty servicing, contact us at:
www.PulsarVaporizers.com

PULSAR®
ENJOY HIGHER CULTURE™

www.PulsarVaporizers.com
Manufactured By Pulsar®
Asheville, NC 28806