



Generator Wheel & Handle Kit




Model # 56410

For video instructions visit bit.ly/WHEELKIT



NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us at:

 **800-232-1195** (M-F 8AM-5PM CST)

 techsupport@wenproducts.com

 WENPRODUCTS.COM

Hello and thank you for buying a WEN Generator Wheel and Handle Kit. Installation is fairly straight forward. Just follow these simple steps to get your generator up and rolling in no time. If you would prefer video instructions, feel free to visit <http://bit.ly/WHEELKIT>

First, check to make sure your wheel kit includes all of the necessary parts. Each item comes pre-assembled with the necessary nuts and washers already attached to the proper bolts.



INCLUDED:

- A) Two Wheels
- B) Two Handles (each equipped with one washer and one bolt)
- C) Two Support Legs (each equipped with two nuts and two bolts)
- D) Two Wheel Axles (each equipped with two bolts and two washers)
- E) Two 17/19 mm Wrenches
- F) Two 10/12 mm Wrenches

Next, tip the generator on its side to expose the holes in the frame that will accept the axles for the wheel. (WARNING: It is only OK to tip the generator on its side if it does NOT have oil and gas in it. If it is not “dry” you will need to do the installation with the generator right side up and on a level surface).

Unscrew the bolts and remove the washers from your wheel axles. Place in a safe area.

Insert the small end of the wheel axles into the holes in the generator frame as shown in Figure A. Reattach the bolt to the inside of the axle in order to secure it in place.

Next, slide the larger washer onto the outside of the axle before putting on the wheel. Then slide on the wheel and the smaller washer.

Tighten both nuts using the two 17/19 mm wrenches. Make sure your wheel still has the ability to spin.

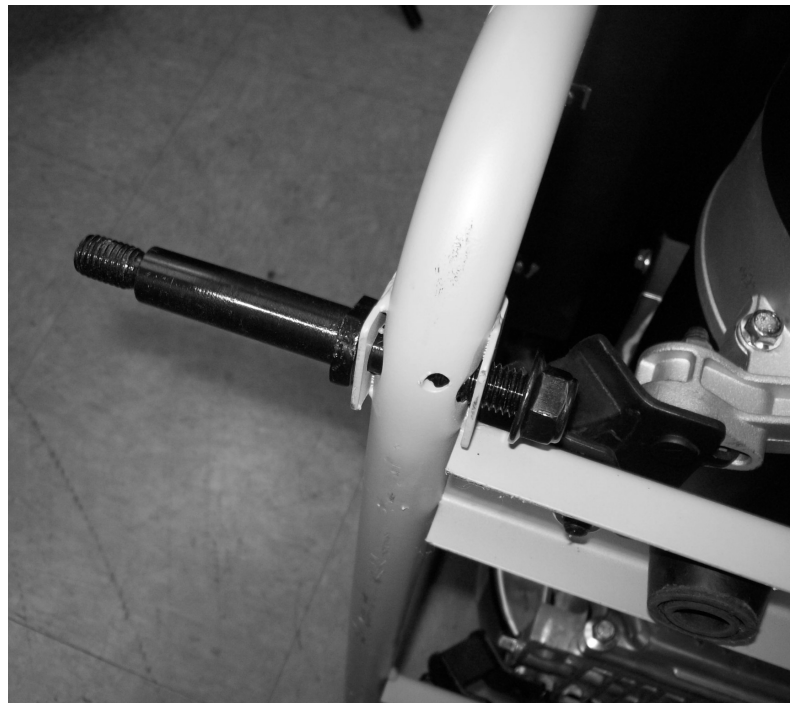


FIGURE A

Once both wheels are installed, attach the support legs to the generator as shown in Figure B. Again, remove the bolts, slide the legs into place and align the two holes.

Reattach the bolts using the 10/13 and the 10/12 mm wrenches.



Finally, flip the generator back to its upright position and attach the two handles using the 10/13 and the 10/12 mm wrenches. Do not tighten the handles too much, as this will restrict movement and will prevent the handles from folding up and down as needed.

Make sure that the cushioning on the handle tilts upwards towards the generator when the handles are in the relaxed position.

Now you are ready to roll. If you have any questions, comments or concerns feel free to contact our helpful and friendly customer service line at 800-232-1195.

Thanks for remembering WEN.

