


# Mk4 FENN HUMANE TRAP

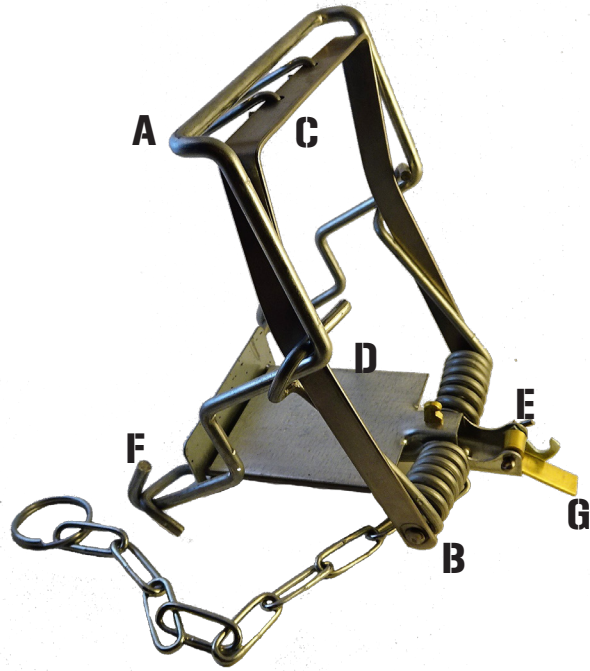

**A. CROSS BAR**

**B. SPRINGS**

**C. THUMB LOOP**

**D. TREADLE PLATE**

**F. BASE HOOK**

**G. TRIGGER CATCH**

## SETTING TRAP:

First open the trigger and safety catches to their open positions.



Place your left thumb into the grip loop with fingers gripping the underside of the base plate of the trap.

Place your right thumb on the top cross bar, with fingers gripping under the spring coil

Pull both thumbs apart descending the top cross bar towards the safety and trigger catch, opening the jaws.

Maintain holding the trap using index finger of right hand under spring, maneuver carefully flip and hook the silver safety catch onto crossbar.

Once engaged your hands are free.

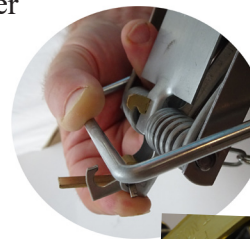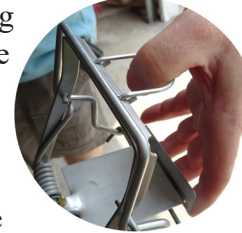




Ensuring that safety catch is on, and fully engaged, turn the trap, keeping it face up with the spring end furthest away, place hands underneath, index fingers on springs, thumbs on top of either side of the cross bar. Flip over the brass colored trigger catch, resting it on top of cross bar.

Keeping the safety catch engaged, use your finger below to elevate the trigger treadle plate, squeezing the cross bar downward, maneuver the brass trigger catch, locking it into the trigger hook, keep an eye on the safety ensuring it remains engaged.

To prime, pull back the silver colored safety catch.

For safety purposes, we highly recommend that when trap is ready and in place, removing the safety with a small stick or screwdriver.

Primed trap with safety on.

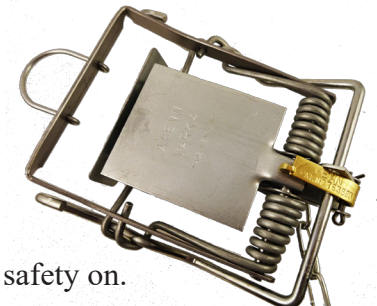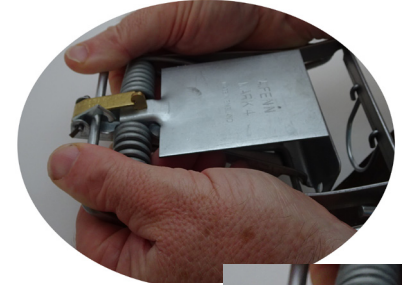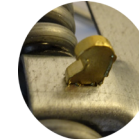

2.

3.

4.