User Manual


Digital Bamboo Bathroom Scale

Model # TTP-Scale-7

1. Features

- 1-1. Capacity: 397lb / 180kg / 28st: 5lb
- 1-2. Division: 0.2lb / 0.1kg / 1 lb
- 1-3. Weight unit: lb / st / kg
- 1-4. Minimal weight: 11lb / 5kg
- 1-5. Function key: UNIT
- 1-6. Display: LCD with blue backlight
- 1-7. Battery: 2 X CR2032
- 1-8. Auto on or press UNIT to switch on
- 1-9. Auto off function

2. LCD diplay




3. Function indication

3-1. UNIT: Press "UNIT" on back the scale to select desired unit in weighing mode.


4. Operation instruction

4-1. Select unit before use


- a) Open the battery door at the back of the scale.
- b) Put the battery in and ensure +/- terminals are correct. The LCD will be on as below.



c) Close the battery door and wait until "0.0lb" is shown...




d) Press "UNIT" to select the desired unit.

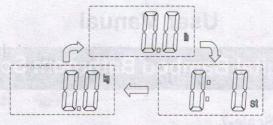


Note: Please put the scale on a flat and hard surface when finishing selecting unit, then you may step on the platform to measure according to the measuring procedure below. If there is no operation in the weighing mode, the scale will turn off automatically in about 10 seconds.

4-2. Measuring(Unit lb selected)

- a) Please put the scale on a fat and hard surface.
- b) Step onto the platform to turn the scale on.



c) Stand still and the weight reading will be locked automatically after blinking. With no further operation, the scale will turn off in about 10 seconds.



Note: If you want to measure again, please step off first and step back onto the platform.

5. Indication message

5-1. Low battery indication. When "Lo" is shown, the scale will turn off after a few seconds and please change the battery.



5-2. When Err is shown It indicates overload. Please remove the weight on the scale to protect the sensors.



6. Reminder

- 6-1. Ensure the scale is on a flat, even and firm surface. Avoid carpet or soft surfaces.
- 6-2. The surface of the scale will be slippery if wet. Please make sure both the glass and your feet are dry before use.
- 6-3. This scale is not waterproof. Please keep it away from water and moisture.
- 6-4. Clean the scale with a slightly damp cloth. Please do not use any chemical/abrasive cleaning agents to clean the scale.
- 6-5. Please remove the batteries if the scale is not used for a long time.

Questions? Comments? Concerns?

Please reach out to us! We always love to hear from our customers:

Phone: (888) 251-0985

Email: Info@ToiletTreeProducts.com