

SPECIALIST DENTAL SEATING



About Us

Hello and welcome to our Dental Seating range literature. We have over 30 years experience in the upholstery business and over 15 years in the dental stool industry.

WE TAKE PRIDE IN OUR PRODUCTS AND CUSTOMERS NEEDS.

Our aim is to provide comfortable yet correct posture seating. We have an extensive colour range of fabric to match your dental chair and surgery decor.

All our products are made to order and can be adjusted where possible to meet with your requirements. Our seating ranges are available through distributors throughout the U.K. & E.U.

We also offer a re-upholstery service on most types of dental chairs which can reduce costs where cross infection issues can arise.

Please take time in reading the glossary, this will help in understanding the importance of choosing the correct seating for the surgeon and assistant who is equally as important as the patient.

Glossary

Free Float Mechanism this enables the angle of the seat and back rest to work together, to give permanent contact with the operator. Back rest maintains support to the natural curve of the back.

Tilt Action Seating area enables the operator to move closer to the patient.

Lockable When the correct position is found the levers can be pressed to lock the preferred operators working position if required.

Gas Lift/Height Adjustment This lever enables seat height to be adjusted to suitable working condition.

- To adjust height - lift lever unseated
- To lower height - lift lever whilst seated

Surgeon Stool uses a 9" Gas Cylinder which gives a working height from the floor to the centre of the seat approx. 500mm-630mm

Assistant Stool uses a 12" Gas Cylinder which gives a working height from the floor to the centre of the approx. 550mm-750mm

Foot Ring Helps maintain posture using as a foot rest only, resting the feet flat on the ring and thighs parallel to the floor.

Five Star Base Increased Stability

Twin wheeled castors Aids smooth movement

Torso Support/Ratchet Mechanism 360 degree adjustable support - Give supports and balance when leaning into patient for left or right handed operators. Adjustable Height gives additional comfort and support

Contoured/Formed Seating Area Aids comfort and movement

Off-Set-Assistant Stool Back rest/Arm rest/Torso Support Maintain support (stool illustrated shows bar off-set to right) The bar position can be change by unscrewing the 2 cap head screws and repositioning.

Saddle Seating Helps maintain the natural curve of the spine.

THE ABOVE FEATURES AID GOOD POSTURE AND REDUCE FATIGUE THROUGH OUT THE DENTIST AND ASSISTANT WORKING CAREER.

For further information please contact your distributor/engineer or alternatively contact :

Gatley Medical Stool Co. Ltd

T 01942 601 107 F 01942 299 045

E sales@gmscltd.co.uk W www.gmscltd.com

Company Registration No. 7695110 VAT Registration No. 116 3607 35





PRS01



PRA02



PRS03



PRA04



SRA05



SRS06



SRA07



SRA08



SRA09



GMS10



GRS11



GRA12



GRS13



GRA14



GMS15



PROGRESS Range

PRS01



The PR 01 has a large back-rest area to hug the lower back. The contoured seat area allows the operator to be closer the patient and aids the thighs to assist smooth swivel movement when required. 3 lever mechanism give height adjustment and free float motion to the back and seat if required. Each can be used independently as free float.

PRA02



The PR 01 has a large back-rest area to hug the lower back. The contoured seat area allows the operator to be closer the patient and aids the thighs to assist smooth swivel movement when required. 3 lever mechanism give height adjustment and free float motion to the back and seat if required. Each can be used independently as free float. Complete with foot ring & taller gas lift.

PRS03



This stool is compact in design where space is a premium. Compact back rest & contoured seat area to help operator to be closer to the patient. The designed seat area gives a smooth swivel movement. The 2 lever mechanism has height adjustment and gives free float action to the back rest

PRA04



This stool is compact in design where space is a premium. Compact backrest & contoured seat area to help operator to be closer to the patient. The designed seat area gives a smooth swivel movement. The 2 lever mechanism has height adjustment and gives free float action to the back rest. Complete with foot ring & taller gas



SELECT Range

SRS06




The SRS 06 has a large backrest area to hug the lower back. A moulded seat for comfort. 3 lever mechanism gives height adjustment and free float motion to the back and seat if required. Each can be used independently as free float.

SRA07



The SRS 06 has a large backrest area to hug the lower back. A moulded seat for comfort. 3 lever mechanism gives height adjustment and free float motion to the back and seat if required. Each can be used independently as free float. Comes complete with Foot Ring & Taller Gas Lift.

SRA05

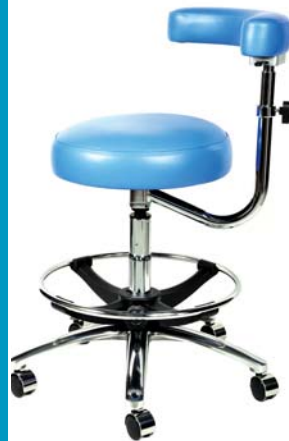

This stool has comfortable circular seating area. It has 360 degree torso/back rest support for comfortable working position. When used as a torso/arm support the ratchet mechanism hugs the torso and a comfortable arm support can be found. Adjustable height positioning. Complete with Foot Ring & Taller Gas Lift.

SRA08



This stool has a comfortable circular seating area. Adjustable seat height.

The backrest has padded backrest which is static to give support.

SRA09



This stool has a comfortable circular seating area. Adjustable seat height.

The off-set padded backrest/arm/torso support give a comfortable working position. Complete with Foot rest & taller gas lift.



GENERAL Range

GRS11



A general purpose stool with a comfortable swivel circular seat area.

Adjustable height positioning.

GRA12



A general purpose stool with a comfortable circular seat area. Adjustable height positioning.

Complete with foot ring and taller gas lift

GRS13



A general purpose stool with a compact backrest which has height adjustment.

The 2 lever mechanism gives height adjustment and free float action to the back rest if required, for comfortable working position.

GRA14



A general purpose stool with a compact backrest which has height adjustment.

The 2 lever mechanism gives height adjustment and free float action to the back rest if required, for comfortable working position.

Complete with foot ring & taller gas lift



SADDLE SEATING Range

GMS10



The saddle seating gives a seating position allowing the spine to maintain a natural 'S' shape.

The saddle seating position enables you to turn and swivel while feet remain in contact with the floor maintaining in a central position which will support the back.

GMS15



This model can benefit a healthy posture by creating an open angle between the spine and thighs thus help maintain natural spinal curves.



Distributor of GMS Co. Ltd