





Link Removal Tool Instructions

Step 1: Wearing the bracelet, gently pinch the links together where it slacks around the wrist. This should help you estimate how many links to remove to achieve your desired fit.

Step 2: Lay the bracelet on the link removal tool. Make sure the side with the bracelet pins slightly indented (**picture show on the left**) is facing the single push pin of the link removal tool.

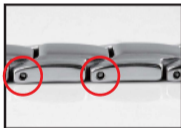

Indented->

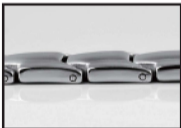

<-Non-Indented

Step 3: Line up the push pin with the bracelet pin you wish to remove. Hold the bracelet in place with one hand and then gently turn the knob on the removal tool with your other hand until the pin is pushed out to the other side. You can then remove the pin by hand.

Note: The pin is split, and the thinner side (left side of picture) will always be on the indented side of the bracelet.



Step 4: Repeat step 3 further down the bracelet (based on how many links you want to remove)

Step 5: Now that the excess links are removed, you need to link both sides of the bracelet back up with a split pin. Hold the two parts of the bracelet together. By hand, insert the thin side of the pin through the NON-indented side of the bracelet. Push it in about 3/4 of the way.



Step 6: Use the link removal tool pin to push the split pin the rest of the way until it is flush in the bracelet like all the other pins. Please note that the thinner side of the split pin is once again on the indented side of the bracelet.

