

## Industrial / Chemical Processing Blowers

## DR 068

.125 HP Regenerative Blower

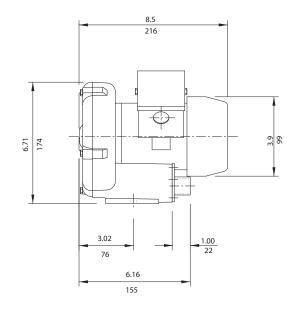

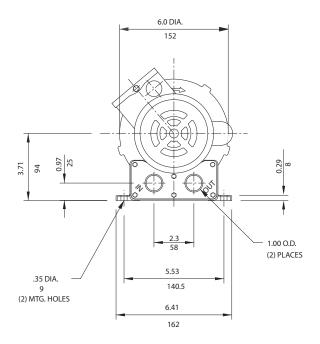

**ROTRON<sup>®</sup>** 

DRAWING NOT TO SCALE. CONTACT FACTORY FOR SCALE CAD DRAWING.

2 CONTACT FACTORY FOR BLOWER MODEL LENGTHS NOT SHOWN.

		Part/ Model Number
		DR068DJ9Y
Specification	Units	081657
Motor Enclosure - Shaft Mtl.	-	TEFC - CS
Horsepower	-	1/8
Voltage	AC	115/230
Phase - Frequency	-	Single - 60 Hz
Insulation Class	-	В
NEMA Rated Motor Amps	Amps (A)	18/1.0-0.9
Service Factor	-	1.0
Max. Blower Amps	Amps (A)	1.18/0.59
Locked Rotor Amps	Amps (A)	8.7/4.35
NEMA Starter Size	-	00/00
Shipping Weight	Lbs	16
	Kg	7.3


**Voltage** - ROTRON motors are designed to handle a broad range of world voltages and power supply variations. Our dual voltage 1 phase motors are factory tested and certified to operate on both: **104-115/208-230 VAC-1 ph-60 Hz** and **100-110/200-220 VAC-1 ph-50 Hz**. All voltages above can handle a ±10% voltage fluctuation. Special wound motors can be ordered for voltages outside our certified range.

**Operating Temperatures** - Maximum operating temperature: Motor winding temperature (winding rise plus ambient) should not exceed 140°C for Class F rated motors or 120°C for Class B rated motors. Blower outlet air temperature should not exceed 140°C (air temperature rise plus inlet temperature). Performance curve maximum pressure and suction points are based on a 40°C inlet and ambient temperature. Consult factory for inlet or ambient temperatures above 40°C.

**Maximum Blower Amps** - Corresponds to the performance point at which the motor or blower temperature rise with a 40°C inlet and/or ambient temperature reaches the maximum operating temperature.

This document is for informational purposes only and should not be considered as a binding description of the products or their performance in all applications. The performance data on this page depicts typical performance under controlled laboratory conditions. AMETEK is not responsible for blowers driven beyond factory specified speed, temperature, pressure, flow or without proper alignment. Actual performance will vary depending on the operating environment and application. AMETEK products are not designed for and should not be used in medical life support applications. AMETEK reserves the right to revise its products without notification. The above characteristics represent standard products. For product designed to meet specific applications, contact AMETEK Technical & Industrial Products Sales department.





## Industrial / Chemical Processing Blowers

## **DR 068**

.125 HP Regenerative Blower

## **FEATURES**

- Manufactured in the USA ISO 9001 and NAFTA compliant
- CE compliant Declaration of Conformity on file
- Maximum flow: 13 SCFM
- Maximum pressure: 13.5 IWG
- Maximum vacuum: 13.5 IWG
- Standard motor: 1/8 HP, TEFC
- Cast aluminum blower housing, impeller & cover; slip-on steel flanges
- UL & CSA approved motor with permanently sealed ball bearings
- Inlet & outlet internal muffling
- Quiet operation within OSHA standards

# **MOTOR OPTIONS**

- International voltage & frequency (Hz)
- Various horsepowers for application-specific needs

### **BLOWER OPTIONS**


- Corrosion resistant surface treatments & sealing options
- · Cast iron (threaded) or face flanges for application-specific needs

### ACCESSORIES

- Flowmeters reading in SCFM
- Filters & moisture separators
- Pressure gauges, vacuum gauges, & relief valves
- Switches air flow, pressure, vacuum, or temperature
- External mufflers for additional silencing
- Air knives (used on blow-off applications)
- Variable frequency drive package



**ROTRON®** 

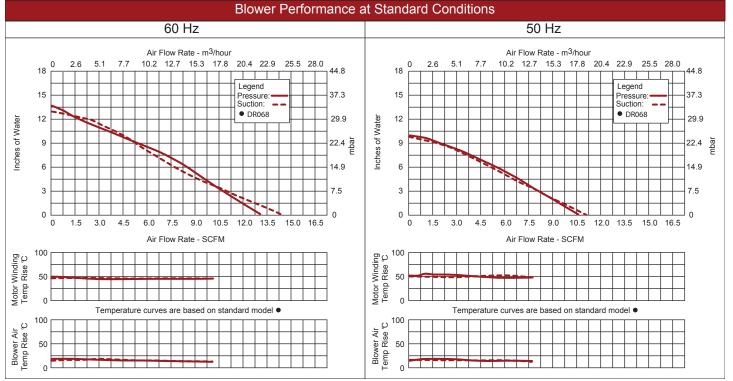

This document is for informational purposes only and should not be considered as a binding description of the products or their performance in all applications. The performance data on this page depicts typical performance under controlled laboratory conditions. AMETEK is not responsible for blowers driven beyond factory specified speed, temperature, pressure, flow or without proper alignment. Actual performance will vary depending on the operating environment and application. AMETEK products are not designed for and should not be used in medical life support applications. AMETEK reserves the right to revise its products without notification. The above characteristics represent standard products. For product designed to meet specific applications, contact AMETEK Technical & Industrial Products Sales department.

AMETEK DYNAMIC FLUID SOLUTIONS 75 North Street, Saugerties, NY 12477 USA: +1 215-256-6601 - Europe: +49 7703 930909 - Asia: +86 21 5763 1258 Customer Service Fax: +1 215.256.1338 www.ametekdfs.com



