INSTALLATION GUIDE

RESEARCH POWErStep

APPLICATION

AMP Part #


Ram 1500 Ram 2500/3500 Crew Cab Crew Cab

2013-2017 2013-2017 77138-01A 77138-01A

Note: The application works only on the Crew Cab model Vehicles.

		A-5 Hours Professional installation recommended SKILL LEVEL (1) (2) (3) (4) (4) (4) (4) (4) (4) (4) (4)
AMP RESEARCH TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 6:00 AM - 5:00 PM PST		
6,641,158; 6,830,257; 6,834,875; 6,938,909 Printed in USA.	lusively by AMP Research in the USA. May be cover ; 7,055,839; 7,380,807; 7,398,985; 7,584,975 ©2012	2 AMP Research. All rights reserved.
www.amp-research.com	1/12	IM77138 rev 03.07.19

INSTALLATION GUIDE Attaching motor to Linkage assembly.

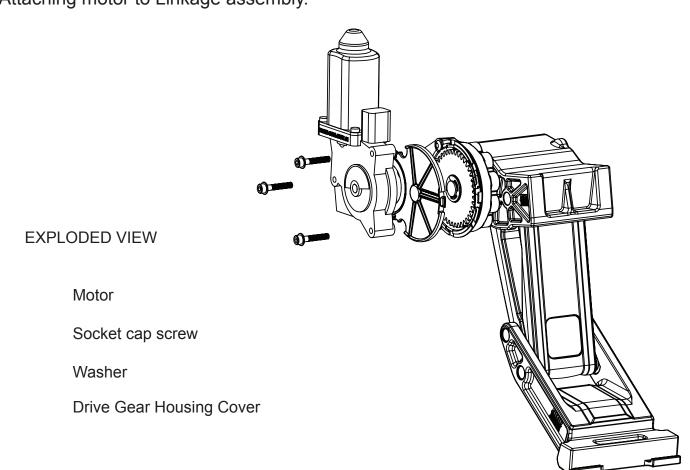

CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.


CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.


Instructions:


1. Position the gear cover in place as shown if not already in place.


2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.


3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.**

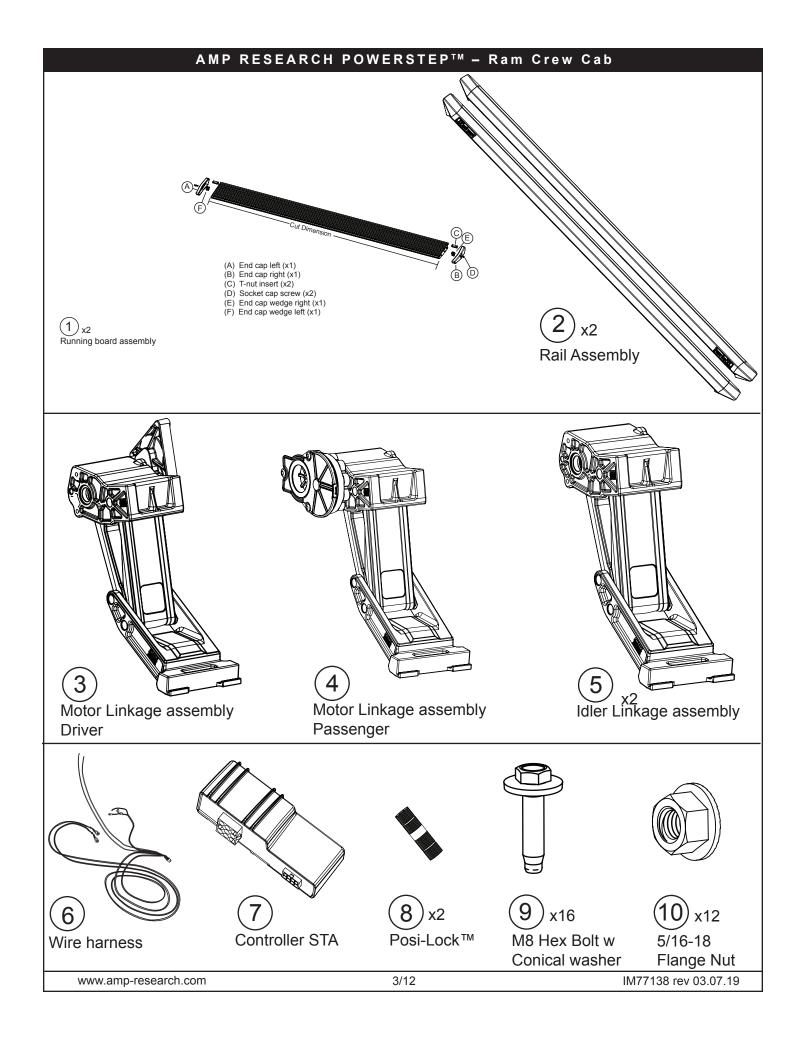

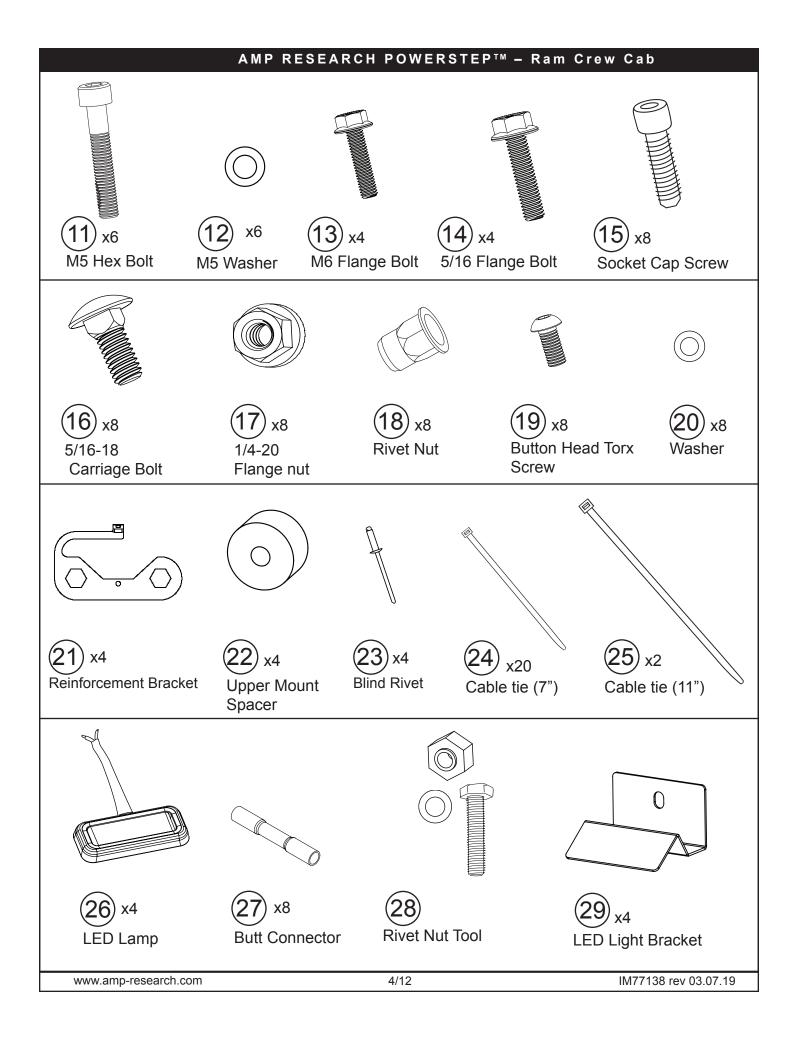


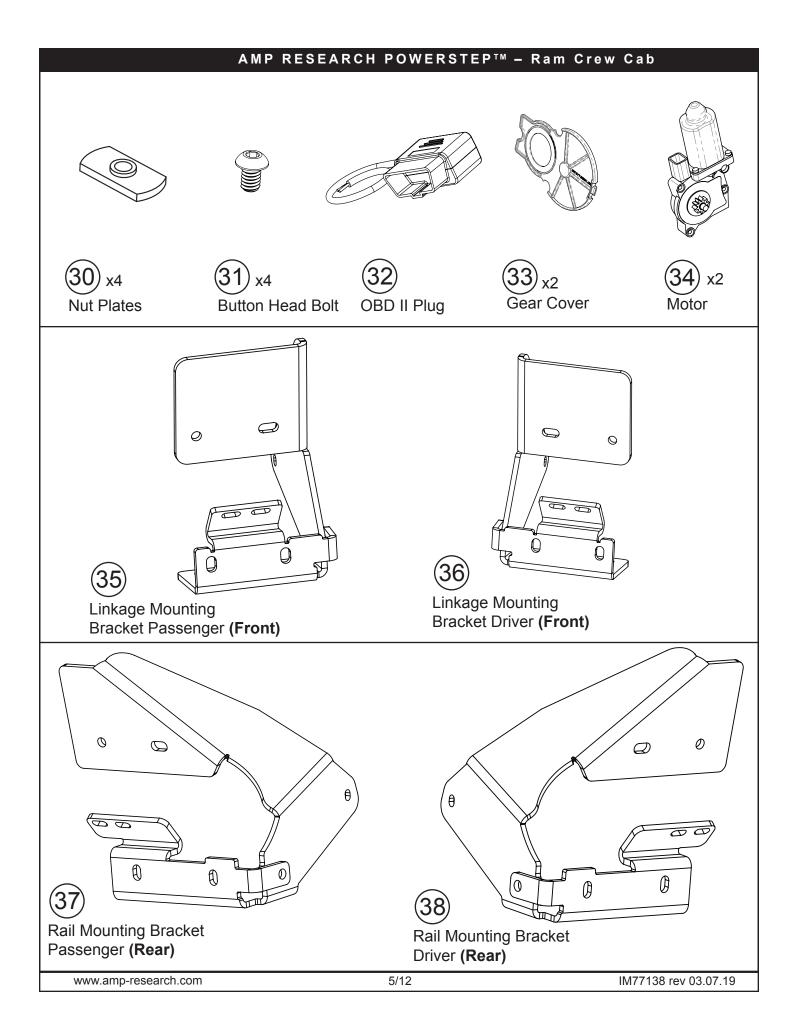

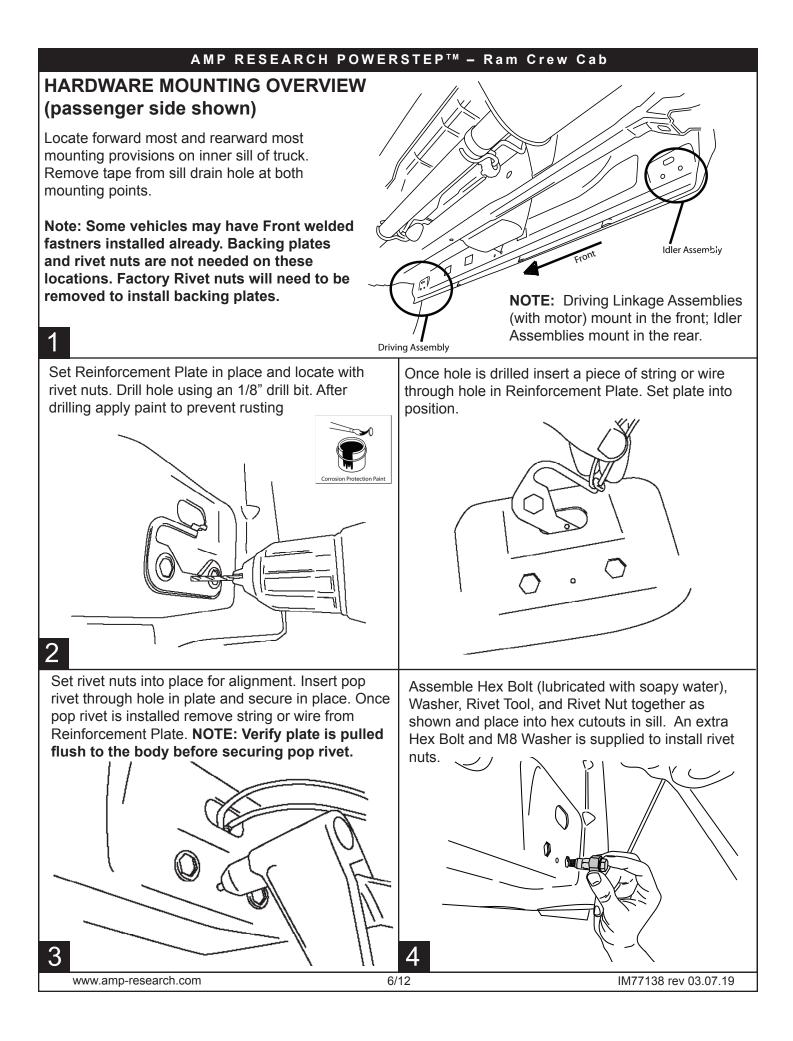

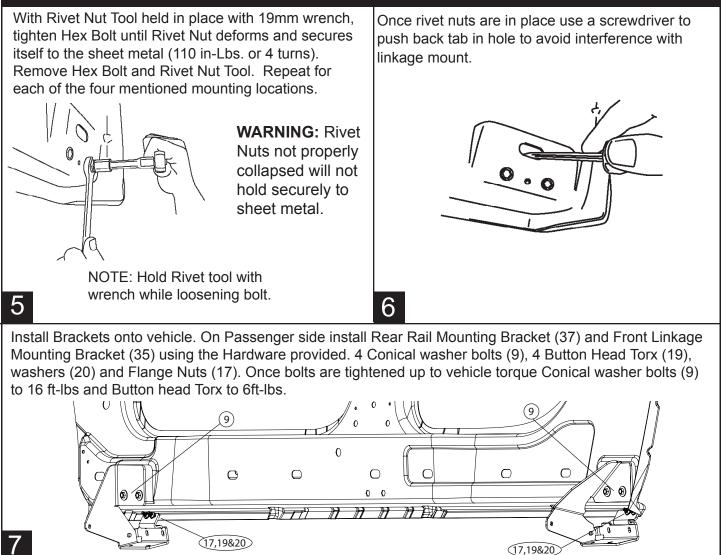


Insert and position Carriage bolts (16) into slot on rail (4). Insert from either end of rail. Using Flange Nuts (17) provided assemble rail to Brackets onto the rail. Next install Flange Bolt (14) and Flange Nut (10) onto bracket tab. Driver side shown. Dimensions shown are for reference. *Torque flange nuts to 16ft-lbs.*

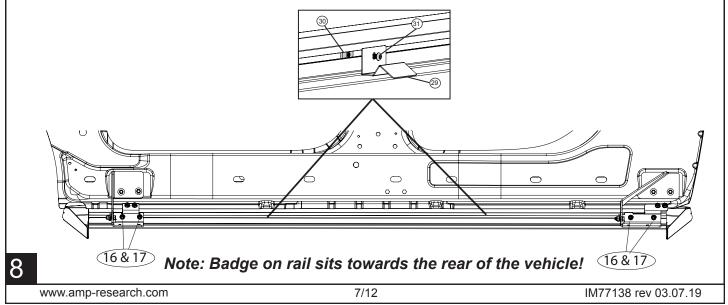


AMP RESEARCH POWERSTEP™ - Ram Crew Cab Install provided spacer (22) and M6 bolt (13) into Thread supplied bolts 2x (9) into Front Drive Linkage. upper mount as shown on both the Drive and Idler Repeat step for Rear Idler Linkage. Do not tighten. linkages. Do not tighten. 10 9 Using a 13mm socket Torque linkage bolts 4x (9) Slide mounting T-nut into position, Center board in from step 3 to 16 ft-lbs. Next use a 10mm socket, rail pocket. Tighten fasteners to 10 ft-lbs. torque linkage spacer bolt 2x (13) from step 6 to 8 ft-lbs. Once linkages are tight cycle board to verify steps deploy under own weight. 11 12 Once linkages are tightened to the bracket tighten Attach motor to linkage. Using a 4mm hex Torque to 36 in-Lbs. bracket tab Flange bolt (14) and Nut (17). Torque to 16 ft-Lbs. 14 3

Prepare large tie-wraps for mounting Power Step Insert controller into tie-wrap loops and cinch down Controller. Loosely loop tie-wraps around large securely. The tie-wraps should cinch down into bundle of wires behind battery in engine channels on controller surface. compartment. 15 16 Remove fuse from Power Step Wire Harness. Connect power leads from Controller, Red to positive battery terminal and Black to the vehicle body ground as shown. 6 18 17 Tape leading end of wires together and push through Locate large rubber wire boot on driver side firewall as shown below. Slice small opening as shown rubber boot to cabin side of the firewall. Silicon lubricant may be used for ease of passage. The below to run trigger wires through. trigger wires will come out just above and to the left of the brake pedal. 9 www.amp-research.com 9/12 IM77138 rev 03.07.19

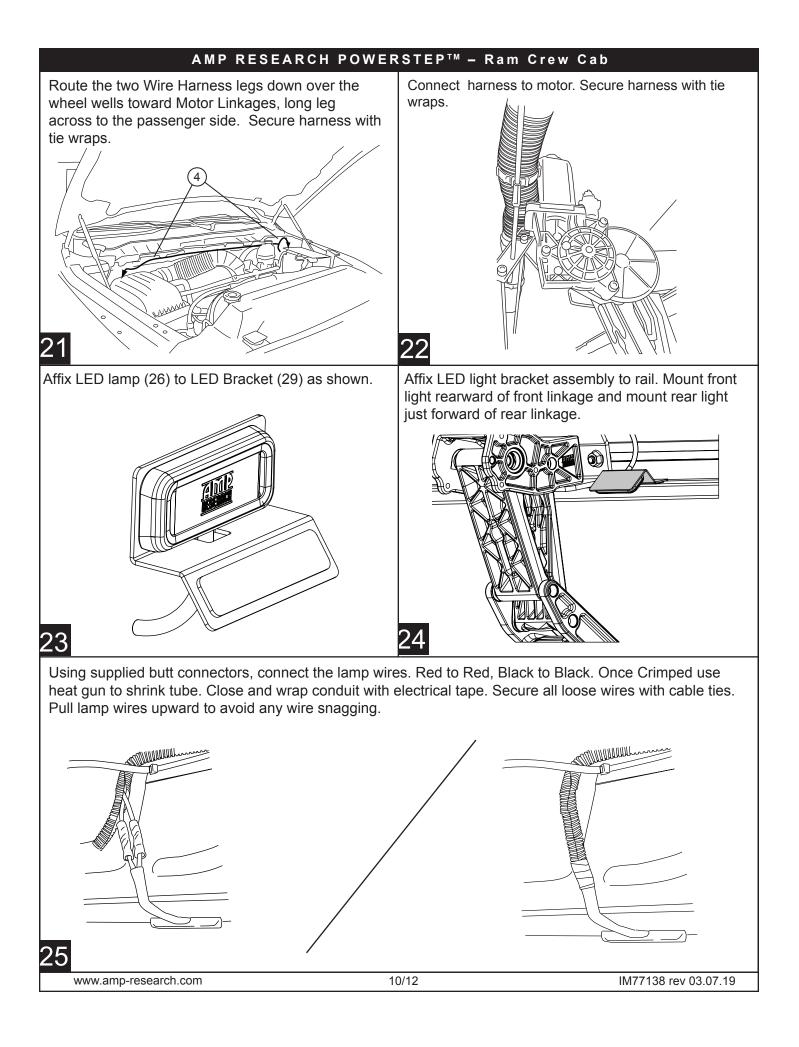


OBD II install: Use Supplied Posi Twist connectors to attach the Plug and Play Module to the Harness. Attach matching colors on the harness to the wires on the module. Plug in module to OBD II port on the vehicle. Secure harness with supplied tie wraps.

Note: If the OBD II pass thru harness (76404-01A) was purchased see install sheet supplied in packaging. The pass through harness allows for an open port for other accessories. See next page for a brief description.

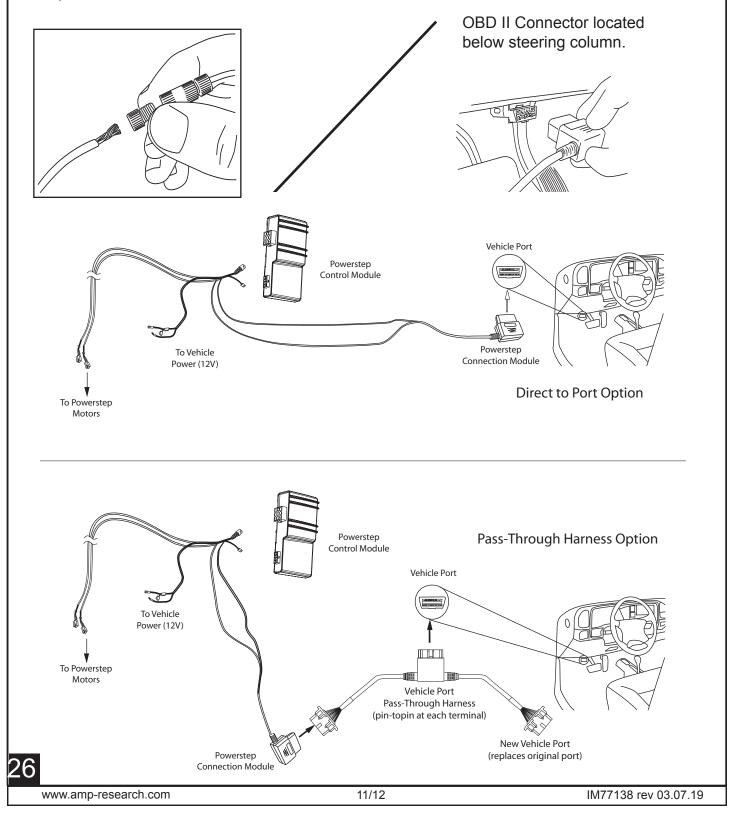

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

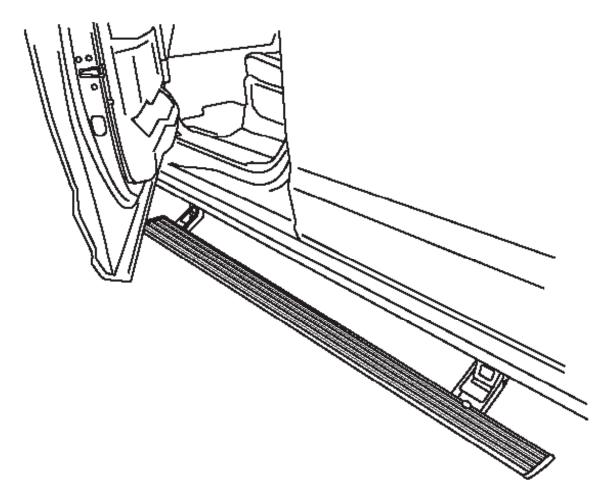

FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close. **NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. **Note that** *there is a 2-second delay before the PowerStep returns to the stowed/retracted position.* **CORRECT OPERATION OF LIGHTS:** All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reillumintated by closing and opening any door of vehicle.

RESERRCH POWEr Step

Congratulations on your purchase of the genuine AMP Research PowerStep! Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.



Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. <u>Avoid spraying the motors directly.</u> After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All[®] to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH CUSTOMER SERVICE 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.