



AgriEid Handheld Reader

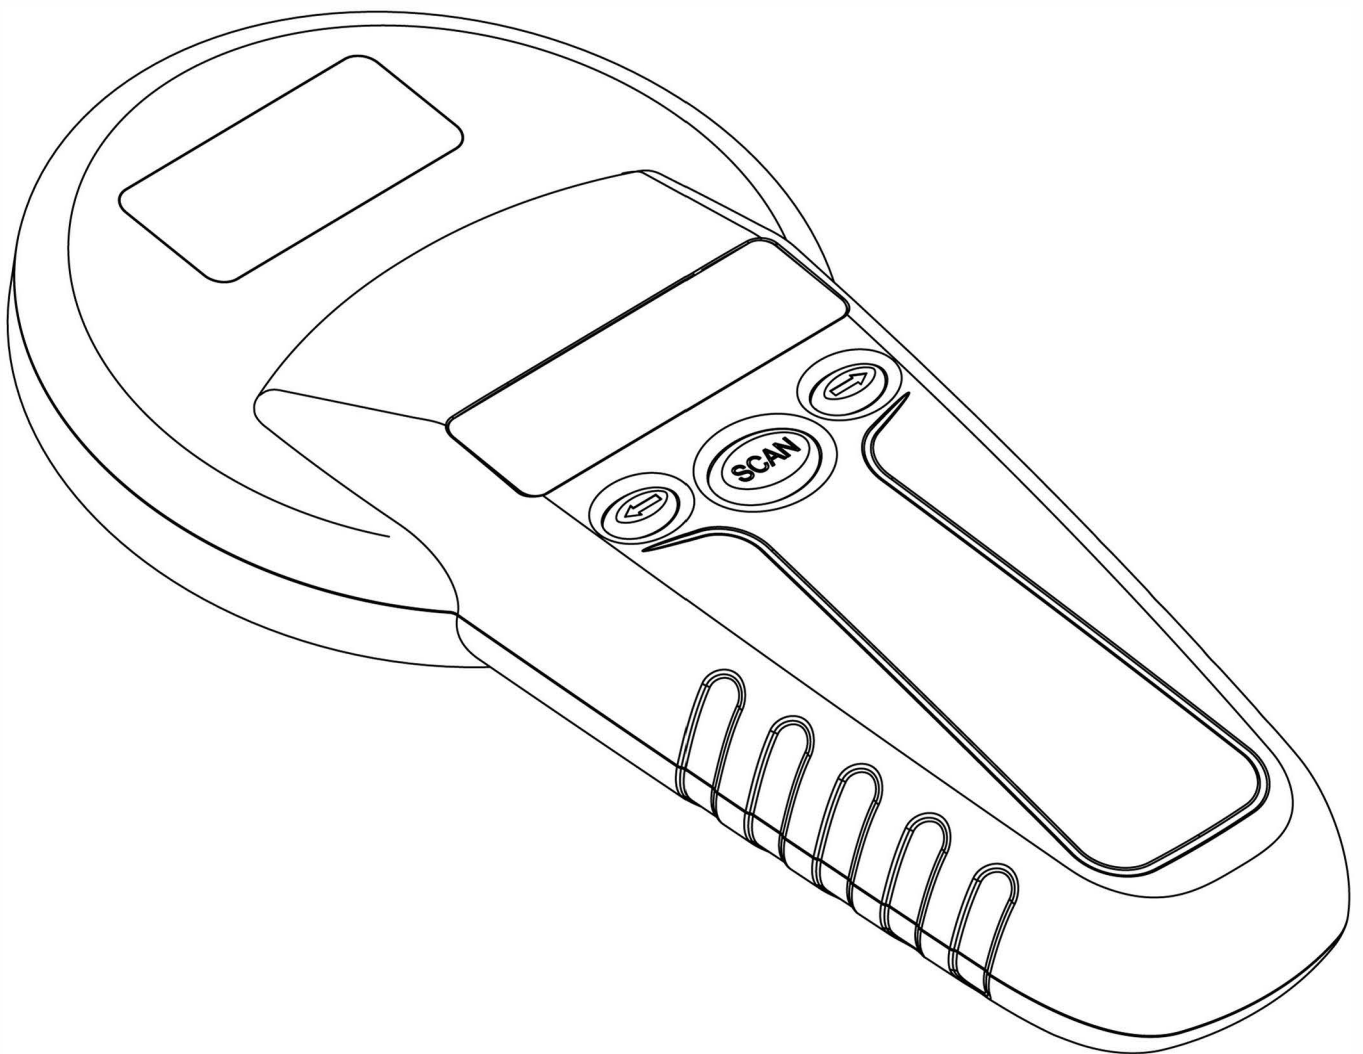


Operation Manual

①

Product Introduction

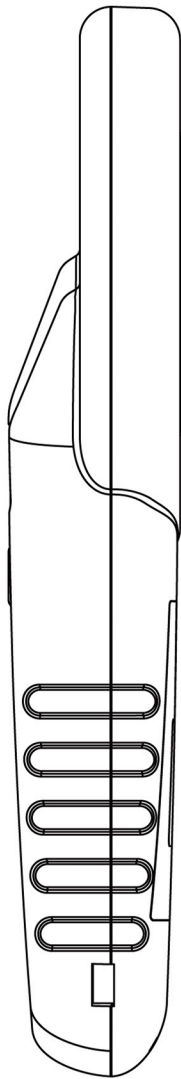

Side view

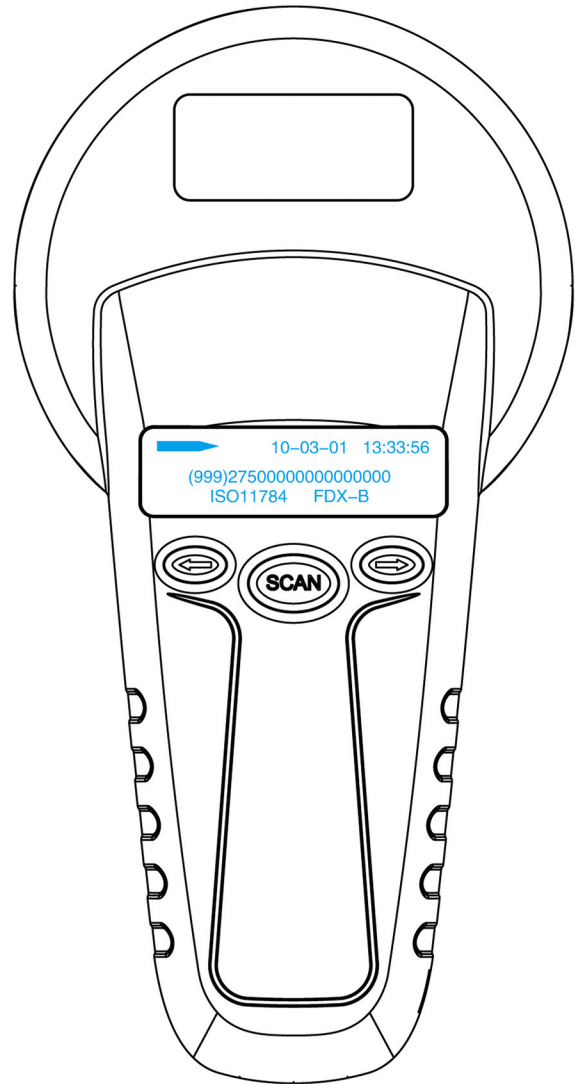

Front view

Comfortable hand feeling ;
Clear OLED display;
Three-button easy operation;
Perfect operation interface;
Easy&Convenient secondary;

②

Battery Installation


Open the back cover
and slide down



If hard to open - use a
knife to open gap and
apply downward
pressure on point
marked in photo



Connect the battery
pack by snapping the
2 cables together

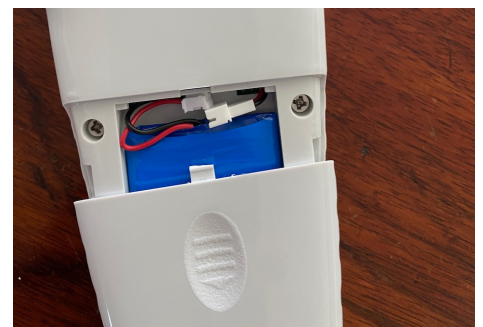


With the battery pack
connected the device
will now scan + charge



③

Screen Display

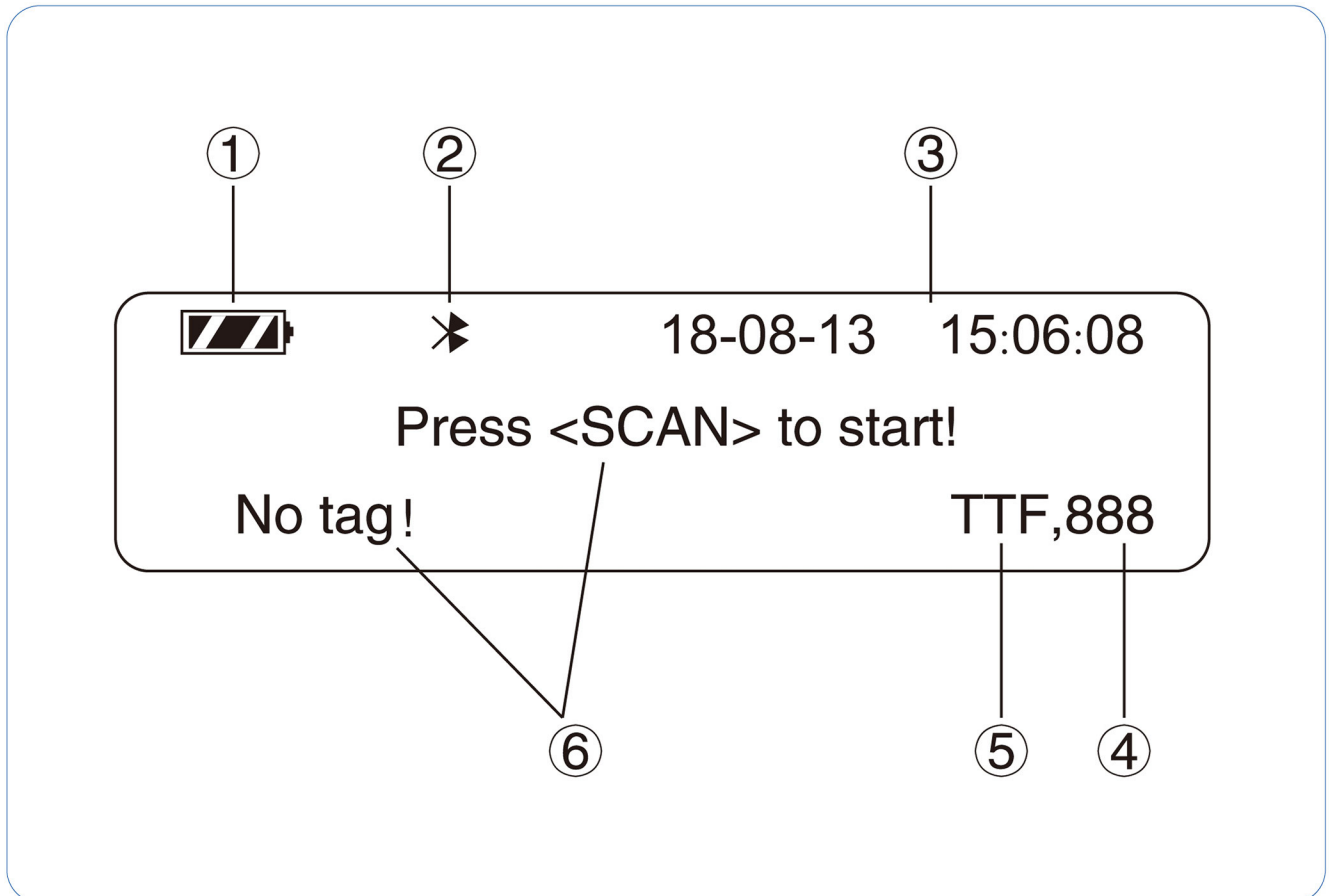


- ① Battery power
- ② Time&date
- ③ Records
- ④ Current scanning mode
- ⑤ Current operation information


4

Scanning


1 Press **SCAN** and enter the scanning status.

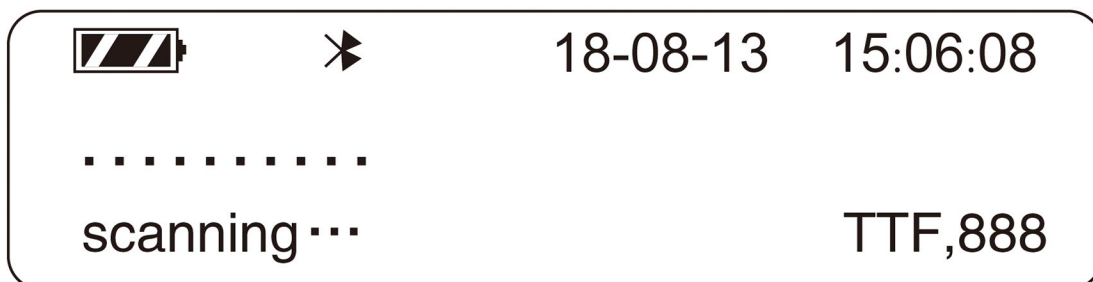

2 If there's no tag detected within 1min, it enters the following interface, press **SCAN** to enter scanning status again.

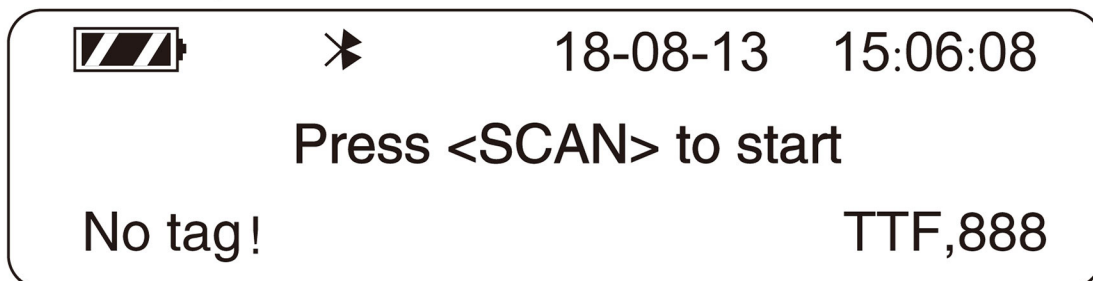


3 Tag number will be displayed if it is detected, press **SCAN** to scan the next tag.

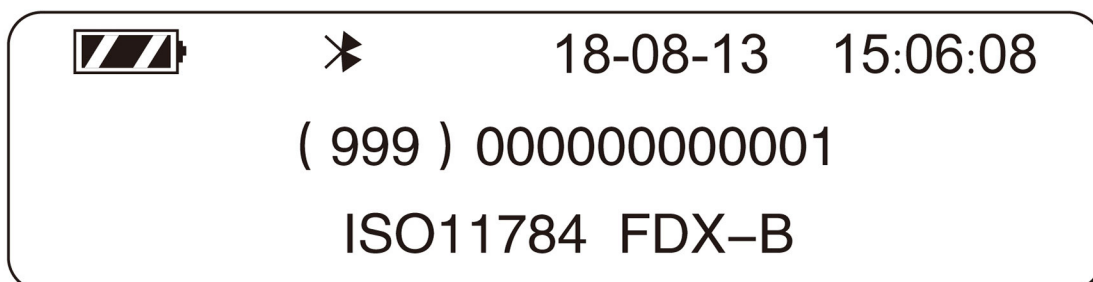






5

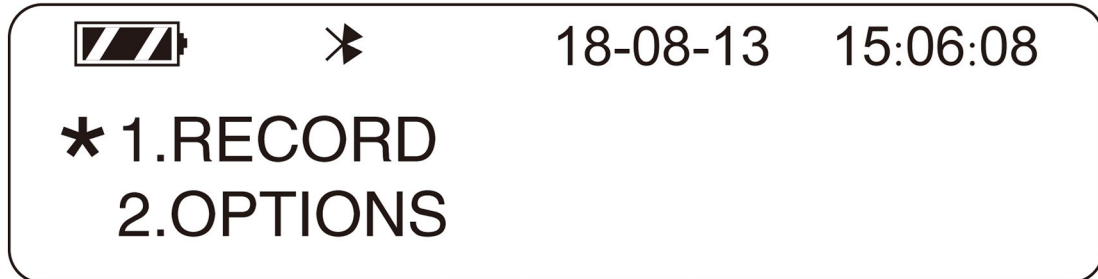
Menu Setting

1 Press  to enter the menu setting interface.





2 Press  choose the option(mark "✱"), press  to enter. Press  to return to the previous menu.

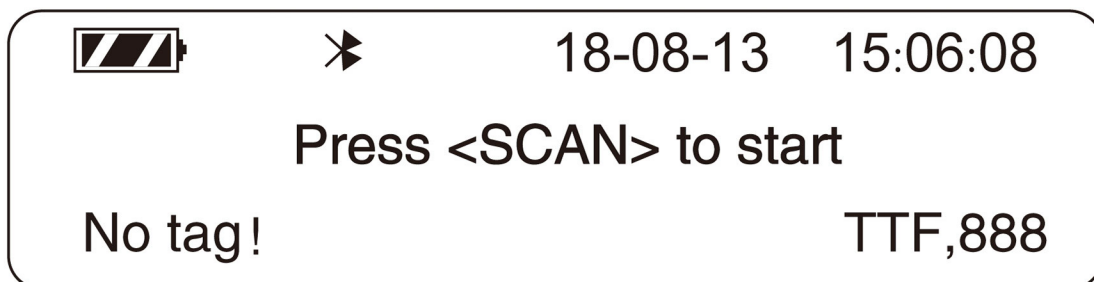3 Shortcuts of language switching: in the following interface, long pressing  and in the meantime pressing  to switch the language




⑥

Menu Description

- 1 Record list: enter the record menu, press  &  to check the records.
- 2 Settings:
 - (1)Language: operation language choice
 - (2)Tag type:

TTF and barcode are optional
 - (3)Task
 - (4)record option: there're "YES"& "NO"two modes. Under "NO" mode, the same tag number will be recorded only once if it is multi-read.Under "YES" mode, the same tag number will be recorded many times if it is multi-read. "NO" is the default mode.
 - (5)Time: set the time and date.
 - (6)Buzzer: the default mode is "open" .
 - (7)USB keyboard simulation: when it is under "open" mode and connected to the computer through USB, the device has the keyboard simulation function.
 - (8) Power management: shut down delay setting, the range is "1-20" minutes.
 - (9)Clear all the records: clear all the records in the device.
 - (10)Firmware upgrade: device software upgrade. If needed, please operate under manufacturer' s guidance.
- 3 Device info: the device number (bluetooth number) and version number is for maintenance use by the manufacturer.
- 4 Power off: shut down the device.

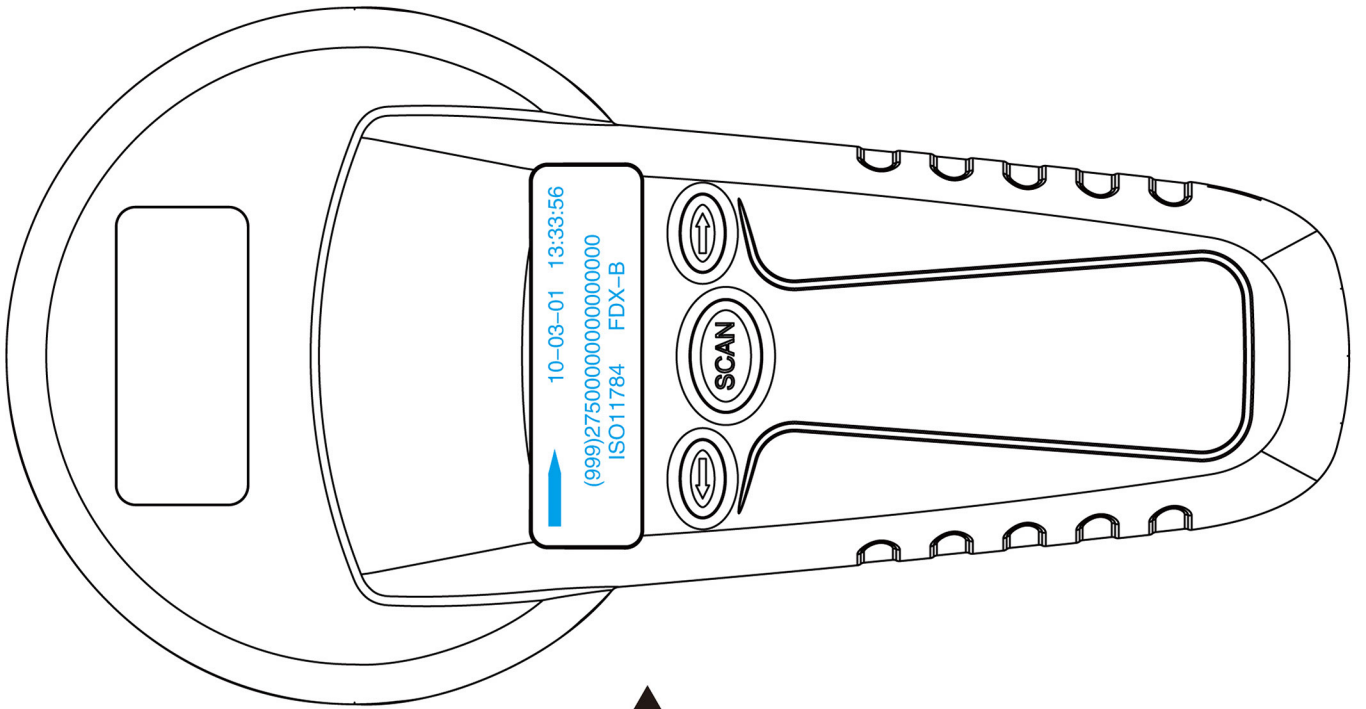

USB 
UNIVERSAL SERIAL BUS