

# Univox® CTC

Cross the Counter Systems for counters, desks and cashiers




## Features

- Correctly installed and adjusted system complies with the industry standard IEC 60118-4
- Reliable, powerful amplifiers guarantee problem free functionality
- Dual action AGC supplies excellent speech perception and eliminates pumping effects
- Compensation for long microphone distance:  
AGC with very large input range (70dB) guarantees smooth sound level
- Low overspill due to defined spreading:  
at 1.5 m from the middle of the desk the magnetic field is reduced more than 33dB
- Smallest distance between 2 systems is 1 meter
- Amplifier equipped with LED for function control
- User friendly - system works automatically without the need of any adjustment

## No more communication problems!

Univox® CTC (Cross the Counter) is a complete induction loop system for installation in receptions, information desks, supermarket cashiers and ticket booths. When installed, the system grants for hearing aid users to communicate with the staff with high speech perception.

The system includes an induction loop amplifier, a microphone and a loop pad. The reliable and powerful amplifiers, equipped with a modern and intelligent AGC function, supplies excellent speech perception in any situation. Choose between a goose neck microphone and a small self-adhesive microphone which can be mounted on a glass or a wall. Every Univox® CTC system includes a loop pad which is mounted under the counter/desk. Correctly installed the system works automatically without any settings or adjustments.

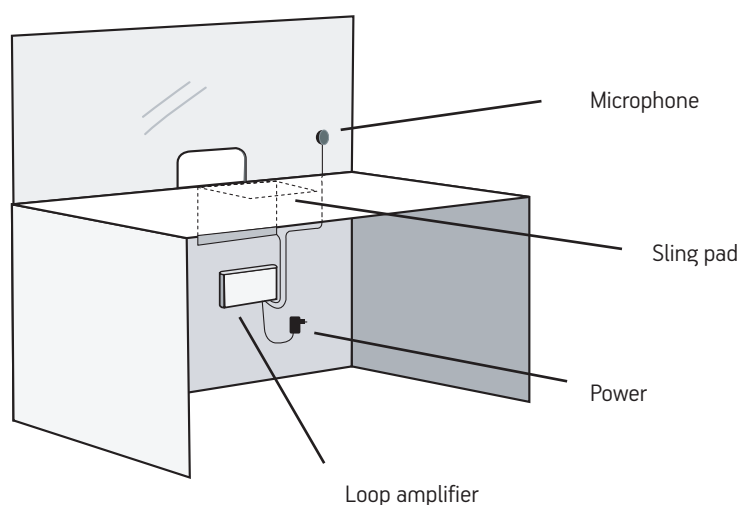



## System overview

Part No	Description
202040A EU	<u>Univox® CTC-120</u>
202040A UK	Univox® CLS-1 loop amplifier
202040A AU	Univox® AVLM5 microphone for glass/wall
202040A US	Loop pad Sign/label with T-symbol, 80 x 73 mm Wall holder for Univox® loop amplifier
202040B EU	<u>Univox® CTC-121</u>
202040B UK	Univox® CLS-1 l loop amplifier
202040B AU	Univox® M-2 goose neck microphone
202040B US	Loop pad Sign/label with T-symbol, 80 x 73 mm Wall holder for Univox® loop amplifier

## Technical data

For technical product information regarding the amplifiers CLS-1 and regarding the microphones AVLM5 and M-2 we refer to product Brochures, see our websites.



CLS-1 loop amplifier



AVLM5 microphone for glass/wall



M-2 goose neck microphone



Loop pad



Sign with T-symbol



Wall holder for loop amplifier



For additional information, please refer to User Guide/Installation Guide which can be downloaded from [www.univox.eu](http://www.univox.eu). If required, spare part list or other technical documents can be ordered at [support@edin.se](mailto:support@edin.se).