

## Put the *power* of water to work for you.

Coatings2go, LLC., provides hydrophilic and other coatings that are quickly delivered to you hassle-free, and in a cost-effective manner. Our coatings are perfect for on-site manufacturing, eco-friendly, and can be controlled by your employees, in your own facility, and are FDA Master Filed. They are easy to customize and offer you performance and versatility, with no license fees or royalty costs. You can purchase domestically or internationally through our quick and secure online ordering.

### Advantages of water-based coatings:

- > Non-flammable or carcinogenic
- > Workers prefer them
- > Lower insurance cost
- > No need for large air volumes for ventilation
- > Lower costs for heating & cooling air
- > Lower-cost disposal & clean-up

### Markets Served:

- > Ocular surgery devices
- > Endoscopic devices
- > General surgery devices
- > Cardiovascular access & therapy
- > Dental products
- > Your products? Let's get started!

## Chemical *solutions* for your **needs**:

Biological • Chemical • Electrical • Mechanical

7 coatings options

3 available sizes

4, 12, or 32 oz.

+1 978.369.7411

[www.Coatings2Go.com](http://www.Coatings2Go.com)

**ORDER NOW!**

Surface Solutions Laboratories, Inc., was started in 1995. Our experienced staff holds nine U.S. patents—and brings a breadth of medical device industry expertise, with 35-plus years of design and formulation of coatings and adhesives across many market platforms. SURFACE SOLUTIONS LABORATORIES® coatings are based upon the proprietary technology of Surface Solutions Laboratories, Inc. Coatings2Go, LLC, is a licensee of Surface Solutions Laboratories, Inc., technology.


© 2012 Surface Solutions Laboratories, Inc. All Rights Reserved. SURFACE SOLUTIONS LABORATORIES is a trademark of Surface Solutions Laboratories, Inc., registered in the United States Patent and Trademark Office. COATINGS2GO is a trademark of Coatings2Go, LLC, registered in the United States Patent and Trademark Office.

## Water-based medical coatings

*Easy to order. Easy to use.*

*Direct to you.*

Coatings  
**2Go**™

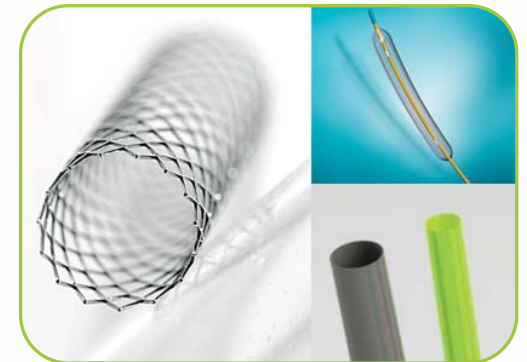

Heparin release/retention in urethane 6-65D

Time	Ave eluted, mg	Ave cum % eluted	Surface
			Active by factor Xa
0 Hr	0	0	
1 Hr	0.0349	3.43	
1 Day	0.1609	17.415	
2 Day	0.0081	18.215	
3 Day	0.0063	18.835	
7 Day	0.0068	19.5	
14 Day	0.0004	19.58	
30 Day	0.0007	19.64	2.2mU/cm <sup>2</sup>
60 Day	0.00005	20.66	2.5mU/cm <sup>2</sup>
90 day	below detection		1.5 mU/cm <sup>2</sup>
6 month	below detection		2.0mU/cm <sup>2</sup>
Film load,mg	1.02	100	


< Antimicrobial Coatings

# How we can help:


- > Supply coatings from our Web site: [www.coatings2go.com](http://www.coatings2go.com)
- > Prototype coating—proof of principle
- > Consult on tech transfer & processing in your own facility
- > Customization of the coating or packaging
- > Pretreatment & printing for adhesion improvements

Hydrophilic & hydrophobic slip coatings for plastics and metals.

Test Facility: Biocascade

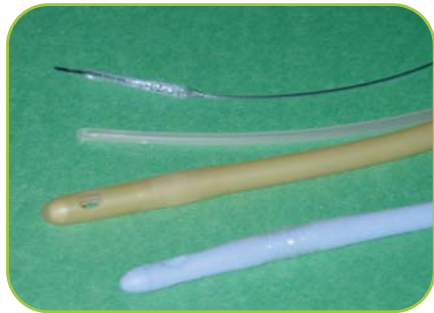


Antimicrobial Coatings

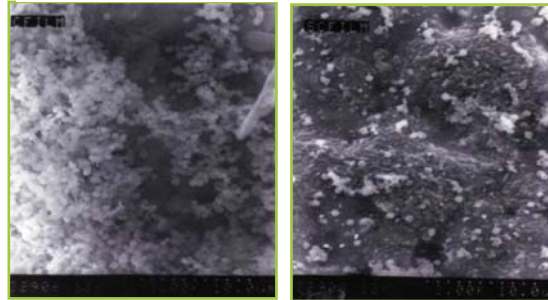


Uncoated

Coated

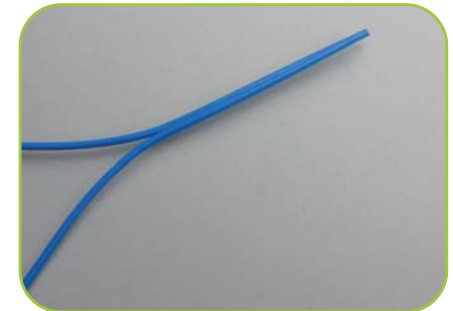

Blocking and antiblocking coatings

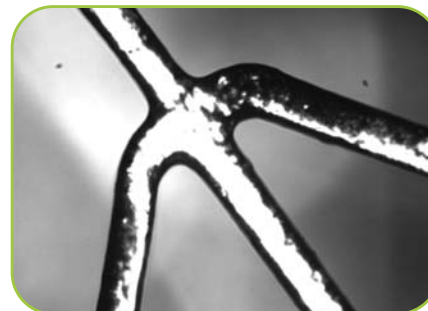

Drug Delivery Coatings



Pigmented, UV-traceable, protective, and special effects coatings

+1 978.369.7411  
[www.Coatings2Go.com](http://www.Coatings2Go.com)  
**ORDER NOW!**