

pTron

Pulsefit F121

Smart Fitness Band



Wearing Method

Best to wear the band after the styloid of ulna;

Please fit the adjusting holes according to your wrist size, and then do up the wristband buckle;

The sensor should cling to skin to avoid movement.

Charging the band

Please ensure the band has enough battery at your first time using it. Please charge the band first if it can not be powered on, and then the band will automatically start working.

Charging method: Unplug the band body from both ends of the strap. Insert the USB plug of the band correctly into the USB port of the computer or the device adapter.



Please remove the strap and charge the bracelet according to the direction shown in the figure

Power on/off

① In shutdown state, please long touch the function key over 2 seconds to start the device with vibration;

② Short touch on MFC until you see the Function page. Long touch the MFC point for more than 2 seconds to enter the function interface. Short touch to select power off, when the power off interface appears long press for 2 sec to power off the smart band.

Band operation

- ① In power on state, short touch the function key to light up the screen to default page with date and time information;
- ② In the default time/date page, short touch the function key can switch band to different pages. The screen will be turned off if no operation in 5 seconds;
- ③ For checking heart rate/blood pressure, just wake up the screen with 1 touch MFC, go to the heart-rate/blood pressure page, short press MFC, wait for measurement and then the result will be displayed in 40 seconds.

Install the band APP on the phone


Generally, you can download the Android app by search "HryFine" in the app market or scan the QR code, and the IOS version can download by scan the QR code



System Requirements:
Android 5.0 and above;
iOS10.0 and above;
Bluetooth 4.0 support.

Bundle the band to APP

For the first time using the band, please connect it to the APP to calibrate the time and date, otherwise the pedometer and sleeping monitor will not be accurate. The band will automatically be synchronized when successfully connected.

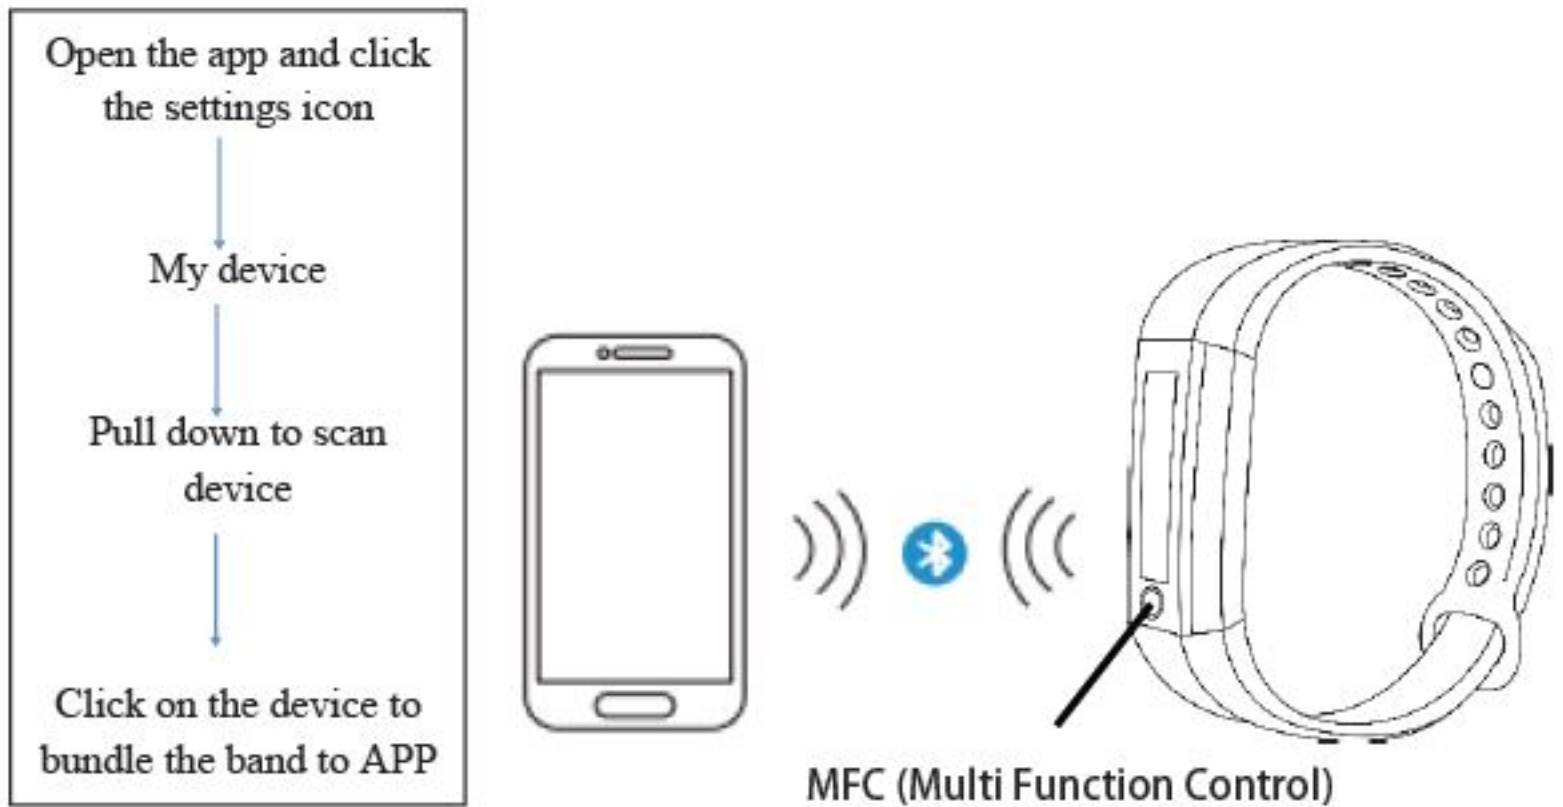

- ① After the band is bundled to APP successfully, the APP will save the band info, search and connect the band automatically if the APP is opened or running in the background.
- ② Pls ensure the band has all the required permissions of the system during installation or set the permission in your phone's system settings, such as running in background and reading contact information.

APP functions and settings

Personal information

Please set personal information after entering the APP;

Settings → personal settings, you can set the gender - age - height - weight to ensure the accuracy of distance and calorie calculation. You can also set your daily exercise and sleep goals and monitor daily completion.

Message notification

Incoming call:

In the connected state, if the incoming call reminder function is enabled, the band will vibrate when there is incoming call, and the name or number of the incoming call will be displayed. (Need to set permission for APP to access phone address book)

SMS notification:

In the connected state, if the SMS remind function is enabled, the band will vibrate when there is a SMS.

Other remind:

In the connected state, if you turn on this feature, the band will vibrate when there are WeChat, QQ, Facebook and other notifications on your phone, and the message will be displayed on wristband. (Need to turn on notification in phone system, and set permission of APP to access system notifications).

Note: Social media notificattion depends on phone's OS.

Vibrating reminder:

If turned on, the band will vibrate when there is a call, information or other reminder. If turned off, there will only be remind on screen without vibration, so as not to disturb you.

Sedentary reminder:

Set to enable/disable the sedentary reminder function. You can set

the reminding interval in the profile, thus the band will remind if you sit for a long time over that interval.

management to trusted list and allow all permission to enable full functions.

APP features and settings

Smart alarm clock

In the connected state, three alarm clocks can be set and synchronized to the band;

Offline alarm is also supported. After successfully synchronized, even if the APP is not connected, the band will still alarm according to set time.

Band display settings

In this option, you can set the display pages on your band . The enabled function pages will be switched one by one with your touch on function key, and disabled function page will not appear.

Looking for band

In connected state, click the "Looking for band" option, the band will vibrate to cause your attention.

Shake to take selfie

In the connected state, enter the "shake to take selfie" in APP, shake the band, and the APP will take photos automatically after 3 seconds countdown. Please allow APP to access the camera and photo album to take and save the selfie.

Band display instructions

Press and hold 2 seconds on each interface of the bracelet to enter/exit the menu.

Clock interface

After synchronizing with the phone, the bracelet will automatically calibrate the time;

Standby time setting: Press the touch button for 3 seconds on the clock interface to switch between different interfaces. A total of 3 sets of interfaces

Pedometer
Wear a band to automatically record your daily activity. You can view the real-time steps today.

Distance

Based on the number of your daily activity and your personal profile, the distance you traveled will be displayed.

Calories

Based on your walking distance and your personal profile, the calories burned will be displayed.

Heart rate, blood pressure

Switch to the heart rate or blood pressure interface, long touch to enter measurement page, and the result will be displayed in 40 seconds.

Sleep mode

The bracelet will automatically monitor your sleeping status in night; it will detect your sleep status with deep sleep / light sleep / awake times, calculate your sleep quality; the result can be checked on APP.

Note: The band will track sleeping status only when you wore it during your sleep in night. Place the band somewhere will not trigger the sleeping monitor. Sleeping status from 9:00pm to 9:00am will be recorded.

Please synchronize your band with APP after 9:00am the next day to upload the data before you can check it.

More mode

MAC: local address information

Shutdown: long press 2S pop-up shutdown prompt box, choose whether to shut down.

Specifications

Device type	Smart band	Battery	Lithium polymer
Vibration motor	support	Connectivity	Bluetooth 4.2
Operating temperature	-10°C~50°C	sensor	Low-power accelerometer
System Requirements	iOS 10.0 & above / Android 5.0 & above		

Notices:

- 1.Take off your band before having shower or swimming.
- 2.Please connect the band when synchronizing data.
- 3.Use the 5V USB charging adapter.
- 4.Do not expose the band in high moisture or extreme high temperatures.
- 5.When the APP crashes or reboots, please check the phone memory, clear it and try again, or exit the app to reopen it.