

Seat Installation

X3, X4, X8 Series



Seat should be on the right side of cart
(NOTE: Left/Right is determined standing behind the cart)

X3 Series


Step 1: Slide seat bracket through opening in lower frame connector



Tighten both thumb screws to secure bracket in place.

X4/X8 Series

Step 1: Seat bracket is attached to the two bars of the lower frame using the two clamps provided. Two clamps with screws on the right and left.

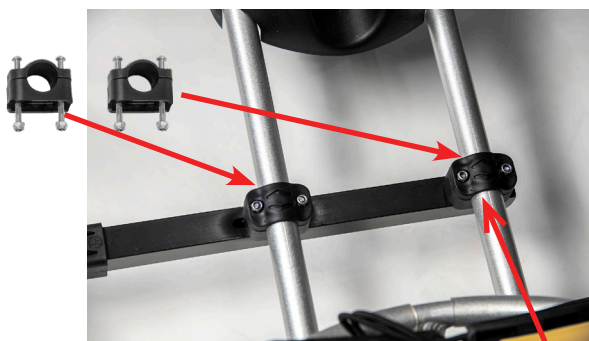

Clamp styles may vary on older carts.



Step 2: Fit bottom of seat into slot on the bracket



Hold base of post on the ground and lift the post connector to slide on to the bracket.

Step 3: Attach seat to top of seat post (tight fit)



Step 4: The seat is spring loaded and the base is kept off the ground until weight is applied. When you sit on the seat the base will touch the ground for support.