


FACE VITAL
Silicone Facial Brush

Visit our website:

<https://facevital.com>

Operation Manual


Thank you for purchasing this product. Please read all the contents of this manual carefully before use and keep it properly.

About this manual:
The product pictures and related product features as shown in this instruction, as well as the explanations of some nouns, can only be used as reference. In case of user's on hand as the standard, the reference data is from the company's laboratory.

Safety Attention
Please read this manual carefully before use, and then use this product correctly. The machine should be cleaned in a timely manner after use to avoid the accumulation of residues. Please follow the instructions and recommendations for proper use.


Dangerous	Content related to serious personal injury caused by incorrect operation
Warnings	Content related to personal injury caused by incorrect operation
Alertions	Content related to personal safety or property loss caused by incorrect operation

Dangerous

- Please use the charging line randomly distributed by this product to recharge and connect the charger to the home socket correctly to avoid failure, fire or fire caused by heat.
- Cause the product built-in rechargeable lithium battery. Please do not put this product in fire or use it in high temperature and high heat environment, which may lead to failure, fire or fire caused by heat.
- If the product is deformed, damaged or smelly, please do not use it again as to avoid the risk of electric shock and fire.


Warnings

- Please do not disassemble or modify this product on your own so as not to cause failure.
- Please avoid falling and hitting this product so as not to cause failure.




Attention


- If the machine is damaged, in order to avoid danger, it must be repaired by the manufacturer, or the maintenance department or similar department's professional staff.
- Do not use this product (such as alcohol, gasoline, spray, etc.) near the flammable and explosive goods, which may lead to fire or explosion.
- It needs monitor children to make sure they don't play with the product.
- Place the packaging materials, such as plastic bags, in a place where the children can't reach.
- Please turn off the power and contact the factory after sale when a fault occurs in cleaning and maintenance or failure in use.
- Do not use this product for purposes other than those specified in this specification in order to avoid failure or fire caused by heating.
- If the product is unusually hot in using, please stop using it immediately and turn off the power to avoid scalding.
- Please do not use the machine in case of failure, it may have adverse effects on the body or other risks.




Intimate beauty instrument

 **400mAh Lithium Battery**

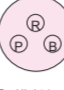
Intelligent charging scheme, built-in a 400mAh battery with a longer time to use (7 days with full power).

 **Vibration Massage**

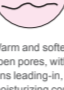
Use with essence, mask, cream and other skin care products to moisturize and tighten the skin.

 **EMS Leading-in**

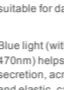
With the flow of ions, the nutrient components are permeated into the skin, and the nutrition of the skin is facilitated.


 **Color lights skin care**

Red light (wavelength 620-630nm) activates skin fiber cells, makes skin shiny and elastic, and wakes up skin.


 **Wet heat moisturizing skin**


Warm and soften horniness, gradually open pores, with vibration massage and ions leading in, so that moisture and moisturizing components can go deep into the skin base.

 **Purple light** (wavelength 415-431 nm) whiten skin, brighten skin, and is suitable for darker skin.

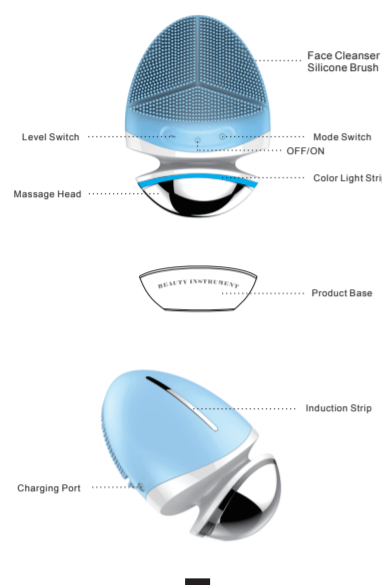
 **Deep cleaning**

Used with ultrasonic vibration, the vibration caused by the force acting on the magnetic field to remove grease and garbage directly.


 **Blue light** (with a wavelength of 465-470nm) helps to improve sebum secretion, acne, and the skin is glossy and elastic, calming the skin.



Component Description



- Face Cleanser Silicone Brush
- Level Switch
- Mode Switch
- OFF/ON
- Color Light Strip
- Message Head
- Product Base
- Induction Strip
- Charging Port



Key Description of Silicone Facial Brush


- Long press the power key for 1.5 seconds to turn on/off the product.
- Short press the "mode switching" key one time to switch to the red light constant temperature mode after the machine is turned on, and switch to the purple light EMS mode for the second time short press.

Operations

[Pre-use preparation]


- Prepare the facial cleanser and clean the wet face.
- Use the toner to apply the face, turn on red heating mode for leading-in.
- Use the essence to apply the face, and turn on the purple light EMS mode for lifting.

<Blue light dilute & repair acne>


 **1. Deep cleaning, derived dirt**

Positive ion combined with acoustic massage, leading out makeup residue and dirt, clean and dredge pores, build a good attraction foundation for follow-up nursing.


<Red light wake up collagen>

 **2. Warm massage, wake up the skin**

High frequency vibration warm massage, go through the skin cuticular layer, directly acting on the dermal layer, rejuvenating the skin.



<Purple light tender and whiten skin>

 **3. EMS micro current, leading-in nutrition**

Micro current combined with constant temperature massage, powerful push skin care essence through pores into the muscle fiber, deep nourishment, skin care effect doubled.

<Charging>

There will be residual electricity before the machine leaves the factory. Please use up the remaining electricity and recharge it.


- Connect the machine to a charging line and charger, and plug it into a household power outlet.
- The color strip shines red when charging.
- When the machine is full charged, the color strip is always on green light.

<Charging Time & Usage Times>

- It takes about two hours to charge.
- Full charged can be used for about 7 days (15 minutes per day).
- Depending on the use situation, the number of times of use will be a little different.

Cleaning and Maintenance

- Please clean the silicone brushing hair in time after used, and put them vertically or hang them dry.
- This product is designed to prevent drenching water, which can be washed with water.
- Do not use alcohol, steel ball, abrasive cleaner, corrosive liquid cleaning the product, otherwise it may damage the product or cause cracking or fading.
- If you don't use it for a long time (about 3 months), please take out the machine and store it after full charged.



After-sale Repairing

- This product is only suitable for personal home care, not for commercial purposes.
- We provide one year warranty for the product, which is calculated from the date of purchase.
- During the warranty period, we will replace the parts or the whole product as appropriate for this product due to defects in the material or production process.
- Application for warranty must be submitted to the manufacturer after-sale department of this product together with a certificate that certifies the date of purchase (such as purchase invoice).
- The following conditions are not guaranteed by the company:
 - Damaged caused by improper use, such as improper plug insertion at charging port, reverse insertion of charging plug, artificial damage, etc.
 - The aging and wear of the product caused by normal use, but it has little effect on the use function of the product.
 - Product problems caused by used for other purposes, or improper operation or unprofessional maintenance or use of accessories other than our company.
 - Consumables, accessories, etc.
 - Damaged caused by force majeure factors (such as lightning, fire, flood, etc.)

Specification Parameters

Product Name: Silicone Facial Brush
 Item No.: DS-8806
 Working Voltage: 3.7V
 Power Rating: 1.5V~1A
 Power Supply: 5V~1A
 Net Weight: 95g
 Unit Size: 18.5*4.5*1.0(cm)
 Gift Box Size: 17.8*12.3*4.7(cm)
 Operative Norm: GB4706.1-2005

