

ZeroFlush Waterless Urinal EnviroSeal Daily Cleaning Instructions

Before commencing cleaning of a ZeroFlush urinal with EnviroSeal system:

- Be aware of MSDS sheets
- Always wear surgical or rubber gloves
- Check for visible evidence of any maintenance requirements




Step 1

Inspect the urinal for any solid debris including pubic hairs and remove from the bowl of the urinal and around the BioPur holder.



Step 2

Depending upon usage patterns it will be necessary to unscrew the BioPur holder to remove debris that may have got under the holder ensuring you place the holder in urinal to prevent leakage.

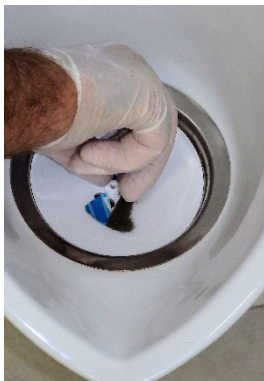

Step 3

After removal of the BioPur holder remove debris that may have got lodged in the drainage holes normal items such as paper tissue, chewing gum or pubic hair and dispose of in rubbish bag.



Step 4

If any debris is lodged in the drain outlets or can be sighted in the Elastomer trap this can be cleared by pouring water into the urinal washing the debris through the Elastomer trap into the drain.



Step 5

After removal of any debris and pouring water through Elastomer trap screw the BioPur holder back into place ensuring it is firmly fixed in place without over tightening.



Step 6

Wipe clean the inside and outside of the urinal with a soft cloth or paper towel then apply Aquatemp Spray & Go urinal cleaner and deodouriser all over the inside and outside of the urinal.



Step 7

Finally wipe clean the entire urinal with a microfibre cloth where you have applied Aquatemp Spray & Go urinal cleaner and deodouriser. This will remove any stubborn stains plus lime scale, calcium, uric salts and other organics from the urinal plus leaving the urinal sparkling clean.