

## **80 Series Parts Manual**





which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

For assistance, contact SARGENT at 800-727-5477 or www.sargentlock.com

Experience a safer and more open world

### 80 Series Parts Manual



TOC	Table of Contents
1	Chassis Assemblies
-	8300
-	8400
-	8500
-	8600 12-27
-	8700
-	8800
-	8900
-	900 Series Mortise Locks94-107
2	Rail Assemblies
3	700 Series ET Control 128-165
4	800 Series Trim
5	Auxiliary Controls

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


(12-)8304	(12-)8310	(12-)8313	(12-)8315
(12-)8328	(12-)8343	(12-)8344	(12-)8363
(12-)8375	(12-)8376		



Function		Assembly No.	Description	Sellable
(12-) All functions	1.2/4" D	68-2481	LHRB	Yes
	1 3/4" Door	68-2482	RHRB	Yes
	2" 2 2/4" D	68-2483	LHRB	Yes
	2"-2 3/4" Door	68-2484	RHRB	Yes

ltem	Part No.	Description	Qty	Sellable
1	68-0486	Chassis	1	Yes
2	68-0241	Lift Arm	1	Yes
3	68-0239	Pivot Pin (Lift Arm)	1	Yes
	68-0489	Lift Lever LHRB 1 3/4" Door	1	Yes
4	68-0490	Lift Lever RHRB 1 3/4" Door	1	Yes
4	68-0491	Lift Lever LHRB 2 3/4" Door	1	Yes
	68-0492	Lift Lever RHRB 2 3/4" Door	1	Yes
5	68-0479	Pivot Pin (Lift Lever)	1	Yes
6	68-0496	Cover <sup>1</sup>	1	Yes
7	68-3905	Cover Screw Pack <sup>1</sup>	2	Yes
	_	900 Series Mortise Assembly <sup>1,2,4</sup>	1	Yes
Not	68-2520	Screw Pack Standard	1	Yes
Shown	68-2522	Screw Pack (12-)	1	Yes
	C908	Strike Pack <sup>3</sup> (1 1/4" Standard Lip)	1	Yes

1. Specify finish 2. Specify hand 3. Specify lip length 4. Specify function

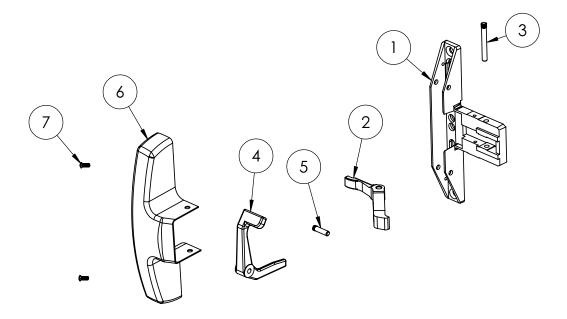

A8231:M 09/22

3

Experience a safer and more open world

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

53-MD	8406	8443	8446	8473
MD-	8410	8413	8415	
53-MD-5CH-	8440	8474		
MD-5CH-				


Function	Assembly No.	Description	Sellable
	68-5944	LHRB Non-Cladded	Yes
53-MD-(All Functions)	68-5945	RHRB Non-Cladded	Yes
MD-(All Functions)	68-5946	LHRB 1/2" Cladded	Yes
53-MD-5CH-(All Functions)	68-5951	RHRB 1/2" Cladded	Yes
MD-5CH-(All Functions)	68-6013	LHRB 1/4" Cladded	Yes
	68-6014	RHRB 1/4" Cladded	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0496	Chassis Cover, Narrow*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
		68-1644	LHRB Non-Cladded		Yes
		68-1645	RHRB Non-Cladded		Yes
3		68-1646	LHRB 1/2" Cladded	1	Yes
3		68-1647	RHRB 1/2" Cladded	I	Yes
	See chart	68-1649	LHRB 1/4" Cladded		Yes
	above	68-1650	RHRB 1/4" Cladded		Yes
4	]	68-0479	Lift Lever Pivot Pin	1	Yes
5	]	68-0241	Lift Arm	1	Yes
6	]	68-0239	Pivot Pin (Lift Arm)	1	Yes
7		68-0486	Chassis	1	Yes
	94-2008		Inner Chassis Assembly		Yes
	68-3854		53-Inner Chassis Assembly		Yes
8	68-7936	N/A	5CH- Inner Chassis Assembly	1	Yes
	68-7789		5CH-53- Inner Chassis Assembly		Yes
0		(Std) MD660T	T D 1133	_	
9		(5CH) MD660T	IOD ROd <sup>1,2,3</sup>		Yes
10	(Std) MD691T	01-0696	Coiled Pin	2	Yes
-	(5CH) MD691T	68-4840	Latch Bolt Assembly	1	Yes
11		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD	<u> </u>	Yes
12	68-5375	N/A	Top Case Assembly 1/4" Cladded	1	Yes
	68-5376		Top Case Assembly 1/2" Cladded		Yes
10		(Std) 660B	Bottom Rod <sup>1,2,3</sup>	1	Yes
13	]	(5CH) 660B	BOTTOM KOG	1	Yes
14	(Std) 691B	94-0039	Bolt Sleeve	1	Yes
15	(5CH) 691B	01-4389	Roll Pin	1	Yes
16	]	97-0454	Spring (Bottom Bolt)	1	Yes
17	]	94-0038	Bottom Bolt	1	Yes
		68-0888	Bottom Plate	1	Yes
18	N/A	68-3676	Screw Pack*	1	Yes
		652	Strike Pack	1	Yes

1. Specify AFF

Specify Opening Height
 Specify Standard or 5CH prefix before order.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product. Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

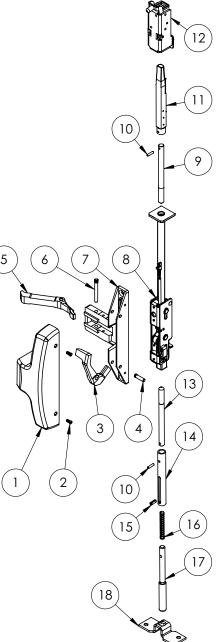

SARGENT

**ASSA ABLOY** 

Experience a safer and more open world

12-53-MD-	8406	8443	8446	8473
12-MD-	8410	8413	8415	8440
12-53-MD-5CH-	8474			
12-MD-5CH-				

Function	Assembly No.	Description	Sellable
	68-5944	LHRB Non-Cladded	Yes
12-53-MD-(All Functions)	68-5945	RHRB Non-Cladded	Yes
12-MD-(All Functions)	68-5946	LHRB 1/2" Cladded	Yes
12-53-MD-5CH-(All Functions)	68-5951	RHRB 1/2" Cladded	Yes
12-MD-5CH-(All Functions)	68-6013	LHRB 1/4" Cladded	Yes
	68-6014	RHRB 1/4" Cladded	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0496	Chassis Cover, Narrow*		Yes
2	IN/A	68-3905	Screw Pack (B)*	1	Yes
		68-1644	LHRB Non-Cladded		Yes
		68-1645	RHRB Non-Cladded		Yes
3		68-1646	LHRB 1/2" Cladded	1	Yes
э		68-1647	RHRB 1/2" Cladded	I	Yes
	See chart above	68-1649	LHRB 1/4" Cladded		Yes
	See Chart above	68-1650	RHRB 1/4" Cladded		Yes
4		68-0479	Lift Lever Pivot Pin	1	Yes
5		68-0241	Lift Arm	1	Yes
6		68-0239	Pivot Pin (Lift Arm)	1	Yes
7		68-0486	Chassis	1	Yes
	68-3627		12- Inner Chassis Assembly		Yes
0	68-3855		12-53- Inner Chassis Assembly	1	Yes
8	68-7935	N/A	5CH-12- Inner Chassis Assembly		Yes
	68-7790		5CH-12-53- Inner Chassis Assembly		Yes
0	(Std) MD660T		1	Vac	
9	(	(5CH) MD660T	Top Rod <sup>1,2,3</sup>		Yes
10	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes
11	(501)///20511	68-4840	Latch Bolt Assembly	1	Yes
11		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
12	68-5375	67-7938	Top Case Assembly 1/4" Cladded	1	Yes
	68-5376		Top Case Assembly 1/2" Cladded		Yes
13		(Std) 660B	Bottom Rod <sup>1,2,3</sup>	1	Yes
15		(5CH) 660B	BOLLOITI KOU	1	Yes
14	(Std) 691B	94-0039	Bolt Sleeve	1	Yes
15	(5CH) 691B	01-4389	Roll Pin	1	Yes
16		97-0454	Spring (Bottom Bolt)	1	Yes
17		94-0038	Bottom Bolt	1	Yes
		68-0888	Bottom Plate	1	Yes
10	N1/A	68-3676	Screw Pack*	1	Yes
18	N/A	650	Top Strike Pack	1	Yes
		606	Bottom Strike Pack	1	Yes



1. Specify AFF 2. Specify Opening Height 3. Specify Standard or 5CH prefix before order.


Experience a safer and more open world

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

5

SARGENT

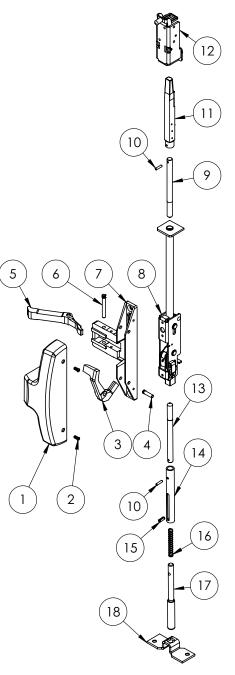

53-NB-MD	8406	8443	8446	8473
NB-MD-	8410	8413	8415	8440
53-NB-MD-5CH-	8474			
NB-MD-5CH-				

Function	Assembly No.	Description	Sellable
	68-5944	LHRB Non-Cladded	Yes
53-NB-MD-(All Functions)	68-5945	RHRB Non-Cladded	Yes
NB-MD-(All Functions)	68-5946	LHRB 1/2" Cladded	Yes
53-NB-MD-5CH-(All Functions)	68-5951	RHRB 1/2" Cladded	Yes
NB-MD-5CH-(All Functions)	68-6013	LHRB 1/4" Cladded	Yes
	68-6014	RHRB 1/4" Cladded	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable	
1	N/A	68-0496	Chassis Cover, Narrow*	1	Yes	
2	IN/A	68-3905	Screw Pack (B)*	1	Yes	
		68-1644	LHRB Non-Cladded		Yes	
		68-1645	RHRB Non-Cladded		Yes	
3		68-1646	LHRB 1/2" Cladded	1	Yes	
5		68-1647	RHRB 1/2" Cladded	_ '	Yes	
	See chart	68-1649	LHRB 1/4" Cladded		Yes	
	above	68-1650	RHRB 1/4" Cladded		Yes	
4		68-0479	Lift Lever Pivot Pin	1	Yes	
5		68-0241	Lift Arm	1	Yes	
6		68-0486	Chassis	1	Yes	
7		68-0239	Pivot Pin (Lift Arm)	1	Yes	
	94-2008		Inner Chassis Assembly		Yes	
8	68-3854 N/A	68-3854	NUA	53-Inner Chassis Assembly	1 1	Yes
0		5CH- Inner Chassis Assembly		Yes		
	68-7789		5CH-53- Inner Chassis Assembly		Yes	
9		(Std) MD660T	Top Rod <sup>1,2,3</sup>	1	Yes	
	· · · · · · · · · · · · · · · · · · ·	(5CH) MD660T	lop Kod -	<u>'</u>	103	
10	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes	
11		68-4840	Latch Bolt Assembly	1	Yes	
		67-7938	5CH Latch Bolt Assembly	1	Yes	
	68-5374		Top Case Assembly STD		Yes	
12	68-5375	N/A	Top Case Assembly 1/4" Cladded	1	Yes	
	68-5376		Top Case Assembly 1/2" Cladded	]	Yes	
12	N1/A	68-3676	Screw Pack*	1	Yes	
13	N/A	650	Top Strike Pack	1	Yes	

\*Specify Finish 1. Specify AFF

Specify Opening Height
 Specify Standard or 5CH prefix before order.

6

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT

ASSA ABLOY

11

9

10

8

7

3

4

6

5

2


12-53-NB-MD-	8406	8410	8413	8415	8440
12-NB-MD	8443	8446	8473	8474	
12-53-NB-MD-5CH-					
12-NB-MD-5CH-					

Function	Assembly No.	Description	Sellable
	68-5944	LHRB Non-Cladded	Yes
12-53-NB-MD-(All Functions)	68-5945	RHRB Non-Cladded	Yes
12-NB-MD-(AllFunctions)	68-5946	LHRB 1/2" Cladded	Yes
12-53-NB-MD-5CH-(All Functions)	68-5951	RHRB 1/2" Cladded	Yes
12-NB-MD-5CH-(All Functions)	68-6013	LHRB 1/4" Cladded	Yes
	68-6014	RHRB 1/4" Cladded	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0496	Chassis Cover, Narrow*	1	Yes
2		68-3905	Screw Pack (B)*	1	Yes
		68-1644	LHRB Non-Cladded		Yes
		68-1645	RHRB Non-Cladded		Yes
3		68-1646	LHRB 1/2" Cladded	1	Yes
	<b>C I</b> .	68-1647	RHRB 1/2" Cladded	1	Yes
	See chart	68-1649	LHRB 1/4" Cladded	1	Yes
	above	68-1650	RHRB 1/4" Cladded	1	Yes
4		68-0479	Lift Lever Pivot Pin	1	Yes
5		68-0241	Lift Arm	1	Yes
6		68-0486	Chassis	1	Yes
7		68-0239	Pivot Pin (Lift Arm)	1	Yes
	68-3627		12- Inner Chassis Assembly	]	Yes
8	68-3855	N/A	12-53- Inner Chassis Assembly	1	Yes
0	68-7935		5CH-12- Inner Chassis Assembly		Yes
	68-7790		5CH-12-53- Inner Chassis Assembly		Yes
9		(Std) MD660T (5CH) MD660T	Top Rod <sup>1,2,3</sup>	1	Yes
10	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes
11		68-4840	Latch Bolt Assembly	1	Yes
11		67-7938	5CH Latch Bolt Assembly	1	Yes
			5CH Latch Bolt Assembly		Yes
	68-5375	67-7938	Top Case Assembly 1/4" Cladded	1	Yes
	68-5376		Top Case Assembly 1/2" Cladded		Yes
13	N/A	68-3676	Screw Pack*	1	Yes
5		650	Top Strike Pack	1	Yes

\*Specify Finish 1. Specify AFF

Specify Opening Height
 Specify Standard or 5CH prefix before order.

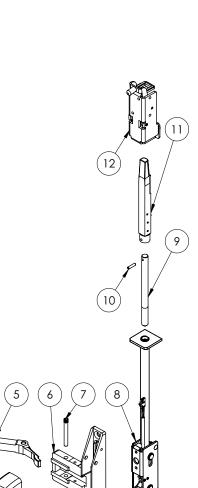

3

2

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



53-AD	8406	8474	8440	8410
AD	8413	8415	8443	8446
53-AD-5CH-	8473			
AD-5CH-				

Function	Assembly No.	Description	Sellable
	68-5944	LHRB Non-Cladded	Yes
53-AD-(All Functions) AD-(All Functions) 53-AD-5CH-(All Functions) AD-5CH-(All Functions)	68-5945	RHRB Non-Cladded	Yes
	68-5946	LHRB 1/2" Cladded	Yes
	68-5951	RHRB 1/2" Cladded	Yes
	68-6013	LHRB 1/4" Cladded	Yes
	68-6014	RHRB 1/4" Cladded	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0496	Chassis Cover, Narrow*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
		68-1644	LHRB Non-Cladded		Yes
		68-1645	RHRB Non-Cladded		Yes
2	3	68-1646	LHRB 1/2" Cladded		Yes
3		68-1647	RHRB 1/2" Cladded	1	Yes
	See chart above	68-1649	LHRB 1/4" Cladded		Yes
		68-1650	RHRB 1/4" Cladded		Yes
4		68-0479	Lift Lever Pivot Pin	1	Yes
5		68-0241	Lift Arm	1	Yes
6		68-0239	Pivot Pin (Lift Arm)	1	Yes
7		68-0486	Chassis	1	Yes
	94-2008		Inner Chassis Assembly	1	Yes
0	68-3854		53- Inner Chassis Assembly		Yes
8	68-7936	N/A	5CH- Inner Chassis Assembly	1	Yes
	68-7789		5CH-53- Inner Chassis Assembly		Yes
9		(Std) MD660T	T D- 4123	1	N/s s
9	(a. b	(5CH) MD660T	Top Rod <sup>1,2,3</sup>	1	Yes
10	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes
11		68-4840	Latch Bolt Assembly	1	Yes
11		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
12	68-5375	N/A	Top Case Assembly 1/4" Cladded	1	Yes
	68-5376		Top Case Assembly 1/2" Cladded		Yes
13		(Std)660B	Bottom Rod <sup>1,2,3</sup>	1	Yes
13		(5CH) 660B	Bottom Rod	1	Yes
14	(Std) 691B	94-0039	Bolt Sleeve	1	Yes
15	(5CH) 691B	01-4389	Roll Pin	1	Yes
16		97-0454	Spring (Bottom Bolt)	1	Yes
17		94-0038	Bottom Bolt	1	Yes
		68-0037	Bottom Case	1	Yes
18	N/A	68-3676	Screw Pack*	1	Yes
		640	Aluminum Door Strike Pack	1	Yes

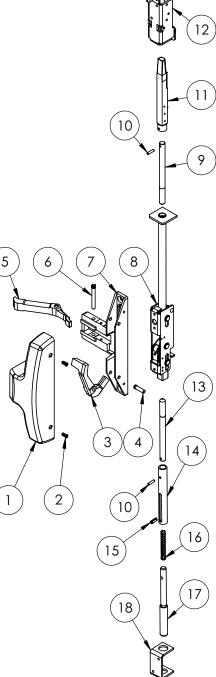

SARGENT

ASSA ABLOY

\*Specify Finish

1. Specify AFF

Specify Opening Height
 Specify Standard or 5CH prefix before order.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


53-NB-AD	8406	8410	8413	8415	8440
NB-AD-	8443	8446	8473	8474	
53-NB-AD-5CH-					
NB-AD-5CH-					

Function	Assembly No.	Description	Sellable
	68-5944	LHRB Non-Cladded	Yes
53-NB-AD-(All Functions) NB-AD-(All Functions) 53-NB-AD-5CH-(All Functions) NB-AD-5CH-(All Functions)	68-5945	RHRB Non-Cladded	Yes
	68-5946	LHRB 1/2" Cladded	Yes
	68-5951	RHRB 1/2" Cladded	Yes
	68-6013	LHRB 1/4" Cladded	Yes
	68-6014	RHRB 1/4" Cladded	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0496	Chassis Cover, Narrow*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
		68-1644	LHRB Non-Cladded		Yes
		68-1645	RHRB Non-Cladded	1	Yes
2		68-1646	LHRB 1/2" Cladded		Yes
3		68-1647	RHRB 1/2" Cladded	1	Yes
	See chart	68-1649	LHRB 1/4" Cladded	-	Yes
	above	68-1650	RHRB 1/4" Cladded	1	Yes
4		68-0479	Lift Lever Pivot Pin	1	Yes
5		68-0241	Lift Arm	1	Yes
6		68-0486	Chassis	1	Yes
7		68-0239	Pivot Pin (Lift Arm)	1	Yes
	94-2008	N/A	Inner Chassis Assembly		Yes
0	68-3854		53- Inner Chassis Assembly		Yes
8	68-7936		5CH- Inner Chassis Assembly	1	Yes
	68-7789		5CH-53- Inner Chassis Assembly	1	Yes
9	(- N	(Std) MD660T (5CH) MD660T	Top Rod <sup>1,2,3</sup>	1	Yes
10	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes
11		68-4840	Latch Bolt Assembly	1	Yes
		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
12	68-5375	N/A	Top Case Assembly 1/4" Cladded		Yes
	68-5376		Top Case Assembly 1/2" Cladded		Yes
12	NI/A	68-3676	Screw Pack*	1	Yes
13	N/A	639	Aluminum Door Strike Pack	1	Yes



Specify AFF
 Specify Opening Height
 Specify Standard or 5CH prefix before order.

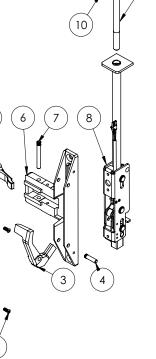

5

2

12

11

9

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

1

Experience a safer and more open world


#### (12/53-/5CH)8504 (12/53-/5CH)8513 (12/53-/5CH)8543 (12/53-/5CH)8573

## SARGENT ASSA ABLOY

Function	Assembly No.	Description	Sellable
(12-) All functions	68-5880	LHRB/RHRB	Yes
(12-) 53- All functions	68-7411	LHRB/RHRB	Yes
(12-) 5CH- All functions	68-8009	LHRB/RHRB	Yes
(12-) 53-, 5CH- All functions	68-8010	LHRB/RHRB	Yes

ltem	Assy. No.	Part No.	Description	Qty	Sellable
1		68-0495	Cover <sup>1</sup>	1	Yes
2		68-3905	Cover Screw Pack <sup>1</sup>	1	Yes
3		68-1137	Lift Arm	1	Yes
4		98-0028	Latchbolt Spring	1	Yes
4	N/A	68-1831	Latch Bolt Spring (5CH-)	1	Yes
5		01-4512	Spirol Pin	2	Yes
6		01-0008	Groove Pin	2	No
7		68-7420	Latchbolt Assembly (53-)	1	Yes
7		68-6021	Latchbolt Assembly (Std)	1	Yes
8		68-1624	8500 Chassis	1	
9	-	68-1625	Lift Lever (RHRB)	1	
10	68-6082	68-1626	Lift Lever (LHRB)	1	NI-
11	68-6082	94-0088	Cylinder Hub	2	No
12		01-0005	Retaining Ring, Truarc 5100-43	2	
13		68-0479	Lift Lever Pivot Pin	2	
14		52-0310	Cable Clamp (53-)	1	Yes
15		01-1482	Cr-Phms (#2-56 X 1/8") (53-)	1	Yes
16		13-0458	Cylinder Retainer Pack (04 & 044 Functions Only)	1	Yes
17		68-1686	Switch Bracket (53-)	1	Yes
18		01-1220	#6-32 X 3/8" Length Ph Pn Hd Machine Screw (53-)	1	Yes
19	N/A	52-4545	Switch Assembly (53-)	1	Yes
20	]	01-9446	Machine Screw (#1-72 X 11/32" Ph Fl Hd) (53-)	1	Yes
21	]	01-0909	Hex Machine Screw Nut (53-)	1	Yes
Not	]	68-2512	Screw Pack	1	Yes
Shown		657	Strike Pack	1	Yes

1. Indicates finish required

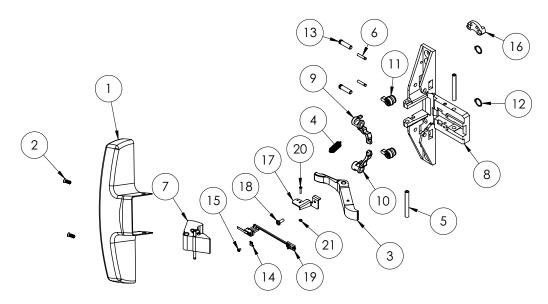

A8231:M 09/22

10

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Experience a safer and more open world


(12-/GL-/59-)8504	(12-/GL-/59-)8506	(12-/GL-/59-)8510
(12-/GL-/59-)8513	(12-/GL-/59-)8515	(12-/GL-/59-)8540
(12-/GL-/59-)8543	(12-/GL-/59-)8544	(12-/GL-/59-)8546
(12-/GL-/59-)8573	(12-/GL-/59-)8574	



Function	Assembly No.	Description	Sellable
(12-)GL- All functions	68-5881	LHRB/RHRB	YES
(12-)59- All functions	68-5882	LHRB/RHRB	YES

ltem	Assy. No.	Part No.	Description	Qty	Sellable
1		68-1020	Cover <sup>1</sup>	1	Yes
2		—	Screw Pack <sup>1</sup>	1	Yes
3		68-1353	Lift Arm (Guarded)	1	Yes
4		98-0028	Latchbolt Spring	1	Yes
5		01-4512	Spirol Pin	2	Yes
6	N/A	01-0008	Groove Pin	2	No
7		68-1352	Guide	1	Yes
8		68-1394	Extension Spring	1	Yes
9		52-0310	Cable Clamp (59-)	1	Yes
10		68-5949	Guard Bracket & Switch Assembly (59-)	1	No
10	68-5947 8500 Guard Bracket Assembly (Gl-)		1	No	
11		68-4415	Guarded Latchbolt	1	Yes
12		68-1624	8500 Chassis	1	
13		68-1625	Lift Lever (RhRb)	1	
14	68-6082	68-1626	Lift Lever (LhRb)	1	No
15	08-0082	94-0088	Cylinder Hub	2	INU
16		01-0005	Retaining Ring	2	
17		68-0479	Lift Lever Pivot Pin	2	
18		01-1482	Cr-Phms (#2-56 X 1/8") (59-)	1	Yes
19	NUA	13-0458	Cylinder Retainer Pack (04 & 044 Functions Only)	1	Yes
Not	N/A	68-2512	Screw Pack	1	Yes
Shown		657	Strike Pack	1	Yes

1. Indicates finish required

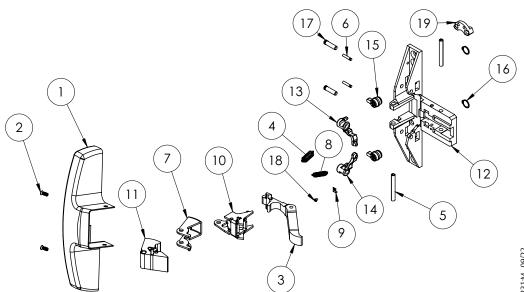

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

53-MD-	8606	8643	8646	8673
59-MD	8610	8613	8615	8674
MD-	8640			
53-MD-5CH-				
MD-5CH-				

Function	Assembly No.	Description	Sellable
53-MD-	68-5068	LHRB Chassis Assembly	Yes
59-MDMD-	68-5069	RHRB Chassis Assembly	Yes
53-MD-5CH	68-5070	59- LHRB Chassis Assembly	Yes
MD-5CH- (All Functions)	68-5071	59- RHRB Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N1/A	68-0407	Chassis Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
		68-0011	Main Slide		Yes
3		68-1815	59- Main Slide	1	No
		68-1836	Main Slide Cup to 1/2" Cladding <sup>4</sup>		Yes
4		68-1505	Chassis (LH)	- 1	Yes
4		68-1506	Chassis (RH)	יך	Yes
5	See chart above	68-1503	Lift Lever	1	Yes
6	See chart above	68-0012	Roller (Main Slide)	2	Yes
7		01-4512	Spirol Pin	1	Yes
8		68-0324	Lift Lever Pivot Pin	1	Yes
9		68-0323	Chassis Pin	2	Yes
10		68-0241	Lift Arm	- 1	Yes
10		68-1137	59- Lift Arm		Yes
	94-2008		Inner Chassis Assembly		Yes
11	68-3854	N/A	A 53- Inner Chassis Assembly <sup>3</sup>		Yes
	68-7936		5CH- Inner Chassis Assembly	1	Yes
	68-7789		5CH-53- Inner Chassis Assembly		Yes
12	(Std) MD660T (5CH) MD660T		Top Rod <sup>1,2,5</sup>	1	Yes
13	(Std) MD691T	01-0696	Coiled Pin	2	Yes
	(5CH) MD691T	68-4840	Latch Bolt Assembly	1	Yes
14		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
15	68-5375	N/A	Top Case Assembly 1/4" Cladded	1	Yes
	68-5376		Top Case Assembly 1/2" Cladded	1	Yes
10		(Std) 660B	D (( D 1125	1	Yes
16		(5CH) 660B	Bottom Rod <sup>1,2,5</sup>	1	Yes
17	(Std) 691B	94-0039	Bolt Sleeve	1	Yes
18	(5CH) 691B	01-4389	Roll Pin	1	Yes
19		97-0454 Spring (Bottom Bolt)		1	Yes
20		94-0038	Bottom Bolt		Yes
		68-0888	Bottom Plate	1	Yes
21	N/A	68-4389	Screw Pack (W)*	1	Yes
		652	Strike Pack	1	Yes

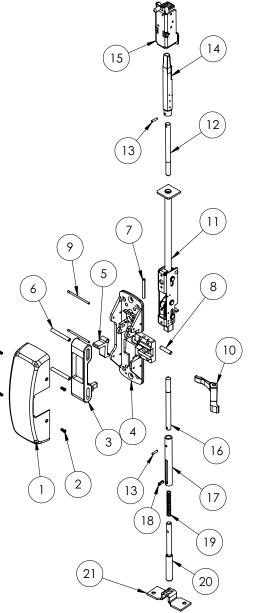

\*Specify Finish 1. Specify AFF

2. Specify Opening Height

3. Also used with 59-

4. Cut the main slide finger as needed for panel thickness 5. Specify Standard or 5CH prefix before order.



The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



2-53-MD-	8606	8643	8646	8673
2-59-MD-	8610	8613	8615	8674
2-MD-	8640			

#### 1 12-53-MD-5CH-12-MD-5CH-

1

1


	Function	Assem	bly No.			Sellable
	3-MD-	68-5068		LHRB Chassis Assembly		Yes
	9-MD-	68-5069		RHRB Chassis Assembly		Yes
12-M		68-5070		59- LHRB Chassis Assembly		Yes
	3-MD-5CH-				T	
	ID-5CH- unctions)	68-5071		59- RHRB Chassis Assembly		Yes
`	· · · · · · · · · · · · · · · · · · ·					,
tem	Assembly No.	Part No.	Description		Qty	Sellable
1	N/A	68-0407	Chassis Cover*		1	Yes
2		68-3905		Screw Pack (B)*	1	Yes
		68-0011		Main Slide		Yes
3		68-1815	59- Main Slide		1	No
		68-1836	Main Slide Cup to 1/2" Cladding⁴			Yes
4		68-1505		Chassis (LH)	1	Yes
		68-1506		Chassis (RH)	<u> </u>	Yes
5	See chart above	68-1503		Lift Lever	1	Yes
6		68-0012		Roller (Main Slide)	2	Yes
7		01-4512		Spirol Pin	1	Yes
8	-	68-0324	Lift Lever Pivot Pin		1	Yes
9	-	68-0323		Chassis Pin	2	Yes
10		68-0241		Lift Arm	1	Yes
		68-1137		59- Lift Arm		Yes
	68-3627	-		nner Chassis Assembly	4	Yes
11	68-3855	N/A	12- 53- Inner Chassis Assembly <sup>3</sup>		1	Yes
	68-7935	,		2- Inner Chassis Assembly	-	Yes
	68-7790		5CH-12-	53- Inner Chassis Assembly		Yes
12	(Std) MD691T	(Std) MD660T (5CH) MD660T		Top Rod <sup>1,2,5</sup>	1	Yes
13	(5CH) MD691T	01-0696		Coiled Pin	2	Yes
14	(2.2.7)	68-4840		atch Bolt Assembly	1	Yes
		67-7938		H Latch Bolt Assembly	1	Yes
	68-5374			p Case Assembly STD	4	Yes
15	68-5375	N/A		se Assembly 1/4" Cladded	1	Yes
	68-5376	(- b	Top Ca	se Assembly 1/2" Cladded		Yes
16		(Std) 660B		Bottom Rod <sup>1,2,5</sup>	1	Yes
-		(5CH) 660B			1	Yes
17	(Std) 691B	94-0039		Bolt Sleeve	1	Yes
18	(5CH) 691B	01-4389		Roll Pin	1	Yes
19	-	97-0454	S	pring (Bottom Bolt)	1	Yes
20		94-0038		Bottom Bolt	1	Yes
		68-0888		Bottom Plate	1	Yes
21	N/A	68-4389		Screw Pack(W)*	1	Yes
	'	650		Top Strike Pack	1	Yes
	fy Finish	606		Bottom Strike Pack		Yes

1. Specify AFF

2. Specify Opening Height 3. Also used with 12-59-

4. Cut the main slide finger as needed for panel thickness

5. Specify Standard or 5CH prefix before order

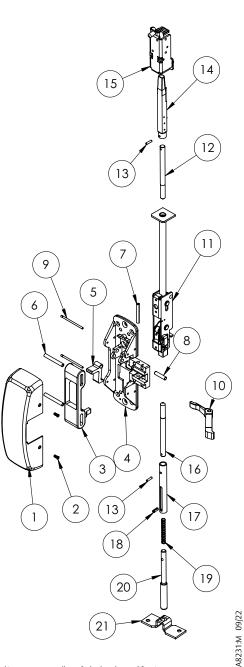

21

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world



53-NB-MD-	8606	8610	8613	8615
59-NB-MD-	8640	8643	8646	8673
NB-MD-	8674			
53-NB-MD-5CH-				
NB-MD-5CH-				

Function	Assembly No.	Description	Sellable
53-NB-MD-	68-5068	LHRB Chassis Assembly	Yes
59-NB-MD-	68-5069	RHRB Chassis Assembly	Yes
NB-MD-	68-5070	59- LHRB Chassis Assembly	Yes
53-NB-MD-5CH-			
NB-MD-5CH-	68-5071	59- RHRB Chassis Assembly	Yes
(All Functions)			

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	51/4	68-0407	Chassis Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
		68-0011	Main Slide		Yes
3		68-1815	59- Main Slide	1	No
		68-1836	Main Slide Cup to 1/2" Cladding <sup>4</sup>	]	Yes
4		68-1505	Chassis (LH)	1	Yes
4		68-1506	Chassis (RH)		Yes
5	See chart above	68-1503	Lift Lever	1	Yes
6		68-0012	Roller (Main Slide)	2	Yes
7		01-4512	Spirol Pin	1	Yes
8		68-0324Lift Lever Pivot Pin68-0323Chassis Pin		1	Yes
9				2	Yes
10		68-0241	Lift Arm	1	Yes
10		68-1137	59- Lift Arm		Yes
	94-2008		Inner Chassis Assembly		Yes
11	68-3854	N/A	53- Inner Chassis Assembly <sup>3</sup>	1	Yes
	68-7936		5CH- Inner Chassis Assembly		Yes
	68-7789		5CH-53- Inner Chassis Assembly		Yes
12		(Std) MD660T	Top Rod <sup>1,2,5</sup>	1	Yes
12		(5CH) MD660T	тор коц че		ies
13	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes
14		68-4840	Latch Bolt Assembly	1	Yes
14		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
15			Top Case Assembly 1/4" Cladded	1	Yes
	68-5376		Top Case Assembly 1/2" Cladded		Yes
	N/A	68-4389	Screw Pack(W)*	1	Yes
		650	Top Strike Pack	1	Yes

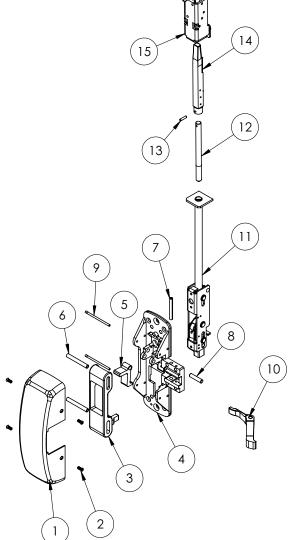

1. Specify AFF

2. Specify Opening Height

3. Also used with 59-

4. Cut the main slide finger as needed for panel thickness 5. Specify Standard or 5CH prefix before order



The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



12-53-NB-MD-	8606	8610	8613	8615		
12-59-NB-MD-	8640	8643	8646	8673		
12-NB-MD-	8674					
12-53-NB-MD-5CH-						
12-NB-MD-5CH-						

Function	Assembly No.	Description	Sellable
12-53-NB-MD-	68-5068	LHRB Chassis Assembly	Yes
12-59-NB-MD-	68-5069	RHRB Chassis Assembly	Yes
12-NB-MD-	68-5070	59- LHRB Chassis Assembly	Yes
12-53-NB-MD-5CH-			
12-NB-MD-5CH-	68-5071	59- RHRB Chassis Assembly	Yes
(All Functions)			

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0407	Chassis Cover*	1	Yes
2	NA	68-3905	Screw Pack (B)*	1	Yes
		68-0011	Main Slide		Yes
3		68-1815	59- Main Slide	1	No
		68-1836	Main Slide Cup to 1/2" Cladding⁴	]	Yes
4		68-1505	Chassis (LH)	1	Yes
4		68-1506	Chassis (RH)		Yes
5	See chart	68-1503	Lift Lever	1	Yes
6	above	68-0012	Roller (Main Slide)	2	Yes
7		01-4512	Spirol Pin	1	Yes
8		68-0324	Lift Lever Pivot Pin	1	Yes
9	68-0323 Chassis Pin		2	Yes	
10		68-0241	Lift Arm	1	Yes
10		68-1137	59- Lift Arm		103
	68-3627		12- Inner Chassis Assembly		Yes
11	68-3627 68-3855 69 7025 N/A		12-53-Inner Chassis Assembly <sup>3</sup>	1	Yes
	68-7935	IN/A	5CH-12- Inner Chassis Assembly	_ '	Yes
	68-7790		5CH-12-53- Inner Chassis Assembly		Yes
12		(Std) MD660T	Top Rod <sup>1,2,5</sup>	1	Yes
12		(5CH) MD660T	Төр көа		ies
13	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes
14		68-4840	Latch Bolt Assembly	1	Yes
14		67-7938	5CH Latch Bolt Assembly	1	Yes
		N/A	Top Case Assembly STD	]	Yes
15	68-5374 68-5375 Top Case Assembly 1/4" Cladded		Top Case Assembly 1/4" Cladded	] 1	Yes
		68-5376	Top Case Assembly 1/2" Cladded		Yes
		68-4389	Screw Pack(W)*	1	Yes
	N/A	650	Top Strike Pack	1	Yes

\*Specify Finish 1. Specify AFF

2. Specify Opening Height 3. Also used with 12-59-

4. Cut the main slide finger as needed for panel thickness 5. Specify Standard or 5CH prefix before order

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


2

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



SARGENT

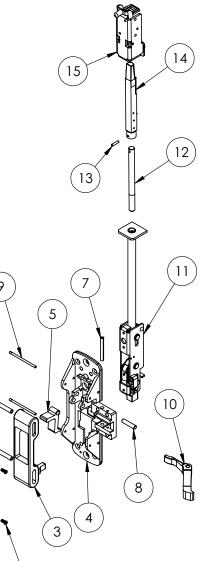

53-WD-	8606	8610	8613	8615
59-WD	8640	8643	8646	8673
WD-	8674			
53-WD-5CH-				
WD-5CH-				

Function	Assembly No.	Description	Sellable
	68-5068	LHRB Chassis Assembly	Yes
53-WD-	68-5069	RHRB Chassis Assembly	Yes
59-WD-	68-5070	59- LHRB Chassis Assembly	Yes
WD-	68-5071	59- RHRB Chassis Assembly	Yes
53-WD-5CH-	(Std) WD691T	Top Dod and Balt Kit5	Vac
WD-5CH-	(5CH) WD660T	Top Rod and Bolt Kit⁵	Yes
(All Functions)	WDA691T <sup>4</sup>	Top Rod and Bolt Kit with Aux Kit (Parts 12, 13, 14)	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0407	Chassis Cover*	1	Yes
2	NA	68-3905	Screw Pack (B)*	1	Yes
3		68-0011	Main Slide	1	Yes
5		68-1815	59- Main Slide		No
4		68-1505	Chassis (LH)	1	Yes
4		68-1506	Chassis (RH)		Yes
5	See chart	68-1503	Lift Lever	1	Yes
6	above	68-0012	Roller (Main Slide)	2	Yes
7	above	68-0324	Lift Lever Pivot Pin	1	Yes
8		01-4512	Spirol Pin	1	Yes
9		68-0241	Lift Arm	1	Yes
9		68-1137	59- Lift Arm		Yes
10		68-0323	Chassis Pin	2	Yes
	68-3580		Inner Chassis Assembly	1	Yes
	68-3859		53- Inner Chassis Assembly <sup>3</sup>	1	Yes
11	68-7785	N/A	5CH- Inner Chassis Assembly	1	Yes
	68-7786		5CH-53- Inner Chassis Assembly	1	Yes
12		01-1137	Screw #8-32 x 7/16 4	1	Yes
13		68-0918	Extension Rod4	1	Yes
14		68-0917	Auxillary Control Plate4	1	Yes
15	See chart above	(Std) WD660T (5CH) WD660T	Top Rod <sup>1,2,5</sup>	1	Yes
16		01-0696	Coiled Pin	2	Yes
		68-4840	Latch Bolt Assembly	1	Yes
17		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-3522		Top Case and Bracket Assembly STD		Yes
18	68-3523	N/A	Top Case and Bracket Assembly 1/4" Cladded	1	Yes
	68-3524		Top Case and Bracket Assembly 1/2" Cladded		Yes
19		(Std) 660B	Bottom Rod <sup>1,2,3</sup>	1	Yes
		(5CH)660B		1	Yes
20	(Std) 691B	94-0039	Bolt Sleeve	1	Yes
21	(5CH)691B	01-4389	Roll Pin	1	Yes
22		97-0454	Spring (Bottom Bolt)	1	Yes
23		94-0038	Bottom Bolt	1	Yes
		68-0888	Bottom Plate	1	Yes
24	N/A	68-4389	Screw Pack(W)*	1	Yes
		652	Strike Pack	1	Yes

1. Specify AFF


2. Specify Opening Height

3. Also used with 59-

4. Only when used w/ Aux Control

5. Specify Standard or 5CH prefix before order

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

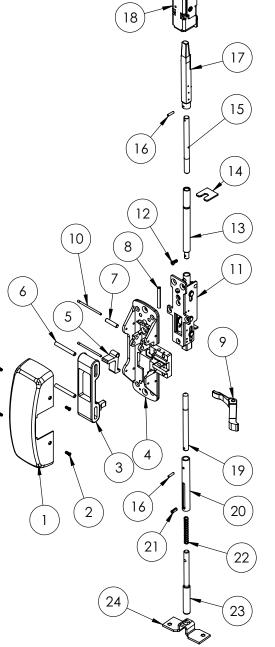

Experience a safer and more open world

.

16

SARGENT ASSA ABLOY

12-53-WD-	8606	8610	8613	8615
12-59-WD-	8640	8643	8646	8673
12-WD-	8674			

#### 1 12-53-WD-5CH-12-WD-5CH-

Function	Assembly No.	Description	Sellable
	68-5068	LHRB Chassis Assembly	Yes
12-53-WD-	68-5069	RHRB Chassis Assembly	Yes
12-59-WD-	68-5070	59- LHRB Chassis Assembly	Yes
12-WD-	68-5071	59- RHRB Chassis Assembly	Yes
12-53-WD-5CH-	(Std) WD691T	Top Dod and Polt Kit 5	Yes
12-WD-5CH- (All Functions)	(5CH) WD691T	Top Rod and Bolt Kit ⁵	Yes
	WDA691T <sup>4</sup>	Top Rod and Bolt Kit with Aux Kit (Parts 12, 13, 14)	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N1/A	68-0407	Chassis Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
3		68-0011	Main Slide	1	Yes
2		68-1815	59- Main Slide	ין	No
4		68-1505	Chassis (LH)	1	Yes
4		68-1506	Chassis (RH)		Yes
5	See chart	68-1503	Lift Lever	1	Yes
6	above	68-0012	Roller (Main Slide)	2	Yes
7	above	68-0324	Lift Lever Pivot Pin	1	Yes
8		68-0241	Lift Arm	1	Yes
ð		68-1137	59- Lift Arm		Yes
9		01-4512	Spirol Pin	1	Yes
10		68-0323	Chassis Pin	2	Yes
	68-3580		12-Inner Chassis Assembly	1	Yes
11	68-3859		12-53- Inner Chassis Assembly <sup>3</sup>	1	Yes
	68-7785	N/A 5CH- Inner Chassis Assembly		1	Yes
	68-7786		5CH-53- Inner Chassis Assembly	1	Yes
12		01-1137	Screw #8-32 x 7/16 4	1	Yes
13		68-0918	Extension Rod4	1	Yes
14		68-0917	Auxillary Control Plate <sup>4</sup>	1	Yes
15	See chart above	(Std) WD660T (5CH) WD660T	Top Rod <sup>1,2,5</sup>	1	Yes
16	above	01-0696	Coiled Pin	2	Yes
		68-4840	Latch Bolt Assembly	1	Yes
17		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-3522	011550	Top Case and BracketAssembly STD	- ·	Yes
18	68-3523	N/A	Top Case and Bracket Assembly 1/4" Cladded	1	Yes
10	68-3524		Top Case and Bracket Assembly 1/2" Cladded		Yes
10		(Std) 660B		1	Yes
19		(5CH)660B	Bottom Rod <sup>1,2,3</sup>	1	Yes
20	(Std) 691B	94-0039	Bolt Sleeve	1	Yes
21	(5CH) 691B	01-4389	Roll Pin	1	Yes
22		97-0454	Spring (Bottom Bolt)	1	Yes
23		94-0038	Bottom Bolt	1	Yes
		68-0888	Bottom Plate	1	Yes
	N1/A	68-4389	Screw Pack(W)*	1	Yes
24	N/A	650	Top Strike Pack	1	Yes
		606	Bottom Strike Pack	1	Yes

\*Specify Finish


1. Specify AFF

2. Specify Opening Height

3. Also used with 12-59-4. Only when used w/ Aux Control

5. Specify Standard or 5CH prefix before order

## SARGENT ASSA ABLOY

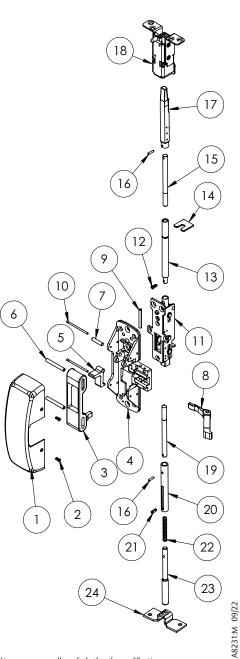


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

53-NB-WD-	8606	8610	8613	8615
59-NB-WD-	8640	8643	8646	8673
NB-WD-	8674			
53-NB-WD-5CH				
NB-WD-5CH-				

Function	Assembly No. Description		Sellable
	68-5068	LHRB Chassis Assembly	Yes
53-NB-WD-	68-5069	RHRB Chassis Assembly	Yes
59-NB-WD	68-5070	59- LHRB Chassis Assembly	Yes
NB-WD-	68-5071	59- RHRB Chassis Assembly	Yes
53-NB-WD-5CH-	(Std) WD691T	Top Rod and Bolt Kit <sup>5</sup>	Yes
NB-WD-5CH-	(5CH) WD691T		Yes
(All Functions)	WDA691T <sup>4</sup>	Top Rod and Bolt Kit with Aux Kit (Parts 12, 13, 14)	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0407	Chassis Cover*	1	Yes
2	IN/A	68-3905	Screw Pack (B)*	1	Yes
3		68-0011	Main Slide	1	Yes
5		68-1815	59- Main Slide	1	No
4		68-1505	Chassis (LH)	1	Yes
4		68-1506	Chassis (RH)	I	Yes
5	C h	68-1503	Lift Lever	1	Yes
6	See chart above	68-0012	Roller (Main Slide)	2	Yes
7	above	68-0324	Lift Lever Pivot Pin	1	Yes
8		01-4512	Spirol Pin	1	Yes
10	]	68-0241	Lift Arm	1	Yes
10		68-1137	59- Lift Arm	I	Yes
9	]	68-0012	Roller (Main Slide)	1	Yes
	68-3580		Inner Chassis Assembly		Yes
	68-3859	]	53- Inner Chassis Assembly <sup>3</sup>		Yes
11	68-7785	N/A	5CH- Inner Chassis Assembly	1	Yes
	68-7786	1	5CH-53- Inner Chassis		Yes
			Assembly		ies
12		01-1137	Screw #8-32 x 7/16 4	1	Yes
13		68-0918	Extension Rod4	1	Yes
14		68-0917	Auxillary Control Plate <sup>4</sup>	1	Yes
15	See chart above	(Std) WD660T (5CH) WD660T	Top Rod <sup>1,2,5</sup>	1	Yes
16		01-0696	Coiled Pin	2	Yes
17		68-4840	Latch Bolt Assembly	1	Yes
17		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-3522		Top Case and Bracket Assembly STD		Yes
18	68-3523	68-3523 N/A	Top Case and Bracket Assembly 1/4" Cladded	1	Yes
	68-3524		Top Case and Bracket Assembly 1/2" Cladded		Yes
19	N/A	68-4389	Screw Pack(W)*	1	Yes
19		650	Top Strike Pack	1	Yes

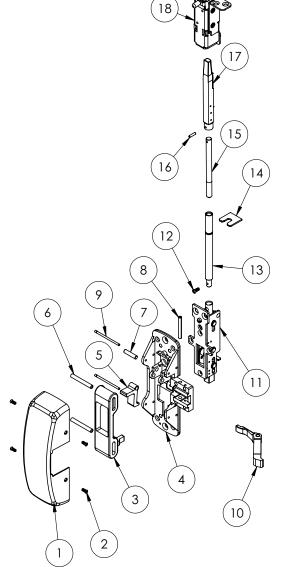

SARGENT

ASSA ABLOY

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

1. Specify AFF

Specify Opening Height
 Also used with 59-

4. Only when used w/ Aux Control

5. Specify Standard or 5CH prefix before order

18

12-53-NB-WD-	8606	8610	8613	8615		
12-59-NB-WD-	8640	8643	8646	8673		
12-NB-WD-	8674					
12-53-NB-WD-5CH-						
12-NB-WD-5CH-						


Function	Assembly No.	Description	Sellable
	68-5068	LHRB Chassis Assembly	Yes
12-53-NB-WD-	68-5069	RHRB Chassis Assembly	Yes
12-59-NB-WD-	68-5070	59- LHRB Chassis Assembly	Yes
12-NB-WD-	68-5071	59- RHRB Chassis Assembly	Yes
12-53-NB-WD-5CH-	(Std) WD691T	Top Dod and Dolt Kit 5	Yes
12-NB-WD-5CH-	(5CH) WD691T	Top Rod and Bolt Kit ⁵	Yes
(All Functions)	WDA691T(4)	Top Rod and Bolt Kit with Aux Kit (Parts 12, 13, 14)	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0407	Chassis Cover*	1	Yes
2	IN/A	68-3905	Screw Pack (B)*	1	Yes
3		68-0011	Main Slide	1	Yes
2		68-1815	15 59- Main Slide		No
4		68-1505	Chassis (LH)	1	Yes
4		68-1506	Chassis (RH)	I	Yes
5	C h t	68-1503	Lift Lever	1	Yes
6	See chart above	68-0112	Roller (Main Slide)	2	Yes
7	above	68-0324	Lift Lever Pivot Pin	1	Yes
8		01-4512	Spirol Pin	1	Yes
9		68-0241	Lift Arm	1	Yes
9		68-1137	59- Lift Arm	I	
10		68-0323	Chassis Pin	2	Yes
	68-3580		12-Inner Chassis Assembly		Yes
68-3859		12-53- Inner Chassis		Yes	
		N/A	Assembly <sup>3</sup>	1	
	68-7785		5CH- Inner Chassis Assembly	1	Yes
	68-7786		5CH-53- Inner Chassis		Yes
	00-1100		Assembly		
12		01-1137	Screw #8-32 x 7/16 4	1	Yes
13		68-0918	Extension Rod4	1	Yes
14		68-0917	Auxillary Control Plate4	1	Yes
15	See chart	(Std) WD660T	Top Rod <sup>1,2,5</sup>	1	Yes
	above	(5CH) WD660T	· ·	-	
16		01-0696	Coiled Pin	2	Yes
17		68-4840	Latch Bolt Assembly	1	Yes
17		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-3522		Top Case and Bracket Assembly STD		Yes
18	68-3523	N/A	Top Case and Bracket Assembly 1/4" Cladded	1	Yes
68-3524			Top Case and Bracket Assembly 1/2" Cladded		Yes
	NUA	68-4389	Screw Pack(W)*	1	Yes
	N/A	650	Top Strike Pack	1	Yes

\*Specify Finish 1. Specify AFF

2. Specify Opening Height

Specify Opening Regit
 Also used with 12-59 Only when used w/ Aux Control
 Specify Standard or 5CH prefix before order

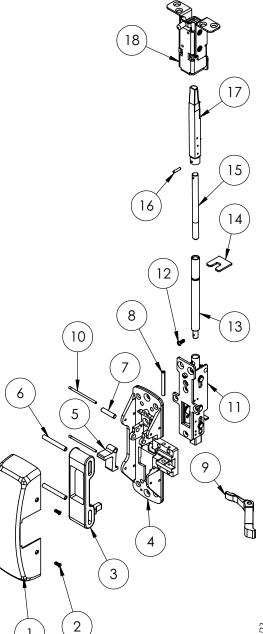

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



53-AD-	8606	8610	8613	8615
59-AD	8640	8643	8646	8673
AD-	8674			
53-AD-5CH-				
AD-5CH-				

Function	Assembly No.	Description	Sellable
53-AD-	68-5068	LHRB Chassis Assembly	Yes
59-AD-	68-5069	RHRB Chassis Assembly	Yes
AD-	68-5070	59- LHRB Chassis Assembly	Yes
53-AD-5CH-			
AD-5CH-	68-5071	59- RHRB Chassis Assembly	Yes
(All Functions)		,	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0407	Chassis Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
		68-0011	Main Slide	-	Yes
3		68-1815	59- Main Slide	1	No
		68-1836	Main Slide Cup to 1/2" Cladding <sup>4</sup>		Yes
		68-1505	Chassis (LH)		Yes
4		68-1506	Chassis (RH)	1	Yes
5		68-1503	Lift Lever	1	Yes
6	See chart above	68-0012	Roller (Main Slide)	2	Yes
7		01-4512	Spirol Pin	1	Yes
8		68-0324	Lift Lever Pivot Pin	1	Yes
9		68-0323	Chassis Pin	2	Yes
10		68-0241	Lift Arm	1	Yes
10		68-1137	59- Lift Arm	1	Yes
	94-2008		Inner Chassis Assembly		Yes
11	68-3854		53- Inner Chassis Assembly <sup>3</sup>	1	Yes
11	68-7936	N/A	5CH- Inner Chassis Assembly		Yes
	68-7789		5CH-53- Inner Chassis Assembly		Yes
12		(Std) MD660T	Top Rod <sup>1,2,5</sup>	1	Yes
12	(Std) MD691T	(5CH) MD660T	τορ κου		
13	(5CH) MD691T	01-0696	Coiled Pin	2	Yes
14		68-4840	Latch Bolt Assembly	1	Yes
14		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
15	68-5375	N/A	Top Case Assembly 1/4" Cladded	1	Yes
	68-5376		Top Case Assembly 1/2" Cladded		Yes
16		(Std) 660B	Bottom Rod <sup>1,2,3</sup>	1	Yes
		(5CH)660B		1	Yes
17	(Std) 691B	94-0039	Bolt Sleeve	1	Yes
18	(5CH) 691B	01-4389	Roll Pin	1	Yes
19		97-0454	Spring (Bottom Bolt)	1	Yes
20		94-0038	Bottom Bolt	1	Yes
		68-0037	Bottom Case	1	Yes
21	N/A	68-4389	Screw Pack (W)*	1	Yes
		640	Aluminum Door Strike Pack	1	Yes


1. Specify AFF

2. Specify Opening Height

3. Also used with 59-

4. Cut the main slide finger as needed for panel thickness

5. Specify Standard or 5CH prefix before order

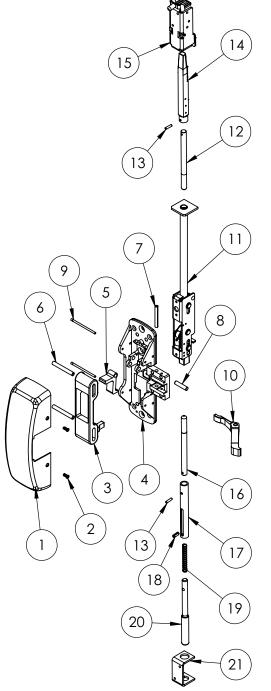

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

20

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

SARGENT ASSA ABLOY

8606	8610	8613	8615
8640	8643	8646	8673
8674			

#### 53-NB-AD-59-NB-AD-NB-AD-53-NB-AD-5CH-NB-AD-5CH-

Function	Assembly No. Description		Sellable
53-NB-AD-	68-5068	LHRB Chassis Assembly	Yes
59-NB-AD-	68-5069	RHRB Chassis Assembly	Yes
NB-AD-	68-5070	59- LHRB Chassis Assembly	Yes
53-NB-AD-5CH-			
NB-AD-5CH-	68-5071	59- RHRB Chassis Assembly	Yes
(All Functions)			


ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	-	68-0407	Chassis Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
		68-0011	Main Slide		Yes
		68-1815	59- Main Slide	-	No
3		68-1836	Main Slide Cup to 1/2"	1	Yes
			Cladding <sup>4</sup>		
4		68-1505	Chassis (LH)	1	Yes
		68-1506	Chassis (RH)	-	Yes
5	See chart above	68-1503	Lift Lever	1	Yes
6		68-0012	Roller (Main Slide)	2	Yes
7		01-4512	Spirol Pin	1	Yes
8		68-0241	Lift Arm	1	Yes
9		68-0323	Chassis Pin	2	Yes
10		68-0241	Lift Arm	1	Yes
10		68-1137	59- Lift Arm	1	Yes
	94-2008		Inner Chassis Assembly		Yes
	68-3854 68-7936		53- Inner Chassis		Yes
			Assembly <sup>3</sup>		
11		N/A	5CH- Inner Chassis	1	Yes
		I	Assembly		
			5CH-53- Inner Chassis	1	Yes
	68-7789		Assembly		
		(Std) MD660T	T D 1135	1	Yes
9		(5CH) MD660T	Top Rod <sup>1,2,5</sup>		
10	(Std) MD691T (5CH) MD691T	01-0696	Coiled Pin	2	Yes
11		68-4840	Latch Bolt Assembly	1	Yes
		67-7938	5CH Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
	68-5375		Top Case Assembly 1/4"		Vac
15	08-03/0	N/A	Cladded	1	Yes
			Top Case Assembly 1/2"		Yes
	68-5376		Cladded		
		68-4389	Screw Pack(W)*	1	Yes
	N/A	639	Aluminum Door Strike	1	Yes
			Pack		105

\*Specify Finish

1. Specify AFF

Specify Opening Height
 Also used with 59-

4. Cut the main slide finger as needed for panel thickness 5. Specify Standard or 5CH prefix before order

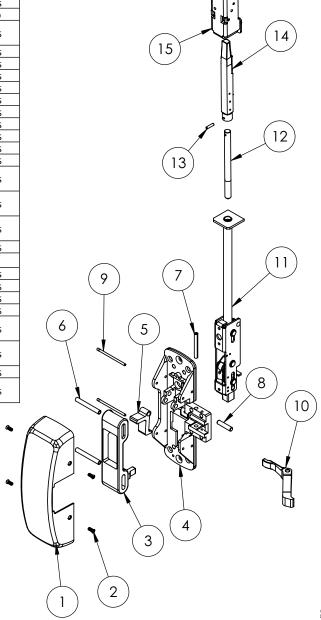

SARGENT


ASSA ABLOY

12-LP	8606	8610	8613	8615
LP	8640	8643	8646	8673
12-LS	8674			
LS				

SARGENT
ASSA ABLOY

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-1186	Active Outside Front <sup>1</sup>	1	Yes
2	68-4239	N/A	Active Mortise Case	1	Yes
3		68-1327	Link Connect (Pull Lever)	1	Yes
4		68-1309	Pull Lever Low Profile	1	Yes
5		68-1332	Torsion Spring (Pull Lever)	1	Yes
6	69 4764	68-1313	Pivot Pin	3	Yes
7	68-4264	68-0241	Lift Arm	1	Yes
8		68-1310	Pivot Bracket	1	Yes
9		01-4509	Retaining Ring	3	Yes
10		68-1311	Lift Arm Spacer	2	Yes
11	NI/A	68-4373	Screw Pack (LP)	1	Yes
12	N/A	68-1317 Chassis Cover (LP)*		1	Yes
13		01-0696	Coiled Pin	2	Yes
14	692L	68-1339	Connecting Tube	1	Yes
15	692L	661L	Top Rod (LP)	1	Yes
16		68-4840	Latch Bolt Assembly	1	Yes
	68-5374		Top Case Assembly STD		Yes
17			Top Case Assembly 1/4" Panel	1	Yes
			Top Case Assembly 1/2" Panel		
		68-4389	Screw Pack	1	Yes
	N/A	650	Strike Pack	1	Yes
		77-0883	A.S.A. Strike (Curved Lip)*2	1	Yes

\*Specify Finish 1. Only available in 32D finish 2. LS function only

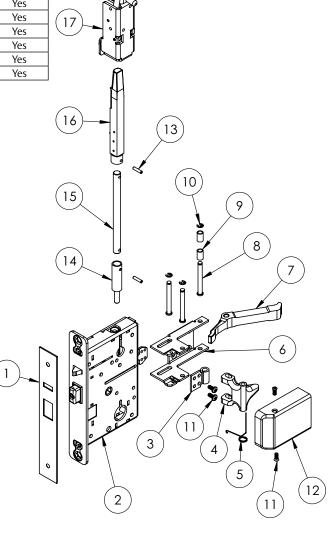

A8231:M 09/22

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

12-LP	8606	8610	8613	8615
LP	8640	8643	8646	8673
12-LS	8674			
LS				

ltem	Part No.	Description Qty Sell		Sellable
1	68-1188	Active Inside Front 1 No		No
2	68-1167	Active Latchbolt	1	Yes
3	68-1166	Activation Bolt	1	Yes
4	01-4402	#8-32x7/16" Flat PH U/C MS	7	Yes
5	68-1338	Mortise Cap	1	No
6	68-1476	Outside Hub (LP)	1	Yes
7	68-1291	Slide	1	No
8	68-1330	Bushing (LP)	2	Yes
9	68-1168	Active Case Pivot	1	Yes
10	68-1172	Retractor	1	Yes
11	68-1293	Fire Stop	1	Yes
12	68-1220	Active Bolt Guide	1	Yes
13	82-0294	Post (Screw and Case)	8	No
14	68-1337	Mortise Case	1	No
15	68-1253	Spring (Top Mount)	1	Yes
16	68-1265	Spring (Active Lever)	1	Yes
17	68-1333	Active Lever	1	Yes
18	68-1198	Torsion Spring (Retractor)	1	Yes
19	68-1246	Top Pusher Guide	1	Yes
20	68-1328	Link Latchbolt Tail	1	No
21	68-1334	Latchbolt Extension/Slide	1	No
22	68-1292	Upper Guard	1	Yes
23	68-1336	Top Mount	1	Yes
24	01-0424	Rivet	2	No

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



12-LP	8606	8610	8613	8615
LP	8640	8643	8646	8673
12-LS	8674			
LS				



Ø S જે Q a ß ଧ ø E. 

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

12-LR	8606	8610	8613	8615
LR	8640	8643	8646	8673
	8674			

SARGENT
ASSA ABLOY

ltem	Assembly No.	Part No.	Description Qt		Sellable	
1	N/A	68-1183	Inactive Outside Front <sup>1</sup>	1	1 Yes	
2	68-4238	N/A	Inactive Mortise Case	1 Yes		
3		68-1327	Link Connect (Pull Lever)	1	Yes	
4		68-1309	Pull Lever Low Profile	1	Yes	
5		68-1332	Torsion Spring (Pull Lever)	1	Yes	
6	68-4264	68-1313	Pivot Pin	3	Yes	
7	08-4204	68-0241	Lift Arm	1	Yes	
8		68-1310	Pivot Bracket	1	Yes	
9		01-4509	Retaining Ring	3	Yes	
10		68-1311	Lift Arm Spacer	2	Yes	
11	NUA	68-1317	Chassis Cover (LP)*	1	Yes	
12	N/A	68-4373	Screw Pack (LP)	1	Yes	
13		01-0696	Coiled Pin	2	Yes	
14	692L	68-1339	Connecting Tube	1	Yes	
15	092L	661L	Top Rod (LP)	1	Yes	
16		68-4840	Latch Bolt Assembly	1	Yes	
	68-5374		Top Case Assembly STD		Yes	
17	68-5375	N/A	Top Case Assembly 1/4" Panel	1	Yes	
	68-5376		Top Case Assembly 1/2" Panel		Yes	
	N/A	68-4389	Screw Pack	1	Yes	
	IN/A	650	Strike Pack	1	Yes	

\*Specify Finish 1. Only available in 32D finish

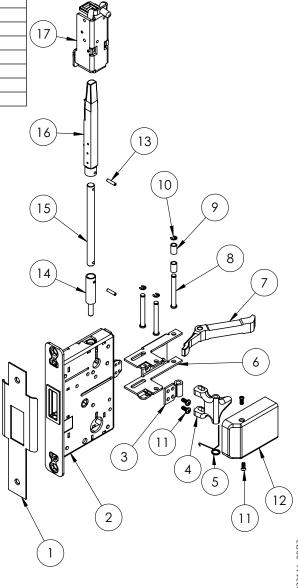

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

12-LR	8606	8610	8613	8615
LR	8640	8643	8646	8673
	8674			




ltem	Part No.	Description Qt		Sellable
1	01-4402	#8-32x7/16" Flat PH U/C MS 9		Yes
2	68-1338	Mortise Cap 1		No
3	68-1164	Pusher Lever	2	Yes
4	68-1476	Outside Hub (LP)	1	Yes
5	68-1174	Pusher Slide	1	Yes
6	68-1176	Pusher Rod Guide	1	No
7	68-1177	Pusher Rod	1	No
8	99-0057	GD Bolt Spring	2	Yes
9	68-1491	Rod Guide Stop	2	No
10	68-1163	Pusher Bolt	1	Yes
11	68-1329	Inactive Latchbolt Actuator	1	No
12	82-0294	Post (Screw and Case)	7	No
13	68-1531	Inactive Bolt Guide	1	Yes
14	68-1187	Inactive Inside Front	1	No
15	68-1222	Inactive Bolt Guide	1	Yes
16	68-1337	Mortise Case	1	No
17	68-1328	Link Latchbolt Tail	1	No
18	01-0424	Rivet	2	No
19	68-1335	Inactive Latchbolt Tail	1	No
20	68-1336	Top Mount	1	Yes
21	68-1253	Spring (Top Mount)	1	Yes
22	68-1405	Inactive Lever	1	Yes
23	68-1246	Top Pusher Guide	1	Yes
24	68-1251	Pusher Rod	1	No
25	99-0072	GD Bolt Eyelet	2	Yes

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

12-LR	8606	8610	8613	8615
LR	8640	8643	8646	8673
	8674			



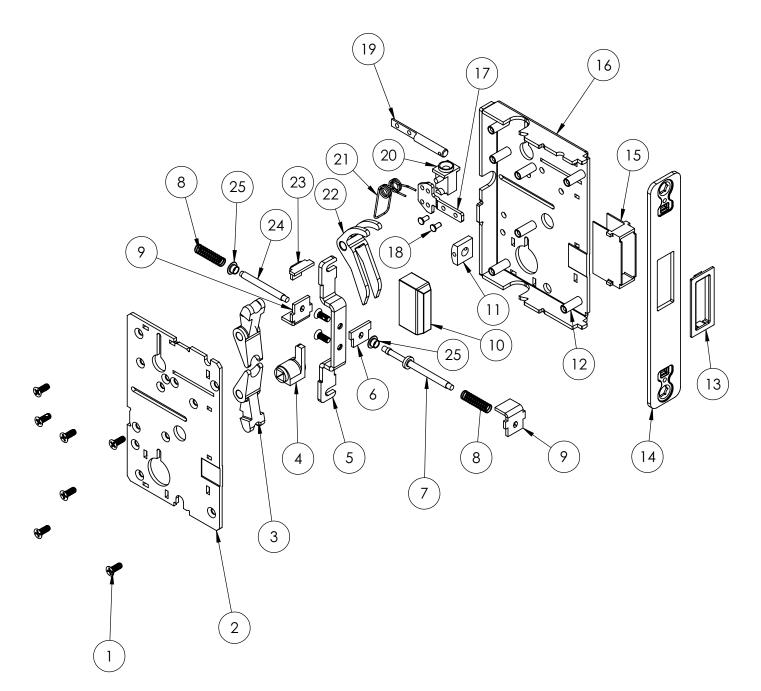

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

# STD 12 8706 8713 8715 8743 HC 8746 8773 8774 12-HC 8746 8773 8774

SARGENT
ASSA ABLOY

Function	Assembly No.	Description	Sellable
06 12 15 42 46 72 74	68-2201 (LHRB)	Chassis Assembly	Vas
06,13,15, 43, 46, 73, 74	68-2202 (RHRB)		Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NI/A	68-0405	Chassis Cover*	1	Yes
2	N/A	97-2563	Auxiliary Screw Pack*	1	Yes
3		68-0327	Main Slide	1	Yes
4		68-1090	Lift Lever	1	Yes
5		97-0050	Knob Return Spring	1	Yes
6		01-0749	Groove Pin	1	No
7		68-2413	Chassis and Slide Assembly, LHRB	1	No
'		68-2414	Chassis and Slide Assembly, RHRB	ין	No
8	See chart above	68-0323	Chassis Pin	2	Yes
9		68-0241	Lift Arm	1	Yes
10		68-7803	Knob Hub Subassembly	1	Yes
11		01-3384	8-32x7/16 PH FH MS	2	Yes
12		01-0930	Countersunk Lock Washer	2	Yes
13		01-4512	Spirol Pin	1	Yes
14		68-0324	Lift Lever Pivot Pin	1	Yes
15		97-0049	Top Rod Adjustment Pin	1	Yes
16	N/A	97-0048	Bottom Rod Adjustment Pin	1	Yes
17		68-5991	Mounting Screw Pack	1	Yes

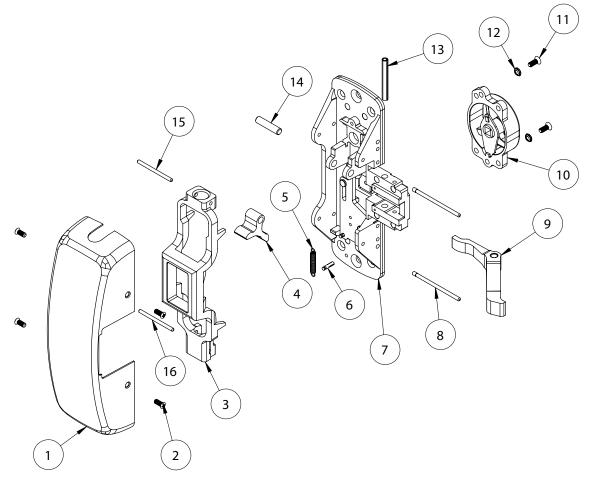

28


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT
ASSA ABLOY

Function	Assembly No.	Description	Sellable
10.40	68-2163 (LHRB)	Chassis Assembly	Yes
10, 40	68-2164 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NI/A	68-0405	Chassis Cover*	1	Yes
2	N/A	68-2113	Screw Pack*	1	Yes
3		68-0327	Main Slide	1	Yes
4		68-1090	Lift Lever	1	Yes
5		68-0326	Chassis	1	Yes
6	68-2163(LHRB) 68-2164(RHRB)	68-0323	Chassis Pin	2	Yes
7	00-2104(KIIKD)	68-0241	Lift Arm	1	Yes
8		01-4512	Spirol Pin	1	Yes
9		68-0324	Lift Lever Pivot Pin	1	Yes
10		97-0049	Top Rod Adjustment Pin	1	Yes
11	] N/A	97-0048	Bottom Rod Adjustment Pin	1	Yes
12		68-5991	Mounting Screw Pack	1	Yes

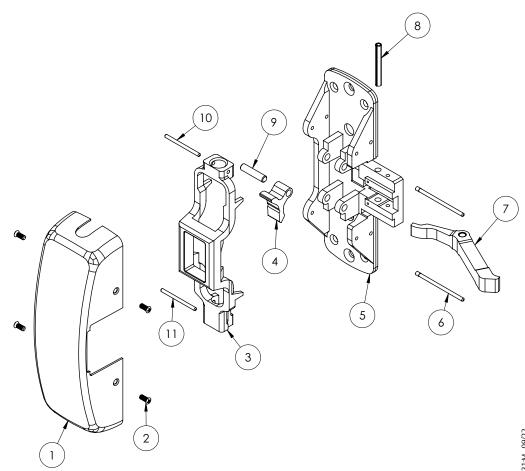


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT	
ASSA ABLOY	

Function	Assembly No.	Description	Sellable
28	68-2210 (LHRB)	Chassis Assembly	Yes
	68-2211 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NI/A	68-0405	Chassis Cover*	1	Yes
2	N/A	68-2113	68-2113 Screw Pack*		Yes
3		68-0327	Main Slide	1	Yes
4		68-1090	Lift Lever	1	Yes
5		97-0050	Knob Return Spring	1	Yes
6		01-0749	Groove Pin	1	No
7		68-2415	Chassis and Slide Assembly, LHRB	1	No
	68-2210(LHRB)	68-2416	Chassis and Slide Assembly, RHRB	d Slide Assembly, RHRB	
8	68-2211(RHRB)	68-0241	Lift Arm	1	Yes
9		97-0089	9 Thumb Piece Lever		Yes
10		01-1146	8-32x3/8 PH FH U'CUT Screw		Yes
11		01-4512	Spirol Pin		Yes
12		68-0323	Chassis Pin	2	Yes
13		68-0324	Lift Lever Pivot Pin	1	Yes
14		97-0049	Top Rod Adjustment Pin	1	Yes
15	N/A	97-0048	Bottom Rod Adjustment Pin	1	Yes
16		68-5991	Mounting Screw Pack	1	Yes

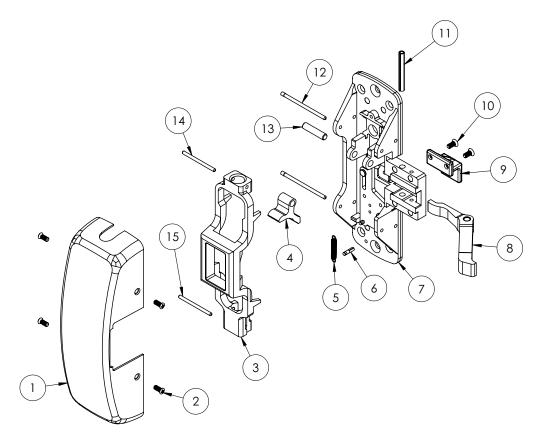


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

## SARGENT ASSA ABLOY

	Function	Assembly	No.	Description	Sella	able
	62,63	68-2204 (LHRB)		Chassis Assembly	Yes	
	02,03	68-2205 (RH	HRB)		Ye	es
	1	· · · ·				
ltem	Assembly No.	Part No.		Description	Qty	Sellable
1	N/A	68-0405		Chassis Cover*	1	Yes
2		68-2113		Screw Pack*	1	Yes
3		68-0327		Main Slide	1	Yes
4		68-1090		Lift Lever	1	Yes
5		97-0050		Knob Return Spring	1	Yes
6		01-0749		Groove Pin	1	No
7		68-2415	Cha	assis and Slide Assembly, LHRB	- 1	No
		68-2416	Cha	issis and Slide Assembly, RHRB		No
8		68-0241		Lift Arm	1	Yes
9		68-0323		Chassis Pin	2	Yes
10		97-0089	089 Thumb Piece Lever		1	Yes
11	68-2204(LHRB) 68-2205(RHRB)	01-1146	8	-32x3/8 PH FH U'CUT Screw	2	Yes
12	00-2205(KIIKD)	01-0005	Retaining Ring		1	Yes
13		01-4512	Spirol Pin		1	Yes
14		68-0324	Lift Lever Pivot Pin		1	Yes
15		68-2198	Le	ocking Slide Assembly, LHRB	- 1	Yes
15		68-2199	Lo	ocking Slide Assembly, RHRB		Yes
16		97-2048	Су	linder Hub and Pin Assembly	1	Yes
17		68-0368	Locking Slide Spring, LHRB		- 1	Yes
17		97-0006		Locking Slide Spring, RHRB		Yes
18		01-1190	6	5-32x5/16 PH PNHD Self Tap	1	Yes
19		97-0049		Top Rod Adjustment Pin	1	Yes
20	N/A	97-0048	E	Bottom Rod Adjustment Pin	1	Yes
21		68-5991		Mounting Screw Pack	1	Yes

\*Specify Finish

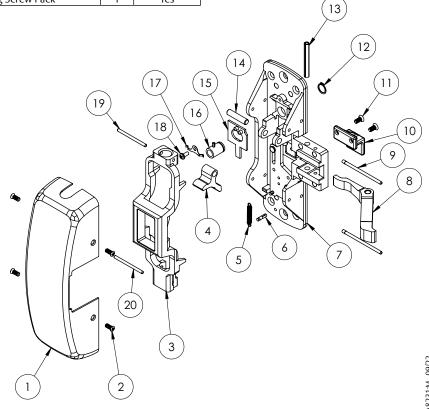

Experience a safer and more open world


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

STD	8706	8710	8713	8715
	8728	8740	8743	8746
	8762	8763	8773	8774

SARGENT
ASSA ABLOY

Function	Assembly No.	Description	Sellable
(All Functions)	97-2434 Manufactured Before 11/11/2002	Top Case	Yes
	68-4557 Manufactured After 11/11/2002	Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	97-0018 Top Cover*		1	Yes	
2	N/A	68-3905	3905 Screw Pack (B)*		Yes
3		97-0065	Latch Release Lever Pin	1	Yes
4		97-0579	Spring, Torsion	1	Yes
5		68-1155	Latch Retracting Lever	1	Yes
6		97-0296	Latch Bolt	1	Yes
7	97-2434	97-0300	L.B. Spring	1	Yes
8		97-0299	Chassis	1	Yes
9		97-0294	Pivot Pin	3	Yes
11		01-0461	Spirol Pin	1	Yes
12	]	01-0002	Roll Pin	1	Yes
3		97-0065	Latch Release Lever Pin	1	Yes
4		97-0579	Spring, Torsion	1	Yes
5		68-1155	Latch Retracting Lever	1	Yes
6	] [	97-0296	Latch Bolt	1	Yes
7	] [	97-0300	L.B. Spring	1	Yes
8	68-4557	97-0299	Chassis	1	Yes
9	] (	97-0294	Pivot Pin	1	Yes
10	] (	68-1455	Top Rod Adjuster	1	Yes
11	1	01-0461	Spirol Pin	1	Yes
12	]	01-0002	Roll Pin	1	Yes
13	]	97-0298	Top Slide	1	Yes
14		670T	Top Rod	1	Yes
15	N/A	97-0020	Rod Guide*	1	Yes
16		646	Strike Pack	1	Yes

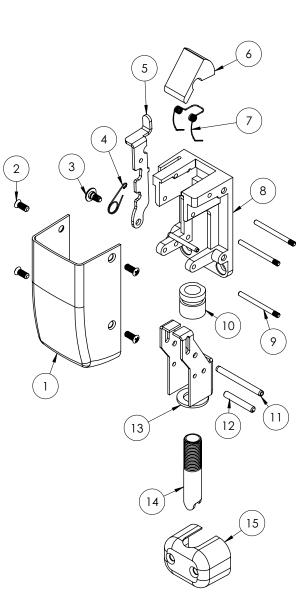


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

STD	8706	8710	8713	8715
	8728	8740	8743	8746
	8762	8763	8773	8774

Function	Assembly No.	Description	Sellable
(All Functions)	97-2038 (Manufactured Before 11/11/2002)	Bottom Case Assembly	Yes
	68-4549 (Manufactured After 11/11/2002)	Bottom Case Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	97-0018	Bottom Cover*	1	Yes
2		68-3905	Screw Pack (B)*	1	Yes
3		97-0035	Retractor	1	Yes
4		97-0084	Adjustment Pin, Bottom Rod	1	Yes
5	97-2038	97-0025	Bottom Chassis	1	Yes
6		97-0053	Bottom Latch Bolt	1	Yes
7		01-0697	Spirol Pin	1	Yes
3		97-0035	Retractor	1	Yes
4	1	97-0084	Adjustment Pin, Bottom Rod	1	Yes
5		97-0025	Bottom Chassis	1	Yes
6	68-4549	97-0053	Bottom Latch Bolt	1	Yes
7	1	01-0697	Spirol Pin	1	Yes
8		97-0572	Rod Adjustment Nut	1	Yes
9		97-0101	Spring, Compression	1	Yes
10		670B	Bottom Rod	1	Yes
11	N/A	97-0020	Rod Guide*	1	Yes
12		624	Bottom Strike Pack	1	Yes

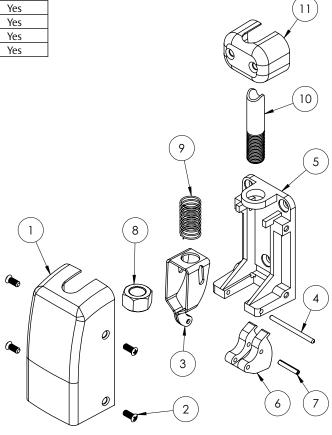

SARGENT

ASSA ABLOY


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

12-	8706	8710	8713	8715
	8728	8740	8743	8746
	8762	8763	8773	8774

Function Assembly No.		Description	Sellable
(All Functions)	97-2963 Manufactured Before 11/11/2002	Top Case Assembly	Yes
	68-4559 Manufactured After 11/11/2002	Top Case Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	97-0018	Top Cover*	1	Yes
2	IN/A	68-3905	Screw Pack (B)*	1	Yes
3		97-0065	Latch Release Lever Pin	1	Yes
4		01-0002	Roll Pin	1	Yes
5		01-0461	Spirol Pin	1	Yes
6		97-0579	Spring, Torsion	1	Yes
7	]	97-0399	Latch Retracting Lever	1	Yes
8	]	97-0391	Sleeve	2	Yes
9	]	97-0398	Latch Bolt	1	Yes
10	68-4559	97-0400	Top Case Spring	1	Yes
11	]	97-0405	Guard Lever	1	Yes
12	-	97-0393	Pivot Pin	1	Yes
13		97-0402	Top Chassis	1	Yes
14		97-0394	Latch Bolt Pivot Pin	1	Yes
15	]	97-0294	Pivot Pin	3	Yes
16		68-1455	Top Rod Adjuster	1	Yes
17		97-0397	Slide	1	Yes
3		97-0065	Latch Release Lever Pin	1	Yes
5	]	01-0461	Spirol Pin	1	Yes
6	]	97-0579	Spring, Torsion	1	Yes
7	]	97-0399	Latch Retracting Lever	1	Yes
8	]	97-0391	Sleeve	2	No
9	]	97-0398	Latch Bolt	1	Yes
10	97-2963	97-0400	Top Case Spring	1	No
11	]	97-0405	Guard Lever	1	No
12	]	97-0393	Pivot Pin	1	No
13	]	97-0402	Top Chassis	1	Yes
14	]	97-0394	Latch Bolt Pivot Pin	1	Yes
15	]	97-0294	Pivot Pin	3	Yes
17	<u> </u>	97-0397	Slide	1	Yes
18		670T	Top Rod	1	Yes
19	N/A	97-0020	Rod Guide*	1	Yes
20		646	Strike Pack	1	Yes

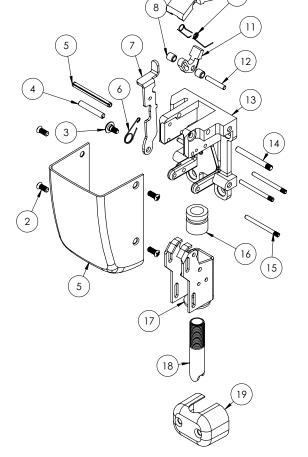

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Experience a safer and more open world

SARGENT

ASSA ABLOY

9


10

FM, 12-FM	12-	8706	8710	8713	8715
12-HC	12-HC4	8728	8740	8743	8746
HC	HC4	8762	8763	8773	8774



Function	Function Assembly No. Description		Sellable
(All Functions)	97-2002	Bottom Case Assembly Manufactured Before 11/11/2002	Yes
	68-4558	Bottom Case Assembly Manufactured After 11/11/2002	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NI/A	97-0392	Bottom Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
3		97-0076	Bottom Bolt	1	Yes
4		97-0305	Nylon Insert	4	Yes
5	97-2002	97-0270	Reinforcement	1	Yes
6	97-2002	97-0101	Spring, Compression	1	Yes
7		97-0080	Chassis	1	Yes
8		01-4404	CR-FH #6 Head 8-32 Screw	2	Yes
3		68-1454	Bottom Bolt	1	Yes
4		97-0305	Nylon Insert	4	Yes
5	68-4558	97-0270	Reinforcement	1	Yes
6	08-4558	97-0101	Spring, Compression	1	Yes
7		97-0080	Chassis	1	Yes
8		01-4404	CR-FH #6 Head 8-32 Screw	2	Yes
9		670B	Bottom Rod	1	Yes
10		97-0020	Rod Guide*	1	Yes
11	N/A	655	Flat Strike Pack (STD, HC)	1	Yes
		653	Bottom Strike Pack (FM)	1	Yes

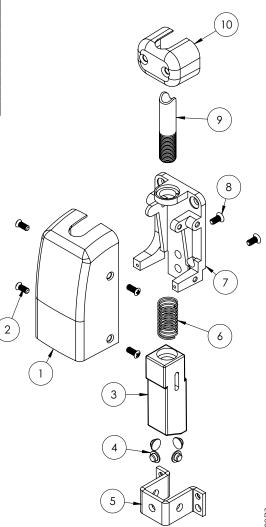

A8231:M 09/22

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

12-(FM, HC, HC4)	8706	8710	8713	8715
(FM, HC, HC4)	8728	8740	8743	8746
	8762	8763	8773	8774

Function Assembly No. Description		Description	Sellable
	97-2003	Top Case Assembly Manufactured Before 11/11/2002	Yes
(All Functions)	68-4561	Top Case Assembly Manufactured After 11/11/2002	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NI/A	97-0084	Top Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
3		97-0079	Top Case Filler	1	Yes
4		01-1490	#4-40 x 3/8 PH Pan MS	2	Yes
5		97-0579	Spring, Torsion	1	Yes
6		97-0065	Pin, Latch Release Lever	1	Yes
7		01-0695	Spirol Pin	1	Yes
8	97-2003	97-0270	Top Reinforcement	1	Yes
9		97-2046	Top Slide Assembly	1	Yes
10		68-1155	Latch Release Lever	1	Yes
11		97-0080	Chassis	1	Yes
12		01-0476	Snap-In Nyliner	1	Yes
3		97-0079	Top Case Filler	1	Yes
4		01-1490	#4-40 x 3/8 PH Pan MS	2	Yes
5		97-0579	Spring, Torsion	1	Yes
6		97-0065	Pin, Latch Release Lever	1	Yes
7	68-4561	01-0695	Spirol Pin	1	Yes
8	08-4501	97-0761	Top Reinforcement	1	Yes
9		68-4560	Top Slide Assembly	1	Yes
10		68-1665	Latch Release Lever	1	Yes
11		97-0080	Chassis	1	Yes
12		01-0476	Snap-In Nyliner	1	Yes
13		670T	Top Rod	1	Yes
14	N/A	97-0020	Rod Guide*	1	Yes
15		659	Strike Pack	1	Yes

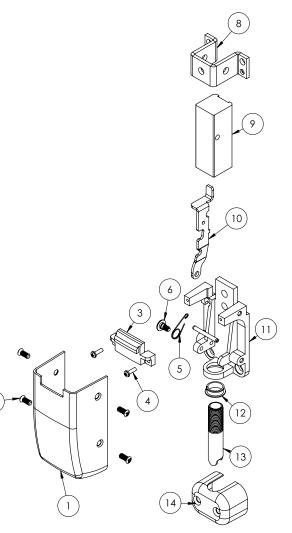

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

A8231:M 09/22

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

2

SARGENT **ASSA ABLOY** 


12-NB	8706	8710	8713
NB	8715	8740	8743
	8746	8773	8774



Function	Assembly No.	Description	Sellable
(All Functions)	68-4568 (LHRB)	Chassis Assambly	Yes
	68-4569 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0405	Chassis Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
3		68-1137	Lift Arm	1	Yes
4		68-1170	Outside Actuator, LH	1	Yes
4		68-1171	Outside Actuator, RH		Yes
5		68-1208	ET Cam, LH	1	Yes
J		68-1209	ET Cam, RH		Yes
6		68-1184	Guide Pin	1	Yes
7		68-1205	Chassis, LH	1	Yes
1		68-1206 Chassis, RH	I	Yes	
8	68-4568(LHRB)	68-1191	Link Pin	1	Yes
9	68-4569(RHRB)	01-0005	Retaining Ring	1	Yes
10		68-0239	Pivot Pin	1	Yes
11		68-1180	Tube Support	1	Yes
12	]	01-3595	Machine Screw	2	Yes
13	]	68-1193	Spring, Upper Link	1	Yes
14	]	97-0048	Rod Adjustment Pin	1	Yes
15	]	68-4270	Upper Link Assembly, LHRB	1	Yes
15		68-4271	Upper Link Assembly, RHRB	ין	Yes
16	]	68-1210	Hair Pin	1	Yes
17	N/A	68-5991	Mounting Screw Pack	1	Yes

\*Specify Finish

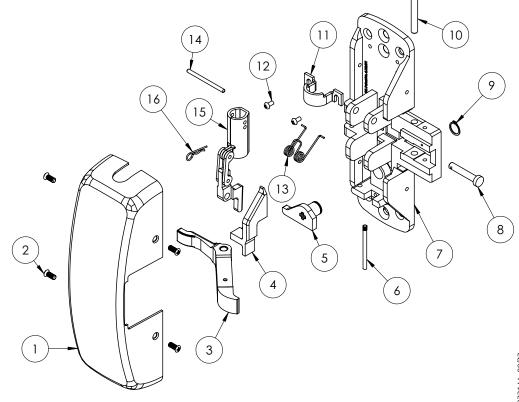

Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

12-NB	8706	8710	8713
NB	8715	8740	8743
	8746	8773	8774

97-0402

97-0394

01-0461

97-0294

68-0991

68-0419

01-3563

68-0420

68-1458

97-0020

670T

646

SARGENT
ASSA ABLOY

tion /	Assembly No	).	Description		Sellable
ctions)	68-3933		Top Case Assemb	y	Yes
Assembly No.	Part No.		Description	Qty	Sellable
NI/A	97-0392		Top Cover*	1	Yes
N/A	68-3905		Screw Pack (B)*	1	Yes
	97-0065	La	tch Release Lever Pin	1	Yes
	97-0579		Spring, Torsion	1	Yes
	68-1155	Lā	tch Retracting Lever	1	Yes
	68-1153	-	Top Case Latch Bolt	1	Yes
	01-0697		Spirol Pin	2	Yes
	97-0400		Top Case Spring	1	Yes
	68-1460		Link, Pivot	1	Yes
	ctions) Assembly	Assembly No.         Part No.           N/A         97-0392           68-3905         97-0065           97-0579         68-1155           68-1153         01-0697           97-0400         97-0400	Assembly No.         Part No.           N/A         97-0392           68-3905         97-0065           97-0579         68-1155           68-1155         La           01-0697         97-0400	Assembly No.Part No.Description97-0392Top Case Assembly DescriptionN/A97-0392Top Cover*68-3905Screw Pack (B)*97-0065Latch Release Lever Pin97-0579Spring, Torsion68-1155Latch Retracting Lever68-1153Top Case Latch Bolt01-0697Spirol Pin97-0400Top Case Spring	Assembly No.         Part No.         Description         Qty           N/A         97-0392         Top Cover*         1           68-3905         Screw Pack (B)*         1           97-0065         Latch Release Lever Pin         1           97-0579         Spring, Torsion         1           68-1155         Latch Retracting Lever         1           68-1153         Top Case Latch Bolt         1           01-0697         Sprinol Pin         2           97-0400         Top Case Spring         1

Top Chassis

Pivot Pin, Latch Bolt

Spirol Pin

Pivot Pin

Fusible Link

Guide Spring

#5-40 x 1/4 PH RD HD MS

Pin, Fire Stop

Top Rod Link

Rod Guide\*

Top Rod

Strike Pack

1

1

1

2

1

1

1

1

1

Yes

Yes

Yes

Yes

No

No

No

\*Specify Finish

10

11

12

13

14

15

16

17

18


19

20

21

68-3933

N/A

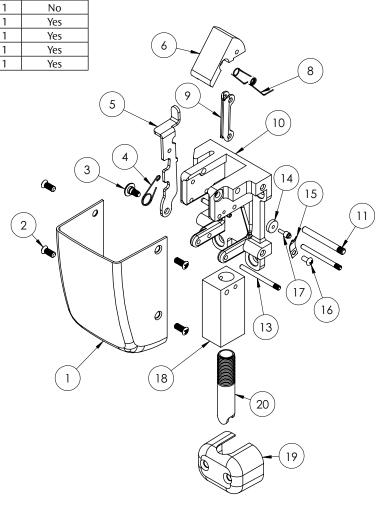

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


#### 12-53-12-53-HC 53-53-HC 12-53-NB 12-53-HC4 53-NB 53-HC4

#### 8706 8713 8715 8743 8746 8773 8774



F	unction	Assembly N	о.	Description		ellable
06, 13	3, 15, 43, 46,	68-3714 (LHR	RB)	Chassis Assembly		Yes
	73,74	68-3715 (RHF	RB)	Chassis Assembly		Yes
		· · · · · · · · · · · · · · · · · · ·				
ltem	Assembly N	lo. Part No.		Description	Qty	Sellable
1	, , , , , , , , , , , , , , , , , , ,	68-0405		Chassis Cover*	1	Yes
2	N/A	97-2563		Auxillary Screw Pack*	1	Yes
3		68-1768		Spacer	1	No
4		68-1087		Locking Lever	1	No
5		01-0749		Groove Pin	3	No
6		68-1128		Slide Pivot Pin	1	No
7	1	68-1123		Lock Lever Spring	1	No
8	1	68-1671		Main Slide	1	No
9		68-1127		Roll Pin	1	No
10		98-0238		Guard Bracket Hairpin	1	Yes
11		68-1090		Lift Lever	1	Yes
12	1	01-4396		59-80 Machine Screw	2	No
13	1	68-1092		Lift Block	1	No
14	See chart abo	52-2217		Switch Assembly	1	Yes
15	See chart abo	97-0050		Knob Return Spring	1	Yes
16	1	68-0323		Chassis Pin	2	Yes
17		68-1137		Lift Arm	1	Yes
18		01-3384		8-32x7/16 PH FH MS	2	Yes
19		68-7803		Knob Hub Subassembly	1	Yes
20		01-0930		CS Lock Washer	2	Yes
21	1	01-0150		Wire Clip	1	Yes
22	1	01-4512		Spirol Pin	1	Yes
22		68-2413	Chas	sis w/ Locking Slide Assembly, LHRB	- 1	Na
23		68-2414		sis w/ Locking Slide Assembly, RHRB		No
24		68-0324		Lift Lever Pivot Pin	1	Yes
25		01-4381		Machine Screw	2	No
26		97-0049		Top Rod Adjustable Pin	1	Yes
27	N/A	97-0048		Bottom Rod Adjustable Pin	1	Yes
28		68-5991		Mounting Screw Pack	1	Yes

\*Specify Finish

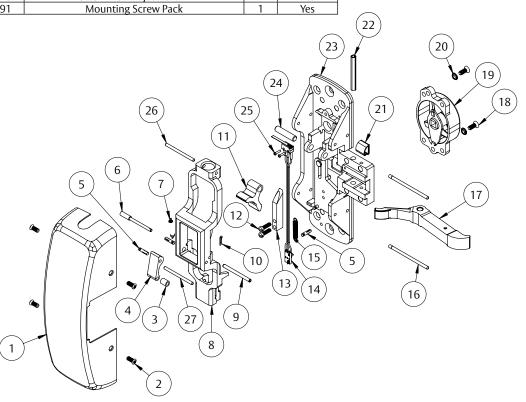

Experience a safer and more open world

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

#### 12-53-53-12-53-HC 53-HC

SARGENT
ASSA ABLOY

 $\Sigma$ 

(9 8)

Func	tion	on Assembly No. Description			Sellable	
10	10	68-382	23 (LHRB)			Yes
10,	10.40		4 (RHRB)	Chassis Assembly		Yes
ltem	Asser	nbly No.	Part No.	Description	Qty	Sellable
1		-	68-0405	Chassis Cover*	1	Yes
2	1	N/A	97-2563	Auxillary Screw Pack*	1	Yes
3			68-1123	Spring, Locking Lever	1	No
4	1		68-1087	Locking Lever	1	No
5	]		68-1768	Spacer	1	No
6	]		68-1671	Main Slide	1	No
7	]		68-1127	Roll Pin	1	No
8			98-0238	Guard Bracket Hairpin	1	Yes
9			68-1294	Stop Pin	1	Yes
10			68-1113	Chassis, LHRB	1	No
10	CO 20	(ממנדו) בב	68-1114	Chassis, RHRB		No
11		23(LHRB)	68-0323	Chassis Pin	2	Yes
12	68-38.	24(RHRB)	68-1137	Lift Arm	1	Yes
13			01-0150	Wire Clip	1	Yes
14			01-4512	Spirol Pin	1	Yes
15			68-0324	Lift Lever Pivot Pin	1	Yes
16			52-2217	Switch Assembly	1	Yes
17			01-4381	Machine Screw	2	No
18			68-1090	Lift Lever	1	Yes
19			68-1128	Slide Pivot Pin	1	No
20			01-0749	Groove Pin	2	No
21			97-0049	Top Rod Adjustment Pin	1	Yes
22		N/A	97-0048	Bottom Rod Adjustment Pin	1	Yes
23	1 '		68-5991	Mounting Screw Pack	1	Yes

\*Specify Finish

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

8728


53-HC
HC



Function	Assembly No.	Description	Sellable
20	68-3829 (LHRB)	HRB) Chassis Assembly	
28	68-3830 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0405	Chassis Cover*	1	Yes
2	IN/A	68-3905	Auxillary Screw Pack*	1	Yes
3		68-1087	Locking Lever	1	No
4		68-1768	Spacer	1	No
5		68-1671	Main Slide	1	Yes
6	]	68-1127	Roll Pin	1	No
7	]	98-0238	Guard Bracket Hairpin	1	Yes
8	]	01-4396	59-80 Machine Screw	2	Yes
9		68-1092	Lift Block	1	Yes
10		52-2217	Switch Assembly	1	Yes
11	]	97-0050	Knob Return Spring	1	Yes
12	]	01-0749	Groove Pin	3	No
13	68-3829(LHRB)	68-0323	Chassis Pin	2	Yes
14		68-1137	Lift Arm	1	Yes
15	68-3830(RHRB)	97-0089	Thumb Piece Lever	1	Yes
16	]	01-1146	8-32x3/8 PH FL U'CUT W/NY	1	Yes
17	]	01-0150	Wire Clip	1	Yes
18	]	01-4512	Spirol Pin	1	Yes
19		68-2413	Chassis w/ Locking Slide Assembly, LHRB	- 1	No
19		68-2414	Chassis w/ Locking Slide Assembly, RHRB	י ך	No
20		68-0324	Lift Lever Pivot Pin	1	Yes
21	]	01-4381	Machine Screw	2	No
22	]	68-1090	Lift Lever	1	Yes
23	]	68-1123	Spring, Locking Lever	1	No
24		68-1128	Slide Pivot Pin	1	No
25		97-0048	Bottom Rod Adjustable Pin	1	Yes
26	] N/A	97-0049	Top Rod Adjustable Pin	1	Yes
27		68-5991	Mounting Screw Pack	1	Yes

\*Specify Finish

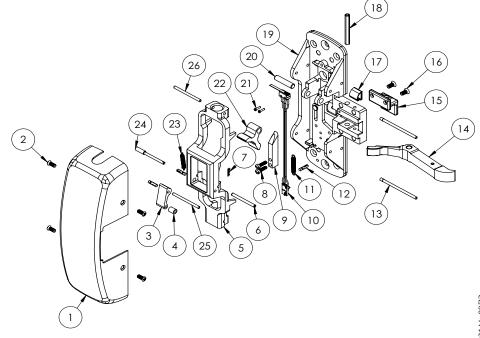

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

97-2048

68-1123 68-1128

01-0749

97-0049

97-0048

68-5991

12-53-53-12-53-HC 53-HC

SARGENT	B
ASSA ABLOY	7

Yes

No

No

No

Yes

Yes

Yes

1

1

1

3

1

1

1

Function As		Assembly No.	Description	Sell	able	
		6	8-3826 (LHRB)		Y	'es
t	52, 63	6	8-3827 (RHRB)	Chassis Assembly	Yes	
ltem	Assembly	No.	Part No.	Description	Qty	Sellabl
1	-		68-0405	Chassis Cover*	1	Yes
2	N/A		97-2563	Auxillary Screw Pack*	1	Yes
3			68-1087	Locking Lever	1	No
4			68-1768	Spacer	1	No
5			68-1671	Main Slide	1	No
6	1		68-1127	Roll Pin	1	No
7	1		98-0238	Guard Bracket Hairpin	1	Yes
8			68-1090	Lift Lever	1	Yes
9			01-4396	59-80 Machine Screw	2	Yes
10		52-2217	Switch Assembly	1	Yes	
11		68-1092	Lift Block	1	Yes	
12	1		97-0050	Knob Return Spring	1	Yes
13	]		68-2413	Chassis and Locking Slide Assembly, LHRB	1	No
13			68-2414	Chassis and Locking Slide Assembly, RHRB	יך	No
14	]		68-0323	Chassis Pin	2	Yes
15	1		68-1137	Lift Arm	1	Yes
16	68-3826(LF	IRB)	97-0089	Thumb Piece Lever	1	Yes
17	68-3827(RF	łRB)	01-1146	8-32x3/8 PH FL U'CUT W/NY	1	Yes
18	Ì		01-0150	Wire Clip	1	Yes
19	]		01-0005	Retaining Ring	1	Yes
20			01-4512	Spirol Pin	1	Yes
21	-	68-0324	Lift Lever Pivot Pin	1	Yes	
22		68-2198	Locking Slide Assembly, LHRB	1	Yes	
22		68-2199	Locking Slide Assembly, RHRB	- 1	Yes	
23			01-4381	Machine Screw	2	Yes
24			68-0368	Locking Slide Spring, LHRB	1	Yes
24			97-0006	Locking Slide Spring, RHRB	- 1	Yes
25	]		01-1190	6-32x5/16 PH PNHD Self Tap Screw	1	Yes
20	1		07 2049	Cultur dan Uluk an d Din Assanthiu	1	V

Cylinder Hub and Pin Assembly

Lock Lever Spring Slide Pivot Pin

Groove Pin

Top Rod Adjustable Pin

Bottom Rod Adjustable Pin

Mounting Screw Pack

\*Specify Finish

26

27 28 29

30

31

32


N/A

42

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Experience a safer and more open world

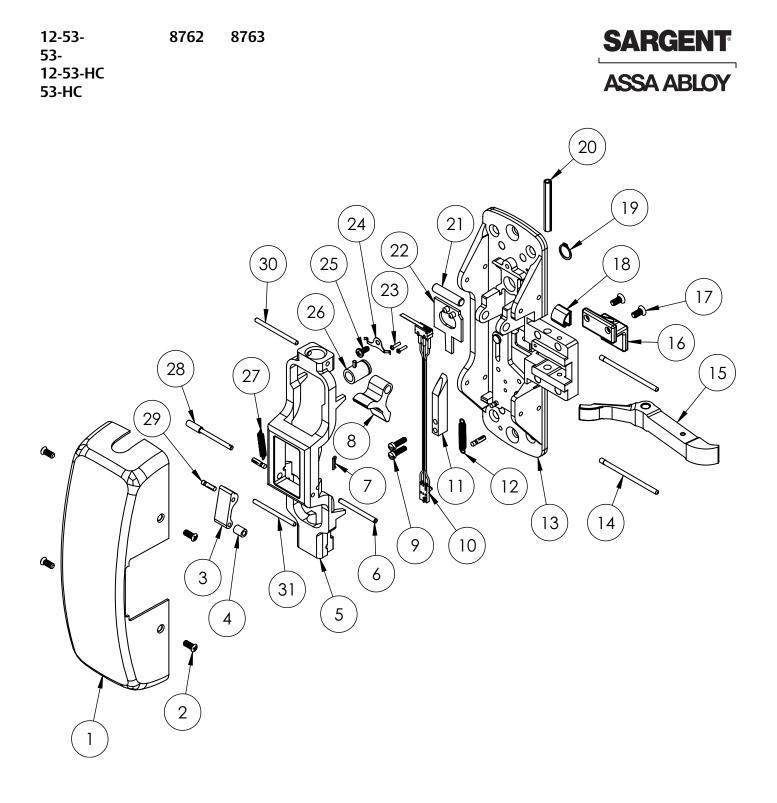

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


STD	8706 8773	 8715	8743	8746
12-FM FM				

SARGENT
ASSA ABLOY

Function	Assembly No.	Description	Sellable
06 12 15 42 46 72 74	68-7306 (LHRB)	Chassis Assembly	Yes
06, 13, 15, 43, 46, 73, 74	68-7307 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0405	Chassis Cover*	1	Yes
2	N/A	97-2563	Auxillary Screw Pack*	1	Yes
3		68-1664	Main Slide	1	Yes
4		68-1656	Lift Lever	1	Yes
5		01-4396	59-80 Machine Screw	2	Yes
6		68-1655	Lift Block	1	Yes
7		97-0050	Knob Return Spring	1	Yes
8		01-0749	Groove Pin	1	No
9		68-7310	Chassis and Slide Assembly, LHRB	1	No
9	See chart above	68-7311	Chassis and Slide Assembly, RHRB	] '	No
10		68-0323	Chassis Pin	2	Yes
11		68-0241	Lift Arm	1	Yes
12		01-9372	Lift Lever Pivot Pin	1	Yes
13		68-7803	Knob Hub Subassembly	1	Yes
14		01-3384	8-32x7/16 PH FH MS	2	Yes
15		01-0930	Countersunk Lock Washer	2	Yes
15		01-4512	Spirol Pin	1	Yes
17		97-0049	Top Rod Adjustment Pin	1	Yes
18	N/A	97-0048	Bottom Rod Adjustment Pin	1	Yes
19		68-5991	Mounting Screw Pack	1	Yes

\*Specify Finish

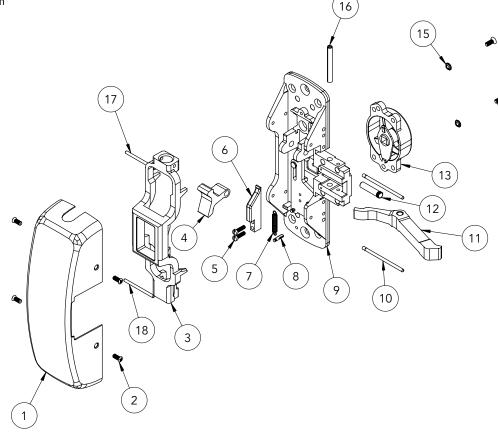

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

14

Function	Assembly No.	Description	Sellable
(10, 40)	68-7308 (LHRB)	Chassis Assembly	Yes
(10, 40)	68-7309 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0405	Chassis Cover*	1	Yes
2	N/A	97-2563	Auxillary Screw Pack*	1	Yes
3	-	68-1664	Main Slide	1	Yes
4		68-1656	Lift Lever	1	Yes
5	68-7308(LHRB)	68-1660	Chassis	1	Yes
6	68-7309(RHRB)	68-0323	Chassis Pin	2	Yes
7		68-0241	Lift Arm	1	Yes
8		01-9372	Lift Lever Pivot Pin	1	Yes
9		97-0049	Top Rod Adjustment Pin	1	Yes
10	N/A	97-0048	Bottom Rod Adjustment Pin	1	Yes
11		68-5991	Mounting Screw Pack	1	Yes

\*Specify Finish

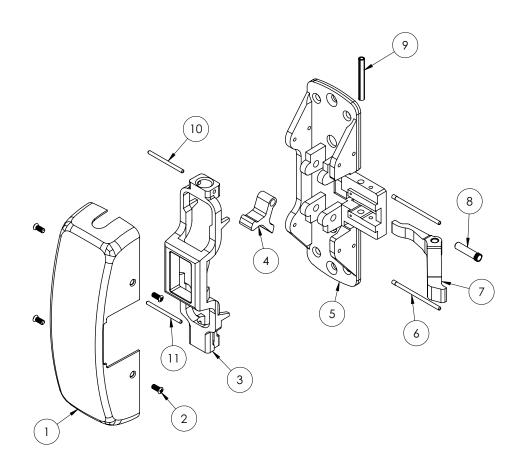

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


53-NB-	8706	8710	8713	8715
12-53-NB-	8740	8743	8746	8773
	8774			



Function	Assembly No.	Description	Sellable
	68-5449 (LHRB)	Chassis Assembly	Yes
(All Functions)	68-5450 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NI/A	68-0405	Chassis Cover*	1	Yes
2	N/A	68-3905	Screw Pack (B)*	1	Yes
3		01-3595	#8-32x1/4" Machine Screw*	1	Yes
4		68-1180	Tube Support	1	Yes
5		68-4270	Upper Link Assembly, LHRB	- 1	Yes
5		68-4271	Upper Link Assembly, RHRB		Yes
6		68-1193	Upper Link Spring	1	Yes
7		68-1170	Outside Actuator, LHRB	- 1	Yes
1		68-1171	Outside Actuator, RHRB	ין	Yes
8		01-1237	#1-72 PH Pan Head MS	1	Yes
9		68-1208	ET Cam, LH	- 1	Yes
9	68-5449	68-1209	ET Cam, RH		Yes
10	68-5450	52-5133	Switch and Wire Assembly	1	Yes
11		68-1184	Guide Pin	1	Yes
12		01-4512	Spirol Pin	1	Yes
13		68-1205	Chassis, LH	1	No
15		68-1206	Chassis, RH	ין	No
14		01-0005	Retaining Ring	1	Yes
15	]	68-1137	Lift Arm	1	Yes
16	]	68-1210	Hair Pin	1	Yes
17	]	68-1191	Link Pin	1	Yes
18		97-0048	Bottom Rod Adjustment Pin	1	Yes
19	N/A	68-5991	Mounting Screw Pack	1	Yes

\*Specify Finish

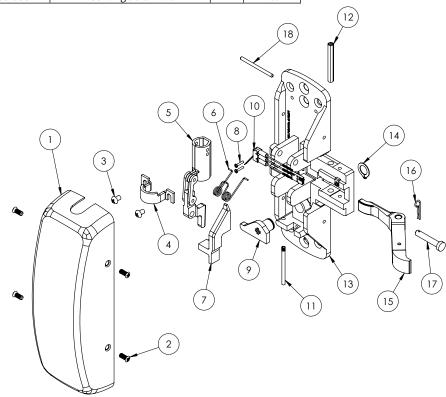

The wa

**46** 

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Experience a safer and more open world

12-HC4-

871087138715874387468773

SARGENT ASSA ABLOY

HC4-

Function	Assembly No.	Description	Sellable
06,10,13,15,40,43	68-4112 (LHRB)	Chassis Assembly	Yes
46, 73, 74	68-4113 (RHRB)	Chassis Assembly	Yes


8706

8740

8774

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NI/A	68-0405	Chassis Cover*	1	Yes
2	N/A	97-2563	Auxillary Screw Pack*	1	Yes
3		68-1087	Locking Lever	1	No
4		68-1768	Spacer	1	No
5		68-1671	Main Slide	1	Yes
6		68-1127	Roll Pin	1	No
7		98-0238	Guard Bracket Hairpin	1	Yes
8		01-4396	59-80 Machine Screw	2	No
9		68-1090	Lift Lever	1	Yes
10		68-1092	Lift Block	1	Yes
11		97-0050	Knob Return Spring	1	Yes
12		01-0749	Groove Pin	3	Yes
13	See chart above	68-2413	Chassis and Slide Assembly, LHRB	- 1	No
13		68-2414	Chassis and Slide Assembly, RHRB	ין	No
14		68-0323	Chassis Pin	2	Yes
15		68-1137	Lift Arm	1	Yes
16		68-7803	Knob Hub Subassembly	1	Yes
17		01-0930	Countersunk Lock Washer	2	Yes
18		01-3384	8-32x7/16 PH FH MS	2	Yes
19		01-4512	Spirol Pin	1	Yes
20		68-0324	Lift Lever Pivot Pin	2	Yes
21		68-1123	Return Spring, Guarding	1	No
22		68-1128	Slide Pivot Pin	1	No
23		97-0048	Bottom Rod Adjustment Pin	1	Yes
24	N/A	97-0049	Top Rod Adjustment Pin	1	Yes
25	· ·	68-5991	Mounting Screw Pack	1	Yes

\*Specify Finish

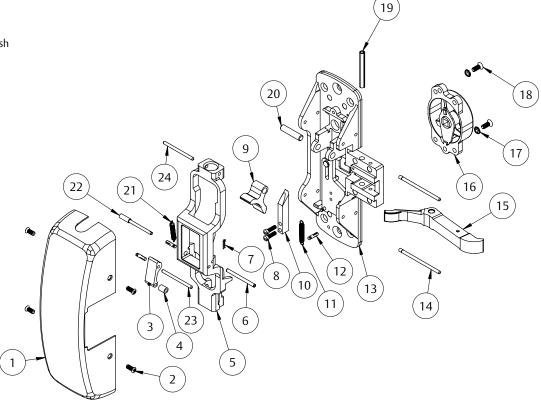

Experience a safer and more open world The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


(WS-/53-)8804 (WS-/53-)8815 (WS-/53-)8846 (WS-/53-)8876	(WS-/53-)8806 (WS-/53-)8840 (WS-/53-)8873 (WS-/53-)8877	(WS-/53-)8810 (WS-/53-)8843 (WS-/53-)8874 (WS-/53-)8878	(WS-/53-)8813 (WS-/53-)8844 (WS-/53-)8875 (WS-/53-)8881	S/ AS
(WS-/53-)8882	(WS-/53-)8888	(113 [33 ]0010	(100)	



Function	Assembly No.	Description	Sellable
All functions	68-4261	LHRB/RHRB	Yes
WS- All functions	08-4201	LHRB/RHRB	res
53- All functions	68-6075	LHRB/RHRB	Yes
WS-53- All functions	00-0075	LHRB/RHRB	res

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-1389	Chassis Blank (Std)	1	No
2		98-0018	Outside Cylinder Hub	2	Yes
3		68-1367	Lift Lever (RH)	1	Yes
4		68-1366	Lift Lever (LH)	1	Yes
5		68-4413	Standard Latchbolt (68-4261)	1	Yes
5		68-7417	53- Standard Latchbolt (68-6075)	1	Yes
6		98-0028	Latchbolt Spring	1	Yes
7		68-1137	Lift Arm	1	Yes
8		98-0011	Latchbolt Lever Pivot Pin	2	Yes
9	See chart above	01-4512	Spirol Pin	2	Yes
10	above	01-0005	Retaining Ring, Truarc 5100-43	2	Yes
11		01-0008	Groove Pin	1	No
12		68-1685	Switch Bracket (53- Only)	1	Yes
13		01-1482	#6-32 x 1/8" Ph Pn Hd Machine Screw (53- Only)	1	Yes
14		52-4545	Switch Assembly (53- Only)	1	Yes
15		01-9446	#1-72 x 11/32" Ph Fl Hd Machine Screw (53- Only)	1	Yes
16		01-0909	Hex Machine Screw Nut (53- Only)	1	Yes
17		52-0310	Cable Clamp (53- Only)	1	Yes
18		01-1482	Cr-Phms #2-56 X 1/8" (53- Only)	1	Yes
19		68-0406	Cover <sup>1</sup>	1	Yes
20	N1/A	68-3905	Screw Pack <sup>1</sup>	1	Yes
Not	N/A	68-2143	Screw Pack	1	Yes
Shown		649	Strike Pack	1	Yes

1. Indicates finish required

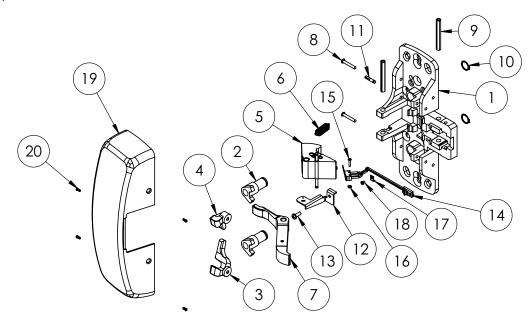

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

(12-/WS-/53)8804 (12-/WS-/53)8806 (12-/WS-/53)8815 (12-/WS-/53)8840 (12-/WS-/53)8846 (12-/WS-/53)8873 (12-/WS-/53)8876 (12-/WS-/53)8877 (12-/WS-/53)8882 (12-/WS-/53)8888


(12-/WS-/53)8810 (12-/WS-/53)8813 (12-/WS-/53)8843 (12-/WS-/53)8844 (12-/WS-/53)8874 (12-/WS-/53)8875 (12-/WS-/53)8878 (12-/WS-/53)8881



Function	Assembly No.	Description	Sellable
12- All functions	68-4263	LHRB/RHRB	YES
WS-12- All functions	08-4203	LHRB/RHRB	TES
12-53- All functions	69 6076	LHRB/RHRB	YES
WS-12-53- All functions	68-6076	LHRB/RHRB	TES

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-1378	Chassis Blank (12-)	1	No
2		98-0018	Outside Cylinder Hub	2	Yes
3		68-1367	Lift Lever (RH)	1	Yes
4		68-1366	Lift Lever (LH)	1	Yes
		68-4414	Fire Rated Latchbolt (68-4263)	1	Yes
5		68-7418	12-53- Standard Latchbolt (68-6076)	1	Yes
6		98-0028	Latchbolt Spring	1	Yes
7		68-1137	Lift Arm	1	Yes
8		98-0011	Latchbolt Lever Pivot Pin	2	Yes
9	See chart above	01-4512	Spirol Pin	2	Yes
10	above	01-0005	Retaining Ring, Truarc 5100-43	2	Yes
11		01-0008	Groove Pin	1	No
12		68-1685	Switch Bracket (53- Only)	1	Yes
13		01-1482	#2-56 Ph Pn Hd Machine Screw (53- Only)	1	Yes
14		52-4545	Switch Assembly (53- Only)	1	Yes
15		01-9446	#1-72 X 11/32" Ph Fl Hd Machine Screw (53- Only)	1	Yes
16		01-0909	Hex Machine Screw Nut (53- Only)	1	Yes
17		52-0310	Cable Clamp (53- Only)	1	Yes
18		01-1482	Cr-Phms #2-56 X 1/8" (53- Only)	1	Yes
19		68-0406	Cover <sup>1</sup>	1	Yes
20		68-3905	Cover Screw Pack (#8-32 X 5/16") <sup>1</sup>	1	Yes
Not	N/A	68-2143			Yes
Shown		649	Strike Pack	1	Yes

1. Indicates finish required

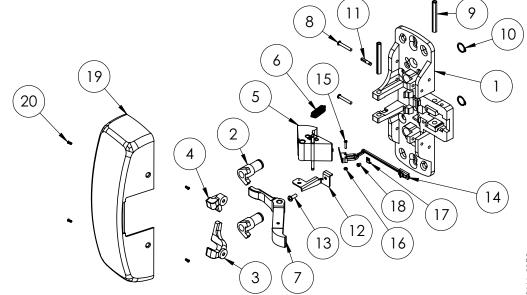

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

AL- AN	AL- AND GL- PREFIXES						
8804	8806	8810	8813	8815	8840		
8843	8844	8846	8875	8876	8877		
8878	8881	8882					

Function	Assembly No.	Description	Sellable
AL- (All Functions Except 77,78,81, And 82)	68-4410	LHRB/RHRB	Vac
GL- (All Functions)	08-4410	LHRB/RHRB	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-1485	Chassis (Std)	1	No
2		98-0018	Outside Hub	2	Yes
3		98-0011	Latchbolt Lever Pin	2	Yes
4		01-0005	Retaining Ring, Truarc 5100-43	2	Yes
5		68-1367	Lift Lever (RH)	1	Yes
6		68-1366	Lift Lever (LH)	1	Yes
7	See chart above	68-4415	Guarded Latchbolt	1	Yes
8	See chart above	68-1353	Lift Arm	1	Yes
9		68-1352	Guide	1	Yes
10		98-0028	Latchbolt Spring	1	Yes
11		68-4417	Guard Bracket Std	1	Yes
12		01-4512	Spirol Pin	2	Yes
13		01-0008	Groove Pin	2	No
14		68-1394	Guide Spring	1	Yes
15		68-1014	Cover <sup>1</sup>	1	Yes
16	N1/A	68-3905	Cover Screw Pack <sup>1</sup>	1	Yes
Not	N/A	68-2143	Screw Pack	1	Yes
Shown		649	Strike Pack	1	Yes

1. Indicates finish required

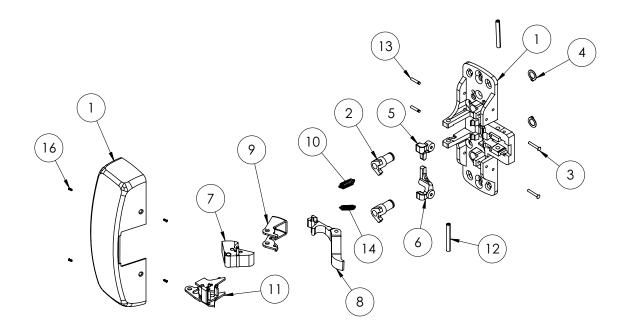

A8231:M 09/22

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT

**ASSA ABLOY** 


Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

AL- AND O	GL- PREFIXES		
12-8804	12-8806	12-8810	12-8813
12-8815	12-8840	12-8843	12-8844
12-8846	12-8875	12-8876	12-8877
12-8878	12-8881	12-8882	

Function	Assembly No.	Description	Sellable
12-AL- (All Functions Except 77,78,81,82)	69 4411	ממוומ/ממווו	Vac
12-GL- (All Functions)	68-4411	LHRB/RHRB	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-1378	Chassis (12-)	1	No
2		98-0018	Outside Hub	2	Yes
3		98-0011	Latchbolt Lever Pin	2	Yes
4		01-0005	Retaining Ring, Truarc 5100-43	2	Yes
5		68-1367	Lift Lever (Rh)	1	Yes
6		68-1366	Lift Lever (Lh)	1	Yes
7	See chart above	68-4415	Guarded Latchbolt	1	Yes
8	See chart above	68-1353	Lift Arm	1	Yes
9		68-1352	Guide	1	Yes
10		98-0028	Latchbolt Spring	1	Yes
11		68-4417	Guard Bracket Std	1	No
12		01-4512	Spirol Pin	2	Yes
13		01-0008	Groove Pin	2	No
14		68-1394	Guide Spring	1	Yes
15		68-1014	Cover <sup>1</sup>	1	Yes
16	N1/A	68-3905	Cover Screw Pack <sup>1</sup>	1	Yes
Not	N/A	68-2143	Screw Pack	1	Yes
Shown		649	Strike Pack	1	Yes

1. Indicates finish required

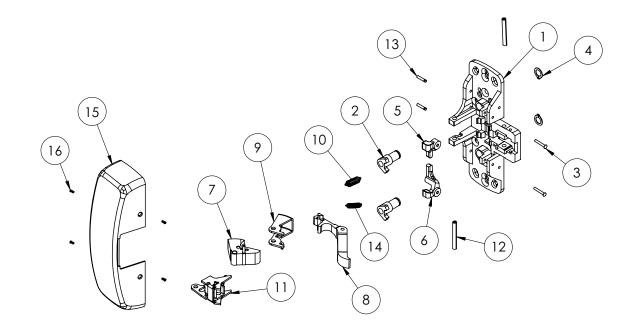

A8231:M 09/22

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

SARGENT

ASSA ABLOY

Function	Assembly No.	Description	Sellable
10	68-2425 (LHRB)	Chassis Assombly	Yes
16	68-2426 (RHRB)	Chassis Assembly	Yes


ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0408	Chassis Cover (LHRB)*	1	Yes
	N/A	68-0409	Chassis Cover (RHRB)*	'	ies
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0940	Chassis (LHRB)	1	Nie
5		68-0941	Chassis (RHRB)		No
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)	] '	res
5		01-9700	Shoulder Screw	1	Yes
6		68-1137	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4414	Latch Bolt Assembly	1	Yes
10		98-0028	Spring, Latch Bolt Return	1	Yes
11		68-0271	Pivot Pin, Knob Lever	1	Yes
12		98-0018	Outside Cylinder Hub	3	Yes
13	See chart above	01-0005	Retaining Ring	2	Yes
15		68-0237	Latch Bolt Lift Lever (LHRB)	1	N/
14		68-0238	Latch Bolt Lift Lever (RHRB)		Yes
15		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
16		98-0020	Inside Cylinder Support	1	Yes
17		01-1095	Set Screw #8-32 x 1/4 Cup Point	2	Yes
18		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
19		68-7803	Knob Hub Subassembly	1	Yes
20		01-1146	Machine Screw, #8-32 X 3/8	2	Yes
21		01-0930	Countersunk Lock Washer	1	Yes
22		68-4236	Knob Lever (LHRB)	1	Yes
22		68-4235	Knob Lever (RHRB)		res
23		97-0050	Spring, Knob Return	1	Yes
24		68-1929	Cylinder Cam Adapter	1	Yes
25		98-0021	Blocking Ring*	1	Yes
26	NUA	68-2143	Screw Pack	1	Yes
27	N/A	-	Cylinder* **	1	Yes
28		649	Strike Pack	1	Yes

\*Specify Finish \*\*Specify #44 cylinder by keying requirements

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



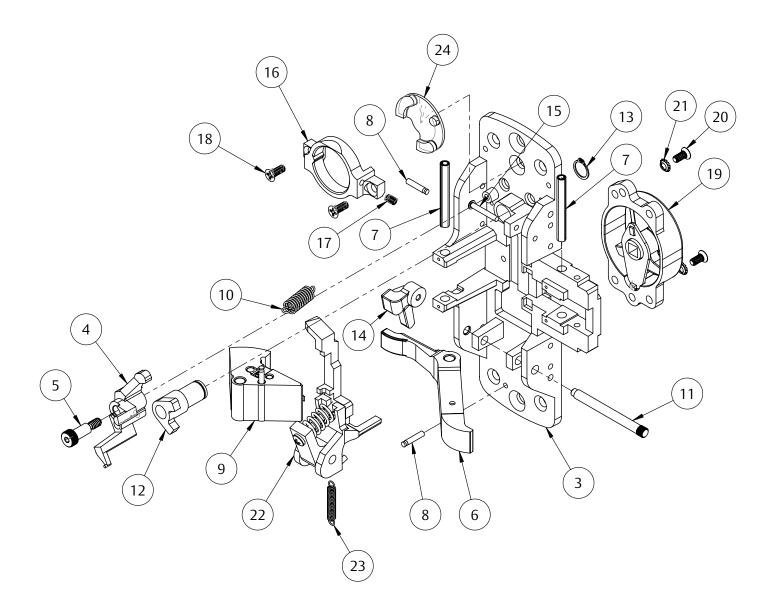

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

#### (12-) AL/GL-8816

#### SARGENT **ASSA ABLOY**

Function	Assembly No.	Description	Sellable
10	68-4077 (LHRB)	Chassis Assembly	Yes
16	68-4078 (RHRB)	Chassis Assembly	Yes


ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	-	68-1015	Chassis Cover (LHRB)*	- 1	Yes
	N/A	68-1016	Chassis Cover (RHRB)*	I	res
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0940	Chassis (LHRB)	- 1	No
2		68-0941	Chassis (RHRB)		INO
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
-		68-8613	Locking Lever Subassembly (RHRB)		ies
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4415	Latch Bolt Assembly	1	Yes
10		98-0028	Spring, Latch Bolt Return	1	Yes
11		68-1394	Spring, Guarding	1	Yes
12		68-0271	Pivot Pin, Knob Lever	1	Yes
13		98-0018	Outside Cylinder Hub	1	Yes
14		01-0005	Retaining Ring	2	Yes
15	See chart above	68-4417	Guard Bracket Assembly	1	Yes
16		68-1352	Guide, Guarding	1	Yes
17		68-0237	Latch Bolt Lift Lever (LHRB)	- 1	Vas
		68-0238	Latch Bolt Lift Lever (RHRB)		Yes
18		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
19		98-0020	Inside Cylinder Support	1	Yes
20		01-1095	Set Screw #8-32 x 1/4 Cup Point	2	Yes
21		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
22		68-7803	Knob Hub Subassembly	1	Yes
23		01-1146	Machine Screw, #8-32 X 3/8	2	Yes
24		01-0930	Countersunk Lock Washer	1	Yes
25		68-4236	Knob Lever (LHRB)	1	Yes
23		68-4235	Knob Lever (RHRB)		ies
26		97-0050	Spring, Knob Return	1	Yes
27		68-1929	Cylinder Cam Adapter	1	Yes
28		98-0021	Blocking Ring*	1	Yes
29	N/A	68-2143	Screw Pack	1	Yes
30	IN/A	-	Cylinder* **	1	Yes
31		649	Strike Pack	1	Yes

\*Specify Finish \*\*Specify #44 cylinder by keying requirements

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



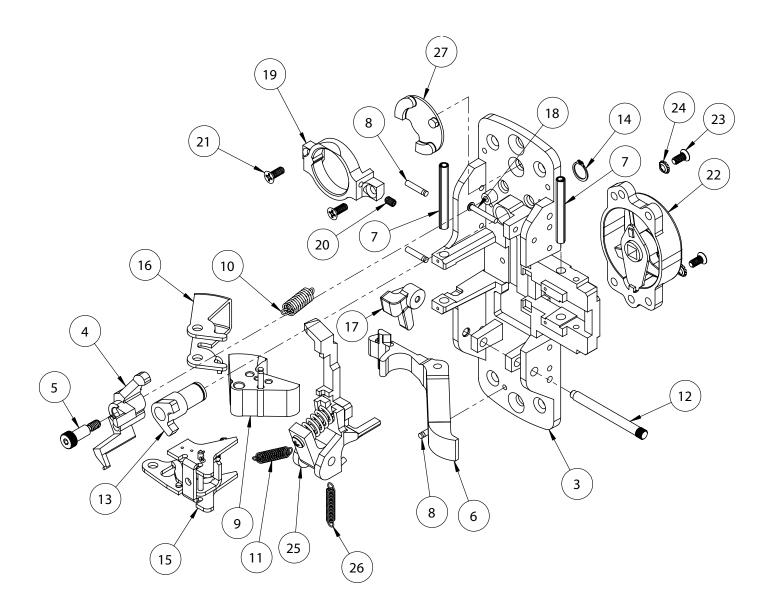

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Function	Assembly No.	Description	Sellable
10	68-6265 (LHRB)	Chassis Assombly	Vas
16	68-6266 (RHRB)	Chassis Assembly	Yes


1 2		CO 1703			Sellable
		68-1782	Chassis Cover (LHRB)*	1	Yes
2	N/A	68-1783	Chassis Cover (RHRB)*		res
		68-3908	Cover Screw Pack*		Yes
3		68-0940	Chassis (LHRB)	- 1	NLa
3		68-0941	Chassis (RHRB)		No
4		68-7802	Locking Lever Subassembly (LHRB)	- 1	Yes
		68-8613	Locking Lever Subassembly (RHRB)		res
5		01-9700	Shoulder Screw	1	Yes
6		68-1137	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4414	Latch Bolt Assembly	1	Yes
10		98-0028	Spring, Latch Bolt Return	1	Yes
11		68-0271	Pivot Pin, Knob Lever	1	Yes
12		98-0018	Outside Cylinder Hub	1	Yes
13		01-0005	Retaining Ring	2	Yes
14		68-0237	Latch Bolt Lift Lever (LHRB)	- 1	N/
14		68-0238	Latch Bolt Lift Lever (RHRB)		Yes
15		98-0011	Pivot Pin. Latch Bolt Lift Lever	1	Yes
16	See chart above	98-0020	Inside Cylinder Support	1	Yes
17		01-1095	Set Screw #8-32 x 1/4 Cup Point	2	Yes
18		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
19		68-7803	Knob Hub Subassembly	1	Yes
20		01-1146	Machine Screw, #8-32 X 3/8	2	Yes
21		01-0930	Countersunk Lock Washer	1	Yes
		68-4236	Knob Lever (LHRB)		
22		68-4235	Knob Lever (RHRB)	- 1	Yes
23		97-0050	Spring, Knob Return	1	Yes
24		68-1776	Flag, 49-	1	Yes
25		68-1779	Window, 49- (LHRB)		
25		68-1778	Window, 49- (RHRB)	1	Yes
26		68-1797	Label, 49- Indicator (LHRB)	1	Ň
26		68-1796	Label, 49- Indicator (RHRB)	- 1	Yes
27		52-1056	Machine Screw, #2-56 x 3/16	2	Yes
28		68-1929	Cylinder Cam Adapter	1	Yes
29		98-0021	Blocking Ring*	1	Yes
30	N1/A	68-2143	Screw Pack	1	Yes
31	N/A	-	Cylinder* **	1	Yes
32		649	Strike Pack	1	Yes

\*Specify Finish \*\*Specify #44 cylinder by keying requirements

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



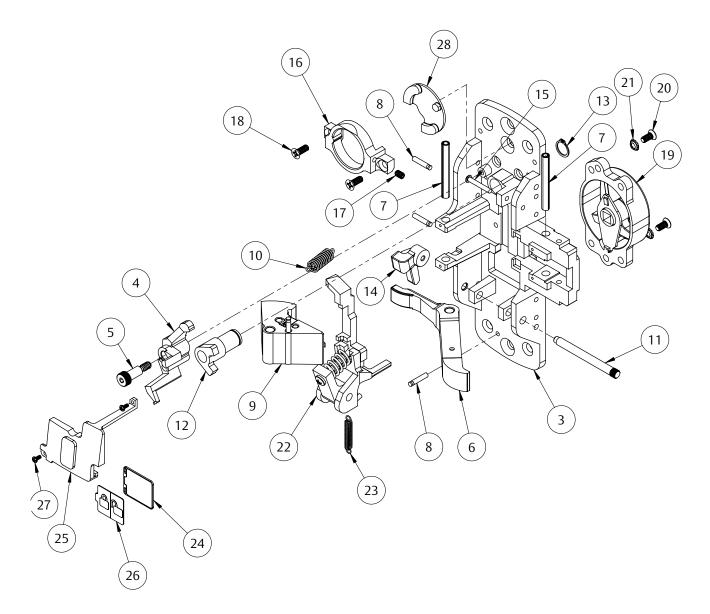

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Function	Assembly No.	Description	Sellable
10	68-3722 (LHRB)	Chassis Assembly	Yes
16	68-3723 (RHRB)	Chassis Assembly	


ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	-	68-1015	Chassis Cover (LHRB)*	- 1	Vas
	N/A	68-1016	Chassis Cover (RHRB)*		Yes
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0940	Chassis (LHRB)	- 1	No
3		68-0941	Chassis (RHRB)		INO
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
		68-8613	Locking Lever Subassembly (RHRB)		ies
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4415	Latch Bolt Assembly	1	Yes
10		98-0028	Spring, Latch Bolt Return	1	Yes
11		68-1394	Spring, Guarding	1	Yes
12		68-0271	Pivot Pin, Knob Lever	1	Yes
13		98-0018	Outside Cylinder Hub	1	Yes
14		01-0005	Retaining Ring	2	Yes
15		68-4418	Guard Bracket & Switch Assembly	1	Yes
16	See chart above	68-1352	Guide, Guarding	1	Yes
17		68-0237	Latch Bolt Lift Lever (LHRB)	- 1	\/
17		68-0238	Latch Bolt Lift Lever (RHRB)		Yes
18		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
19		98-0020	Inside Cylinder Support	1	Yes
20		01-1095	Set Screw #8-32 x 1/4 Cup Point	2	Yes
21		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
22		68-7803	Knob Hub Subassembly	1	Yes
23		01-1146	Machine Screw, #8-32 X 3/8	2	Yes
24		01-0930	Countersunk Lock Washer	1	Yes
25		68-4236	Knob Lever (LHRB)	- 1	Yes
25		68-4235	Knob Lever (RHRB)	ין	res
26		97-0050	Spring, Knob Return	1	Yes
27		68-1929	Cylinder Cam Adapter	1	Yes
28		52-0310	Cable Clamp	1	Yes
29		01-1482	Machine Screw, #2-56 x 1/8		Yes
30		98-0021	Blocking Ring*	1	Yes
31		68-2143	Screw Pack	1	Yes
32	N/A	-	Cylinder* **	1	Yes
33		649	Strike Pack	1	Yes

\*Specify Finish \*\*Specify #44 cylinder by keying requirements

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



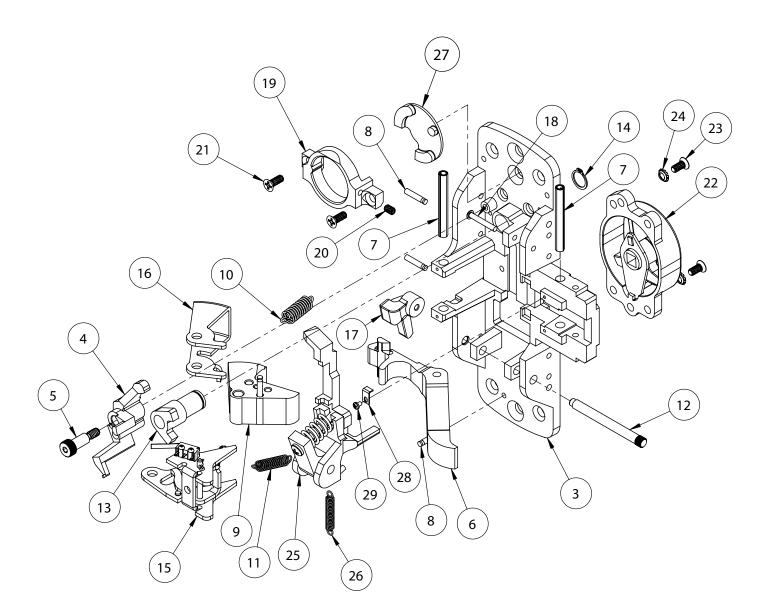

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

#### AL- and GL- Prefixes (12-)49-AL/GL-8816

## SARGENT ASSA ABLOY

Function	Assembly No.	Description	Sellable
16	68-6287 (LHRB)	Chassis Assambly	Vas
16	68-6288 (RHRB) Chassis Assembly		Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
	,	68-1784	Chassis Cover (LHRB)*		
1	N/A	68-1785	Chassis Cover (RHRB)*	- 1	Yes
2		68-3908	Cover Screw Pack*		Yes
		68-0940	Chassis (LHRB)		
3		68-0941	Chassis (RHRB)	1	No
		68-7802	Locking Lever Subassembly (LHRB)		
4		68-8613	Locking Lever Subassembly (RHRB)	- 1	Yes
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4415	Latch Bolt Assembly, Guarded	1	Yes
10		98-0028	Spring, Latch Bolt Return	1	Yes
11		68-1394	Spring, Guarding	1	Yes
12		68-0271	Pivot Pin, Knob Lever	1	Yes
13		98-0018	Outside Cylinder Hub	3	Yes
14		01-0005	Retaining Ring	2	Yes
15		68-4417	Guard Bracket Assembly	1	Yes
16		68-1352	Guide, Guarding	1	Yes
17	See chart above	68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
17		68-0238	Latch Bolt Lift Lever (RHRB)	1	Yes
18		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
19		98-0020	Inside Cylinder Support	1	Yes
20		01-1095	Set Screw #8-32 x 1/4 Cup Point	2	Yes
21		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
22		68-7803	Knob Hub Subassembly	1	Yes
23		01-1146	Machine Screw, #8-32 X 3/8	2	Yes
24		01-0930	Countersunk Lock Washer	1	Yes
25		68-4236	Knob Lever (LHRB)	1	Yes
25		68-4235	Knob Lever (RHRB)		165
26		97-0050	Spring, Knob Return	1	Yes
27		68-1776	Flag, 49-		Yes
28		68-1779	Window, 49- (LHRB)	- 1	N/s s
28		68-1778	Window, 49- (RHRB)		Yes
29	-	68-1797	Label, 49- Indicator (LHRB)	- 1	Yes
_		68-1796	Label, 49- Indicator (RHRB)		162
30		52-1056	Machine Screw, #2-56 x 3/16	- 1	Yes
31		68-1929	Cylinder Cam Adapter		162
32		98-0021	Blocking Ring*	- 1	Yes
33	N/A	68-2143	Screw Pack		
34	11//4	-	Cylinder* **	2	Yes
35		649	Strike Pack	1	Yes


\*Specify Finish \*\*Specify #44 cylinder by keying requirements

**60** 

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



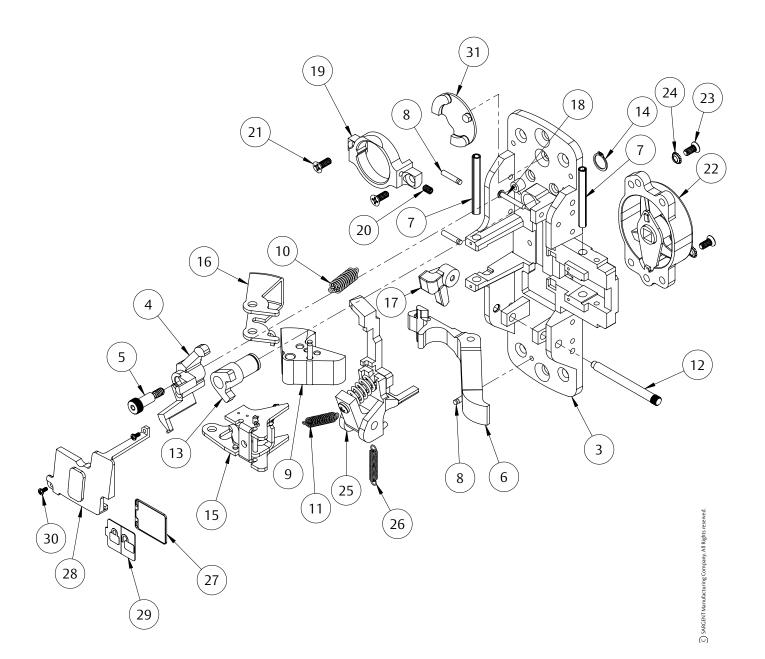

61

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Function	Assembly No.	Description	Sellable
10	68-7512 (LHRB)	Chassis Assembly	Yes
10	68-7513 (RHRB)	Chassis Assembly	


ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0408	Chassis Cover (LHRB)*	- 1	Yes
	N/A	68-0409	Chassis Cover (RHRB)*	ין	res
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0940	Chassis (LHRB)	- 1	No
2		68-0941	Chassis (RHRB)	ין	INO
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)		ies
5		01-9700	Shoulder Screw	1	Yes
6		68-1137	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4414	Latch Bolt Assembly	1	Yes
10		68-1831	Spring, Latch Bolt Return	1	Yes
11		68-0271	Pivot Pin, Knob Lever	1	Yes
12		98-0018	Outside Cylinder Hub	3	Yes
13	See chart above	01-0005	Retaining Ring	2	Yes
14	See Chart above	68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
14		68-0238	Latch Bolt Lift Lever (RHRB)	1	
15		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
16		98-0020	Inside Cylinder Support	1	Yes
17		01-1095	Set Screw #8-32 x 1/4 Cup Point	2	Yes
18	1	01-3384	Machine Screw, #8-32 X 7/16	2	Yes
19		68-7803	Knob Hub Subassembly	1	Yes
20		01-1146	Machine Screw, #8-32 X 3/8	2	Yes
21		01-0930	Countersunk Lock Washer	1	Yes
22		68-4236	Knob Lever (LHRB)	- 1	N/s s
22		68-4235	Knob Lever (RHRB)	<b>   </b>	Yes
23		97-0050	Spring, Knob Return	1	Yes
24		68-1929	Cylinder Cam Adapter	1	Yes
25		98-0021	Blocking Ring*	1	Yes
26		68-2143	Screw Pack	1	Yes
27	N/A	-	Cylinder* **		Yes
28		649	Strike Pack		Yes

A8231:M 09/22

**62** 

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



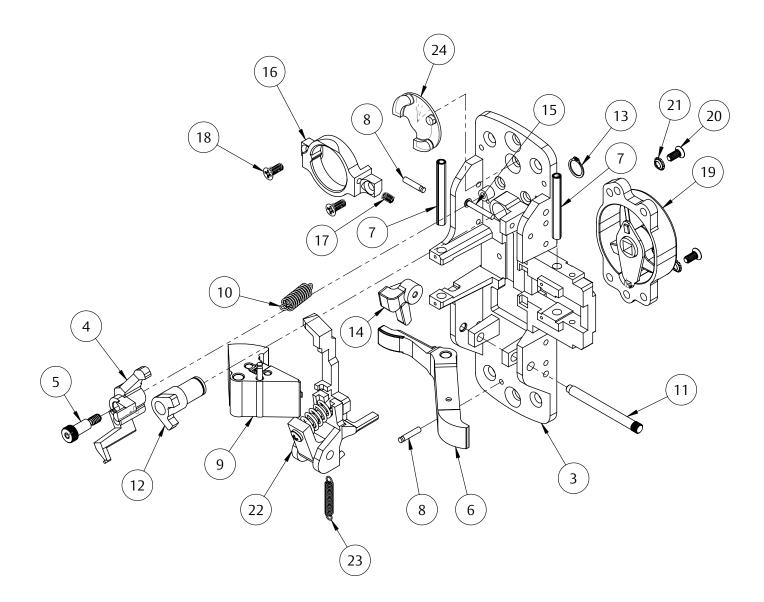

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Function	Assembly No.	Description	Sellable
16	68-7965 (LHRB)	Chassis Assambly	Yes
10	68-7966 (RHRB)	Chassis Assembly	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	-	68-1015	Chassis Cover (LHRB)*	1	Yes
1	N/A	68-1016	Chassis Cover (RHRB)*	I	ies
2		68-3908	Cover Screw Pack*	1	Yes
		68-0940	Chassis (LHRB)	1	NL
3		68-0941	Chassis (RHRB)	- 1	No
4	]	68-7802	Locking Lever Subassembly (LHRB)	1	No. a
4		68-8613	Locking Lever Subassembly (RHRB)	1	Yes
5		01-9700	Shoulder Screw	1	Yes
6	1	68-1353	Lift Arm	1	Yes
7	]	01-4512	Spirol Pin	2	Yes
8	]	01-0008	Groove Pin	2	Yes
9		68-4415	Latch Bolt Assembly	1	Yes
10		68-1831	Spring, Latch Bolt Return	1	Yes
11		68-1394	Spring, Guarding	1	Yes
12	See chart above	68-0271	Pivot Pin, Knob Lever	1	Yes
13		98-0018	Outside Cylinder Hub	3	Yes
14		98-0018	Retaining Ring	2	Yes
15		68-4418	Guard Bracket & Switch Assembly	1	Yes
16		68-1352	Guide, Guarding	1	Yes
17		68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
		68-0238	Latch Bolt Lift Lever (RHRB)	1	res
18		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
19		98-0020	Inside Cylinder Support	1	Yes
20		01-1095	Set Screw #8-32 x 1/4 Cup Point	2	Yes
21		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
22		68-7803	Knob Hub Subassembly	1	Yes
23		01-1146	Machine Screw, #8-32 X 3/8	2	Yes
24		01-0930	Countersunk Lock Washer	1	Yes
25		68-4236	Knob Lever (LHRB)	1	Yes
		68-4235	Knob Lever (RHRB)	<u> </u>	
26		97-0050	Spring, Knob Return	1	Yes
27	]	68-1929	Cylinder Cam Adapter	1	Yes
28	]	52-0310	Cable Clamp	1	Yes
29		01-1482	Machine Screw, #2-56 x 1/8	1	Yes
30		98-0021	Blocking Ring*	1	Yes
31	N/A	68-2143	Screw Pack	1	Yes
32		-	Cylinder* **	1	Yes
33		649	Strike Pack	1	Yes

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



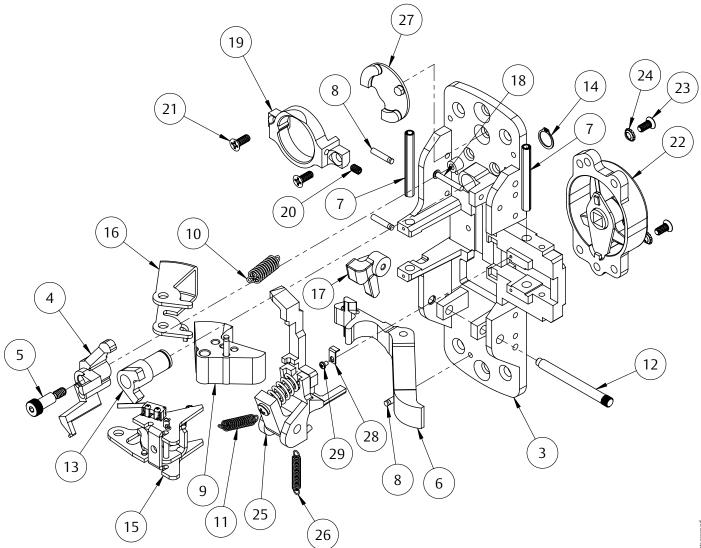


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

# SARGENT

Function	Assembly No.	Description	Sellable
28	68-2329 (LHRB)	Chassis Assembly	Yes
28	68-2330 (RHRB)	Chassis Assembly	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N1/A	68-0406	Chassis Cover*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
3		68-0938	Chassis (RHRB)		No
4		68-1137	Lift Arm	1	Yes
5	See chart above	01-4512	Spirol Pin	2	Yes
6		01-0008	Groove Pin	2	Yes
7	See Chart above	68-4414	Latch Bolt Assembly	1	Yes
8		68-0028	Spring, Latch Bolt Return	1	Yes
9		68-0271	Pivot Pin, Thumb Piece Lever	ין	res
10		68-0260	Thumb Piece Lever	2	Yes
10		68-0261	Thumb Piece Lever	1	Yes
11		68-2143	Screw Pack	1	Yes
12		649	Strike Pack	1	Yes

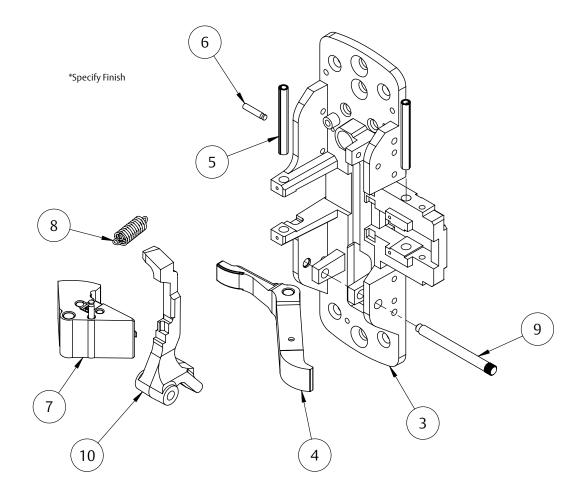


66

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Function	Assembly No.	Description	Sellable
28	68-4082 (LHRB)	Chassis Assembly	Vas
	68-4083 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N1/A	68-1014	Chassis Cover*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	Nia
3		68-0938	Chassis (RHRB)		No
4		68-1353	Lift Arm	1	Yes
5		01-4512	Spirol Pin	2	Yes
6		01-0008	Groove Pin	2	Yes
7		68-4415	Latch Bolt Assembly	1	Yes
8	See chart above	68-0028	Spring, Latch Bolt Return	1	Yes
9		68-1394	Spring, Guarding		
10		68-0271	Pivot Pin, Thumb Piece Lever	1	Yes
11		68-4417	Guard Bracket Assembly	1	Yes
12		68-1352	Guide, Guarding	1	Yes
10		68-0260	Thumb Piece Lever (LHRB)	1	Yes
13	13	68-0261	Thumb Piece Lever (RHRB)		res
14		68-2143	Screw Pack	1	Yes
15		649	Strike Pack	1	Yes

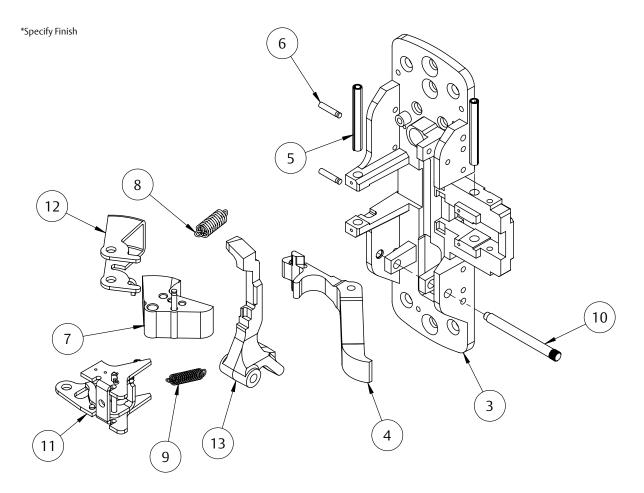


A8231:M 09/22

Experience a safer and more open world The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Function	Assembly No.	Description	Sellable
28	68-3835 (LHRB)	Chassis Assembly	Yes
28	68-3836 (RHRB)	Chassis Assembly	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NUA	68-1014	Chassis Cover*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
3		68-0938	Chassis (RHRB)		INO
4		68-1353	Lift Arm	1	Yes
5		01-4512	Spirol Pin	2	Yes
6		01-0008	Groove Pin	2	Yes
7		68-4415	Latch Bolt Assembly	1	Yes
8		68-0028	Spring, Latch Bolt Return	1	Yes
9	See chart above	68-1394	Spring, Guarding	ין	
10		68-0271	Pivot Pin, Thumb Piece Lever	1	Yes
11		68-4418	Guard Bracket & Switch Assembly	1	Yes
12		68-1352	Guide, Guarding	1	Yes
13		68-0260	Thumb Piece Lever (LHRB)	1	Yes
15		68-0261	Thumb Piece Lever (RHRB)	ין	res
14		52-0310	Cable Clamp	1	Yes
15		01-1482	Machine Screw, #2-56 x 1/8	1	Yes
16		68-2143	Screw Pack	1	Yes
17		649	Strike Pack	1	Yes

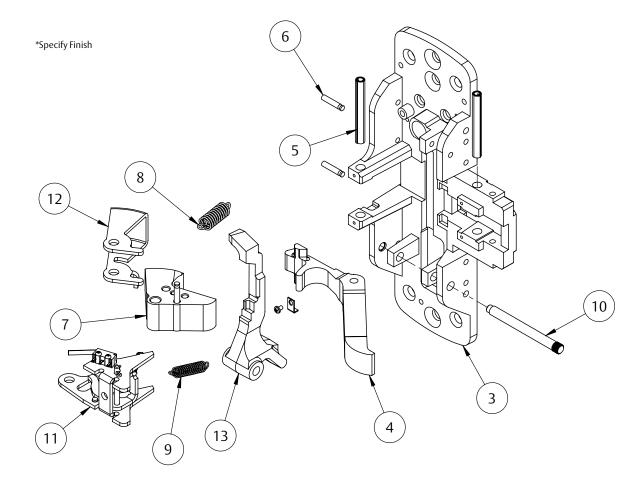


The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

**68** 

Function	Assembly No.	Description	Sellable
20	68-7514 (LHRB)	Chassis Assambly	Yes
28	68-7515 (RHRB)	Chassis Assembly	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N1/A	68-0406	Chassis Cover*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
2		68-0938	Chassis (RHRB)		INU
4		68-1137	Lift Arm	1	Yes
5		01-4512	Spirol Pin	2	Yes
6	See chart above	01-0008	Groove Pin	2	Yes
7	See Chart above	68-4414	Latch Bolt Assembly	1	Yes
8		68-1831	Spring, Latch Bolt Return	1	Yes
9		68-0271	Pivot Pin, Thumb Piece Lever		res
10		68-0260	Thumb Piece Lever	2	Yes
10		68-0261	Thumb Piece Lever	1	Yes
11		68-2143	Screw Pack	1	Yes
12		649	Strike Pack	1	Yes

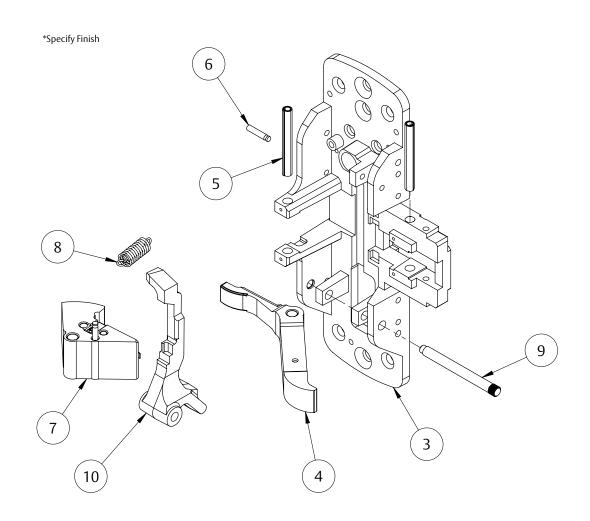

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

#### (12-) 5CH-53-59-8828

## SARGENT ASSA ABLOY

Function	Assembly No.	Description	Sellable
28	68-7967 (LHRB)	Chassis Assambly	Yes
28	68-7968 (RHRB)	Chassis Assembly	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-1014	Chassis Cover*	1	Yes
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
3		68-0938	Chassis (RHRB)		
4		68-1353	Lift Arm	1	Yes
5		01-4512	Spirol Pin	2	Yes
6		01-0008	Groove Pin	2	Yes
7		68-4415	Latch Bolt Assembly	1	Yes
8	] See chart above	68-1831	Spring, Latch Bolt Return	1	Vac
9		68-1394	Spring, Guarding	יין	Yes
10		68-0271	Pivot Pin, Thumb Piece Lever	1	Yes
11		68-4418	Guard Bracket & Switch Assembly	1	Yes
12	-	68-1352	Guide, Guarding	1	Yes
13		68-0260	Thumb Piece Lever (LHRB)	1	Yes
15		68-0261	Thumb Piece Lever (RHRB)		
14		52-0310	Cable Clamp	1	Yes
15		01-1482	Machine Screw, #2-56 x 1/8	1	Yes
16		68-2143	Screw Pack	1	Yes
17		649	Strike Pack	1	Yes

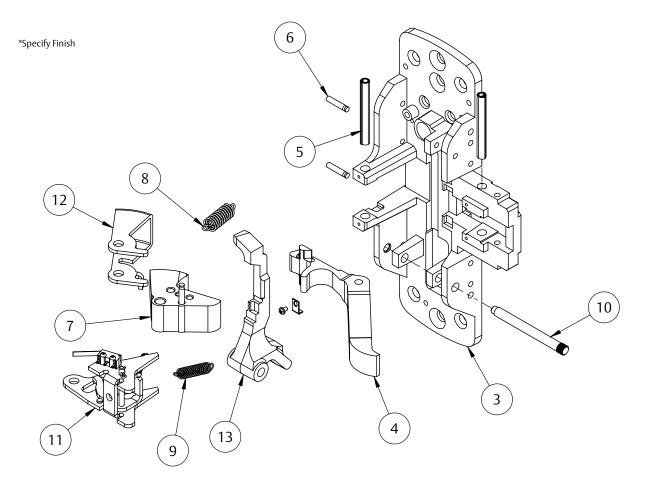

70


The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

uction in whole or in part without and mol

Experience a safer and more open world

Function	Assembly No.	Description	Sellable
63	68-2326 (LHRB)	Chassis Assambly	Yes
03	68-2327 (RHRB)	Chassis Assembly	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	N/A	68-0406	Chassis Cover*	1	Yes
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
5		68-0938	Chassis (RHRB)		
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)		
5		01-9700	Shoulder Screw	1	Yes
6		68-1137	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8	1	01-0008	Groove Pin	2	Yes
9	See chart above	68-4414	Latch Bolt Assembly	1	Yes
10		98-0028	Spring, Latch Bolt Return	- 1	Yes
11		68-0271	Pivot Pin, Thumb Piece Lever		
12		98-0018	Outside Cylinder Hub	1	Yes
13		01-0005	Retaining Ring	1	Yes
14		68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
14		68-0238	Latch Bolt Lift Lever (RHRB)	1	Yes
15		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
16		68-0260	Thumb Piece Lever (LHRB)	1	Yes
10		68-0261	Thumb Piece Lever (RHRB)	1	Yes
17		68-2143	Screw Pack	1	Yes
18		649	Strike Pack	1	Yes

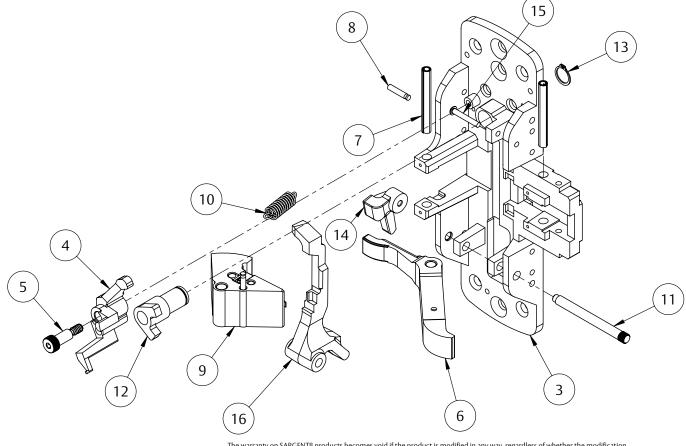


Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Function	Assembly No.	Description	Sellable
62	68-3727 (LHRB)	Chassis Assembly	Vas
63	68-3728 (RHRB)		Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NUA	68-1014	Chassis Cover*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	NIE
2		68-0938	Chassis (RHRB)		No
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)		
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4415	Latch Bolt Assembly, Guarded	1	Yes
10		98-0028	Spring, Latch Bolt Return	1	Yes
11	See chart above	68-1394	Spring, Guarding	1	Yes
12		68-0271	Pivot Pin, Thumb Piece Lever	1	Yes
13		98-0018	Outside Cylinder Hub	1	Yes
14		01-0005	Retaining Ring	1	Yes
14		68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
15		68-0238	Latch Bolt Lift Lever (RHRB)	1	Yes
16		98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
17		68-0260	Thumb Piece Lever (LHRB)	1	Yes
17		68-0261	Thumb Piece Lever (RHRB)		
18		52-0310	Cable Clamp	1	Yes
19		01-1482	Machine Screw, #2-56 x 1/8		Yes
20		68-2143	Screw Pack	1	Yes
21		649	Strike Pack	1	Yes

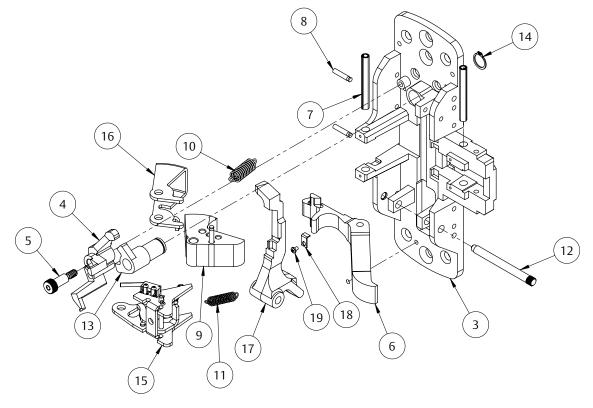

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

9

10

11

12

13

14

15

16

17

See chart above

## SARGENT ASSA ABLOY

Fu	nction	Assembly No	o. Description	ion	
63 68		68-4099 (LHRI	B) Chaosis Assessible		
	63	68-4100 (RHR	B) Chassis Assembly		Yes
		•	· · ·		÷
ltem	Assembly N	o. Part No.	Description	Qty	Sellable
1	NUA	68-1014	Chassis Cover*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
3		68-0938	Chassis (RHRB)	ין	No
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)	I	res
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes

Latch Bolt Assembly, Guarded

Spring, Latch Bolt Return

Spring, Guarding

Pivot Pin, Thumb Piece Lever

Outside Cylinder Hub

**Retaining Ring** 

Guard Bracket Assembly

Guide, Guarding

Thumb Piece Lever (LHRB)

Thumb Piece Lever (RHRB)

68-4415

98-0028

68-1394

68-0271

98-0018


01-0005

68-4417

68-1352

68-0260

68-0261

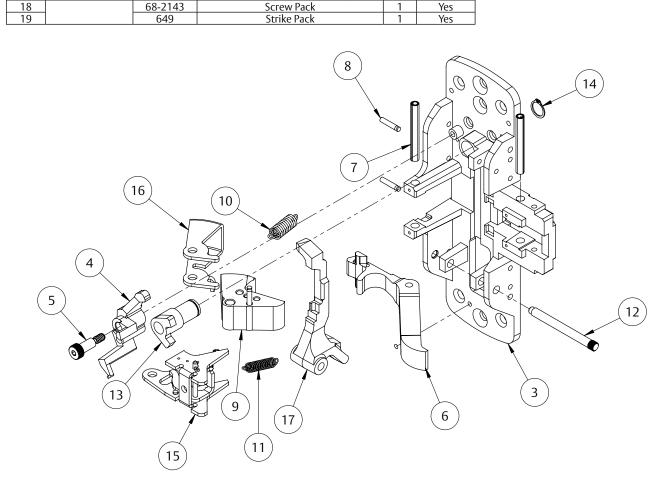

Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Yes

Yes

Yes

Yes

Yes

Yes

Yes

Yes

Yes

1

1

1

1

1

1


1

1

1


Function	Assembly No.	Description	Sellable
63	68-7516 (LHRB)	Chassis Assembly	Vas
	68-7517 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	NUA	68-0406	Chassis Cover*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
		68-0938	Chassis (RHRB)	'	INU
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)	I	ies
5		01-9700	Shoulder Screw	1	Yes
6		68-1137	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9	See chart above	68-4414	Latch Bolt Assembly	1	Yes
10	See Chart above	68-1831	Spring, Latch Bolt Return	- 1	Vac
11		68-0271	Pivot Pin, Thumb Piece Lever		Yes
12		98-0018	Outside Cylinder Hub	1	Yes
13		01-0005	Retaining Ring	1	Yes
14		68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
14		68-0238	Latch Bolt Lift Lever (RHRB)	1	Yes
15	-	98-0011	Pivot Pin, Latch Bolt Lift Lever	1	Yes
16		68-0260	Thumb Piece Lever (LHRB)	1	Voc
10		68-0261	Thumb Piece Lever (RHRB)		Yes
17		68-2143	Screw Pack	1	Yes
18		649	Strike Pack	1	Yes

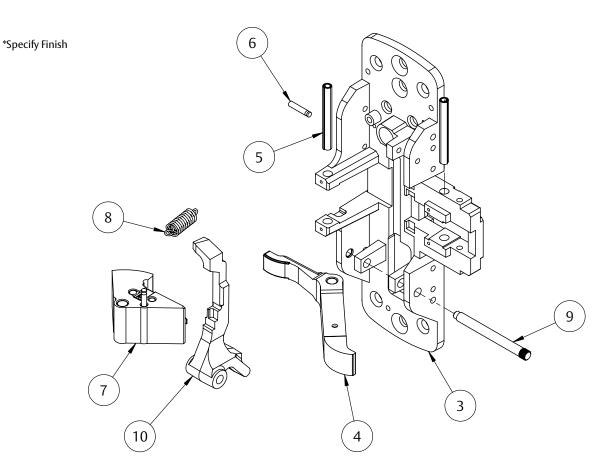

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Function		Assembly No	D. Description		Sellable
10		68-7969 (LHRE			
h3 —		· · · · · ·	(hassis Assembly		Yes
		68-7970 (RHRE	3)		
ltem	Assembly N		Description	Qty	Sellable
1	N/A	68-1014	Chassis Cover*	1	Yes
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	- 1	No
3		68-0938	Chassis (RHRB)	] '	INO
4	]	68-7802	Locking Lever Subassembly (LHRB)	- 1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)	ין	res
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7	]	01-4512	Spirol Pin	2	Yes
8	]	01-0008	Groove Pin	2	Yes
9		68-4415	Latch Bolt Assembly, Guarded	1	Yes
10	See chart abo	98-1831	Spring, Latch Bolt Return	1	Yes
11		68-1394	Spring, Guarding	1	Yes
12		68-0271	Pivot Pin, Thumb Piece Lever	1	Yes
13		98-0018	Outside Cylinder Hub	1	Yes
14		01-0005	Retaining Ring	1	Yes
15		68-4418	Guard Bracket & Switch Assembly	1	Yes
16		68-1352	Guide, Guarding	1	Yes
17		68-0260	Thumb Piece Lever (LHRB)	1	Yes
17		68-0261	Thumb Piece Lever (RHRB)		162
18		52-0310	Cable Clamp	1	Yes
19		01-1482	Machine Screw, #2-56 x 1/8	1	Yes
20		68-2143	Screw Pack	1	Yes
21		649	Strike Pack	1	Yes

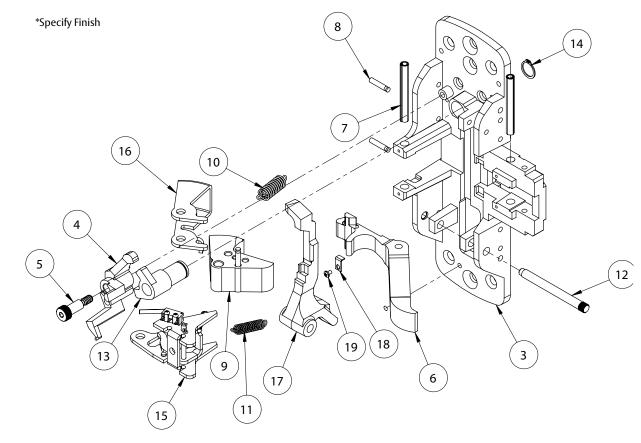

A8231:M 09/22


Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Function	Assembly No.	Description	Sellable
66	68-2443 (LHRB)	Chassis Assambly	Vac
66	68-2444 (RHRB)	Chassis Assembly	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0408	Chassis Cover (LHRB)*	1	Yes
I	N/A	68-0409	Chassis Cover (RHRB)*		ies
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
3		68-0938	Chassis (RHRB)		INO
4		68-7802	Locking Lever Subassembly (LHRB)	- 1	Yes
4		68-8613	Locking Lever Subassembly (RHRB)		res
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4414	Latch Bolt Assembly	1	Yes
10		98-0028	Spring, Latch Bolt Return	1	Yes
11	See chart above	68-0271	Pivot Pin, Knob Lever	1	Yes
12	See chart above	98-0018	Outside Cylinder Hub	1	Yes
13		01-0005	Retaining Ring	2	Yes
14		68-0237	Latch Bolt Lift Lever (LHRB)	1	N/s s
14		68-0238	Latch Bolt Lift Lever (RHRB)	1	Yes
15		98-0011	Pivot Pin, Latch Bolt Lift Lever	2	Yes
16		98-0020	Inside Cylinder Support	2	Yes
17		01-1095	Set Screw #8-32 x 1/4 Cup Point	1	Yes
18		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
19		68-0260	Thumb Piece Lever (LHRB)	1	Yes
19		68-0261	Thumb Piece Lever (RHRB)	ין	res
20		68-1929	Cylinder Cam Adapter	1	Yes
21		98-0021	Blocking Ring*	1	Yes
22	N/A	68-2143	Screw Pack	1	Yes
23		-	Cylinder* **	1	Yes
24		649	Strike Pack	1	Yes

\*Specify Finish

\*\*Specify #44 cylinder by keying requirements

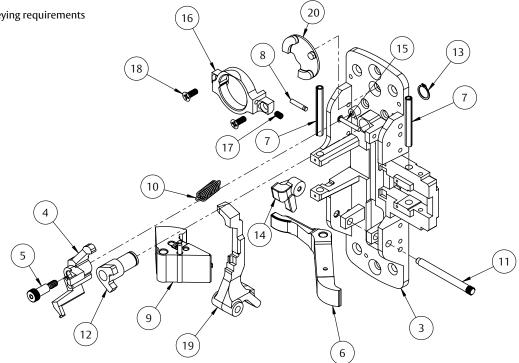

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


76

Fu			Assembly No		Description		Sellable
	66		58-4104 (LHRE 58-4105 (RHRE	,	- Chassis Assembly		Yes
•-							
ltem	Assembly	NO.	Part No.		Description	Qty	Sellable
1	N/A		<u>68-1015</u> 68-1016		Chassis Cover (LHRB)* Chassis Cover (RHRB)*	1	Yes
2			68-3908		Cover Screw Pack*	1	Yes
3			68-0937		Chassis (LHRB)	1	No
J			68-0938		Chassis (RHRB)	<u> </u>	NU
4			68-7802		cking Lever Subassembly (LHRB)	1	Yes
5			68-8613	LO	cking Lever Subassembly (RHRB) Shoulder Screw	1	Yes
<u> </u>			01-9700 68-1353		Lift Arm	1	Yes
7			01-4512		Spirol Pin	2	Yes
8			01-0008		Groove Pin	2	Yes
9			68-4415		Latch Bolt Assembly	1	Yes
10			98-0028		Spring, Latch Bolt Return	1	Yes
11			68-1394		Spring, Guarding	1	Yes
12			68-0271		Pivot Pin, Knob Lever	1	Yes
13	See chart ab	ove	98-0018		Outside Cylinder Hub	1	Yes
14		010	01-0005		Retaining Ring	2	Yes
15			68-4417		Guard Bracket Assembly	1	Yes
16			68-1352		Guide, Guarding	1	Yes
17			68-0237		Latch Bolt Lift Lever (LHRB)	1	Yes
17			68-0238		Latch Bolt Lift Lever (RHRB)		165
18			98-0011		Pivot Pin, Latch Bolt Lift Lever	2	Yes
19			98-0020		Inside Cylinder Support	2	Yes
20			01-1095	5	Set Screw #8-32 x 1/4 Cup Point	1	Yes
21			01-3384		Machine Screw, #8-32 X 7/16	2	Yes
22			68-0260		Thumb Piece Lever (LHRB)	1	Yes
			68-0261		Thumb Piece Lever (RHRB)	1	
23			68-1929		Cylinder Cam Adapter	1	Yes
24			98-0021		Blocking Ring*	1	Yes
25	N/A		68-2143		Screw Pack		Yes
26 27			- 649		Cylinder* ** Strike Pack	1	Yes Yes
21			049		этгіке раск		res

\*Specify Finish \*\*Specify #44 cylinder by keying requirements

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



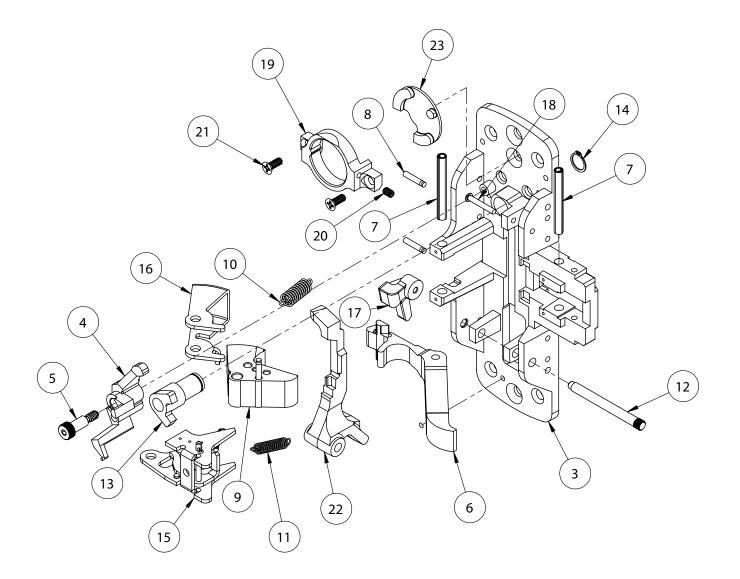

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Fu	nction			ssembly No. Description		Sellable	
	66	6	8-3732 (LHRE	3)			
	66		8-3733 (RHRE	3)	- Chassis Assembly		Yes
	·		<b>`</b>	/	1		-1
ltem	Assembly N	lo.	Part No.		Description	Qty	Sellable
			68-1015		Chassis Cover (LHRB)*	1	
1	N/A		68-1016		Chassis Cover (RHRB)*		Yes
2		ſ	68-3908		Cover Screw Pack*	1	Yes
2			68-0937		Chassis (LHRB)	1	N
3		Ì	68-0938		Chassis (RHRB)	1	No
4		Ī	68-7802	Lo	cking Lever Subassembly (LHRB)	- 1	
4		Ī	68-8613		cking Lever Subassembly (RHRB)		Yes
5	1	Ī	01-9700		Shoulder Screw	1	Yes
6		Ī	68-1353		Lift Arm	1	Yes
7		[	01-4512		Spirol Pin	2	Yes
8		Γ	01-0008		Groove Pin	2	Yes
9		Γ	68-4415		Latch Bolt Assembly	1	Yes
10		ſ	98-0028		Spring, Latch Bolt Return	1	Yes
11		[	68-1394		Spring, Guarding	1	Yes
12		[	68-0271		Pivot Pin, Knob Lever	1	Yes
13			98-0018		Outside Cylinder Hub	1	Yes
14	See chart abo	ove [	01-0005		Retaining Ring	2	Yes
15			68-4418	G	uard Bracket & Switch Assembly	1	Yes
16		[	68-1352		Guide, Guarding	1	Yes
17			68-0237		Latch Bolt Lift Lever (LHRB)	- 1	Yes
			68-0238		Latch Bolt Lift Lever (RHRB)	] '	res
18		[	98-0011		Pivot Pin, Latch Bolt Lift Lever	2	Yes
19		[	98-0020		Inside Cylinder Support	2	Yes
20			01-1095	S	et Screw #8-32 x 1/4 Cup Point	1	Yes
21			01-3384		Machine Screw, #8-32 X 7/16	2	Yes
22			68-0260		Thumb Piece Lever (LHRB)	1	Yes
22		[	68-0261		Thumb Piece Lever (RHRB)	I	ies
23		[	68-1929		Cylinder Cam Adapter	1	Yes
24			52-0310		Cable Clamp	1	Yes
25			01-1482		Machine Screw, #2-56 x 1/8	1	Yes
26			98-0021		Blocking Ring*	1	Yes
27	N/A	[	68-2143		Screw Pack	1	Yes
28	11/7		-		Cylinder* **	1	Yes
29			649		Strike Pack	1	Yes

\*Specify Finish

\*\*Specify #44 cylinder by keying requirements

Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



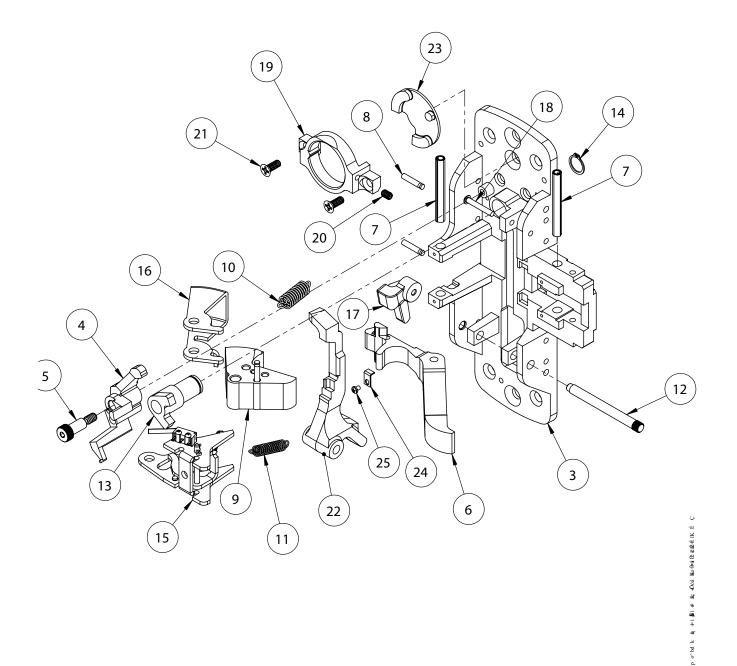

80

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Fu	Inction	Assembly No. Description		Sellable	
66		68-6271 (LHRB	B) Chassis Assembly		Yes
	00	68-6272 (RHRE		Chassis Assembly	
Itom	Assembly No	o. Part No.	Description	0.54	Sellable
ltem	Assembly No	68-1782	<b>Description</b> Chassis Cover (LHRB)*	Qty	Seliable
1	N1/A	68-1783	Chassis Cover (RHRB)*	1	Yes
2	N/A	68-3908	Cover Screw Pack*	1	Yes
Z		68-0937	Chassis (LHRB)	1	165
3		68-0938	Chassis (RHRB)	1	No
		68-7802	Locking Lever Subassembly (LHRB)		
4		68-8613	Locking Lever Subassembly (EHRB)	- 1	Yes
5		01-9700	Shoulder Screw	1	Yes
6		68-1137	Lift Arm	1	Yes
7	1	01-4512	Spirol Pin	2	Yes
8	1	01-0008	Groove Pin	2	Yes
9	]	68-4414	Latch Bolt Assembly	1	Yes
10	]	98-0028	Spring, Latch Bolt Return	1	Yes
11		68-0271	Pivot Pin, Knob Lever	1	Yes
12		98-0018	Outside Cylinder Hub	1	Yes
13		01-0005	Retaining Ring	2	Yes
14	See chart aboy	68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
14		68-0238	Latch Bolt Lift Lever (RHRB)	] '	res
15		98-0011	Pivot Pin, Latch Bolt Lift Lever	2	Yes
16		98-0020	Inside Cylinder Support	2	Yes
17	1	01-1095	Set Screw #8-32 x 1/4 Cup Point	1	Yes
18		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
19		68-0260	Thumb Piece Lever (LHRB)	1	Yes
		68-0261	Thumb Piece Lever (RHRB)		
20		68-1929	Cylinder Cam Adapter	1	Yes
21		68-1776	Flag, 49-	1	Yes
22		68-1779	Window, 49- (LHRB)	1	Yes
		68-1778	Window, 49- (RHRB)	<u> </u>	
23		68-1797	Label, 49- Indicator (LHRB)	1	Yes
		68-1796	Label, 49- Indicator (RHRB)	-	
<u>24</u> 25		52-1056	Machine Screw, #2-56 x 3/16	2	Yes
<u>25</u> 26		98-0021	Blocking Ring*	1	Yes Yes
26	N/A	68-2143	Screw Pack Cylinder* **	1	Yes
27		- 649	Strike Pack	1	Yes
20	1	049	JUIKE FACK		162

\*Specify Finish

\*\*Specify #44 cylinder by keying requirements

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



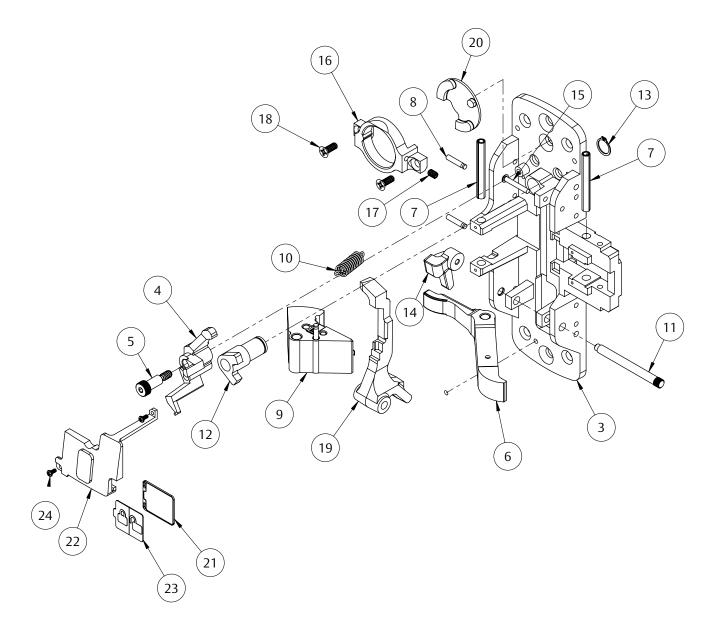

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Fu	FunctionAssembly No.68-6283 (LHRB)		Description		Sellab
66		68-6283 (LHRB)	Chassis Assembly		Yes
		68-6284 (RHRB)			res
				1	
ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-1784	Chassis Cover (LHRB)*	1	Yes
-	N/A	68-1785	Chassis Cover (RHRB)*	-	
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
J		68-0938	Chassis (RHRB)	<u>'</u>	NU
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
-		68-8613	Locking Lever Subassembly (RHRB)		
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9	-	68-4415	Latch Bolt Assembly	1	Yes
10	-	98-0028	Spring, Latch Bolt Return	1	Yes
11		68-1394	Spring, Guarding	1	Yes
12	-	68-0271	Pivot Pin, Knob Lever	1	Yes
13		98-0018	Outside Cylinder Hub	1	Yes
14	-	01-0005	Retaining Ring	2	Yes
15		68-4417	Guard Bracket Assembly	1	Yes
16	See chart above	68-1352	Guide, Guarding	1	Yes
47		68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
17		68-0238	Latch Bolt Lift Lever (RHRB)	- 1	
18	-	98-0011	Pivot Pin, Latch Bolt Lift Lever	2	Yes
19		98-0020	Inside Cylinder Support	2	Yes
20	1	01-1095	Set Screw #8-32 x 1/4 Cup Point	1	Yes
21	1	01-3384	Machine Screw, #8-32 X 7/16	2	Yes
	1	68-0260	Thumb Piece Lever (LHRB)	1	
22		68-0261	Thumb Piece Lever (RHRB)	- 1	Yes
23	1	68-1776	Flag, 49-	1	Yes
	1	68-1779	Window, 49- (LHRB)	- 1	
24		68-1778	Window, 49- (RHRB)	יך	Yes
25	]	68-1797	Label, 49- Indicator (LHRB)	- 1	Vor
25	]	68-1796	Label, 49- Indicator (RHRB)		Yes
26		52-1056	Machine Screw, #2-56 x 3/16	2	Yes
27		68-1929	Cylinder Cam Adapter	1	Yes
28		98-0021	Blocking Ring*	1	Yes
29	N/A	68-2143	Screw Pack	1	Yes
30		-	Cylinder* **	1	Yes
31		649	Strike Pack	1	Yes

\*Specify Finish

\*\*Specify #44 cylinder by keying requirements

Experience a safer and more open world The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



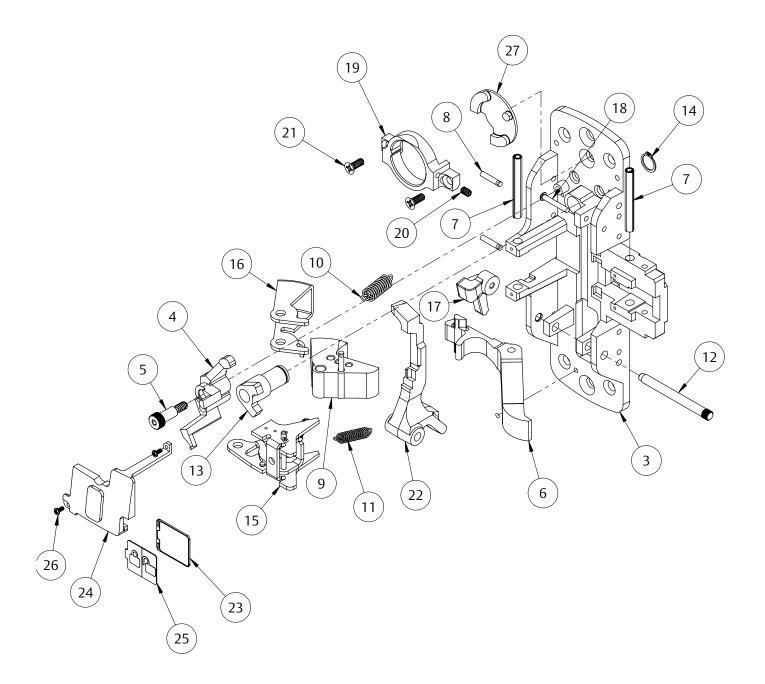

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Function	Assembly No.	Description	Sellable
66	68-7518 (LHRB)	Chassis Assombly	Vas
66	68-7519 (RHRB)	Chassis Assembly	Yes


ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0408	Chassis Cover (LHRB)*	1	Yes
1	N/A	68-0409	Chassis Cover (RHRB)*		ies
2		68-3908	Cover Screw Pack*	1	Yes
3		68-0937	Chassis (LHRB)	1	No
2		68-0938	Chassis (RHRB)		INU
4		68-7802	Locking Lever Subassembly (LHRB)	1	Yes
		68-8613	Locking Lever Subassembly (RHRB)		ies
5		01-9700	Shoulder Screw	1	Yes
6		68-1137	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4414	Latch Bolt Assembly	1	Yes
10		98-1831	Spring, Latch Bolt Return	1	Yes
11	See chart above	68-0271	Pivot Pin, Knob Lever	1	Yes
12	See chart above	98-0018	Outside Cylinder Hub	1	Yes
13		01-0005	Retaining Ring	2	Yes
14		68-0237	Latch Bolt Lift Lever (LHRB)	1	Yes
14		68-0238	Latch Bolt Lift Lever (RHRB)		ies
15		98-0011	Pivot Pin, Latch Bolt Lift Lever	2	Yes
16		98-0020	Inside Cylinder Support	2	Yes
20		01-1095	Set Screw #8-32 x 1/4 Cup Point	1	Yes
21		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
19		68-0260	Thumb Piece Lever (LHRB)	1	Yes
19		68-0261	Thumb Piece Lever (RHRB)		165
20		68-1929	Cylinder Cam Adapter	1	Yes
21		98-0021	Blocking Ring*	1	Yes
22	N/A	68-2143	Screw Pack	1	Yes
23		-	Cylinder* **	1	Yes
24		649	Strike Pack	1	Yes

\*Specify Finish

\*\*Specify #44 cylinder by keying requirements

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



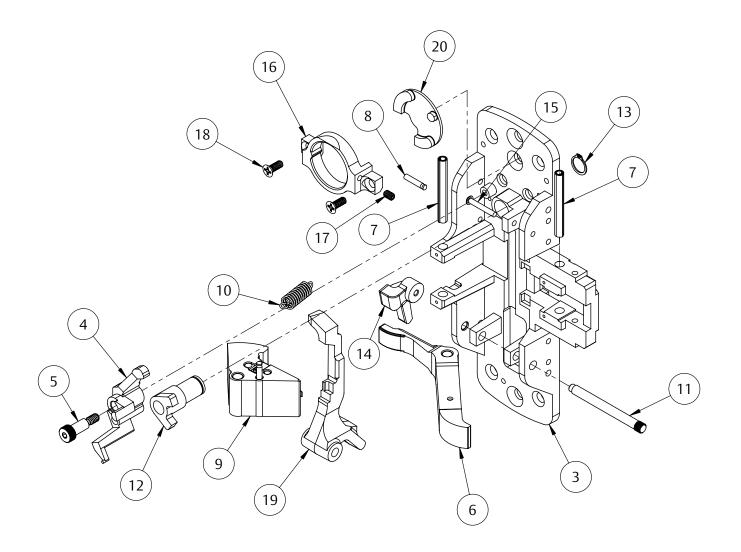

86

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

Function	Assembly No.	Description	Sellable
66	68-7971 (LHRB)	Chassis Assembly	Vec
00	68-7972 (RHRB)	Chassis Assembly	Yes
Item Assembly	v No. Part No.	Description	Oty Sellable

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1	-	68-1015	Chassis Cover (LHRB)*	1	Yes
I	N/A	68-1016	Chassis Cover (RHRB)*	1	ies
2	· ·	68-3908	Cover Screw Pack*	1	Yes
3	See chart above	68-0937	Chassis (LHRB)	1	Nie
5		68-0938	Chassis (RHRB)	<b>1</b> '	No
4		68-7802	Locking Lever Subassembly (LHRB)	- 1	N/
4		68-8613	Locking Lever Subassembly (RHRB)		Yes
5		01-9700	Shoulder Screw	1	Yes
6		68-1353	Lift Arm	1	Yes
7		01-4512	Spirol Pin	2	Yes
8		01-0008	Groove Pin	2	Yes
9		68-4415	Latch Bolt Assembly	1	Yes
10		98-1831	Spring, Latch Bolt Return	1	Yes
11		68-1394	Spring, Guarding	1	Yes
12		68-0271	Pivot Pin, Knob Lever	1	Yes
13		98-0018	Outside Cylinder Hub	1	Yes
14		01-0005	Retaining Ring	2	Yes
15		68-4418	Guard Bracket & Switch Assembly	1	Yes
16		68-1352	Guide, Guarding	1	Yes
17		68-0237	Latch Bolt Lift Lever (LHRB)	1	
		68-0238	Latch Bolt Lift Lever (RHRB)	1	Yes
18		98-0011	Pivot Pin, Latch Bolt Lift Lever	2	Yes
19		98-0020	Inside Cylinder Support	2	Yes
20		01-1095	Set Screw #8-32 x 1/4 Cup Point	1	Yes
21		01-3384	Machine Screw, #8-32 X 7/16	2	Yes
22		68-0260	Thumb Piece Lever (LHRB)	1	Yes
		68-0261	Thumb Piece Lever (RHRB)		
23		68-1929	Cylinder Cam Adapter	1	Yes
24		52-0310	Cable Clamp	– 1 Yes	
25		01-1482	Machine Screw, #2-56 x 1/8		
26		98-0021	Blocking Ring*	1	Yes
27		68-2143	Screw Pack	1	Yes
28		-	Cylinder* **	1	Yes
29		649	Strike Pack	1	Yes

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



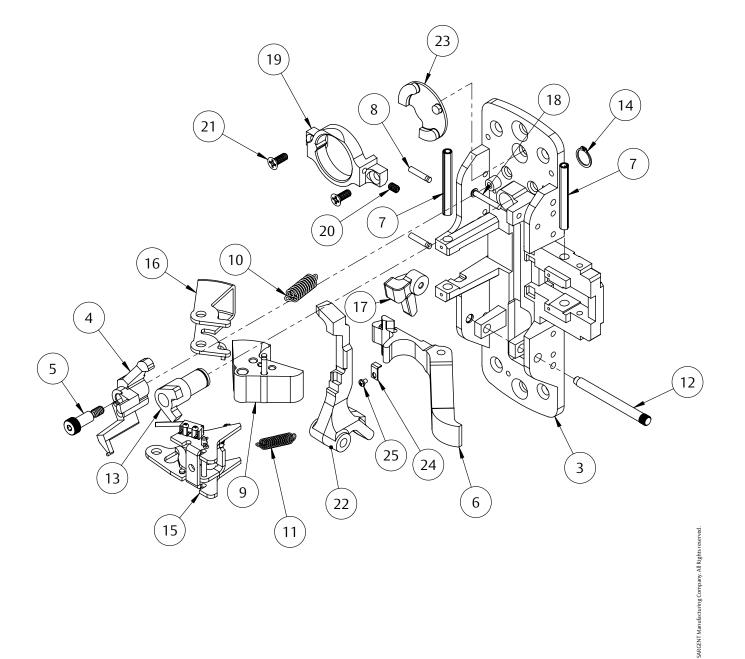

88

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

# 5CH- 88:04, 06, 10, 13, 15, 40, 43, 44, 46, 73, 74, 75, 76, 8812- 5CH- 88:04, 06, 10, 13, 15, 40, 43, 44, 46, 73, 74, 75, 76, 88



Function	Assembly No.	Description	Sellable
5CH- All Functions	68-7484	LHRB/RHRB	Yes
12-5CH-All Functions	68-7485	LHRB/RHRB	Yes

ltem	Assy. No.	Part No.	Description	Qty	Sellable
1		68-1378	Chassis Blank (12-/5CH)	1	No
		68-1389	Chassis blank (5CH)	1	Yes
2	]	98-0018	Outside Cylinder Hub	2	Yes
3		68-1367	Lift Lever (RH)	1	Yes
4		68-1366	Lift Lever (LH)	1	Yes
5		68-4414	Fire Rated Latchbolt (68- 4263) (12-/5CH)	1	Yes
	See chart above	68-4413	Standard Latchbolt (5CH-)	1	Yes
6	]	68-1831	Latchbolt spring (5CH-)	1	Yes
7	]	68-1137	Lift arm	1	Yes
8	]	98-0011	Latchbolt Lever Pivot Pin	2	Yes
9		01-4512	Spirol Pin	2	Yes
10		01-0005	Retaining Ring, Truac 5100- 43	2	Yes
11		01-0008	Groove Pin	1	No
12		68-0406	Cover 1	1	Yes
13	N/A	68-3905	Cover Screw Pack (#8-32 X 5/6") 1	1	Yes
Not shown		68-2143	Screw Pack	1	Yes

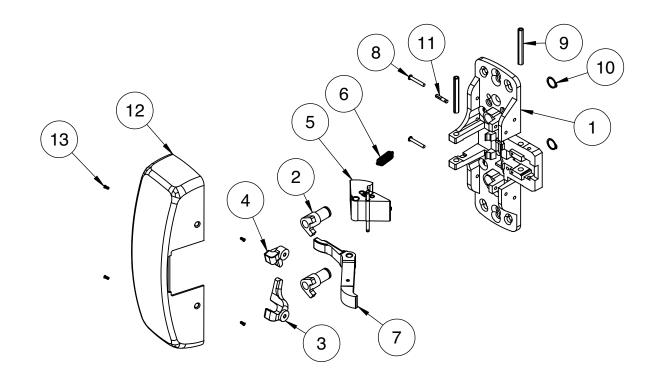

Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


(12-)8904	(12-)8910	(12-)8913
(12-)8915	(12-)8928	(12-)8943
(12-)8944	(12-)8963	(12-)8970
(12-)8971	(12-)8975	(12-)8976

SARGENT	_
ASSA ABLOY	1

Function	Assembly No.	Description	Sellable
(12) (All Europtians Except 16.9.66)	68-2172	LHRB	Yes
(12-) (All Functions Except 16 & 66)	68-2173	RHRB	Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0339	Chassis	1	No
2		68-1137	Lift Arm	1	Yes
3		68-0239	Pivot Pin	1	Yes
4		68-0337	Left Hand Lift Lever	1	Yes
4	See chart above	68-0338	Right Hand Lift Lever	1	Yes
5		68-0273	Bushing	2	Yes
6		01-9370	Washer	1	Yes
7		68-0271	Pivot Pin (63 Function)	1	Yes
8		68-1294	Stop Pin	1	No
9		68-0407	Cover <sup>1</sup>	1	Yes
10		68-3905	Cover Screw Pack <sup>1</sup>	1	Yes
		68-2172 (LHRB)	000 Series Mertise Assembly 123	1	Yes
		68-2173 (RHRB)	900 Series Mortise Assembly <sup>1,2,3</sup>	1	Yes
Not	N/A	68-2143	Screw Pack Standard	1	Yes
Shown		68-2165	Screw Pack (12-)	1	Yes
		C908	Strike Pack LHRB 1 3/4" (C908) <sup>1,3</sup>	1	Yes
		C908	Strike Pack RHRB 1 3/4" (C908) <sup>1,3</sup>	1	Yes

1. Specify finish 2. Specify function 3. Specify hand

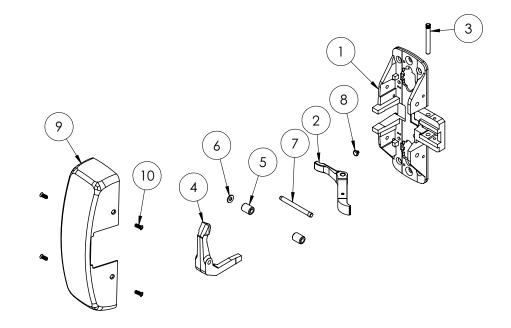

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world



Function	Assembly No.	Description	Sellable
(12-)	68-2213	LHRB	Yes
	68-2214	RHRB	Yes

ltem	Part No.	Description	Qty	Sellable
1 -	68-0341	Chassis RHRB	1	No
	68-0342	Chassis LHRB	1	No
2	68-1137	Lift Arm	1	Yes
3	68-0239	Pivot Pin	1	Yes
4	68-0337	Left Hand Lift Lever	1	Yes
4	68-0338	Right Hand Lift Lever	1	Yes
5	68-0273	Bushing	2	Yes
6	01-9370	Washer	1	Yes
7	68-0271	Pivot Pin (63 Function)	1	Yes
8	68-1294	Stop Pin	1	No
9	99-0007	Cylinder Blocking Ring <sup>1</sup>	1	Yes
	13-0085	Locking Tail	1	Yes
Not	13-0080	Cylinder Barrel Retainer	1	Yes
Shown	_	Cylinder Assembly <sup>2</sup>	1	Yes
	13-0074	Connecting Screw	2	Yes
10	68-0410	Cover LHRB <sup>1</sup>	1	Yes
	68-0411	Cover RHRB <sup>1</sup>	1	Yes
11	68-3905	Cover Screw Pack <sup>1</sup>	1	Yes
	916	Mortise Assembly 16 Fun- tion <sup>1,3</sup>	1	Yes
Not	966	Mortise Assembly 66 Func- tion <sup>1,3</sup>	1	Yes
Shown	68-2143	Screw Pack Standard	1	Yes
	68-2165	Screw Pack (12-)	1	Yes
	C908	Strike Pack LHRB (C908) <sup>3</sup>	1	Yes
	C908	Strike Pack RHRB (C908) <sup>3</sup>	1	Yes

Specify finish
 Specify function
 Specify hand

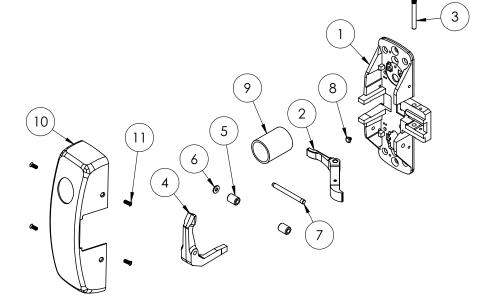

Experience a safer and more open world

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

#### 900 Series Mortise Locks 904, 910, 940, 944

SARGENT
ASSA ABLOY

ltem	Part No.	Description	Qty.	Sellable
1	99-2351	Case Assembly	1	No
2	01-0273	Roll Pin	1	Yes
3	99-0072	Guard Bolt Eyelet	1	Yes
4	99-0057	Guard Bolt Spring	1	Yes
5	99-0279	Guard Bolt Assembly LHRB	1	Vas
5	99-0280	Guard Bolt Assembly RHRB	1	Yes
6	99-0075	Anti-Friction Latchbolt 1		Yes
7	99-0216	Front RHRB <sup>1</sup> 1		No
	99-0217	Front LHRB <sup>1</sup>	1	No
8	99-0098	Pivot Pin Anti-Friction 1 Latchbolt		Yes
9	99-0078	Cylinder Set Screw	1	Yes
10	99-0076	Slide Spacer	2	Yes
11	99-0058	Slide Guide	2	Yes
12	99-2059	Lever Slide Assembly	1	Yes


ltem	Part No.	Description	Qty.	Sellable
13	99-0061	Spring Thumbpiece Lever	1	No
14	99-0236	Cylinder Screw Support	1	Yes
15	99-0060	Guard Bolt Lever	1	Yes
16	01-0098	Retaining Ring	1	Yes
17	99-0063	Spring Guard Bolt Lver	1	Yes
18	99-2389	Latchbolt Lever Assembly	1	Yes
19	99-0212	Pivot Pin Lever Slide	1	Yes
20	99-2247	Latchbolt Assembly	1	Yes
21	99-2361	Cap Assembly	1	No
22	01-1142	Case Screw #8-32 x 1/4	5	No

1. Specify finish

Note: Items 5 and 15 to be sold as a set only.

92



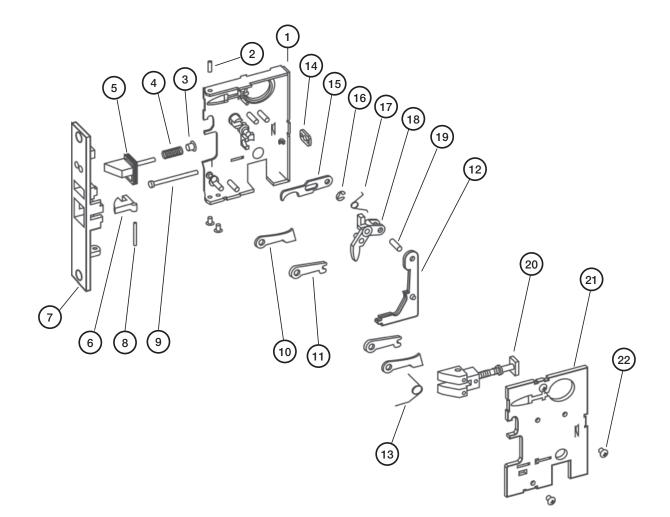

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT	
ASSA ABLOY	ı

ltem	Part No.	Description	Qty.	Sellable
1	99-2351	Case Assembly	1	No
2	01-0273	Roll Pin	1	Yes
3	99-0072	Guard Bolt Eyelet	1	Yes
4	99-0057	Guard Bolt Spring	1	Yes
5	99-0279	Guard Bolt Assembly LHRB	1	Yes
J	99-0280	Guard Bolt Assembly RHRB	1	Yes
6	99-0075	Anti-Friction Latchbolt	1	Yes
7	99-0216	Front RHRB <sup>1</sup>	1	No
1	99-0217	Front LHRB <sup>1</sup>	1	No
8	99-0098	Pivot Pin Anti-Friction Latchbolt	1	Yes
9	99-2247	Latchbolt Assembly	1	Yes
10	01-1142	Case Screw #8-32 x 1/4	5	Yes
11	99-0076	Slide Spacer	2	Yes
12	99-0208	Locking Lever	1	Yes
13	01-0074	Retaining Ring	1	Yes
14	77-1165	Spring Stop Works	2	Yes
15	99-0060	Guard Bolt Lever	1	Yes
16	77-1040	Button Tail Stop Works	1	No
17	01-0098	Retaining Ring	1	Yes
18	99-0058	Slide Guide	2	Yes
19	99-0063	Spring Guard Bolt Lever	1	Yes
20	99-2385	Latchbolt Lever Assembly	1	Yes
21	99-2059	Lever Slide Assembly	1	Yes
22	99-0212	Pivot Pin Lever Slide	1	Yes
23	99-0206	Knob Hub	1	Yes
24	99-0061	Spring Thumbpiece Lever	1	Yes
25	99-0236	Cylinder Screw Support	1	Yes
26	99-0078	Cylinder Set Screw	1	Yes
27	99-2361	Cap Assembly	1	No

1. Specify finish

Notes:


• Items 5 and 15 to be sold as a set only.

• For 8313 x ET or 8913 x ET, use 915 Mortise Assembly.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



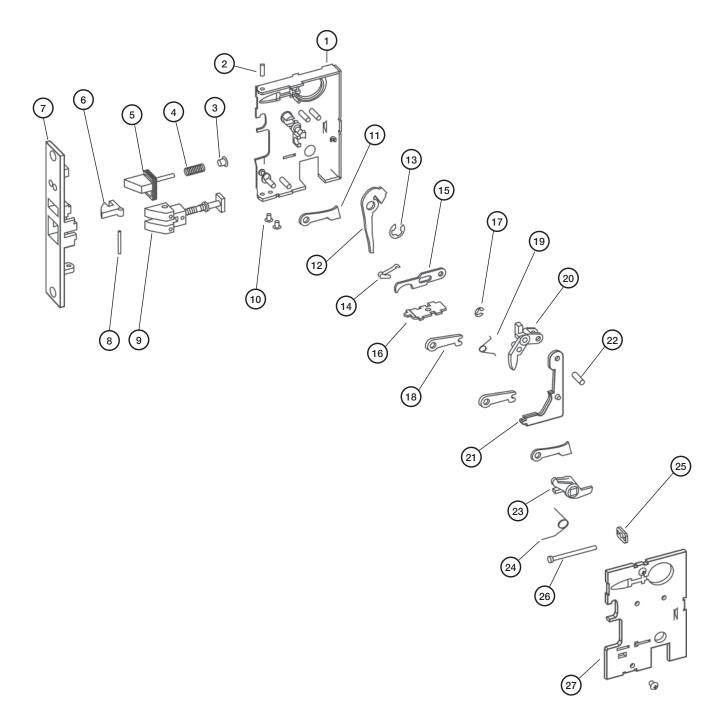

Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty.	Sellable
1	99-2351	Case Assembly	1	No
2	01-0273	Roll Pin	1	Yes
3	99-0072	Guard Bolt Eyelet	1	Yes
4	99-0057	Guard Bolt Spring	1	Yes
5	99-0279	Guard Bolt Assembly LHRB	1	Yes
5	99-0280	Guard Bolt Assembly RHRB	1	Yes
6	99-0075	Anti-Friction Latchbolt	1	Yes
7	99-0216	Front RHRB <sup>1</sup>	1	No
7	99-0217	Front LHRB <sup>1</sup>	1	No
8	99-0098	Pivot Pin Anti-Friction Latchbolt	1	Yes
9	99-2247	Latchbolt Assembly	1	Yes
10	01-1142	Case Screw #8-32 x 1/4	5	Yes
11	99-0076	Slide Spacer	2	Yes
15	99-0060	Guard Bolt Lever	1	Yes
17	01-0098	Retaining Ring	1	Yes
18	99-0058	Slide Guide	2	Yes
19	99-0063	Spring Guard Bolt Lever	1	Yes
20	99-2385	Latchbolt Lever Assembly	1	Yes
21	99-2059	Lever Slide Assembly	1	Yes
22	99-0212	Pivot Pin Lever Slide	1	Yes
23	99-0206	Knob Hub	1	Yes
24	99-0061	Spring Thumbpiece Lever	1	Yes
25	99-0236	Cylinder Screw Support	1	Yes
26	99-0078	Cylinder Set Screw	1	Yes
27	99-2361	Cap Assembly	1	No
-	68-2597	Bridge Rectifier Pack <sup>2</sup>	1	Yes

1. Specify finish

2. Use with 975 and 976 only


Note: Items 5 and 15 to be sold as a set only.

96

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



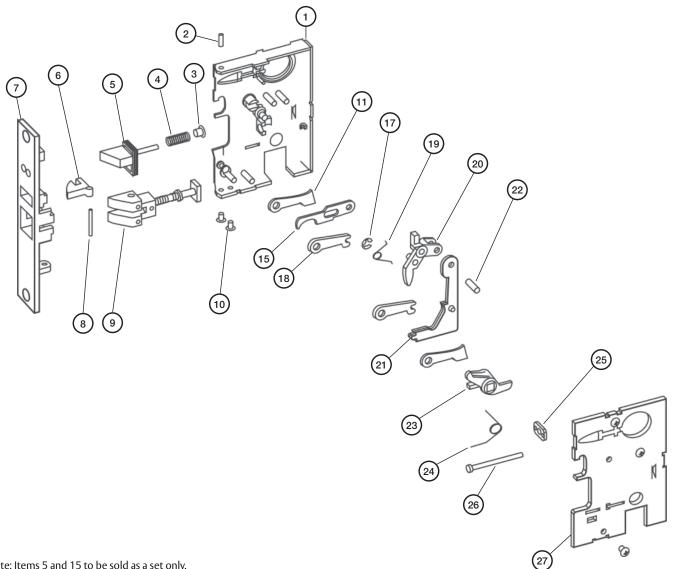

Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT	
ASSA ABLOY	1

ltem	Part No.	Description	Qty.	Sellable
1	99-2352	Case Assembly LHRB	1	No
1	99-2351	Case Assembly RHRB	1	INO
2	01-0273	Roll Pin	1	Yes
3	99-0072	Guard Bolt Eyelet	1	Yes
4	99-0057	Guard Bolt Spring	1	Yes
_	99-0279	Guard Bolt Assembly LHRB	1	Yes
5	99-0280	Guard Bolt Assembly RHRB	1	Yes
6	99-0075	Anti-Friction Latchbolt	1	Yes
_	99-0226	Front LHRB <sup>1</sup>	1	No
7	99-0227	Front RHRB <sup>1</sup>	1	No
8	99-0098	Pivot Pin Anti-Friction Latchbolt	1	Yes
9	99-2247	Latchbolt Assembly	1	Yes
10	01-1142	Case Screw #8-32 x 1/4	5	Yes
11	99-0076	Slide Spacer	2	Yes
12	99-0208	Locking Lever	1	Yes
13	01-0074	Retaining Ring	1	Yes
14	77-1165	Spring Stop Works	2	Yes
15	99-0060	Guard Bolt Lever	1	Yes
16	77-1040	Button Tail Stop Works	1	No
17	01-0098	Retaining Ring	1	Yes
18	99-0058	Slide Guide	2	Yes
19	99-0063	Spring Guard Bolt Lever	1	Yes
	99-2387	Latchbolt Lever Assembly LHRB	1	Yes
20	99-2388	Latchbolt Lever Assembly RHRB	1	Yes
21	99-2059	Lever Slide Assembly	1	Yes
22	99-0212	Pivot Pin Lever Slide	1	Yes
23	99-0206	Knob Hub	1	Yes
24	99-0061	Spring Thumbpiece Lever	1	Yes
25	99-0236	Cylinder Screw Support	1	Yes
26	99-0078	Cylinder Set Screw	2	Yes
	99-2361	Cap Assembly LHRB	1	No
27	99-2362	Cap Assembly RHRB	1	No
28	13-2162	Cylinder Attachment	1	Yes


1. Specify finish Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

900 Series Mortise Locks 916



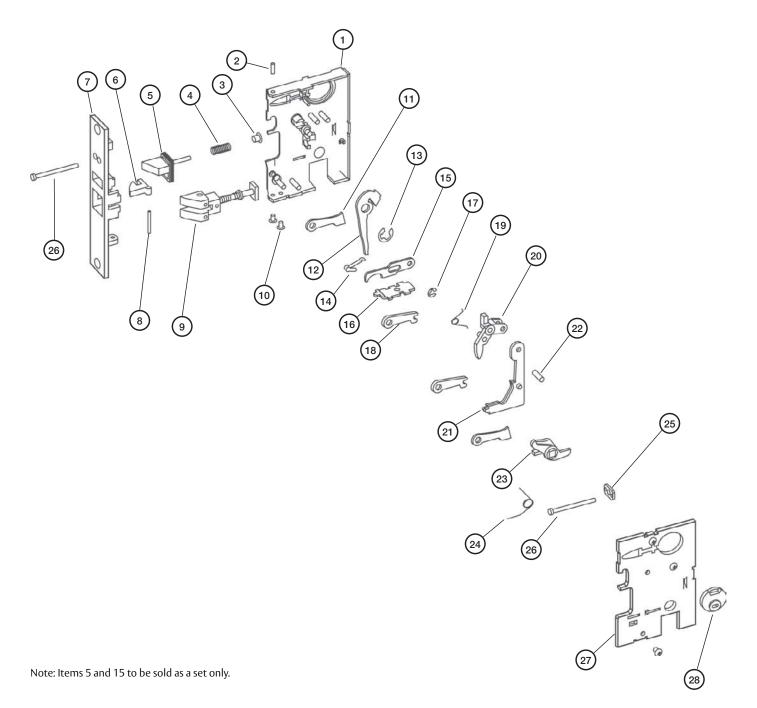

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT
ASSA ABLOY

ltem	Part No.	Description	Qty.	Sellable
1	99-2351	Case Assembly	1	No
2	01-0273	Roll Pin	1	Yes
3	99-0072	Guard Bolt Eyelet	1	Yes
4	99-0057	Guard Bolt Spring	1	Yes
5	99-0279	Guard Bolt Assembly LHRB	1	Yes
5	99-0280	Guard Bolt Assembly RHRB	1	Yes
6	99-0075	Anti-Friction Latchbolt	1	Yes
7	99-0216	Front RHRB <sup>1</sup>	1	No
1	99-0217	Front LHRB <sup>1</sup>	1	No
8	99-0098	Pivot Pin Anti-Friction Latchbolt	1	Yes
9	99-2247	Latchbolt Assembly	1	Yes
10	01-1142	Case Screw #8-32 x 1/4	5	Yes
11	99-0088	Thumb Piece Lever	2	Yes
15	99-0060	Guard Bolt Lever	1	Yes
17	01-0098	Retaining Ring	1	Yes
18	99-0058	Slide Guide	2	Yes
19	99-0063	Spring Guard Bolt Lever	1	Yes
20	99-2385	Latchbolt Lever Assembly	1	Yes
21	99-2050	Lever Slide Assembly	1	Yes
22	99-0212	Pivot Pin Lever Slide	1	Yes
24	99-0061	Spring Thumbpiece Lever	1	Yes
25	99-0236	Cylinder Screw Support	1	Yes
26	99-0078	Cylinder Set Screw	1	Yes
27	99-2361	Cap Assembly	1	No


1. Specify finish

Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

A8231:M 09/22



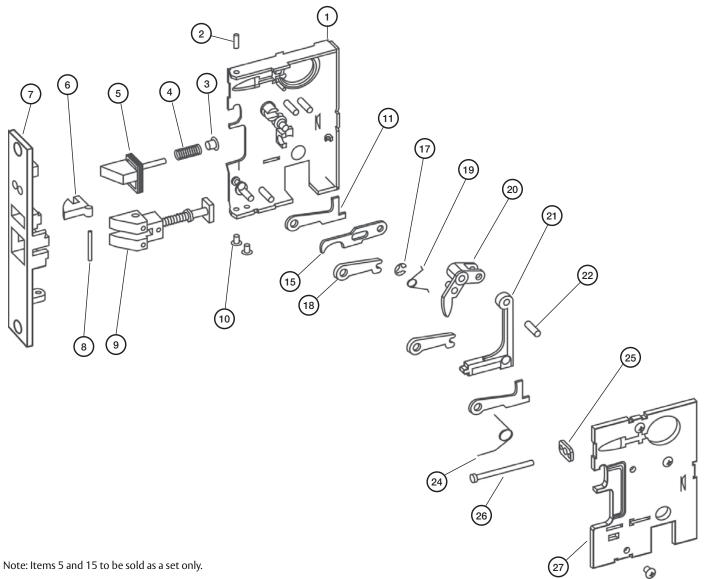

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT	
ASSA ABLOY	


ltem	Part No.	Description	Qty.	Sellable
1	99-2351	Case Assembly RHRB	1	No
1	99-2352	Case Assembly LHRB	1	No
2	01-0273	Roll Pin	1	Yes
3	99-0072	Guard Bolt Eyelet	1	Yes
4	99-0057	Guard Bolt Spring	1	Yes
5	99-0279	Guard Bolt Assembly LHRB	1	Yes
5	99-0280	Guard Bolt Assembly RHRB	1	Yes
6	99-0075	Anti-Friction Latchbolt	1	Yes
7	99-0216	Front RHRB <sup>1</sup>	1	No
1	99-0217	Front LHRB <sup>1</sup>	1	No
8	99-0098	Pivot Pin Anti-Friction Latchbolt	1	Yes
9	99-2247	Latchbolt Assembly	1	Yes
10	01-1142	Case Screw #8-32 x 1/4	5	Yes
11	99-0088	Thumb Piece Lever	2	Yes
12	99-0208	Locking Lever	1	Yes
13	01-0074	Retaining Ring	1	Yes
14	77-1165	Spring Stop Works	2	Yes
15	99-0060	Guard Bolt Lever	1	Yes
16	77-1040	Button Tail Stop Works	1	No
17	01-0098	Retaining Ring	1	Yes
18	99-0058	Slide Guide	2	Yes
19	99-0063	Spring Guard Bolt Lever	1	Yes
20	99-2385	Latchbolt Lever Assembly	1	Yes
21	99-2050	Lever Slide Assembly	1	Yes
22	99-0212	Pivot Pin Lever Slide	1	Yes
24	99-0061	Spring Thumbpiece Lever	1	Yes
25	99-0236	Cylinder Screw Support	1	Yes
26	99-0078	Cylinder Set Screw	1	Yes
27	99-2361	Cap Assembly	1	No

1. Specify finish Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



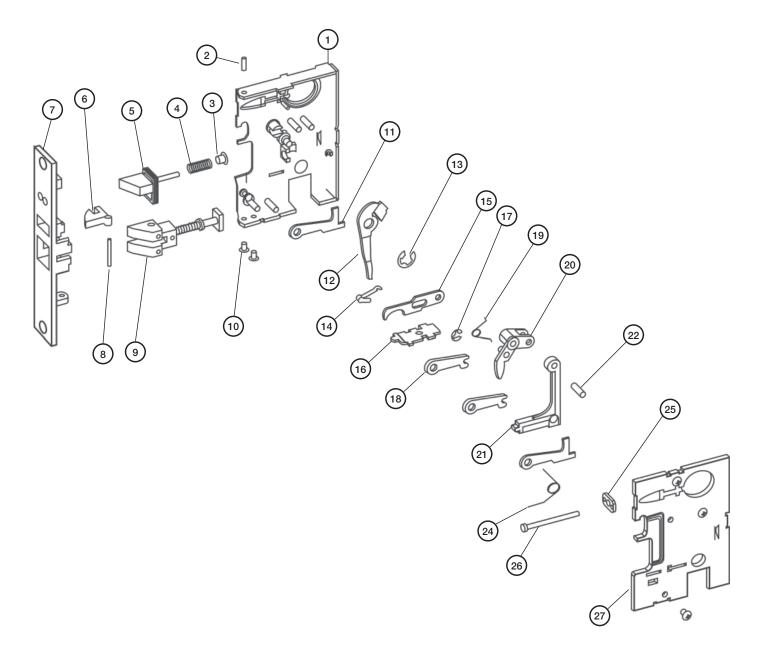

Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGENT	
ASSA ABLOY	

ltem	Part No.	Description	Qty.	Sellable
1	99-2352	Case Assembly LHRB	1	No
1	99-2351	Case Assembly RHRB	1	No
2	01-0273	Roll Pin	1	Yes
3	99-0072	Guard Bolt Eyelet	1	Yes
4	99-0057	Guard Bolt Spring	1	Yes
5	99-0279	Guard Bolt Assembly LHRB	1	Yes
5	99-0280	Guard Bolt Assembly RHRB	1	Yes
6	99-0075	Anti-Friction Latchbolt	1	Yes
7	99-0216	Front RHRB <sup>1</sup>	1	No
7	99-0217	Front LHRB <sup>1</sup>	1	No
8	99-0098	Pivot Pin Anti-Friction Latchbolt	1	Yes
9	99-2247	Latchbolt Assembly	1	Yes
10	01-1142	Case Screw #8-32 x 1/4	5	Yes
11	99-0088	Thumb Piece Lever	2	Yes
12	99-0208	Locking Lever	1	Yes
13	01-0074	Retaining Ring	1	Yes
14	77-1165	Spring Stop Works	2	Yes
15	99-0060	Guard Bolt Lever	1	Yes
16	77-1040	Button Tail Stop Works	1	No
17	01-0098	Retaining Ring	1	Yes
18	99-0058	Slide Guide	2	Yes
19	99-0063	Spring Guard Bolt Lever	1	Yes
20	99-2387	Latchbolt Lever Assembly LHRB	1	Yes
20	99-2388	Latchbolt Lever Assembly RHRB	1	Yes
21	99-2050	Lever Slide Assembly	1	Yes
22	99-0212	Pivot Pin Lever Slide	1	Yes
24	99-0061	Spring Thumbpiece Lever	1	Yes
25	99-0236	Cylinder Screw Support	1	Yes
26	99-0078	Cylinder Set Screw	1	Yes
27	99-2361	Cap Assembly LHRB	1	No
27	99-2362	Cap Assembly RHRB	1	No
28	13-2162	Cylinder Attachment	1	Yes

1. Specify finish


Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

900 Series Mortise Locks 966



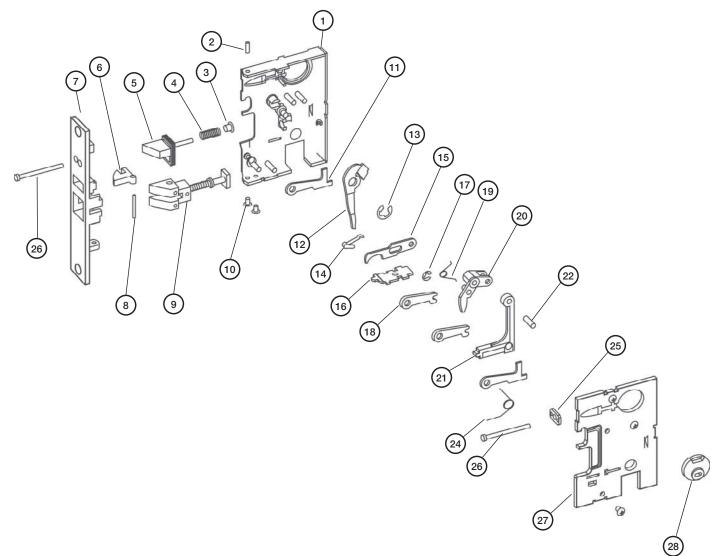

Note: Items 5 and 15 to be sold as a set only.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer quality and more open world the ex



Assembly No.	Description	ription Option		
68-2702	Wide Stile E Rail Assembly*		Yes	
68-2703	Wide Stile F Rail Assembly*	]	Yes	
68-2704	Wide Stile G Rail Assembly*	]	Yes	
68-2705	Wide Stile J Rail Assembly* (12-)		Yes	
68-2724	Narrow Stile E Rail Assembly*	Fire Rated	Yes	
68-2725	Narrow Stile F Rail Assembly*	]	Yes	
68-2726	Narrow Stile G Rail Assembly*	]	Yes	
68-2727	Narrow Stile J Rail Assembly*		Yes	

Assembly No.	Description	Option	Sellable	
68-7524	Wide Stile E Rail Assembly*		Yes	
68-7525	Wide Stile F Rail Assembly*		Yes	
68-7527	8-7527 Wide Stile G Rail Assembly*		Yes	
68-7526	Wide Stile J Rail Assembly*         (12-)(5CH-)           Narrow Stile E Rail Assembly*         Fire Rated		Yes	
68-8021			Yes	
68-8117	Narrow Stile F Rail Assembly*		Yes	
68-8309	Narrow Stile G Rail Assembly*	]	Yes	
68-8213	Narrow Stile J Rail Assembly*		Yes	


ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0550	Mounting Rail Insert Wide(E)*		Yes
		68-0549	Mounting Rail Insert Wide(F)*	]	Yes
		68-0554 Mounting Rail Insert Wide()*		]	Yes
		68-0551	Mounting Rail Insert Wide(G)*	] 1	Yes
		68-1375 Mounting Rail Insert Narrow(E, F		]	Yes
		68-0553	Mounting Rail Insert Narrow(J)*	]	Yes
		68-0552	Mounting Rail Insert Narrow(G)*		Yes
		68-0950	Mounting Rail Wide(E)*		Yes
		68-0952	Mounting Rail Wide(F)*	1	Yes
		68-0948	Mounting Rail Wide(J)*		Yes
2	See Chart Above	68-0949	Mounting Rail Wide(G)*	1	Yes
		68-0958	Mounting Rail Narrow(E)*		Yes
		68-0955         Mounting Rail Narrow(F)*           68-0956         Mounting Rail Narrow(J)*           68-0957         Mounting Rail Narrow(G)*			Yes
					Yes
				]	Yes
3	ADOVE	01-1236 #6-32x 3/8" PH FL U'Cut		4	Yes
4	[	68-0943 Bracket		2	Yes
5	[	68-0945	Pivot Pin	2	Yes
6	[	01-0098	Retainer Ring	2	Yes
7	[	68-0229	Pivot Pin, Push Rail*	2	Yes
8		68-0236 Spring, Rail Arm		2	Yes
0		68-1832	Spring, Rail Arm (5CH-)	2	Yes
9			Connecting Arm Assembly	2	Yes
		68-0615	Push Rail (E)*		Yes
10		68-0618 Push Rail (F)*		1	Yes
		68-0616	Push Rail (J)*	1	Yes
		68-0617	Push Rail (G)*	]	Yes
11	] [	809 TouchPad Assembly		1	Yes
12		01-4537	1-4537 Standard Hole Plug		Yes

\*Specify Finish

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

80 Series Rail Assemblies 12-12- 5CH-



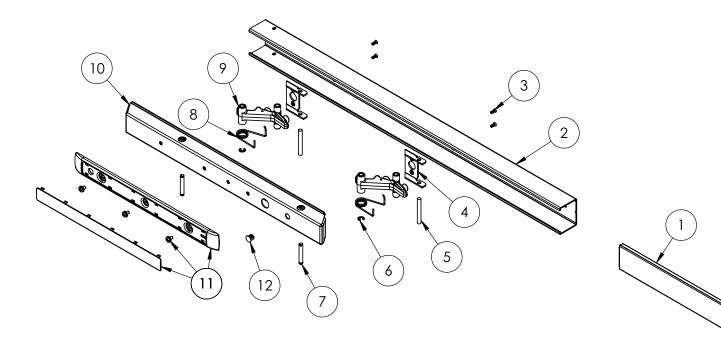

Assembly 68-2703 Shown Above

Experience a safer and more open world

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

#### **80 Series Rail Assemblies** 12-56-56-12-56-5CH-56-5CH-

Description

Wide Stile E Rail Assembly\*

Wide Stile F Rail Assembly\* Wide Stile G Rail Assembly\*

Wide Stile | Rail Assembly\*

Narrow Stile E Rail Assembly\*

Narrow Stile F Rail Assembly\*

Narrow Stile G Rail Assembly\*

Option

(12-56-)

(56-)

Sellable

Yes

Yes

Yes

Yes

Yes

Yes

Yes

68-8330

Assembly

No.

68-5542

68-3212 68-3211

68-3213

68-5578

68-3217

68-3216

Assembly No.	Description	Option	Sellable
68-8326	Wide Stile F Rail Assembly*		Yes
68-8325	Wide Stile G Rail Assembly*		Yes
68-8327	Wide Stile   Rail Assembly*	(12-56-)(5CH)	Yes
68-8329	Narrow Stile F Rail Assembly*	(56-)(5CH)	Yes
68-8328	Narrow Stile G Rail Assembly*		Yes

Narrow Stile | Rail Assembly\*

	68-3216 Narrow Stile G Rail Assembly* Yes									
ltem	Assembly No.	Part No.		Descriptio	on	Qty	Sellable			
1		68-0550	Mou	nting Rail Inser	t Wide(E)*		Yes			
		68-0549	Mou	nting Rail Inser	t Wide(F)*		Yes			
		68-0554		nting Rail Inser			Yes			
		68-0551		nting Rail Inser		1	Yes			
		68-1375		ing Rail Insert N			Yes			
		68-0553		ting Rail Insert			Yes			
		68-0552		ting Rail Insert	Narrow(G)*		Yes			
		68-0950 68-0952		lounting Rail W			Yes			
		68-0952		<u>Iounting Rail W</u> Iounting Rail W		-  -	Yes Yes			
		68-0948		ounting Rail W	/ide(C)*		Yes			
2		68-0958	Mo	ounting Rail Na	rrow(E)*	-  1	Yes			
		68-0955		ounting Rail Na			Yes			
		68-0956		ounting Rail Na			Yes			
		68-0957		ounting Rail Na			Yes			
		M56AE		Rail Motor K			Yes			
		(Std) M56/	AF .			1.	Yes			
3	See Chart	(5CH) M56		Rail Motor Kit, F <sup>1</sup>		1  -	Yes			
	Above	(Std) M56		Dail Matar K	:+ 11		Yes			
		(5CH) M56	A	Rail Motor Kit, J <sup>1</sup>			Yes			
		(Std) M56A		Rail Motor Ki	t C <sup>1</sup>		Yes			
		(5CH) M56					Yes			
4		68-0229		Pivot Pin, Push Rail*		2	Yes			
5		68-0236		Spring, Rail A		2	Yes			
6		01-0098		Retaining R	ing	2	Yes			
7		809		TouchPad Asse		1	Yes			
		68-0615		Standard Push Rail, E*			Yes			
8		68-0618 Standard Push Rail, F*		- 1  -	Yes					
		68-0616 68-0617		<u>Standard Push</u> Standard Push I		-	Yes Yes			
9		68-3609		nnecting Arm A		1	Yes			
10		52-1261		Input Harness		2	Yes			
11		01-1236		6-32x3/8" PH F		4	Yes			
12		68-0945		Pivot Pin		1		All Related HK	- Assemblies L	isted Below
13		68-0943		Bracket		1	Yes			
Ор	tion Code	E Wide	F Wide	J Wide	G Wide	E Narrow	<b>F</b> Narrow	Narrow	G Narrow	Sellable
19	9-56-HK-*	68-5515	68-5516	68-5517	68-5518	68-5602	68-5603	68-5604	68-5605	Yes
53	8-56-HK-*	68-5554*	68-5555*	68-5556*	68-5557*	68-5594*	68-5595*	68-5596*	68-5597*	Yes
53-5	55-56-HK-*	68-5558*	68-5559	68-5560	68-5561*	68-5598*	68-5599*	68-5600*	68-5601*	Yes
	53-56-HK-*	68-5519*	68-5520*	68-5521*	68-5522*	68-5610*	68-5611*	68-5612*	68-5613*	Yes
	3-55-56-HK-*	68-5538*	68-5539*	68-5540*	68-5541*	68-5614*	68-5615*	68-5616*	68-5617*	Yes
	-19-56-HK-*	N/A	68-8358	68-8359	68-8360	N/A	68-8361	68-8359	68-8363	Yes
		N/A	68-8475	68-8476	68-8477	N/A	68-8481	68-8476	68-8483	Yes
5CH-53-56-HK-* 5CH-53-55-56-HK-*		N/A	68-8475	68-8476	68-8477	N/A	68-8481	68-8476	68-8483	Yes
		N/A	68-8514	68-8515	68-8516	N/A	68-8517	68-8515	68-8519	Yes
5CH-19-53-56-HK-* 5CH-19-53-55-56-HK-*		N/A	68-8514	68-8515	68-8516	N/A N/A	68-8517	68-8515	68-8519	Yes
	H-56-HK*	N/A N/A		68-8332				68-8332	68-8333	Yes
			68-8337		68-8339	N/A	68-8331			
	5-56-19-HK*	N/A	68-8409	68-8404	68-8411	N/A	68-8403	68-8404	68-8405	Yes
	-55-56-HK*	N/A	68-8391	68-8386	68-8393	N/A	68-8385	68-8386	68-8387	Yes
Parts 3-13	arts 3-13 Available as Assembly No. 52-3541 for E, 52-3542 for F, 52-3543 for J, 52-3544 for G									

Parts 3-13 Available as Assembly No. 52-3541 for E, 52-3542 for F, 52-3543 for J, 52-3544 for G

A8231:M \*Specify Finish

09/22


1. Specify Standard or 5CH prefix before order The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



Yes

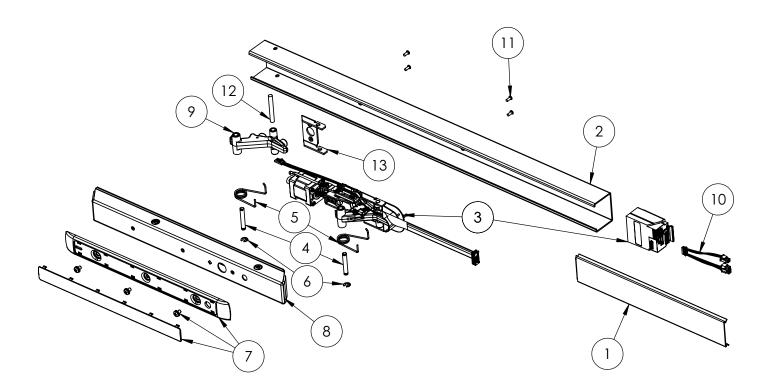

Assembly 68-5578 Shown Above

Experience a safer and more open world The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.



SARGENT

ASSA ABLOY

SARGENT
ASSA ABLOY

Assembly No.	Description	Sellable	
68-6098	Wide Stile E Rail Assembly*		Yes
68-3780	Wide Stile F Rail Assembly*	]	Yes
68-3781	Wide Stile G Rail Assembly*	]	Yes
68-3782	Wide Stile J Rail Assembly*		
68-6100	Narrow Stile E Rail Assembly*	(39-)	Yes
68-3788	Narrow Stile F Rail Assembly*	]	Yes
68-3789	Narrow Stile G Rail Assembly*		Yes
68-3790	Narrow Stile J Rail Assembly*		Yes
68-6099	Wide Stile E Rail Assembly*		Yes
68-3784	Wide Stile F Rail Assembly*		Yes
68-3785	Wide Stile J Rail Assembly*	]	Yes
68-3786	Wide Stile G Rail Assembly*	(12-59-)	Yes
68-6101	Narrow Stile E Rail Assembly*	(12-39-)	Yes
68-3792	Narrow Stile F Rail Assembly*	]	Yes
68-3793	Narrow Stile G Rail Assembly*		Yes
68-3794	Narrow Stile J Rail Assembly*		Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable	ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		809	TouchPad Assembly	1	Yes			68-1045	Mounting Rail, E Narrow*		Yes
2		68-1027 68-1030	Push Rail, E* Push Rail, F*	1	No Yes			68-1042	Mounting Rail, F Narrow*		Yes
		68-1028 68-1029	Push Rail, G* Push Rail, J*		Yes Yes			68-1043	Mounting Rail, J Narrow*		Yes
3		68-0582 01-4537	Lockdown Cam <sup>1</sup> Standard Hole	1	Yes Yes	22		68-1044	Mounting Rail, G Narrow*	1	Yes
5		01-4337	Plug Retaining Ring	2	Yes			68-0950	Mounting Rail, E Wide*		Yes
6		68-0229	Pivot Pin, Push Rail*	2	Yes			68-1058	Mounting Rail, F Wide*		Yes
7 8		68-1049 68-1039	Rubber Cushion Support Plate	1	No No			68-1059	Mounting Rail, J Wide*		Yes
9 10		52-1701 68-0236	59- Wire Guide Spring, Rail Arm	1 2	Yes Yes			68-1060	Mounting Rail, G Wide*		Yes
11 12	See Chart Above	68-0945 01-0711	Pivot Pin Flanged Nyliner	2 8	Yes Yes		See Chart Above	68-6090	Insert Assembly, E Wide		No
13	ADOVE	52-4765	59- Connecting Arm	1	No			68-6091	Insert Assembly, F Wide		No
14 15		68-0943 52-0935	Bracket Wire Barrier	1	Yes Yes			68-6092	Insert Assembly, J Wide		No
16		52-4733	59- Harness Sub- Plate Assembly	1	No			68-6093	Insert Assembly, G Wide		No
10		52-4734	59- Harness Sub- Plate Assembly	I	No	23		68-6097	Insert Assembly, E Narrow	1	No
17		01-0610	Wave Spring Washer <sup>1</sup>	1	Yes			68-6094	Insert Assembly, F Narrow		No
18		68-0583	Lockdown Button	1	Yes			68-6095	Insert Assembly, J Narrow		No
19		01-4466	Machine Screw SEMS <sup>1</sup>	1	No			68-6096	Insert Assembly, G Narrow		No
20		01-1236	#6-32X3/8" PH FL U'Cut 6**		Yes	24		52-1292 52-1293	Harness Assembly Harness Assembly	1	Yes Yes
21		68-6127	Connecting Arm	1	Yes				,		

A8231:M 09/22


\*Specify Finish \*\*Qty is 6 in Sizes F J G, 4 in Size E 1. Do not use on any 12- Rail Assembly

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

110 Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Experience a safer and more open world



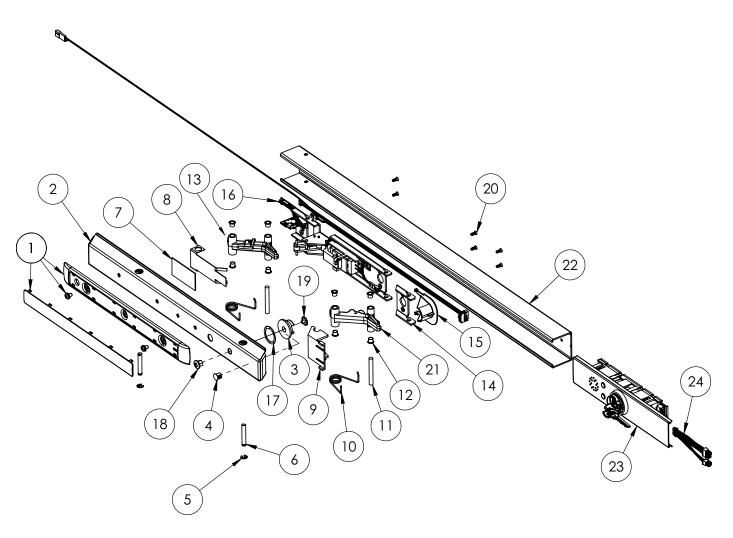

Assembly 68-3780 Shown Above

Experience a safer and more open world

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



Assembly No.	Description	Option	Sellable
68-2694	Wide Stile E Rail Assembly*		Yes
68-2695	Wide Stile F Rail Assembly*		Yes
68-2696	Wide Stile G Rail Assembly*		Yes
68-2697	Wide Stile J Rail Assembly*	Standard	Yes
68-2716	Narrow Stile E Rail Assembly*	Rails	Yes
68-2717	Narrow Stile F Rail Assembly*		Yes
68-2718	Narrow Stile G Rail Assembly*		Yes
68-2719	Narrow Stile J Rail Assembly*		Yes
68-7520	Wide Stile E Rail Assembly*		Yes
68-7521	Wide Stile F Rail Assembly*		Yes
68-7522	Wide Stile G Rail Assembly*	Standard	Yes
68-7523	Wide Stile J Rail Assembly*	Rails	Yes
68-8001	Narrow Stile E Rail Assembly*		Yes
68-8097	Narrow Stile F Rail Assembly*	– (5CH-)	Yes
68-8289	Narrow Stile G Rail Assembly*		Yes
68-8193	Narrow Stile J Rail Assembly*		Yes


ltem	Assembly No.	Part No.	Description	Qty	Sellable
		68-0550	Mounting Rail Insert Wide(E)*		Yes
		68-0549	Mounting Rail Insert Wide(F)*		Yes
		68-0554	Mounting Rail Insert Wide(J)*		Yes
1	[	68-0551	Mounting Rail Insert Wide(G)*	1	Yes
		68-1375	Mounting Rail Insert Narrow(E, F)*	]	Yes
		68-0553	Mounting Rail Insert Narrow(])*		Yes
		68-0552	Mounting Rail Insert Narrow(G)*		Yes
2		01-1236	#6-32x3/8 PH FL U'Cut	4	Yes
	] [	68-0950	Mounting Rail, E Wide*		Yes
		68-0952	Mounting Rail, F Wide*		Yes
	[	68-0948	Mounting Rail, J Wide*		Yes
3	[	68-0949	Mounting Rail, G Wide*	1	Yes
2		68-0958	Mounting Rail, E Narrow*		Yes
		68-0955	Mounting Rail, F Narrow*		Yes
		68-0956	Mounting Rail, J Narrow*		Yes
	See Table	68-0957	Mounting Rail, G Narrow*		Yes
4	Above	68-0943	Bracket		Yes
5	] [	68-3609	Connecting Arm Assembly	2	Yes
6	] [	01-4466	Machine Screw SEMS <sup>1</sup>	1	Yes
7	] [	68-0582	Lockdown Cam <sup>1</sup>	1	Yes
8	] [	01-0610	Wave Spring Washer <sup>1</sup>	1	Yes
9	] [	68-0236	Spring, Rail Arm	2	Yes
9		68-1832	Spring, Rail Arm (5CH-)	2	Yes
10	]	68-0945	Pivot Pin	2	Yes
11		01-0098	Retaining Ring	2	Yes
12	] [	68-0229	Pivot Pin Push Rail*	2	Yes
13	] [	68-0583	Lockdown Button <sup>1</sup>	1	Yes
14	] [	809	Touch Pad Assembly	1	Yes
	[	68-0615	Push Rail, E*		Yes
15			Push Rail, F*	1	Yes
15	[	68-0616	Push Rail, J*		Yes
		68-0617	Push Rail, G*		Yes

\*Specify Finish

1. Do not use on any 12- Rail Assembly

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



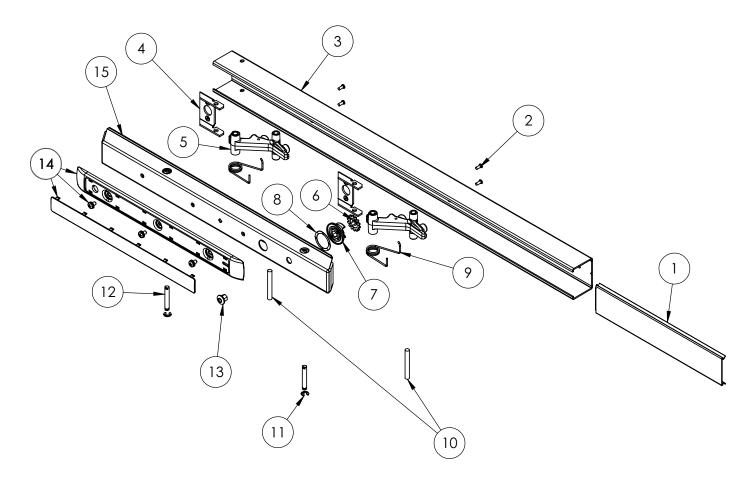

Assembly 68-2695 Shown Above

Experience a safer and more open world The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

SARGENT	
ASSA ABLOY	-1 ,

Assembly No.	Description	Description Option		
68-2698	Wide Stile E Rail Assembly*		Yes	
68-2699	Wide Stile F Rail Assembly*		Yes	
68-2700	Wide Stile G Rail Assembly*		Yes	
68-2701	Wide Stile J Rail Assembly*	16-	Yes	
68-2720	Narrow Stile E Rail Assembly*	10-	Yes	
68-2721	Narrow Stile F Rail Assembly*		Yes	
68-2722	Narrow Stile G Rail Assembly*		Yes	
68-2723	Narrow Stile J Rail Assembly*		Yes	
68-7528	Wide Stile E Rail Assembly*		Yes	
68-7529	Wide Stile F Rail Assembly*		Yes	
68-7530	Wide Stile G Rail Assembly*		Yes	
68-7531	Wide Stile J Rail Assembly*	16-5CH-	Yes	
68-8007	Narrow Stile E Rail Assembly*	- 10-5CH-	Yes	
68-8103	Narrow Stile F Rail Assembly*		Yes	
68-8295	Narrow Stile G Rail Assembly*		Yes	
68-8199	Narrow Stile J Rail Assembly*		Yes	

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		809	Touch Pad Assembly	1	Yes
		68-0615	Push Rail, E*		Yes
2		68-0618	Push Rail, F*	1	Yes
2		68-0616	Push Rail, J*		Yes
		68-0617	Push Rail, G*		Yes
3		68-0943	Bracket	2	Yes
4		01-1236	CR-FHMS 6-32X3/8"	4	Yes
		68-0950	Mounting Rail, E Wide*		Yes
		68-0952	Mounting Rail, F Wide*		Yes
		68-0948	Mounting Rail, J Wide*		Yes
5		68-0949	Mounting Rail, G Wide*	- 1	Yes
J		68-0958	Mounting Rail, E Narrow*		Yes
		68-0955	Mounting Rail, F Narrow*		Yes
	See Table	68-0956 Mounting Rail, J Narrow*		Yes	
	Above	68-0957	Mounting Rail, G Narrow*		Yes
	Above	816-5	Insert Assembly, E Wide <sup>1*</sup>		Yes
		816-1	Insert Assembly, F Wide <sup>1*</sup>		Yes
		816-7	Insert Assembly, J Wide <sup>1*</sup>		Yes
6		816-4	Insert Assembly, G Wide <sup>1*</sup>	1	Yes
		816-2	Insert Assembly, E/F Narrow <sup>1*</sup>		Yes
		816-6	Insert Assembly, J Narrow <sup>1*</sup>		Yes
		816-3	Insert Assembly, G Narrow <sup>1*</sup>		Yes
7		68-0945	Pivot Pin	2	Yes
8		01-0098	Retaining Ring	2	Yes
9		68-0229	Pivot Pin, Push Rail*	2	Yes
10		68-0236	Spring, Rail Arm	2	Yes
10		68-1832	Spring, Rail Arm (5CH-)	2	Yes
11		68-3609	Connecting Arm Assembly	2	Yes
12		01-4537	Standard Hole Plug	1	Yes

\*Specify Finish

1. Do not use on any 12- Rail Assembly

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


A8231:M 09/22

114 Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Experience a safer and more open world

80 Series Rail Assemblies 16-16-5CH-



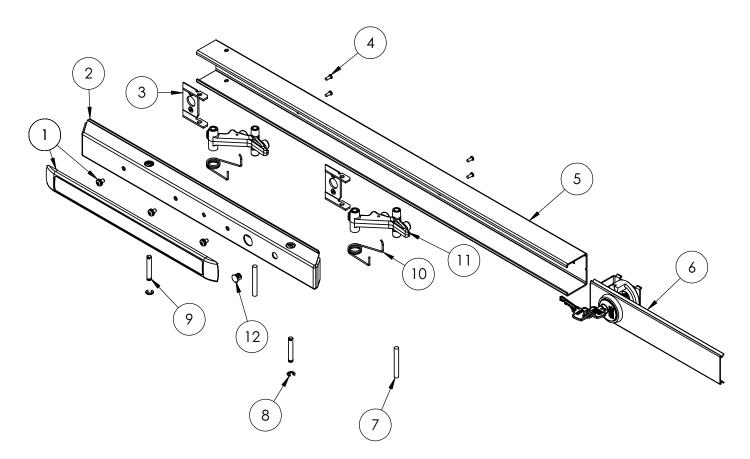

Assembly 68-2699 Shown Above

Experience a safer and more open world The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

#### **80 Series Rail Assemblies** 12-19-19-12-19-5CH 19-5CH-

Description

E Wide Rail Assembly\*

F Wide Rail Assembly\*

J Wide Rail Assembly\*

G Wide Rail Assembly\*

E Narrow Rail Assembly\*

F Narrow Rail Assembly\*

J Narrow Rail Assembly\*

G Narrow Rail Assembly\*

E Wide Rail Assembly\*

F Wide Rail Assembly\*

J Wide Rail Assembly\*

G Wide Rail Assembly\*

E Narrow Rail Assembly\*

F Narrow Rail Assembly\*

| Narrow Rail Assembly\*

G Narrow Rail Assembly\*

Assembly

No. 68-2918

68-2919

68-2921

68-2920

68-2905

68-2906

68-2908

68-2907

68-2926

68-2927

68-2929

68-2928

68-2913

68-2914

68-2916

68-2915

Assembly	Description	Option	Sellable
No.	Description	Option	Seliable
68-7540	E Wide Rail Assembly*		Yes
68-7541	F Wide Rail Assembly*		Yes
68-7543	J Wide Rail Assembly*		Yes
68-7542	G Wide Rail Assembly*	19-	Yes
68-8011	E Narrow Rail Assembly*	5CH-	Yes
68-8107	F Narrow Rail Assembly*		Yes
68-8203	J Narrow Rail Assembly*		Yes
68-8299	G Narrow Rail Assembly*		Yes
68-7536	E Wide Rail Assembly*		Yes
68-7537	F Wide Rail Assembly*		Yes
68-7538	J Wide Rail Assembly*		Yes
68-7539	G Wide Rail Assembly*	12-19-	Yes
68-8027	E Narrow Rail Assembly*	5CH-	Yes

F Narrow Rail Assembly\*

J Narrow Rail Assembly\*

G Narrow Rail Assembly\*

SARGENT

**ASSA ABLOY** 

Yes

Yes

Yes

ltem	Assembly No.	Part No.	Description	Qty	Sellable
1		68-0583	Lockdown Button <sup>1</sup>	1	Yes
	1	68-0736	Push Rail, E*		Yes
2		68-0739	Push Rail, F*	1	Yes
2		68-0737	Push Rail, J*	1	Yes
		68-0738	Push Rail, G*	1	Yes
3	1 [	01-0610	Wave Spring Washer <sup>1</sup>	1	Yes
4	1 [	68-0582	Lockdown Cam <sup>1</sup>	1	Yes
5	1 [	01-4466	SEMS Machine Screw <sup>1</sup>	1	Yes
6	] [	68-0236	Spring, Rail Arm	2	Yes
0		68-1832	Spring, Rail Arm (5CH-)	2	Yes
7	] [	01-0098	Retaining Ring	2	Yes
8	See Table	68-0229	Pivot Pin, Push Rail	2	Yes
9	Above	68-0945	Pivot Pin, Mounting Rail	2	Yes
10	] [	68-0943	Bracket	2	Yes
	] [	68-0950	Mounting Rail, E*		Yes
11		68-0952	Mounting Rail, F*	1	Yes
11		68-0949	Mounting Rail, J*		Yes
		68-0948	Mounting Rail, G*		Yes
12	] [	01-1236	#6-32X3/8" Machine Screw <sup>1</sup>	4	Yes
		68-0550	Mounting Rail Insert, E*		Yes
13		68-0549	Mounting Rail Insert, F*	1	Yes
13		68-0552	Mounting Rail Insert, J*	I	Yes
		68-0551	Mounting Rail Insert, G*		Yes
14	] [	01-4537	Standard Hole Plug	1	Yes

Option

19-

12-19-

Sellable

Yes

68-8123

68-8219

68-8315

#### \*Specify Finish

1. Do not use on any 12- Rail Assembly


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



80 Series Rail Assemblies 12-19-19-12-19-5CH 19-5CH-



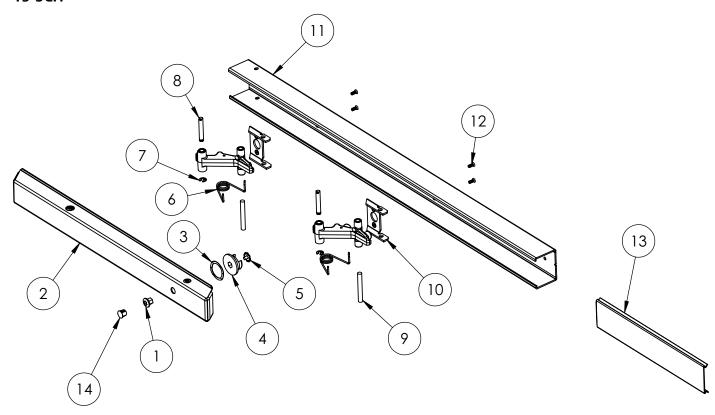

Assembly 68-2919 Shown Above

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

### 80 Series Rail Assemblies All Related AL- Assemblies

### SARGENT ASSA ABLOY

Option Code	F Wide	J Wide	G Wide	E Narrow	<b>F</b> Narrow	J Narrow	G Narrow	Sellable
AL-	68-4010	68-4011	68-4012	68-4025	68-4022	68-4023	68-4024	Yes
12-AL-	68-4018	68-4019	68-4020	68-4033	68-4030	68-4031	68-4032	Yes
19-AL-	68-4035	68-4036	68-4037	68-4050	68-4047	68-4048	68-4049	Yes
12-19-AL-	68-4043	68-4044	68-4045	68-4058	68-4055	68-4056	68-4057	Yes
53-AL-	68-4716	68-4717	68-4718	68-4723	68-4724	68-4725	68-4726	Yes
12-53-AL-	68-4720	68-4721	68-4722	68-4727	68-4728	68-4729	68-4730	Yes
19-53-AL-	68-4842	68-4843	68-4844	68-4849	68-4850	68-4851	68-4852	Yes
12-19-53-AL-	68-4846	68-4847	68-4848	68-4853	68-4854	68-4855	68-4856	Yes
53-55-AL-	68-4922	68-4923	68-4924	68-4929	68-4930	68-4931	68-4932	Yes
12-53-55-AL-	68-4926	68-4927	68-4928	68-4933	68-4934	68-4935	68-4936	Yes

Notes:

• Individual parts are available for sale for each of the assemblies above, contact factory for availability.

• Specify finish.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

#### 80 Series Rail Assemblies All Related TL- Assemblies

SARGENT
ASSA ABLOY

Option Code	E Wide	F Wide	J Wide	G Wide	E Narrow	F Narrow	J Narrow	G Narrow	Sellable
TL-	68-5048	68-5049	68-5051	68-5050	68-5009	68-5010	68-5012	68-5011	Yes
16-TL-	68-5052	68-5053	68-5055	68-5054	68-5013	68-5014	68-5016	68-5015	Yes
12-TL-	68-5056	68-5057	68-5059	68-5058	68-5017	68-5018	68-5020	68-5019	Yes
TL- Inactive	68-5060	68-5061	68-5063	68-5062	N/A	N/A	N/A	N/A	Yes
TL- (8895 Only)	68-5164	68-5165	68-5167	68-5166	N/A	N/A	N/A	N/A	Yes
55-TL-(8895 Only)	68-5168	68-5169	68-5171	68-5170	N/A	N/A	N/A	N/A	Yes
55-56-TL-	68-5689	68-5173	68-5174	68-5172	68-5692	68-5176	68-5177	68-5175	Yes
16-55-56-TL-	68-5706	68-5707	68-5708	68-5709	68-5738	68-5739	68-5740	68-5741	Yes
55-56-HK-TL-	68-5722	68-5723	68-5724	68-5725	68-5754	68-5755	68-5756	68-5757	Yes
AL-TL-	N/A	68-5190	68-5191	68-5192	68-5199	68-5196	68-5197	68-5198	Yes
12-AL-TL-	N/A	68-5193	68-5194	68-5195	68-5203	68-5200	68-5201	68-5202	Yes
59-TL-	N/A	68-5178	68-5179	68-5180	N/A	68-5187	68-5188	68-5189	Yes
12-59-TL-	N/A	68-5181	68-5182	68-5183	N/A	68-5187	68-5188	68-5189	Yes
55-AL-TL-	N/A	68-5314	68-5315	68-5316	68-5323	68-5320	68-5321	68-5322	Yes
12-55-AL-TL-	N/A	68-5317	68-5318	68-5319	68-5327	68-5324	68-5325	68-5326	Yes
53-58-TL-	68-5252	68-5253	68-5254	68-5255	68-5264	68-5265	68-5266	68-5267	Yes
12-53-58-TL-	68-5260	68-5261	68-5262	68-5263	68-5272	68-5273	68-5274	68-5275	Yes
16-53-58-TL-	68-5256	68-5257	68-5258	68-5259	68-5268	68-5269	68-5270	68-5271	Yes
53-55-TL-	68-5228	68-5229	68-5230	68-5231	68-5240	68-5241	68-5242	68-5243	Yes
12-53-55-TL-	68-5236	68-5237	68-5238	68-5239	68-5248	68-5249	68-5250	68-5251	Yes
16-53-55-TL-	68-5232	68-5233	68-5234	68-5235	68-5244	68-5245	68-5246	68-5247	Yes
53-TL-	68-5204	68-5205	68-5206	68-5207	68-5216	68-5217	68-5218	68-5219	Yes
12-53-TL-	68-5208	68-5209	68-5210	68-5211	68-5220	68-5221	68-5222	68-5223	Yes
16-53-TL-	68-5212	68-5213	68-5214	68-5215	68-5224	68-5225	68-5226	68-5227	Yes
56-TL-	68-5691	68-5162	68-5163	68-5161	68-5688	68-5159	68-5160	68-5158	Yes
56-HK-TL-	68-5750	68-5751	68-5752	68-5753	68-5718	68-5719	68-5720	68-5721	Yes
16-56-TL-	68-5734	68-5735	68-5736	68-5737	68-5702	68-5703	68-5704	68-5705	Yes
57-TL-	N/A	68-5096	68-5098	68-5097	68-5102	68-5403	68-5105	68-5104	Yes
12-57-TL-	N/A	68-5099	68-5101	68-5100	68-5106	68-5107	68-5109	68-5108	Yes
55-57-TL-	N/A	68-5178	68-5179	68-5180	N/A	68-5181	68-5182	68-5186	Yes
12-55-57-TL-	N/A	68-5184	68-5185	68-5186	N/A	68-5187	68-5188	68-5189	Yes
55-58-TL-	68-5134	68-5135	68-5137	68-5136	68-514	68-5147	68-5149	68-5148	Yes
12-55-58-TL-	68-5142	68-5143	68-5145	68-5144	68-5154	68-5155	68-5157	68-5156	Yes
16-55-58-TL-	68-5138	68-5139	68-5141	68-5140	68-5150	68-5151	68-5153	68-5152	Yes
58-TL-	68-5110	68-5111	68-5113	68-5112	68-5122	68-5123	68-5125	68-5124	Yes
12-58-TL-	68-5118	68-5119	68-5121	68-5120	68-5130	68-5131	68-5133	68-5132	Yes
16-58-TL-	68-5114	68-5115	68-5117	68-5116	68-5126	68-5127	68-5129	68-5128	Yes

Notes:

• Individual parts are available for sale for each of the assemblies above, contact factory for availability.

• Specify finish.

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

### **80 Series Rail Assemblies All Related LP- Assemblies**



Option Code	L	м	N	Sellable
LP	68-4242	68-4243	68-4244	Yes
12-LP	68-4250	68-4251	68-4252	Yes
16-LP	68-4246	68-4247	68-4248	Yes
58-LP	68-4340	68-4341	68-4342	Yes
12-58-LP	68-4344	68-4345	68-4346	Yes
19-58-LP	68-4348	68-4349	68-4350	Yes
12-19-58-LP	68-4352	68-4353	68-4354	Yes
56-TL-LP	68-5352	68-5353	68-5354	Yes
16-56-TL-LP	68-5796	68-5797	68-5798	Yes
56-HK-TL-LP	68-5808	68-5809	68-5810	Yes
55-56-TL-LP	68-5348	68-5349	68-5350	Yes
16-55-56-TL-LP	68-5799	68-5800	68-5801	Yes
55-56-HK-TL-LP	68-5811	68-5812	68-5813	Yes
58-TL-LP	68-5356	68-5357	68-5358	Yes
12-58-TL-LP	68-5360	68-5361	68-5362	Yes
55-58-TL-LP	68-5364	68-5365	68-5366	Yes
12-55-58-TL-LP	68-5368	68-5369	68-5370	Yes
19-LP	68-4292	68-4293	68-4294	Yes
12-19-LP	68-4300	68-4301	68-4302	Yes
16-19-LP	68-4296	68-4297	68-4298	Yes
55-LP	68-4305	68-4306	68-4307	Yes
12-55-LP	68-4309	68-4310	68-4311	Yes
19-55-LP	68-4313	68-4314	68-4315	Yes
12-19-55-LP	68-4317	68-4318	68-4319	Yes
55-56-LP	68-4322	68-4323	68-4324	Yes
19-55-56-LP	68-4326	68-4327	68-4328	Yes
16-55-56-LP	68-5769	68-5770	68-5771	Yes
16-19-55-56-LP	68-5775	68-5776	68-5777	Yes
55-56-HK-LP	68-5781	68-5782	68-5783	Yes
19-55-56-HK-LP	68-5787	68-5788	68-5789	Yes
56-LP	68-4331	68-4332	68-4333	Yes
19-56-LP	68-4335	68-4336	68-4337	Yes
16-56-LP	68-5766	68-5767	68-5768	Yes
16-19-56-LP	68-5772	68-5773	68-5774	Yes
56-HK-LP	68-5778	68-5779	68-5780	Yes
19-56-HK-LP	68-5784	68-5785	68-5786	Yes
55-58-LP	68-4357	68-4358	68-4359	Yes
12-55-58-LP	68-4361	68-4362	68-4363	Yes
19-55-58-LP	68-4365	68-4366	68-4367	Yes
12-19-55-58-LP	68-4369	68-4370	68-4371	Yes

Notes:

- Individual parts are available for sale for each of the assemblies above, contact factory for availability.
- Specify finish.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

#### 80 Series Rail Assemblies All Related PL- Assemblies

Option Code	F Wide	J Wide	G Wide	E Narrow	F Narrow	J Narrow	G Narrow	Sellable
PL-57-(LHRB)	68-6180	68-6181	68-6182	68-6183	68-6196	68-6197	68-6198	Yes
PL-57-(RHRB)	68-6184	68-6185	68-6186	68-6187	68-6200	68-6201	68-6202	Yes
12-PL-57-(LHRB)	68-6188	68-6189	68-6190	68-6191	68-6204	68-6205	68-6206	Yes
12-PL-57- (RHRB)	68-6192	68-6193	68-6194	68-6195	68-6208	68-6209	68-6210	Yes
PL-59- (LHRB)	68-6128	68-6129	68-6130	68-6131	68-6160	68-6161	68-6162	Yes
PL-59-(RHRB)	68-6132	68-6133	68-6134	68-6835	68-6164	68-6165	68-6166	Yes
12-PL-59-(LHRB)	68-6144	68-6145	68-6146	68-6147	68-6168	68-6169	68-6170	Yes
12-PL-59- (RHRB)	68-6148	68-6149	68-6150	68-6151	68-6172	68-6173	68-6174	Yes
PL-55-57-(LHRB)	68-6216	68-6217	68-6218	68-6219	68-6232	68-6233	68-6234	Yes
PL-55-57- (RHRB)	68-6220	68-6221	68-6222	68-6223	68-6836	68-6237	68-6238	Yes
12-PL-55-57-(LHRB)	68-6224	68-6225	68-6226	68-6227	68-6240	68-6241	68-6242	Yes
12-PL-55-57-(RHRB)	68-6228	68-6229	68-6230	68-6231	68-6244	68-6245	68-6246	Yes

Notes:

• Individual parts are available for sale for each of the assemblies above, contact factory for availability.

• Specify finish.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

#### 80 Series Rail Assemblies All Related 12- Electrical Assemblies



Option Code	E Wide	F Wide	J Wide	G Wide	E Narrow	<b>F</b> Narrow	J Narrow	G Narrow	Sellable
12-53-	68-4595	68-4596	68-4596	68-4597	68-4607	68-4608	68-4609	68-4610	Yes
12-53-56-	68-5544	68-4687	68-4688	68-4689	68-5580	68-4690	68-4691	68-4692	Yes
12-55-	68-2797	68-2798	68-2800	67-2799	68-2809	68-2810	68-2812	68-2811	Yes
12-53-55-	68-4623	68-4624	68-4625	68-4626	68-4635	68-4636	68-4637	68-4638	Yes
12-57-	68-6177	68-2829	68-2826	68-2825	68-2835	68-2836	68-2838	68-2837	Yes
12-55-57-	68-6213	68-4942	68-4944	68-4943	68-4949	68-4950	68-4952	68-4951	Yes
12-58-	68-3044	68-3045	68-3047	68-3046	68-3056	68-3057	68-3059	68-3058	Yes
12-53-58-	68-4647	68-4648	68-4649	68-4650	68-4659	68-4660	68-4661	68-4662	Yes
12-19-53-	68-4735	68-4736	67-4737	68-4738	68-4747	68-4748	68-4749	68-4750	Yes
12-19-55-	68-2939	68-2940	68-2942	68-2941	68-2951	68-2952	68-2954	68-2953	Yes
12-19-57	68-6179	68-2973	68-2976	68-2975	68-2985	68-2986	68-2988	68-2987	Yes
12-19-58-	68-3094	68-3095	68-3097	68-3096	68-3106	68-3107	68-3109	68-3108	Yes
12-19-53-58-	68-4786	68-4787	68-4788	68-4789	68-4798	68-4799	68-4800	68-4801	Yes
12-19-59-	68-6112	68-3801	68-3802	68-3803	68-6114	68-3809	68-3810	68-3811	Yes

Notes:

• Individual parts are available for sale for each of the assemblies above, contact factory for availability.

• Specify finish.

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

#### 80 Series Rail Assemblies All Related 16- Electrical Assemblies



Option Code	E Wide	F Wide	J Wide	G Wide	E Narrow	F Narrow	J Narrow	G Narrow	Sellable
16-53-	68-4599	68-4600	68-4601	68-4602	68-4611	68-4612	68-4613	68-4614	Yes
16-55-	68-2793	68-2794	68-2796	68-2795	68-2805	68-2806	68-2808	68-2807	Yes
16-53-55-	68-4619	68-4620	68-4621	68-4622	68-4631	68-4632	68-4633	68-4634	Yes
16-56-	68-5562	68-5563	68-5564	68-5565	68-5618	68-5619	68-5620	68-5621	Yes
16-53-56-	68-5570	68-5571	68-5572	68-5773	68-5626	68-5627	68-5628	68-5629	Yes
16-53-55-56-	68-5574	68-5575	68-5576	68-5577	68-5630	68-5631	68-5632	68-5633	Yes
16-58-	68-3040	68-3041	68-3043	68-3042	68-3052	68-3053	68-3055	68-3054	Yes
16-53-58-	68-4643	68-4644	68-4645	68-4646	68-4655	68-4656	68-4657	68-4658	Yes
16-53-55-58-	68-4667	68-4668	68-4669	68-4670	68-4675	68-4676	68-4677	68-4678	Yes
16-19-53-	68-4739	68-4740	68-4741	68-4742	68-4751	68-4752	68-4753	68-4754	Yes
16-19-55-	68-2935	68-2936	68-2938	68-2937	68-2947	68-2948	68-2950	68-2949	Yes
16-19-56-	68-5650	68-5651	68-5652	68-5653	68-5634	68-5635	68-5636	68-5637	Yes
16-19-53-56-	68-5513	68-5535	68-5536	68-5537	68-5642	68-5643	68-5644	68-5645	Yes
16-19-53-55-56-	68-5531	68-5532	68-5533	68-5534	68-5646	68-5647	68-5648	68-5649	Yes
16-19-58-	68-3090	68-3091	68-3093	68-3092	68-3102	68-3103	68-3105	68-3104	Yes
16-19-53-58-	68-4782	68-4783	68-4784	68-4785	68-4794	68-4795	68-4796	68-4797	Yes

\*For all associated parts in assemblies above, contact factory for availability

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

#### 80 Series Rail Assemblies All Related 19- Electrical Assemblies

SAR	GE	NT
ASSA	ABI	Ŋ

Option Code	E Wide	F Wide	J Wide	G Wide	E Narrow	F Narrow	J Narrow	G Narrow	Sellable
19-53-	68-4731	68-4732	68-4733	68-4734	68-4743	68-4744	68-4745	68-4746	Yes
19-55-	68-2931	68-2932	68-2934	68-2933	68-2943	68-2944	68-2946	68-2945	Yes
19-56-	68-5511	68-3225	68-3226	68-3224	68-5582	68-3230	68-3231	68-3229	Yes
19-57-	68-6178	68-2965	68-2968	68-2967	68-2977	68-2978	68-2980	68-2979	Yes
19-58-	68-3086	68-3087	68-3089	68-3088	68-3098	68-3099	68-3101	68-3100	Yes
19-59-	68-6111	68-3797	68-3798	68-3799	68-6113	68-3805	68-3806	68-3807	Yes
19-53-56-	68-5512	68-4826	68-4827	68-4828	68-5584	68-4829	68-4830	68-4831	Yes
19-53-55-56-	68-5527	68-4953	68-4954	68-4955	68-5585	68-4956	68-4957	68-4958	Yes
19-53-58-	68-4778	68-4779	68-4780	68-4781	68-4790	68-4791	68-4792	68-4793	Yes

\*For all associated parts in assemblies above, contact factory for availability

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

#### 80 Series Rail Assemblies All Related Electrical Assemblies 53- 55- 57- 58-

Option Code	E Wide	F Wide	J Wide	G Wide	E Narrow	F Narrow	J Narrow	G Narrow	Sellable
53-	68-4591	68-4592	68-4593	68-4594	68-4603	68-4604	68-4605	68-4606	Yes
55-	68-2789	68-2790	68-2792	68-2791	68-2801	68-2802	68-2804	68-2803	Yes
53-55-	68-4615	68-4616	68-4617	68-4618	68-4627	68-4628	68-4629	68-4630	Yes
53-56-	68-5544	68-4687	68-4688	68-4689	68-5580	68-4690	68-4691	68-4692	Yes
53-55-56-	68-5545	68-4693	68-4694	68-4695	68-5581	68-4696	68-4697	68-4698	Yes
57-	68-6176	68-2815	68-2818	68-2817	68-2827	68-2828	68-2830	68-2829	Yes
55-57-	68-6212	68-4938	68-4940	68-4939	68-4945	68-4946	68-4948	68-4947	Yes
58-	68-3036	68-3037	68-3039	68-3038	68-3048	68-3049	68-3051	68-3050	Yes
53-58-	68-4639	68-4640	68-4641	68-4642	68-4651	68-4652	68-4653	68-4654	Yes
53-55-58-	68-4663	68-4664	68-4665	68-4666	68-4675	68-4676	68-4677	68-4678	Yes

• For all associated parts in assemblies above, contact factory for availability

• Specify finish


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



ltem	Part No.	Description	Qty	Sellable
1	97-3230	16- Cylinder Dogging Assembly	1	Yes
	68-0767	F Wide Rail Insert <sup>2</sup>		Yes
	68-0768	E Wide Rail Insert <sup>2</sup>		Yes
2	68-0769	G Wide Rail Insert <sup>2</sup>		Yes
2	68-0770	G Narrow J Wide Rail Insert <sup>2</sup>	י ך	Yes
	68-1376	E and F Narrow Rail Insert <sup>2</sup>	7	Yes
	68-1465	J Narrow Rail Insert <sup>2</sup>	7	Yes
3	13-2131	Cylinder Ring Assembly <sup>2</sup>	1	Yes
4	68-6040	Retaining Collar Assembly	1	Yes
5	N/A	Cylinder and Key Assembly <sup>1</sup>	1	Yes
N/A	01-0288	Allen Wrench	1	Yes

1. For Cylinder, Specify "Mortise" Cylinder, Finish and Keying Requirements

2. Specify Finish

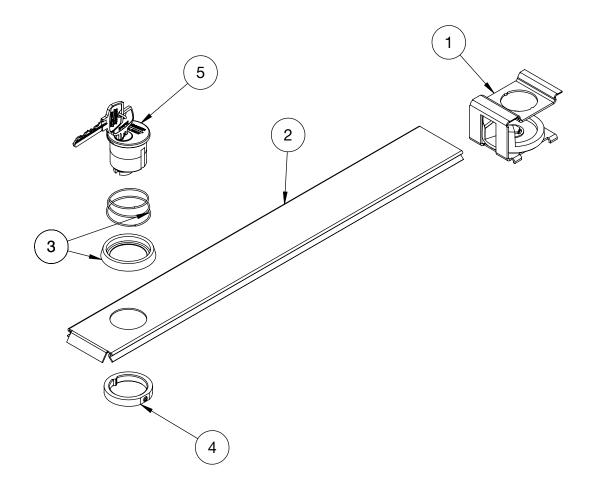


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Function			Exit Devices		
	8300	AD8400 MD8400	8500	AD8600 MD8600 WD8600	SP8600 <sup>2</sup> PP8600 <sup>2</sup> PR8600 <sup>2</sup>
0.4	704	_	704	—	—
04	744 <sup>1</sup>	_	744 <sup>1</sup>	—	—
06	_	706-4	_	706-4	706-6
06	_	746-4 <sup>1</sup>	_	746-4 <sup>1</sup>	746-6 <sup>1</sup>
10	710	710-4	710	710-4	710-6
10	740 <sup>1</sup>	740-4 <sup>1</sup>	740 <sup>1</sup>	740-4 <sup>1</sup>	740-6 <sup>1</sup>
13	713	713-4	713-8	713-4	713-6
15	743 <sup>1</sup>	743-4 <sup>1</sup>	743-8 <sup>1</sup>	743-4 <sup>1</sup>	743-6 <sup>1</sup>
15	715	715-4	715-8	715-4	715-6
16	_	_	_	—	—
73	_	773-4	773-8	773-4	773-6
74	_	774-4	774-8	774-4	774-6
75	775			_	
76	776			_	
77	_	_	_	_	_
78				_	

1.740,743,744 & 746 are freewheeling levers

2. Designates discontinued products

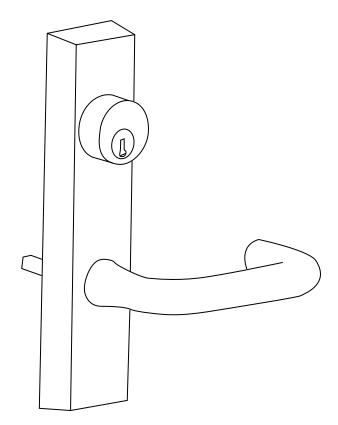


Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

SARGENT
ASSA ABLOY

Function				Exit Devices			
	LS8600 LP8600 LR8600	8700 FM8700 HC48700 HC8700	NB8700	SP8700 <sup>2</sup> PP8700 <sup>2</sup> PR8700 <sup>2</sup>	8800	8888 HC8800	8900
04	—	_	_	—	704	704	704
04	—	_	—	_	744 <sup>1</sup>	744 <sup>1</sup>	744 <sup>1</sup>
06	706-6	706	706-8	706-8	706-8	706-8	_
06	746-6 <sup>1</sup>	746 <sup>1</sup>	746-8	746-8 <sup>1</sup>	746-8 <sup>1</sup>	746-8 <sup>1</sup>	—
10	710-6	710	710	710	710	710	710
10	740-6 <sup>1</sup>	740 <sup>1</sup>	740	740 <sup>1</sup>	740 <sup>1</sup>	740 <sup>1</sup>	740 <sup>1</sup>
13	713-6	713	_	713-8	713-8	713-8	713
15	743-6 <sup>1</sup>	743 <sup>1</sup>	743-8 <sup>1</sup>	743-8 <sup>1</sup>	743-8 <sup>1</sup>	743-8 <sup>1</sup>	743 <sup>1</sup>
15	715-6	715	715-8	715-8	715-8	715-8	715
16	_	_	_	-	716	_	716
73	773-6	773	773-8	773-8	_	_	_
74	774-6	774	774-8	774-8	_	_	_
75		_			775-8	775-8	775
76		_	_		776-8	776-8	776
77					777-8	777-8	777
78	—	_	_	—	778-8	778-8	778

1.740,743,744 & 746 are freewheeling levers

2. Designates discontinued products

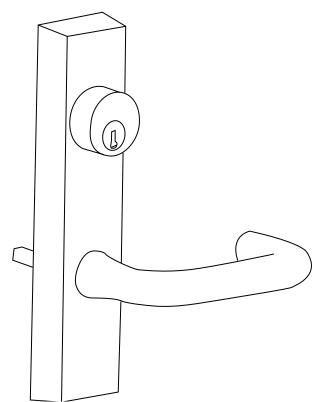


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0427	ET Case (704)	1	No
	97-0429	ET Case (710)	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	97-0522	Hub Plate (704/710)	1	Yes
6	97-0573	Spindle (704/710)	1	Yes
7	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
8	—	Lever Handle <sup>1,2</sup>	1	Yes
9	A6407	Information Tag	1	No
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
51101011	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish 2. Specify lever design by hand

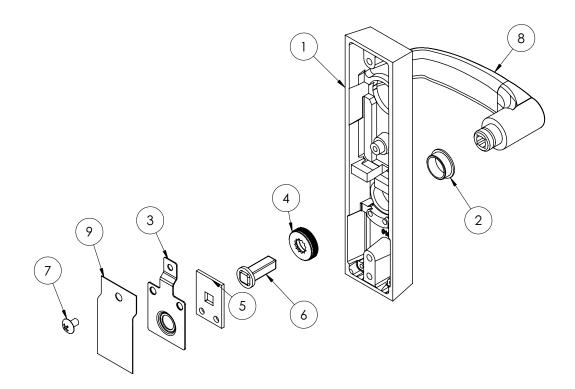

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

6

ltem	Part No.	Description	Qty	Sellable
1	97-0428	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
6	_	Lever Handle <sup>1,3</sup>	1	Yes
	_	Cylinder Assembly <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
SHOWIT	13-0180	Cylinder Nut	1	Yes
7	97-0355	Locking Slide (706) (607-2)	1	Yes
1	97-0356	Locking Slide (713) (607-1)	1	Yes
8	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
9	97-0528	Hub Plate (Std)	1	Yes
10	97-0557	Fusible Link	1	Yes
11	97-0571	Locking Slide Spring	1	Yes
12	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
13	97-0425	Hub Spring (Std)	1	Yes
14	97-0558	Slide Support	1	No
15	97-0563	Spring Support	1	No
16	97-0564	Return Spring	1	No
	97-0549	Spindle (1 3/4" Door) (730-1)	1	Yes
17	97-0550	Spindle (2" Door) (730-2)	1	Yes
	97-0551	Spindle (2 1/4" Door) (730-3)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWIT	01-4373	Thru Bolt #1/4-20 X 2 7/8" ( 2 1/4" Door)	2	Yes

1. Specify finish


2. Specify #41 cylinder by keying requirements

3. Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door

thickness

Note: 607 kit includes items 5, 7, 10, 11, 14, 15, and 16.

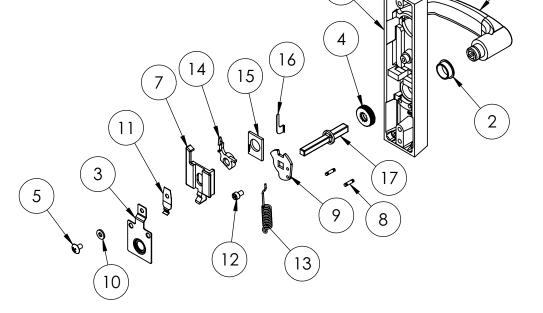

A8231:M 09/22

130

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


hout Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0429	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
6	_	Lever Handle <sup>1,2</sup>	1	Yes
7	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
8	97-0528	Hub Plate (Std)	1	Yes
9	97-0557	Fusible Link	1	Yes
10	97-0571	Locking Slide Spring	1	Yes
11	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
12	97-0425	Hub Spring (Std)	1	Yes
13	97-0356	Locking Slide (713)	1	Yes
	730-1	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
14	730-2	Spindle Retrofit Kit (2" Door)	1	Yes
	730-3	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWII	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand


Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness

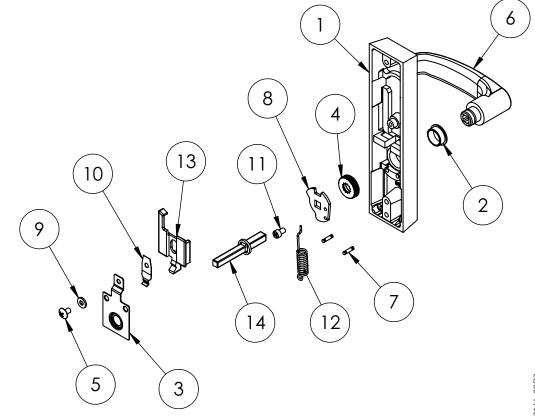

Experience a safer and more open world The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

SARGENT	
ASSA ABLOY	Г

ltem	Part No.	Description	Qty	Sellable
1	97-0427	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
6	_	Lever Handle <sup>1,3</sup>	1	Yes
7	01-4507	1/8" X 1/2' Double Ended Groove Pin	2	No
8	97-0528	Hub Plate (Std)	1	Yes
9	97-0557	Fusible Link	1	Yes
10	97-0571	Locking Slide Spring	1	Yes
11	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
12	97-0425	Hub Spring (Std)	1	Yes
	_	Cylinder <sup>1,2,2a</sup>	1	Yes
	97-0350	Cylinder Collar <sup>1</sup>	1	Yes
Not	13-0180	Cylinder Nut	1	Yes
Shown	13-0086	Backplate (8816 Only)	1	Yes
51101111	13-0074	Connecting Screw (8816 Only)	2	Yes
	13-0075	Connecting Screw (8816 Only) (2 1/2" Door And Over)	2	Yes
13	97-0439	Locking Slide (716)	1	Yes
	97-0549	Spindle (1 3/4" Door) (730-1)	1	Yes
14	97-0550	Spindle (2" Door) (730-2)	1	Yes
	97-0551	Spindle (2 1/4" Door) (730-3)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	1	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	1	Yes
JIIOWII	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	1	Yes

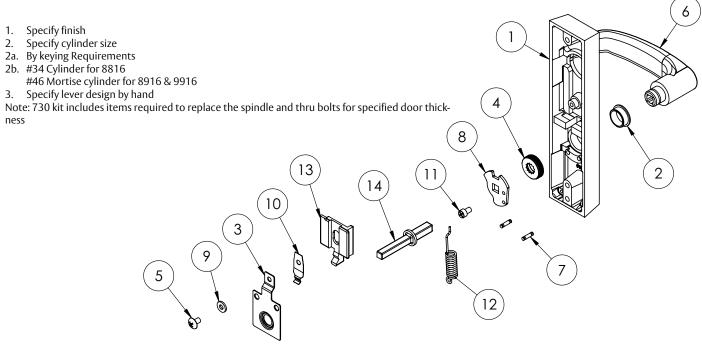


A8231:M 09/22

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0428	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,3</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0347	Locking Slide Spring	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
	—	Cylinder <sup>1,2</sup>	1	Yes
Not	97-0350	Collar <sup>1</sup>	1	Yes
Shown	13-0180	Cylinder Nut	1	Yes
	97-0571	Locking Slide Spring		Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	97-0478	Lower Hub Plate	1	Yes
10	97-0479	Spindle Lock	1	Yes
11	97-0475	Locking Slide (743)	1	Yes
12	97-0581	Retaining Plate	1	Yes
13	97-0582	Spacer	1	Yes
	97-3092	Spindle Assembly (1 3/4" Door)	1	Yes
14	97-3093	Spindle Assembly (2" Door)	1	Yes
	97-3094	Spindle Assembly (2 1/4" Door)	1	Yes
15	01-1479	Cr-Fhms #10-32 X 1/2"	1	Yes
16	01-1183	Ct-Thms #10-32 X 5/16"	1	Yes
17	97-0527	E Clip 0.312 Shaft	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SUOMU	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

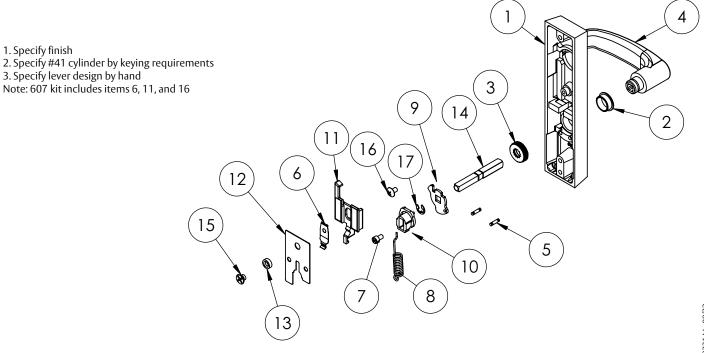

Experience a safer and more open world


The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	97-0429	ET Case (740)	1	No
I	97-0427	ET Case (744)	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
5	_	Lever Handle <sup>1,2</sup>	1	Yes
6	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	97-0528	Hub Plate	1	Yes
10	97-0573	Spindle	1	Yes
11	68-1393	Retaining Plate	1	Yes
	—	Rim Cylinder (744 Only) <sup>1,2</sup>	1	Yes
Not	13-0086	Backplate (744 Only)	1	Yes
Shown	13-0074	Connecting Screw (744 Only)	2	Yes
	13-0075	Connecting Screw (744 Only) (2 1/2" Door And Over)	2	Yes
N	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWIT	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify #34 cylinder (#46 cylinder for 8300 or 8900) by keying requirements

3. Specify lever design by hand

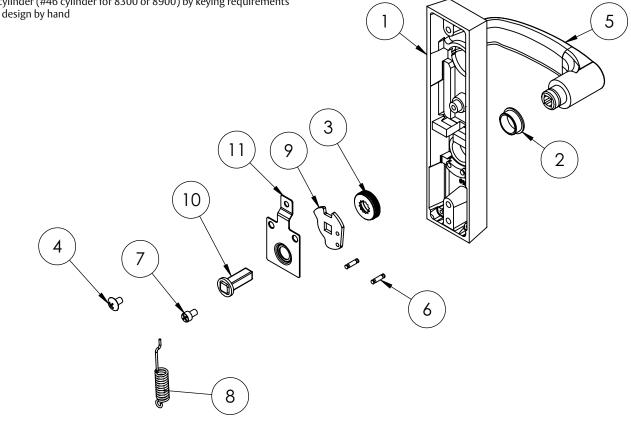

134


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0428	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,3</sup>	1	Yes
5	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
6	97-0347	Locking Slide Spring	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
	_	Cylinder <sup>1,2</sup>	1	Yes
Not	97-0350	Collar <sup>1</sup>	1	Yes
Shown	13-0180	Cylinder Nut	1	Yes
	97-0571	Locking Slide Spring W/ Bl Dyk	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	97-0478	Lower Hub Plate	1	Yes
10	97-0479	Spindle Lock	1	Yes
11	97-0476	Locking Slide (746 Function)	1	Yes
12	97-0581	Retaining Plate	1	Yes
13	97-0582	Spacer	1	Yes
	97-3092	Spindle Assembly (1 3/4" Door)	1	Yes
14	97-3093	Spindle Assembly (2" Door)	1	Yes
	97-3094	Spindle Assembly (2 1/4" Door)	1	Yes
15	01-1183	Cr-Fhms #10-32 X 5/16"	1	Yes
16	97-0527	E Clip 0.312 Shaft	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
Shown	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

Note: 607 kit includes items 6, 11, and 15

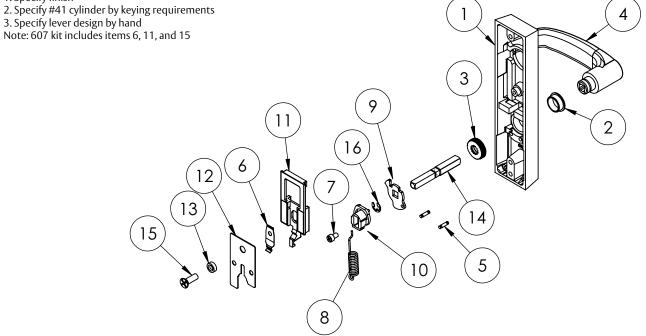

Experience a safer and more open world


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

SARGENT
ASSA ABLOY

ltem	Part No.	Description	Qty	Sellable
1	97-0853	Electric ET Case W/O Cylinder Prep <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,2</sup>	1	Yes
5	68-7546	Motor Actuator Assemby	1	Yes
6	97-0528	Hub Plate (STD)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0852	Retainer Plate, Electrical Function	1	Yes
9	01-4410	#4-40 X 1/4" Ph Flat Head Machine Screw	2	Yes
10	01-4383	#2-56 X 5/8" Ph Pan Head Machine Screw	2	Yes
11	01-4507	1/8 x 1/2 Double Ended Groove Pin	2	No
12	97-0425	Hub Spring (STD)	1	Yes
	97-0549	Spindle (1-3/4" Door)	1	Yes
13	97-0550	Spindle (2" Door)	1	
	97-0551	Spindle (2-1/4" Door)	1	
	52-5660	Ecoflex Et Harness F.Safe/F.Secure	1	Yes
	52-5659	Ecoflex ET Harness H1, H2, M1	1	Yes
	52-5654	Ecoflex ET Harness KP, G1.5,	1	Yes
14	52-5657	Ecoflex ET Harness P1, P2, IN120, IN220	1	Yes
14	52-5655	Ecoflex ET Harness S Series	1	Yes
	52-5656	Ecoflex ET Harness PG	1	Yes
	52-5658	Ecoflex ET Harness N2	1	Yes
	52-5652	Ecoflex ET Harness IN100	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
JIIUWII	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

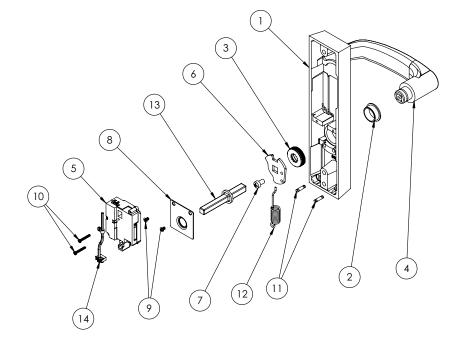


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0574	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0528	Hub Plate	1	Yes
	97-0549	Spindle (1 3/4" Door)	1	
7	97-0550	Spindle (2" Door)	1	Yes
	97-0551	Spindle (2 1/4" Door)	1	
8	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
9	97-0425	Hub Spring (Std)	1	Yes
10	97-0329	Locking Tail	1	No
11	97-3932	Solenoid Cover Assembly (Fail Secure)	1	No
12	68-1402	Retainer Plate, Electrical Function	1	No
13	01-3563	Machine Screw #5-40 X 1/4"	2	No
14	52-3287	24V Pull Solenoid & Bridge Assy, Exit Trim	1	No
14	52-3289	24V Push Solenoid & Bridge Assy, Exit Trim	1	No
15	97-0799	Fork	1	Yes
N	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SUOMU	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	

1. Specify finish


2. Specify lever design by hand

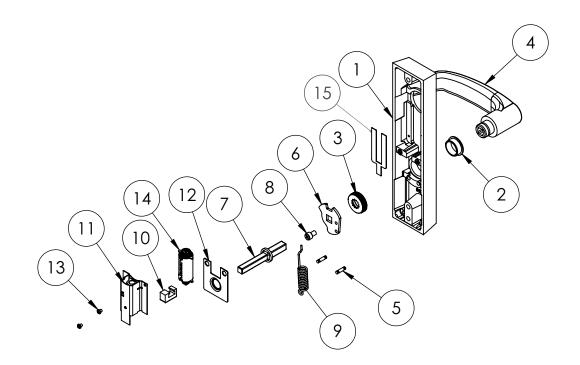

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	97-0851	Electric ET Case W/ Cylinder Prep <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,2</sup>	1	Yes
5	68-7546	Motor Actuator Assemby	1	Yes
6	97-0528	Hub Plate (STD)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0852	Retainer Plate, Electrical Function	1	Yes
9	01-4410	#4-40 X 1/4" Ph Flat Head Machine Screw	2	Yes
10	01-4383	#2-56 X 5/8" Ph Pan Head Machine Screw	2	Yes
11	01-4507	1/8 x 1/2 Double Ended Groove Pin	2	No
12	97-0425	Hub Spring (STD)	1	Yes
	97-0549	Spindle (1-3/4" Door)	1	Yes
13	97-0550	Spindle (2" Door)	1	
	97-0551	Spindle (2-1/4" Door)	1	
	52-5660	Ecoflex Et Harness F.Safe/F.Secure	1	Yes
	52-5659	Ecoflex ET Harness H1, H2, M1	1	Yes
	52-5654	Ecoflex ET Harness KP, G1.5,	1	Yes
14	52-5657	Ecoflex ET Harness P1, P2, IN120, IN220	1	Yes
14	52-5655	Ecoflex ET Harness S Series	1	Yes
	52-5656	Ecoflex ET Harness PG	1	Yes
	52-5658	Ecoflex ET Harness N2	1	Yes
	52-5652	Ecoflex ET Harness IN100	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SNOWN	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

- 1. Specify finish 2. Specify lever design by hand 3. Specify #46 cylinder by keying requirements

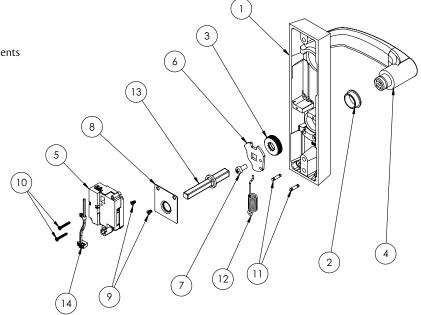

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

4

ltem	Part No.	Description	Qty	Sellable
1	97-0574	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
6	97-0528	Hub Plate	1	Yes
	97-0549	Spindle (1 3/4" Door)	1	Yes
7	97-0550	Spindle (2" Door)	1	Yes
	97-0551	Spindle (2 1/4" Door)	1	Yes
	_	Cylinder <sup>1,3</sup>	1	Yes
Not	13-0086	Backplate	1	Yes
Shown	13-0074	Connecting Screw	2	Yes
	13-0075	Connecting Screw ( 2 1/2" Door And Over)	2	Yes
8	01-1182	CR-CHMS #10-32 X .297	1	Yes
9	97-0425	Hub Spring (Std)	1	Yes
10	97-0329	Locking Tail	1	No
11	97-3932	Solenoid Cover	1	No
12	68-1402	Retainer Plate, Electrical Function	1	No
13	01-1154	#6-32 X 1/4" PH Flat Undercut Ms	2	No
	52-3287	24V Pull Solenoid & Bridge Assy, Exit Trim	1	No
14	52-3289	24V Push Solenoid & Bridge Assy, Exit Trim	1	No
14	52-3288	12V Pull Solenoid & Bridge Assy, Exit Trim	1	No
	52-3290	12V Push Solenoid & Bridge Assy, Exit Trim	1	No
15	01-4560	#3-48 X 1/8" Pan CR-Ohms	2	No
16	97-0799	Fork	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWI	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish 2. Specify lever design by hand

3. Specify #46 cylinder by keying requirements

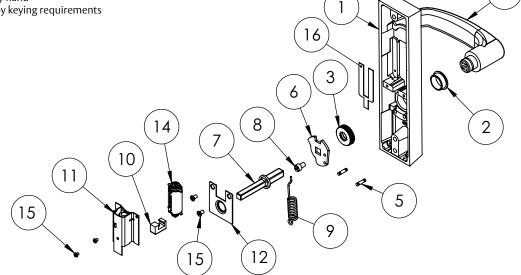

Experience a safer and more open world


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	97-0574	Electric ET Case W/ Cylinder Prep	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,3</sup>	1	Yes
5	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
Not Shown	_	Cylinder <sup>1,2</sup>	1	Yes
6	97-0528	Hub Plate (Std)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	52-2556	Motor & Housing Assembly	1	No
10	68-1402	Retainer Plate, Electrical Function	1	No
11	01-1154	#6-32 X 1/4" Ph Flat Head Machine Screw	2	No
12	01-4540	#3-48 X 5/8" Ph Pan Head Machine Screw	2	No
	97-0549	Spindle (1 3/4" Door)	1	Yes
13	97-0550	Spindle (2" Door)	1	Yes
	97-0551	Spindle (2 1/4" Door)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
5110 WIT	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify #46 cylinder by keying requirements

3. Specify lever design by hand

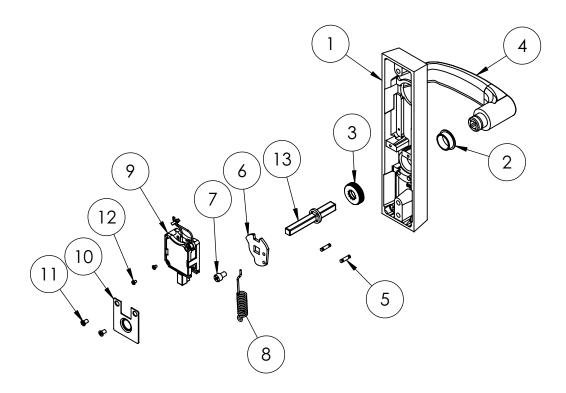

140


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0575	Electric ET Case W/O Cylinder Prep <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0528	Hub Plate (Std)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	52-2556	Motor & Housing Assembly	1	No
10	68-1402	Retainer Plate, Electrical Function	1	No
11	01-1154	#6-32 X 1/4" Ph Flat Head Machine Screw	2	No
12	01-4540	#3-48 X 5/8" Ph Pan Head Machine Screw	2	No
	97-0549	Spindle (1 3/4" Door)	1	Yes
13	97-0550	Spindle (2" Door)	1	Yes
	97-0551	Spindle (2 1/4" Door)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

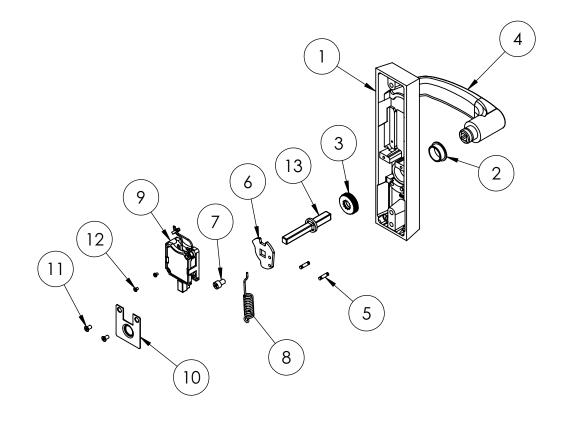


The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	97-0435	ET Case, Off-Set Mounting <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	97-0522	Hub Plate (704/710)	1	Yes
6	97-0573	Spindle (704/710)	1	Yes
7	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
8	68-0853	Bracket	2	Yes
9	01-1478	Cr Pan Hd Mach Screw #1/4-20 X 3/8"	2	Yes
10	_	Lever Handle <sup>1,2</sup>	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWI	01-4373	Thru Bolt #1/4-20 X 3 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

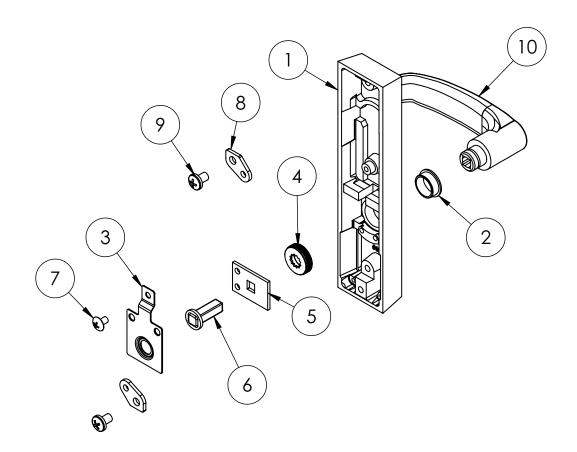

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.


142

ltem	Part No.	Description	Qty	Sellable
1	97-0436	ET Case, Off-Set Mounting	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	01-1027	Ph Fl U'cut Ms #10-24 X 3/8"	1	Yes
6	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
7	_	Lever Handle <sup>1,3</sup>	1	Yes
NL /	—	Cylinder Assembly <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
SHOWII	13-0180	Cylinder Nut	1	Yes
8	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
9	97-0528	Hub Plate (Std)	1	Yes
10	97-0557	Fusible Link	1	Yes
11	97-0571	Locking Slide Spring	1	Yes
12	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
13	97-0425	Hub Spring (Std)	1	Yes
14	97-0355	Locking Slide (706)	1	Yes
	97-0356	Locking Slide (713)	1	Yes
15	97-0558	Slide Support	1	No
16	97-0563	Spring Support	1	No
17	97-0564	Return Spring	1	No
18	68-0852	Cam 700-4	1	Yes
19	68-0853	Bracket	2	Yes
20	01-1478	Cr Pan Hd Mach Screw #1/4-20 X 3/8"	2	Yes
	97-0549	Spindle (1 3/4" Door) (730-4)	1	Yes
21	97-0550	Spindle (2" Door) (730-5)	1	Yes
	97-0551	Spindle (2 1/4" Door) (730-6)	1	Yes
Net	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
JIIUWII	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

thru bolts for specified door thickness

Note: 607 kit includes items 6, 10, 11, 14, 15, 16, and 17

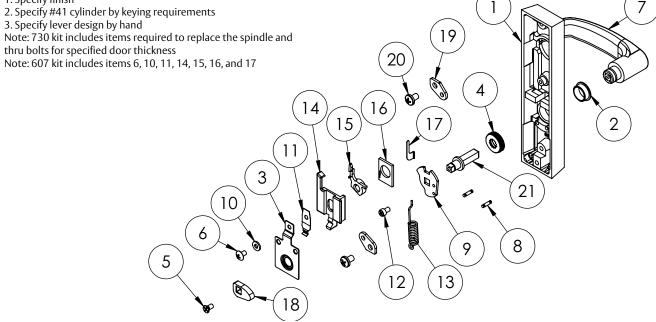

1

Experience a safer and more open world

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.


7

ltem	Part No.	Description	Qty	Sellable
1	97-0435	ET Case, Off-Set Mounting	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
6	_	Lever Handle <sup>1,2</sup>	1	Yes
7	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
8	97-0528	Hub Plate (Std)	1	Yes
9	97-0557	Fusible Link	1	Yes
10	97-0571	Locking Slide Spring	1	Yes
11	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
12	97-0425	Hub Spring (Std)	1	Yes
13	97-0356	Locking Slide (713)	1	Yes
14	68-0852	Cam 700-4	1	Yes
15	68-0853	Bracket	2	Yes
16	01-1478	Cr Pan Hd Mach Screw #1/4-20 X 3/8"	2	Yes
	730-4	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
17	730-5	Spindle Retrofit Kit (2" Door)	1	Yes
	730-6	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
18	01-1027	Cr-Fhms #10-24 X 3/8"	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
	01-4373	Thru Bolt #1/4-30 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness

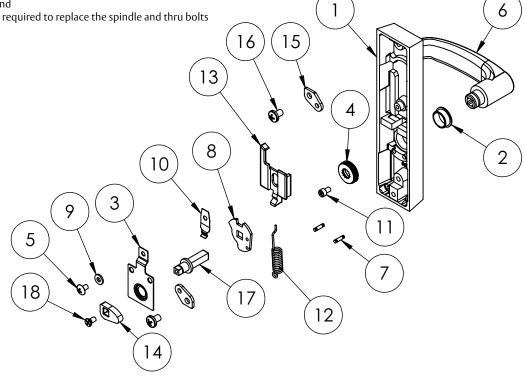

44


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0435	ET Case, Off-Set Mounting <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
5	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
6	—	Lever Handle <sup>1,2</sup>	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0528	Hub Plate	1	Yes
9	97-0425	Hub Spring (Std)	1	Yes
10	68-0853	Bracket	2	Yes
11	01-1478	Cr Pan Hd Mach Screw #1/4-20 X 3/8"	2	Yes
12	97-0573	Spindle	1	Yes
13	68-1393	Retaining Plate	1	Yes
NL .	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
JIIUWII	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

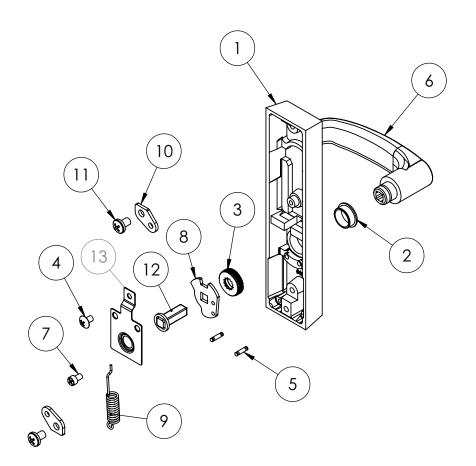

Experience a safer and more open world The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


ltem	Part No.	Description	Qty	Sellable
1	97-0436	ET Case, Off-Set Mounting	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	01-1027	Cr-Fhms #10-24 X 3/8"	1	Yes
5	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
6	_	Lever Handle <sup>1,3</sup>	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
N	_	Cylinder <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
SHOWIT	13-0180	Cylinder Nut	1	Yes
8	97-0478	Lower Hub Plate	1	Yes
9	97-0479	Spindle Lock	1	Yes
10	97-0425	Hub Spring (Std)	1	Yes
11	68-0853	Bracket	2	Yes
12	01-1478	Cr Pan Hd Ms #1/4-20 X 3/8"	2	Yes
13	01-1183	Cr-Fhms #10-32 X 5/16"	1	Yes
	97-3098	Spindle Assembly (1 3/4" Door)	1	Yes
14	97-3099	Spindle Assembly (2" Door)	1	Yes
	97-3100	Spindle Assembly (2 1/4" Door)	1	Yes
15	97-0475	Locking Slide (743)	1	Yes
16	97-0581	Retaining Plate	1	Yes
17	97-0582	Spacer	1	Yes
18	68-0852	Cam 700-4	1	Yes
19	97-0347	Locking Slide Spring	1	Yes
N	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify #41 cylinder by keying requirements

3. Specify lever design by hand

Note: 607 kit includes items 13, 15, 17 and 19

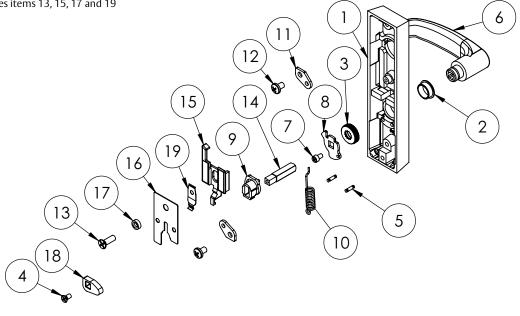


The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0436	ET Case, Off-Set Mounting	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Сар	1	Yes
4	01-1027	Cr-Fhms #10-24 X 3/8"	1	Yes
5	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
6	_	Lever Handle <sup>1,3</sup>	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0478	Lower Hub Plate	1	Yes
N	_	Cylinder <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
SHOWIT	13-0180	Cylinder Nut	1	Yes
9	97-0479	Spindle Lock	1	Yes
10	97-0425	Hub Spring (Std)	1	Yes
11	68-0853	Bracket	2	Yes
12	01-1478	Cr Pan Hd Ms #1/4-20 X 3/8"	2	Yes
13	01-1183	Cr-Fhms #10-32 X 3/8"	1	Yes
	97-3092	Spindle Assembly (1 3/4" Door)	1	Yes
14	97-3093	Spindle Assembly (2" Door)	1	Yes
	97-3094	Spindle Assembly (2 1/4" Door)	1	Yes
15	97-0476	Locking Slide (746)	1	Yes
16	97-0581	Retaining Plate	1	Yes
17	97-0582	Spacer	1	Yes
18	68-0852	Cam 700-4	1	Yes
19	97-0347	Locking Slide Spring	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
JIUWII	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify #41 cylinder by keying requirements

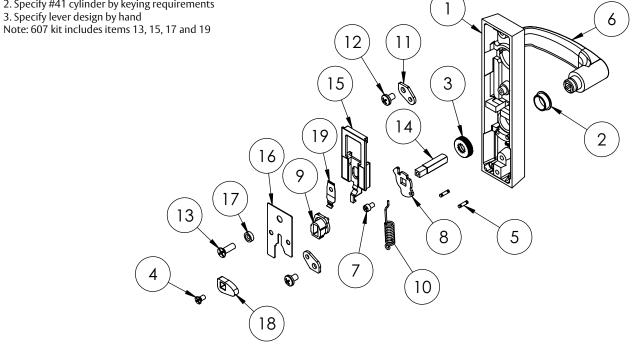

Experience a safer and more open world


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	97-0856	Electric ET Case W/O Cylinder Prep <sup>2</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,2</sup>	1	Yes
5	68-7546	Motor Actuator Assemby	1	Yes
6	97-0528	Hub Plate (STD)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0852	Retainer Plate, Electrical Function	1	Yes
9	01-4410	#4-40 X 1/4" Ph Flat Head Machine Screw	2	Yes
10	01-4383	#2-56 X 5/8" Ph Pan Head Machine Screw	2	Yes
11	01-4507	1/8 x 1/2 Double Ended Groove Pin	2	No
12	97-0425	Hub Spring (STD)	1	Yes
	730-4	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
13	730-5	Spindle Retrofit Kit (2" Door)	1	Yes
	730-6	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
14	01-1027	CR-FHMS 10-24x0.375	1	Yes
15	97-0603	Cam	1	Yes
16	01-1183	Cr Pan Hd Ms #1/4-20 X 3/8"	1	Yes
17	68-0853	Bracket	1	Yes
18	52-5660	Ecoflex Et Harness F.Safe/F.Secure	1	Yes
10	52-5659	Ecoflex ET Harness H1, H2, M1	1	Yes
NL /	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWI	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness.

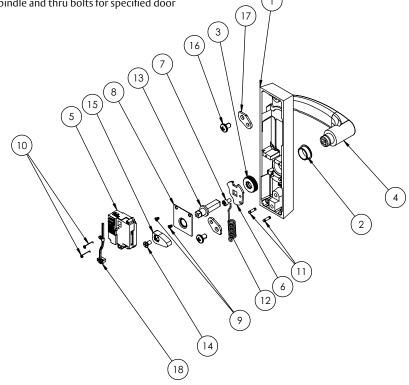

148

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0437	ET Case, Off-Set Mounting	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
	730-4	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
6	730-5	Spindle Retrofit Kit (2" Door)	1	Yes
	730-6	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
7	01-1478	Cr Pan Hd Mach Screw #1/4 X 3/8"	2	Yes
8	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
9	97-0425	Hub Spring (Std)	1	Yes
10	97-0528	Hub Plate	1	Yes
11	97-0329	Locking Tail	1	No
12	97-3932	Solenoid Cover Assembly (Fail Secure)	1	No
13	68-1402	Retainer Plate, Electrical Function	1	No
14	01-3563	Machine Screw #5-40 X 1/4"	2	No
15	68-0852	Cam 700-4	1	Yes
16	68-0853	Bracket	2	Yes
	52-3287	24V Pull Solenoid & Bridge Assy, Exit Trim	1	No
17	52-3289	24V Push Solenoid & Bridge Assy, Exit Trim	1	No
	52-3290	12V Push Solenoid & Bridge Assy, Exit Trim	1	No
18	97-0799	Fork	1	Yes
N	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWII	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness

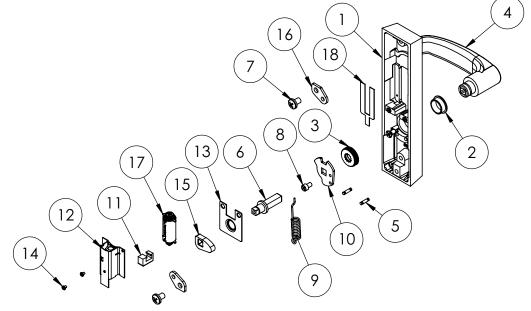


Experience a safer and more open world

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	97-0523	ET Case, Drop Mounting	1	No
2	_	Lever Handle <sup>1</sup>	1	Yes
3	97-0477	Bushing Insert	1	Yes
4	97-0528	Hub Plate	1	Yes
5	97-0760	Cap Nut	1	Yes
6	01-1182	Cr-Thms #10-32 X 19/64"	1	Yes
7	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
8	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
9	97-0425	Hub Spring (Std)	1	Yes
10	68-1254	Extension Bracket	1	Yes
11	01-1478	Cr Pan Hd Mach Screw #1/4-20 X 3/8"	1	Yes
12	97-0573	Spindle	1	Yes
13	68-1393	Retaining Plate	1	Yes
Not Shown	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

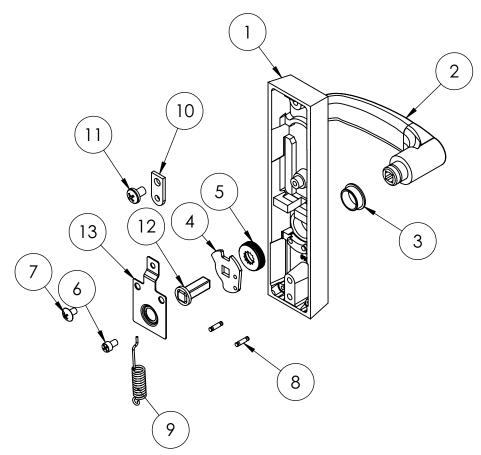

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


ltem	Part No.	Description	Qty	Sellable
1	97-0524	ET Case, Drop Mounting	1	No
2	_	Lever Handle <sup>1,3</sup>	1	Yes
3	97-0477	Bushing Insert	1	Yes
4	97-0478	Lower Hub Plate	1	Yes
5	97-0760	Cap Nut	1	Yes
6	01-1182	Cr-Thms #10-32 X 19/64"	1	Yes
7	01-1183	Cr-Fhms #10-32 X 5/16"	1	Yes
8	01-4507	1/8 X 1/2 Double Ended Groove Pin	2	No
	_	Cylinder <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
SHOWIT	13-0380	Cylinder Nut	1	Yes
9	97-0425	Hub Spring (Std)	1	Yes
10	68-1254	Extension Bracket	1	Yes
11	01-1478	Cr Pan Hd Ms #1/4-20 X 3/8"	1	Yes
12	97-0347	Locking Slide Spring	1	Yes
13	97-0479	Spindle Lock	1	Yes
14	97-0475	Locking Slide (743)	1	Yes
15	97-0581	Retaining Plate	1	Yes
16	97-0582	Spacer	1	Yes
17	97-3092	Spindle Assembly	1	Yes
18	97-0527	E Clip 0.312 Shaft	1	Yes
Not Shown	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes

1. Specify finish

2. Specify #41 cylinder by keying requirements

3. Specify lever design by hand

Note: 700-6 ET control is only available for 1-3/4" doors Note: 607 kit contains items 7, 12, 14 and 16

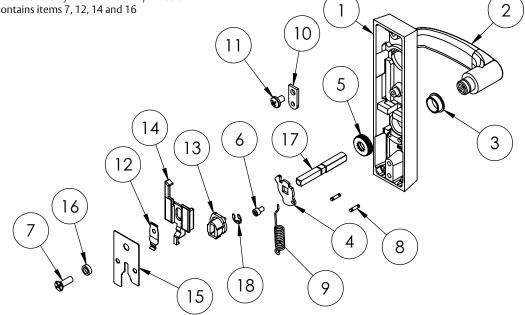

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


ltem	Part No.	Description	Qty	Sellable
1	97-0524	ET Case, Drop Mounting	1	No
2	—	Lever Handle <sup>1,3</sup>	1	Yes
3	97-0477	Bushing Insert	1	Yes
4	97-0478	Lower Hub Plate	1	Yes
5	97-0760	Cap Nut	1	Yes
N	—	Cylinder <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
5110 WIT	13-0180	Cylinder Nut	1	Yes
6	01-1182	Cr-Thms #10-32 X 19/64"	1	Yes
7	01-1183	Cr-Fhms #10-32 X 3/8"	1	Yes
8	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
9	97-0425	Hub Spring (Std)	1	Yes
10	68-1254	Extension Bracket	1	Yes
11	01-1478	Cr Pan Hd Ms #1/4-20 X 3/8"	1	Yes
12	97-0347	Locking Slide Spring	1	Yes
13	97-0479	Spindle Lock	1	Yes
14	97-0526	Locking Slide (746-6)	1	No
15	97-0581	Retaining Plate	1	Yes
16	97-0582	Spacer	1	Yes
17	97-3092	Spindle Assembly	1	Yes
18	97-0527	E Clip 0.312 Shaft	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWI	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify #41 cylinder by keying requirements

3. Specify lever design by hand Note: 700-6 ET control is only available for 1-3/4" doors

Note: 607 kit includes items 7, 12, 14 and 16

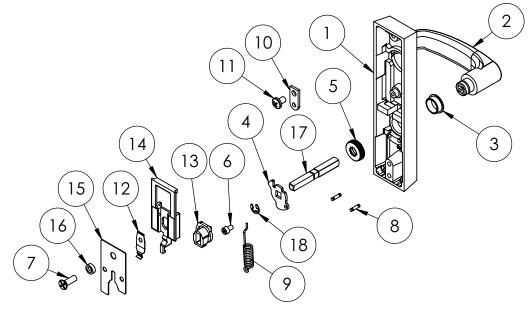

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


**152** Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0858	Electric ET Case W/O Cylinder Prep <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	-	Lever Handle <sup>1,2</sup>	1	Yes
5	68-7546	Motor Actuator Assemby	1	Yes
6	97-0528	Hub Plate (STD)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0852	Retainer Plate, Electrical Function	1	Yes
9	01-4410	#4-40 X 1/4" Ph Flat Head Machine Screw	2	Yes
10	01-4383	#2-56 X 5/8" Ph Pan Head Machine Screw	2	Yes
11	01-4507	1/8 x 1/2 Double Ended Groove Pin	2	No
12	97-0425	Hub Spring (STD)	1	Yes
13	97-0549	Spindle (Lockable 700 AND 700-6)	1	Yes
14	01-1478	Cr Pan Hd Mach Screw #1/4-20 X 3/8"	1	Yes
15	68-1254	Extension Bracket	1	Yes
16	52-5660	Ecoflex Et Harness F.Safe/F.Secure	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
5110 1011	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

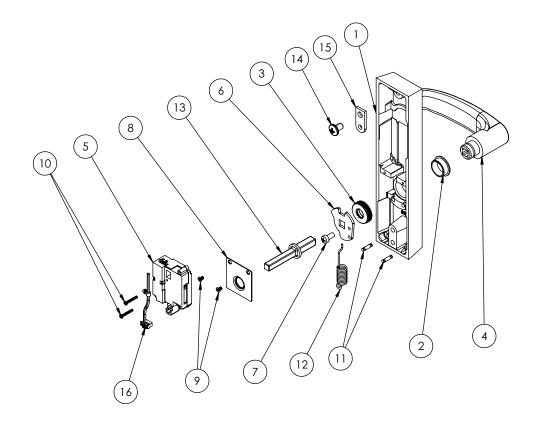


The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

SARGENT	8
ASSA ABLOY	-7 7

ltem	Part No.	Description	Qty	Sellable
1	97-0525	ET Case, Drop Mounting	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0549	Spindle (Lockable 700 And 700-6)	1	Yes
7	97-0480	Locking Piece For -6 And -8	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	97-0329	Locking Tail	1	No
10	97-3932	Solenoid Cover Assembly	1	No
11	68-1402	Retainer Plate, Electrical Function	1	No
12	01-3563	Machine Screw #5-40 X 1/4"	2	No
13	01-1154	CR-FHMS #6-32 X 1/4"	2	No
14	01-1478	CR Pan Hd Mach Screw #1/4-20 X 3/8"	1	Yes
15	68-1254	Extension Bracket	1	Yes
	52-3287	24V Pull Solenoid & Bridge Assy, Exit Trim	1	No
16	52-3288	12V Pull Solenoid & Bridge Assy, Exit Trim	1	No
16	52-3289	24V Push Solenoid & Bridge Assy, Exit Trim	1	No
	52-3290	12V Push Solenoid & Bridge Assy, Exit Trim	1	No
17	97-0799	Fork	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

2. Specify lever design by hand Note: 700-6 ET control is only available for 1 3/4" doors

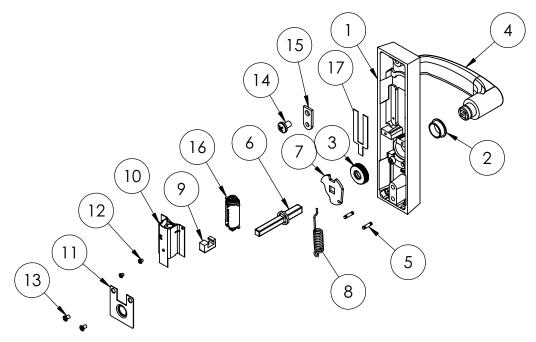

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


ltem	Part No.	Description	Qty	Sellable
1	97-0429	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
6	_	Lever Handle <sup>1,3</sup>	1	Yes
7	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
8	97-0480	Locking Piece For -6 And -8	1	Yes
9	97-0557	Fusible Link	1	Yes
10	97-0571	Locking Slide Spring	1	Yes
11	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
12	97-0425	Hub Spring (Std)	1	Yes
13	97-0355	Locking Slide (706)	1	Yes
	97-0356	Locking Slide (713)	1	Yes
14	97-0541	Spindle (Cross)	1	Yes
15	97-0563	Spring Support	1	No
16	97-0564	Return Spring	1	No
17	97-0558	Slide Support	1	No
NI /	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
51101011	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

Specify #41 cylinder by keying requirements
 Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness

Note: 607 kit includes items 5, 9, 10, 13, 15, 16, and 17

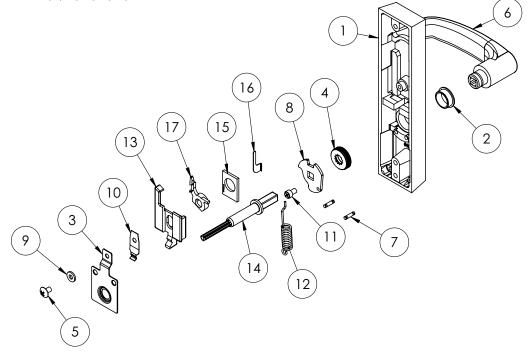

Experience a safer and more open world


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	97-0429	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	68-1393	Retaining Plate	1	Yes
4	97-0760	Cap Nut	1	Yes
5	01-1183	Cr-Thms #10-32 X 5/16"	1	Yes
6	—	Lever Handle <sup>1,2</sup>	1	Yes
7	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
8	97-0480	Locking Piece For -6 And -8	1	Yes
9	97-0557	Fusible Link	1	Yes
10	97-0571	Locking Slide Spring	1	Yes
11	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
12	97-0425	Hub Spring (Std)	1	Yes
13	97-0356	Locking Slide (713)	1	Yes
	730-7	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
14	730-8	Spindle Retrofit Kit (2" Door)	1	Yes
	730-9	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
	01-4373	Thru Bolt #1/4-20 X 2 7/8" ( 2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness

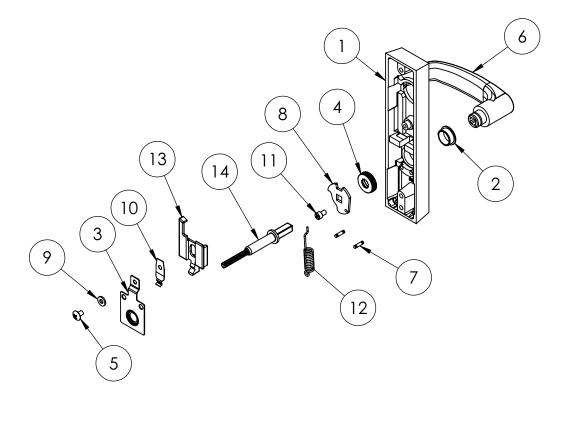

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0428	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,3</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0425	Hub Spring (Std)	1	Yes
7	97-0479	Spindle Lock	1	Yes
	_	Cylinder <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
JIIOWII	13-0180	Cylinder Nut	1	Yes
8	97-0478	Lower Hub Plate	1	Yes
	97-3092	Spindle Assembly (1 3/4" Door)	1	Yes
9	97-3093	Spindle Assembly (2" Door)	1	Yes
	97-3094	Spindle Assembly (2 1/4" Door)	1	Yes
10	97-0527	E Clip 0.312 Shaft	1	Yes
11	68-3671	Spindle Adapter	1	Yes
12	97-0347	Locking Slide Spring	1	Yes
13	97-0581	Retaining Plate	1	Yes
14	97-0475	Locking Slide (743)	1	Yes
15	97-0582	Spacer	1	Yes
16	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
17	01-1183	Cr-Fhms #10-32 X 5/16"	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWI	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

Specify #41 cylinder by keying requirements
 Specify lever design by hand

Note: 607 kit includes items 12, 14, 15 and 17

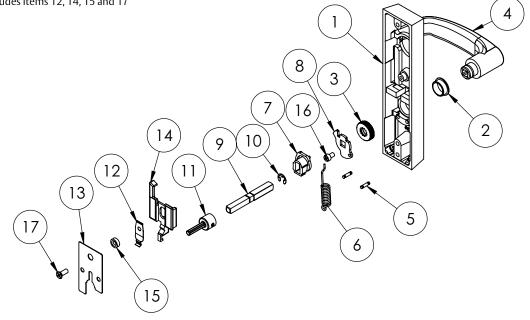

Experience a safer and more open world


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



ltem	Part No.	Description	Qty	Sellable
1	97-0428	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,3</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0425	Hub Spring (Std)	1	Yes
7	97-0479	Spindle Lock	1	Yes
8	97-0478	Lower Hub Plate	1	Yes
	_	Cylinder <sup>1,2</sup>	1	Yes
Not Shown	97-0350	Collar <sup>1</sup>	1	Yes
31101011	13-0180	Cylinder Nut	1	Yes
	97-3092	Spindle Assembly (1 3/4" Door)	1	Yes
9	97-3093	Spindle Assembly (2" Door)	1	Yes
	97-3094	Spindle Assembly (2 1/4" Door)	1	Yes
10	97-0527	E Clip 0.312 Shaft	1	Yes
11	68-3671	Spindle Adapter	1	Yes
12	97-0347	Locking Slide Spring	1	Yes
13	97-0581	Retaining Plate	1	Yes
14	97-0476	Locking Slide (746 Function)	1	Yes
15	97-0582	Spacer	1	Yes
16	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
17	01-1183	Cr-Fhms #10-32 X 3/8"	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWIT	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

2. Specify #41 cylinder by keying requirements3. Specify lever design by hand

Note: 607 kit includes items 12, 14, 15 and 17

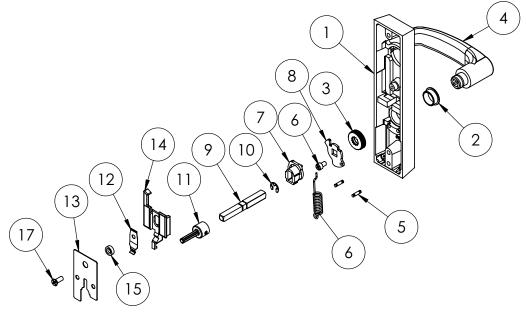


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0853	Electric ET Case W/O Cylinder Prep <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,2</sup>	1	Yes
5	68-7546	Motor Actuator Assemby	1	Yes
	730-7	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
Not Shown	730-8	Spindle Retrofit Kit (2" Door)	1	Yes
51101011	730-9	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
6	97-0480	Hub Plate (700-8)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0852	Retainer Plate, Electrical Function	1	Yes
9	01-4410	#4-40 X 1/4" Ph Flat Head Machine Screw	2	Yes
10	01-4383	#2-56 X 5/8" Ph Pan Head Machine Screw	2	Yes
11	01-4507	1/8 x 1/2 Double Ended Groove Pin	2	No
12	97-0425	Hub Spring (STD)	1	Yes
13	97-0541	Spindle (Lockable 700-8)	1	Yes
	52-5660	Ecoflex Et Harness F.Safe/F.Secure	1	Yes
	52-5659	Ecoflex ET Harness H1, H2, M1	1	Yes
	52-5654	Ecoflex ET Harness KP, G1.5,	1	Yes
14	52-5657	Ecoflex ET Harness P1, P2, IN120, IN220	1	Yes
14	52-5655	Ecoflex ET Harness S Series	1	Yes
	52-5656	Ecoflex ET Harness PG	1	Yes
	52-5658	Ecoflex ET Harness N2	1	Yes
	52-5652	Ecoflex ET Harness IN100	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
51100011	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish 2. Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness

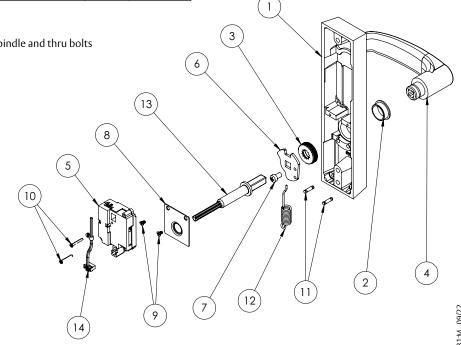

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

SARGENT	
ASSA ABLOY	

ltem	Part No.	Description	Qty	Sellable
1	97-0575	ET Case	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Сар	1	Yes
4	_	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
	730-7	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
Not Shown	730-8	Spindle Retrofit Kit (2" Door)	1	Yes
31101011	730-9	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
6	97-0541	Spindle	1	Yes
7	97-0480	Lower Hub Plate	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	97-0329	Locking Tail	1	No
10	97-3932	Solenoid Cover Assembly	1	No
11	68-1402	Retainer Plate, Electrical Function	1	No
12	01-3563	Machine Screw #5-40 X 1/4"	2	No
13	01-1154	Cr-Fhms #6-32 X 1/4"	2	No
14	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
	52-3287	24V Pull Solenoid & Bridge Assy, Exit Trim	1	No
15	52-3288	12V Pull Solenoid & Bridge Assy, Exit Trim	1	No
15	52-3289	24V Push Solenoid & Bridge Assy, Exit Trim	1	No
	52-3290	12V Push Solenoid & Bridge Assy, Exit Trim	1	No
16	97-0799	Fork	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
SHOWU	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

2. Specify lever design by hand

Note: 730 kit includes items required to replace the spindle and thru bolts for specified door thickness

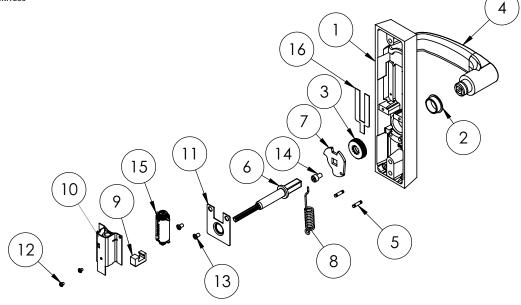


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0851	Electric ET Case W/ Cylinder Prep <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	_	Lever Handle <sup>1,2</sup>	1	Yes
5	68-7546	Motor Actuator Assemby	1	Yes
Not	730-7	Spindle Retrofit Kit (1 3/4" Door)	1	Yes
Shown	730-8	Spindle Retrofit Kit (2" Door)	1	Yes
Showh	730-9	Spindle Retrofit Kit (2 1/4" Door)	1	Yes
6	97-0480	Hub Plate (700-8)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0852	Retainer Plate, Electrical Function	1	Yes
9	01-4410	#4-40 X 1/4" Ph Flat Head Machine Screw	2	Yes
10	01-4383	#2-56 X 5/8" Ph Pan Head Machine Screw	2	Yes
11	01-4507	1/8 x 1/2 Double Ended Groove Pin	2	No
12	97-0425	Hub Spring (STD)	1	Yes
13	97-0541	Spindle (Loockable 700-8)	1	Yes
	52-5660	Ecoflex Et Harness F.Safe/F.Secure	1	Yes
	52-5659	Ecoflex ET Harness H1, H2, M1	1	Yes
	52-5654	Ecoflex ET Harness KP, G1.5,	1	Yes
14	52-5657	Ecoflex ET Harness P1, P2, IN120, IN220	1	Yes
14	52-5655	Ecoflex ET Harness S Series	1	Yes
	52-5656	Ecoflex ET Harness PG	1	Yes
	52-5658	Ecoflex ET Harness N2	1	Yes
	52-5652	Ecoflex ET Harness IN100	1	Yes
N	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
Shown	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish

2. Specify lever design by hand

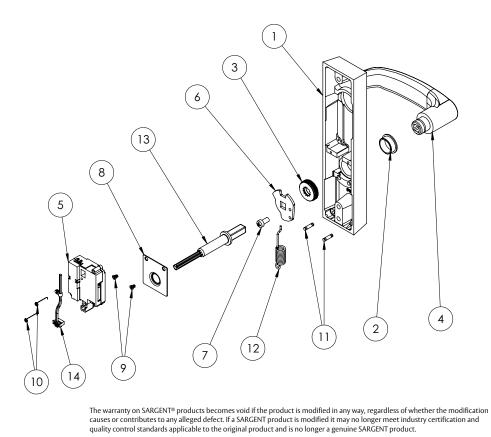

A8231:M 09/22

Experience a safer and more open world


Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

161



ltem	Part No.	Description	Qty	Sellable
1	97-0574	Electric ET Case W/ Cylinder Prep	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0480	Hub Plate (700-8)	1	Yes
7	01-1182	CR-CHMS #10-32 X 19/64"	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	52-2556	Motor & Housing Assembly	1	No
10	68-1402	Retainer Plate, Electrical Function	1	No
11	01-1154	#6-32 X 1/4" Ph Flat Head Machine Screw	2	No
12	01-4540	#3-48 X 5/8" Ph Pan Head Machine Screw	2	No
13	97-0541	Spindle (Lockable 700-8)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
5110 WIT	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

2. Specify lever design by hand

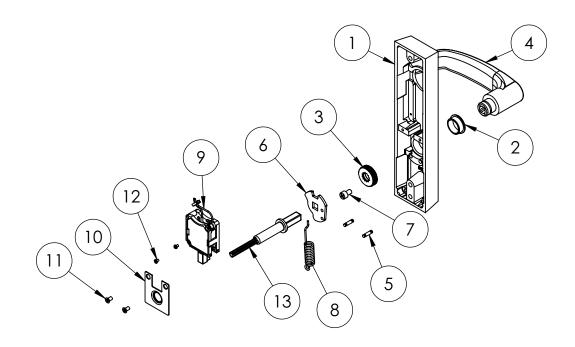


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0575	Electric ET Case W/O Cylinder Prep <sup>1</sup>	1	No
2	97-0477	Bushing Insert	1	Yes
3	97-0760	Cap Nut	1	Yes
4	—	Lever Handle <sup>1,2</sup>	1	Yes
5	01-4507	1/8" X 1/2" Double Ended Groove Pin	2	No
6	97-0480	Hub Plate (700-8)	1	Yes
7	01-1182	Cr-Chms #10-32 X 19/64"	1	Yes
8	97-0425	Hub Spring (Std)	1	Yes
9	52-2556	Motor & Housing Assembly	1	No
10	68-1402	Retainer Plate, Electrical Function	1	No
11	01-1154	#6-32 X 1/4" Ph Flat Head Machine Screw	2	No
12	01-4540	#3-48 X 5/8" Ph Pan Head Machine Screw	2	No
13	97-0541	Spindle (Lockable 700-8)	1	Yes
	01-4451	Thru Bolt #1/4-20 X 2 3/8" (1 3/4" Door)	2	Yes
Not Shown	01-4372	Thru Bolt #1/4-20 X 2 5/8" (2" Door)	2	Yes
51101011	01-4373	Thru Bolt #1/4-20 X 2 7/8" (2 1/4" Door)	2	Yes

1. Specify finish 2. Specify lever design by hand

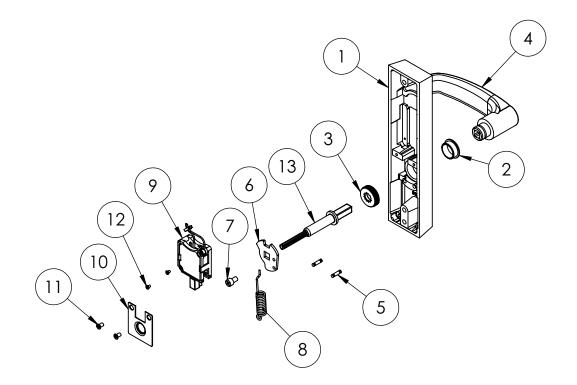


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



ltem	Part No.	Description	Qty	Sellable
1	97-0560	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	97-0119	Thru Bolt Stud	2	Yes
4	01-0227	External Shakeproof Washer	2	Yes
5	N/A	Cylinder, Rim <sup>1,2</sup>	1	Yes
6	13-0080	Barrel Retainer	1	Yes
7	13-0085	Locking Tail	1	Yes
8	13-0086	Backplate, Rim	1	Yes
0	13-0074	Connecting Screw	2	Yes
9	13-0075	Connecting Screw, 2 1/2" Door and Over	2	Yes
N/A	97-2955	Screw Pack	1	Yes

2. Specify cylinder size by keying requirements (cylinder comes with item 6 and item 7) Note: Use for 8800 made before 2/5/2001

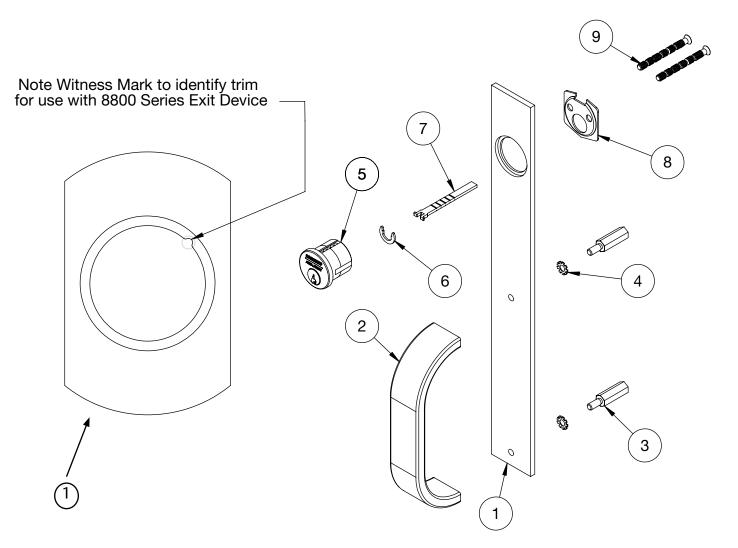

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

# SARGENT<sup>®</sup> ASSA ABLOY

ltem	Part No.	Description	Qty	Sellable
1	97-0313	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	01-0227	Lock Washer	2	Yes
4	97-0119	Thru Bolt Stud	2	Yes
5	N/A	Cylinder <sup>1,2</sup>	1	Yes
6	13-0080	Barrel Retainer	1	Yes
7	13-0085	Locking Tail	1	Yes
8	13-0086	Backplate, Rim	1	Yes
9	13-0074	Connecting Screw	2	Yes
9	13-0075	Connecting Screw, 2 1/2" Door and Over	2	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify finish

2. Specify cylinder size by keying requirements (cylinder comes with item 6 and item 7) Note: Use for 8800 made before 2/5/2001

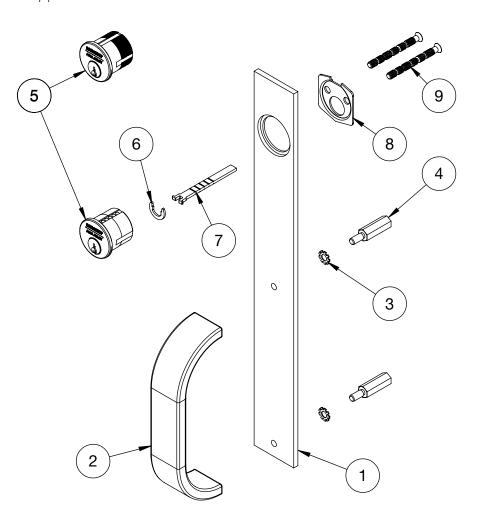


The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



ltem	Part No.	Description	Qty	Sellable
1	97-0312	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	97-0182	Thumb Piece, LHR <sup>1,2</sup>	1	Yes
5	97-0189	Thumb Piece, RHR <sup>1,2</sup>	I	Yes
4	97-0131	Thumb Piece Back Plate	1	Yes
5	97-0119	Thru Bolt Stud	2	Yes
6	01-0227	Lock Washer	2	Yes
7	97-0156	Oval Head Rivet	1	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"	I	Yes

2. Specify Door Thickness and Device Line

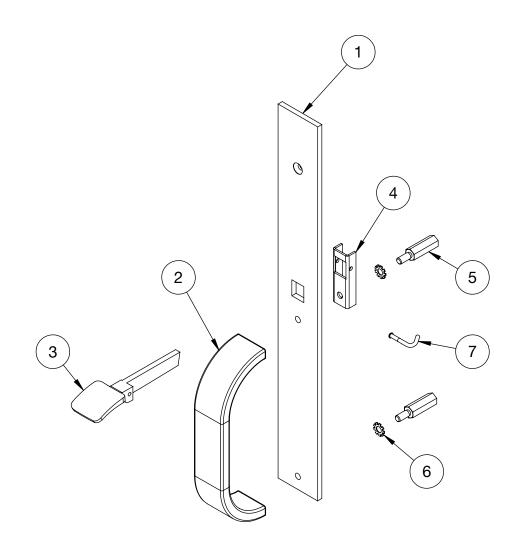


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0560	Plate <sup>1</sup>	1	Yes
2	97-0367	Grip <sup>1</sup>	1	Yes
3	97-0119	Thru Bolt Stud	2	Yes
4	01-0227	External Shakeproof Washer	2	Yes
5	N/A	Cylinder, Rim <sup>1,2</sup>	1	Yes
6	13-0080	Barrel Retainer	1	Yes
7	13-0085	Locking Tail	1	Yes
8	13-0086	Backplate, Rim	1	Yes
	13-0074	Connecting Screw	2	Yes
9	13-0075	Connecting Screw, 2 1/2" Door and Over	2	Yes
N/A	97-2955	Screw Pack	1	Yes

1. Specify finish

 Specify cylinder size by keying requirements (cylinder comes with item 6 and item 7) Specify #34 cylinder for 8800 made After 2/5/2001

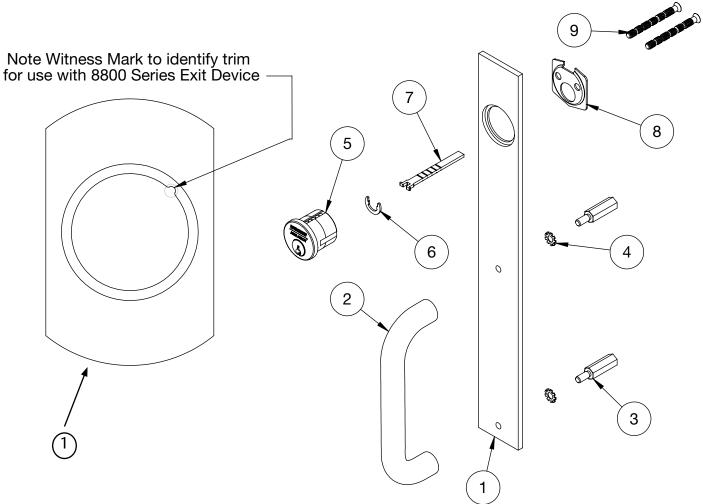

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

167




9

ltem	Part No.	Description	Qty	Sellable
1	97-0313	Plate <sup>1</sup>	1	Yes
2	97-0367	Grip <sup>1</sup>	1	Yes
3	01-0227	Lock Washer	2	Yes
4	97-0119	Thru Bolt Stud	2	Yes
5	13-0080	Barrel Retainer	2	Yes
6	13-0084	Locking Tail	1	Yes
7	N/A	Cylinder <sup>1,2</sup>	1	Yes
8	13-0086	Backplate	1	Yes
9	13-0074	Connecting Screw	2	Yes
9	13-0075	Connecting Screw, 2 1/2" Door and Over	2	Yes
N/A	97-2955	Screw Pack, 1 3/4"	1	Yes
	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify finish

2. Specify cylinder size by keying requirements Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 5 and item 6) Specify #41 cylinder (1 3/4") or #43 Cylinder (2 1/4") for 8300 or 8900 Note: Use for 8800 made before 2/5/2001

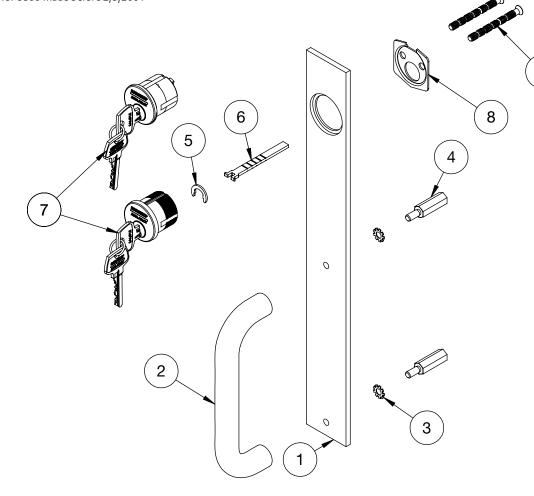

A8231:M 09/22

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

# SARGENT<sup>®</sup> ASSA ABLOY

ltem	Part No.	Description	Qty	Sellable
1	97-0312	Plate <sup>1</sup>	1	Yes
2	97-0367	Grip <sup>1</sup>	1	Yes
3	97-0182	Thumb Piece,LHR <sup>1,2</sup>	1	Yes
5	97-0189	Thumb Piece, RHR <sup>1,2</sup>	1	Yes
4	97-0156	Oval Head Rivet	1	Yes
5	97-0131	Thumb Piece Back Plate	1	Yes
6	97-0119	Thru Bolt Stud	2	Yes
7	01-0227	Lock Washer	2	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify Finish

2. Specify Door Thickness and Device Line

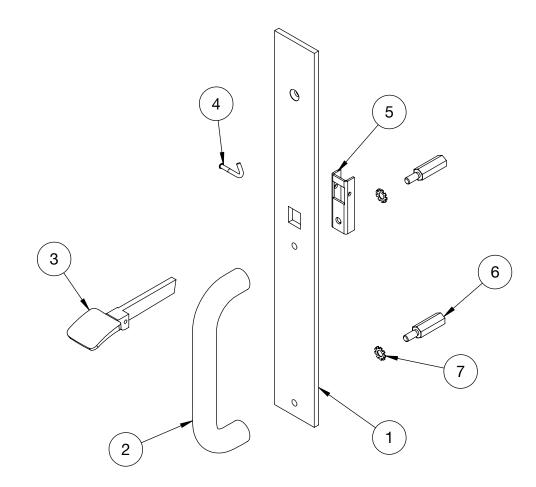


The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



ltem	Part No.	Description	Qty	Sellable
1	97-0561	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	01-0227	Lock Washer	2	Yes
4	97-0119	Thru Bolt Stud	2	Yes
5	13-0086	Backplate	1	Yes
6	13-0074	Connecting Screw	2	Yes
7	13-0085	Connecting Bar	1	Yes
8	13-0080	Retaining Ring	1	Yes
9	N/A	Cylinder <sup>1,2</sup>	1	Yes
N/A	97-2955	Screw Pack	1	Yes

2. Specify cylinder size by keying requirements (cylinder comes with item 7 and item 8) Note: Use for 8800 made before 2/5/2001

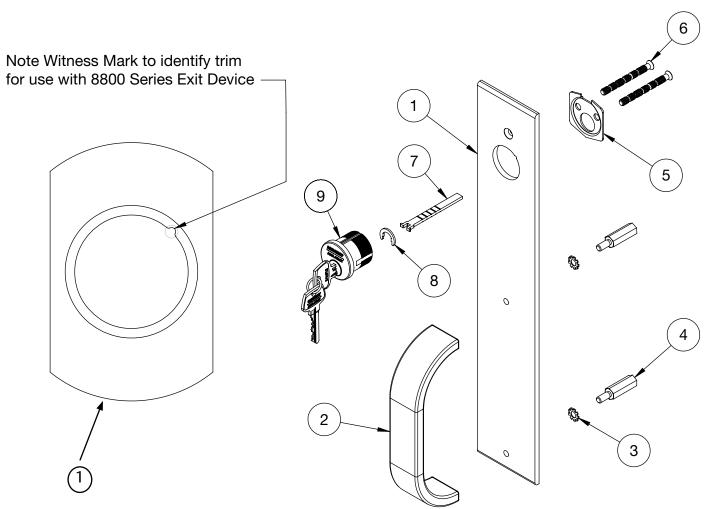

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

170

ltem	Part No.	Description	Qty	Sellable
1	98-0049	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	97-0119	Thru Bolt Stud	2	Yes
4	01-0227	Lock Washer	2	Yes
5	13-0080	Barrel Retainer	2	Yes
6	13-0084	Locking Tail	1	Yes
7	N/A	Cylinder <sup>1,2</sup>	1	Yes
8	13-0086	Backplate	1	Yes
9	13-0074	Connecting Screw		Yes
9	13-0075	Connecting Screw, 2 1/2" Door and Over	2	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify finish

2. Specify cylinder size by keying requirements (cylinder comes with item 5 and item 6) Specify #34 cylinder for 8700 and 8800 Specify #41 cylinder (1 3/4") or #43 cylinder (2 1/4") for 8300 or 8900

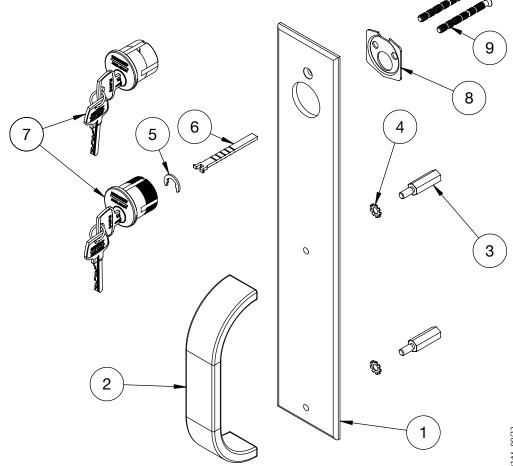

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world


Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.

171

ltem	Part No.	Description	Qty	Sellable
1	97-0286	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	97-0182	Thumb Piece, LHR <sup>1,2</sup>	1	Yes
5	97-0189	Thumb Piece, RHR <sup>1,2</sup>	1	Yes
4	97-0131	Thumb Piece Backplate	1	Yes
5	97-0119	Thru Bolt Stud	2	Yes
6	01-0227	Lock Washer	2	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify Finish

2. Specify Door Thickness and Device Line

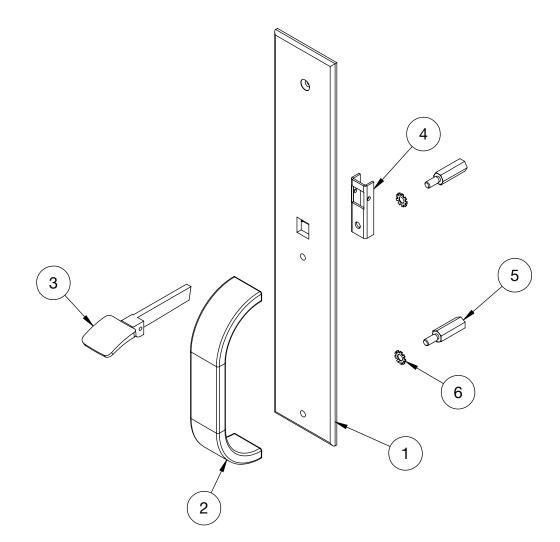

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.


Experience a safer and more open world

# SARGENT<sup>®</sup> ASSA ABLOY

ltem	Part No.	Description	Qty	Sellable
1	97-0562	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	01-0227	Lock Washer	2	Yes
4	98-0071	Thru Bolt Stud	2	Yes
5	13-0074	Connecting Screw	2	Yes
6	13-0086	Backplate	1	Yes
7	97-0060	Grommet Nut <sup>1</sup>	1	Yes
8	13-0085	Connecting Bar	1	Yes
9	13-0080	Retainer	1	Yes
10	N/A	Cylinder <sup>1,2</sup>	1	Yes
N/A	97-2955	Screw Pack	1	Yes

1. Specify finish

2. Specify cylinder size by keying requirements (cylinder comes with item 8 and item 9) Specify #34 cylinder 8800 made after 2/5/2001

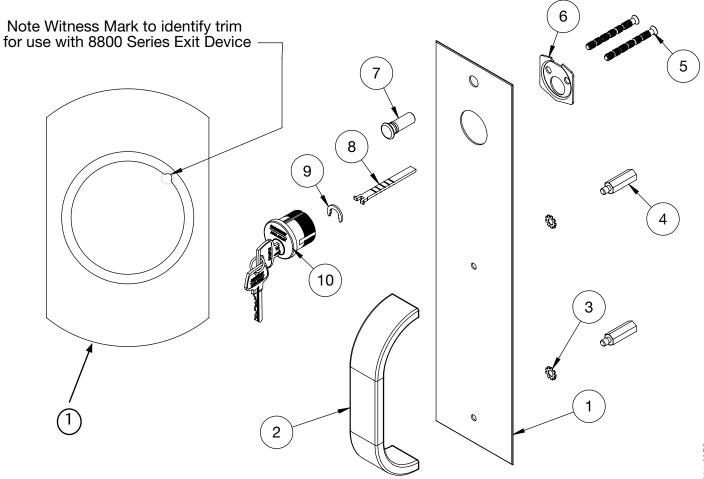

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



ltem	Part No.	Description	Qty	Sellable
1	97-3180	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	98-0071	Thru Bolt Stud	2	Yes
4	01-0227	Lock Washer	2	Yes
5	13-0074	Connecting Screw	2	Yes
6	13-0086	Backplate	1	Yes
7	97-0060	Grommet Nut <sup>1</sup>	1	Yes
8	13-0085	Connecting Bar	1	Yes
9	13-0080	Retainer	1	Yes
10	N/A	Cylinder <sup>1,2</sup>	1	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

2. Specify cylinder size by keying requirements Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 8 and item 9) Specify #41 cylinder (1 3/4") or #43 cylinder (2 1/4") for 8300 or 8900 Note: Use for 8800 made before 2/5/2001

5 and a second 2222 7 10 0 6 8 9 10 Se la Ŋ 0 4 Ø 3 2 0 1

174

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.


Experience a safer and more open world

## SARGENT<sup>®</sup> ASSA ABLOY

ltem	Part No.	Description	Qty	Sellable
1	97-0291	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	98-0071	Thru Bolt Stud	2	Yes
4	01-0227	Lock Washer	2	Yes
5	97-0131	Thumb Piece Back Plate	1	Yes
6	97-0182	Thumb Piece, LHR <sup>1,2</sup>	1	Yes
6	97-0189	Thumb Piece, RHR <sup>1,2</sup>	2	Yes
7	97-0156	Oval Head Rivet	1	Yes
8	97-0060	Grommet Nut <sup>1</sup>	1	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify Finish

2. Specify Door Thickness and Device Line

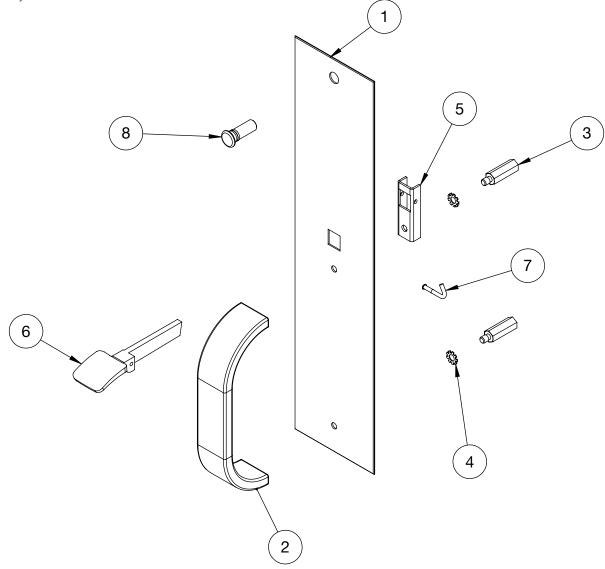


Experience a safer and more open world The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.



ltem	Part No.	Description	Qty	Sellable
1	97-0064	Grip <sup>1</sup>	1	Yes
2	98-0071	Thru Bolt Stud	2	Yes
3	01-0227	Lock Washer	2	Yes
4	13-0074	Connecting Screw	2	Yes
5	13-0086	Backplate	1	Yes
6	13-0085	Connecting Bar	1	Yes
7	13-0080	Retainer	1	Yes
8	N/A	Cylinder <sup>1,2</sup>	1	Yes
	97-2953	Screw Pack, 1 3/4"	1	Yes
N/A	97-2954	Screw Pack, 2 1/4"		Yes

2. Specify cylinder size by keying requirements Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 6 and item 7) Specify #41 cylinder (1 3/4") or #43 cylinder (2 1/4") for 8300 or 8900

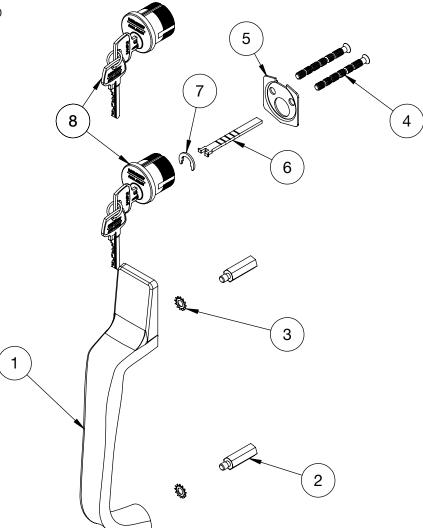


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

# SARGENT<sup>®</sup> ASSA ABLOY

ltem	Part No.	Description	Qty	Sellable
1	97-0309	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	01-0227	Lock Washer	2	Yes
4	97-0119	Thru Bolt Stud	2	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify Finish

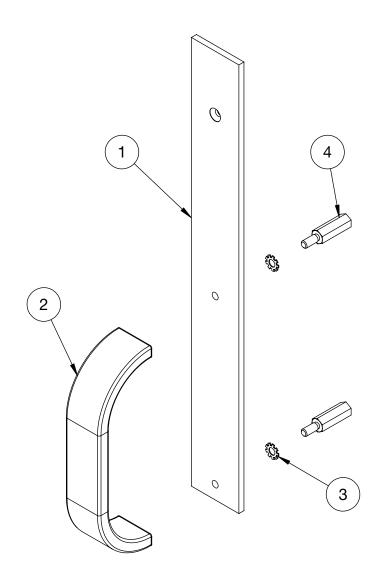


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	97-0309	Plate <sup>1</sup>	1	Yes
2	97-0367	Grip <sup>1</sup>	1	Yes
3	97-0119	Thru Bolt Stud	2	Yes
4	01-0227	Lock Washer	2	Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify Finish

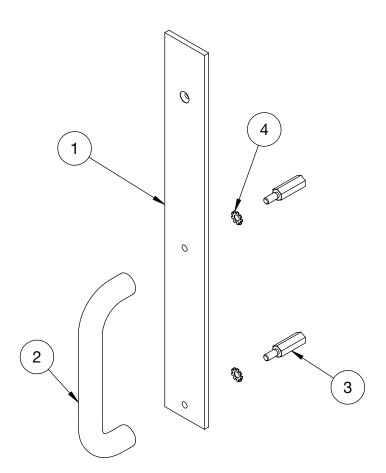

A8231:M 09/22


The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

# SARGENT<sup>®</sup> ASSA ABLOY

ltem	Part No.	Description	Qty	Sellable
1	97-0114	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	97-0119	Thru Bolt Stud	2	Yes
4	01-0227	Lock Washer	2	Yes
N/A	97-2955	Screw Pack, 1 3/4"	1	Yes
	97-2956	Screw Pack, 2 1/4"		Yes


1. Specify Finish

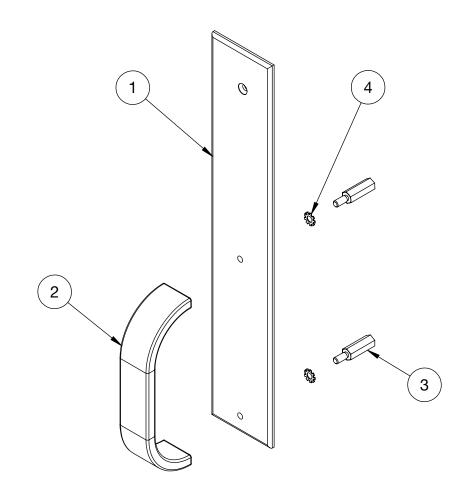

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description	Qty	Sellable
1	98-0126	Plate <sup>1</sup>	1	Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	98-0071	Thru Bolt Stud	2	Yes
4	01-0227	Lock Washer	2	Yes
5	97-0060	Grommet Nut <sup>1</sup>	1	Yes
N/A	97-2955	Screw Pack, 1 3/4"	1	Yes
	97-2956	Screw Pack, 2 1/4"		Yes

1. Specify Finish

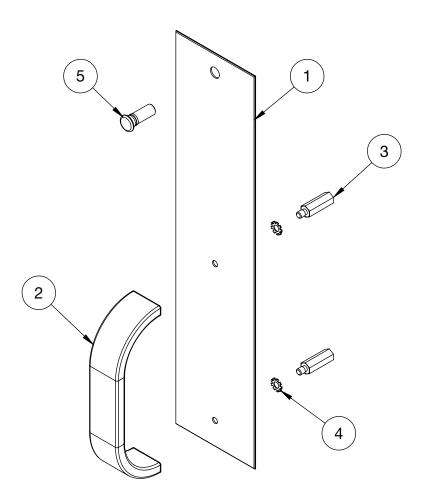

A8231:M 09/22


The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



ltem	Part No.	Description		Sellable
1	97-0064	Grip <sup>1</sup>		Yes
2	98-0071	Thru Bolt Stud		Yes
3	01-0227	Lock Washer		Yes
	97-2953	Screw Pack, 1 3/4"	1	Yes
N/A	97-2954	Screw Pack, 2 1/4"		Yes

1. Specify Finish

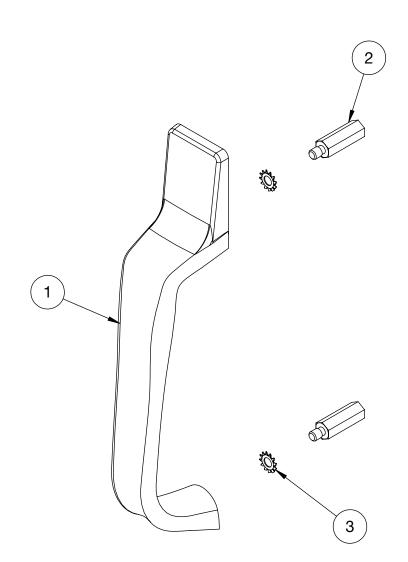

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem

1 2

3

4 5

6 7

8

9

10

11

12

N/A

Part No.	Description	Qty	Sellable
97-0311	Plate <sup>1</sup>	1	Yes
21-0165	Grip <sup>1</sup>	1	Yes
97-0182	Thumb Piece, LHR <sup>1,3</sup>	1	Yes
97-0189	Thumb Piece, RHR <sup>1,3</sup>	1	Yes
97-0131	Thumb Piece Back Plate	1	Yes
97-0119	Thru Bolt Stud	2	Yes
01-0227	Lock Washer	2	Yes
97-0156	Oval Head Rivet	1	Yes
13-0074	Connecting Screw	2	Yes
13-0075	Connecting Screw, 2 1/2" Door Thickness and Over	2	Yes
13-0086	Back Plate	1	Yes
13-0085	Locking Tail	1	Yes
13-0080	Retainer	1	Yes

1. Specify finish

Specify cylinder size by keying requirements
 Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 10 and item 11)

Cylinder<sup>1,2</sup>

Screw Pack, 1 3/4"

Screw Pack, 2 1/4"


Specify #41 cylinder (13/4") or

N/A

97-2955

97-2956

#43 Cylinder (2 1/4") for 8300 or 8900 3. Specify door thickness and device line

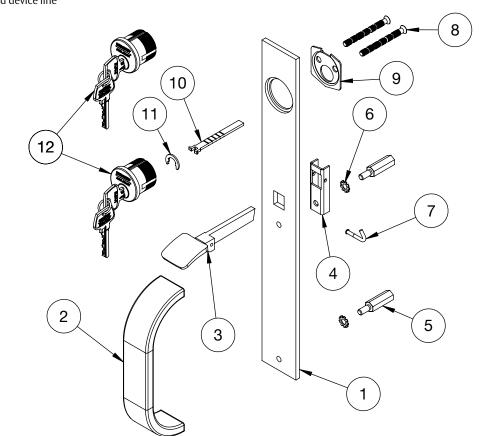

1

1

Yes

Yes

Yes

182

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

**SARGENT**®


**ASSA ABLOY** 

ltem	Part No.	Description		Sellable
1	97-0311	Plate <sup>1</sup>		Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	97-0182	Thumb Piece, LHR <sup>1,3</sup>	- 1	Yes
5	97-0189	Thumb Piece, RHR <sup>1,3</sup>	] '	Yes
4	01-0227	Lock Washer	2	Yes
5	97-0131	Thru Bolt Stud	2	Yes
6	97-0156	Oval Head Rivet		Yes
7	97-0131	Thumb Piece Back Plate 1		Yes
8	13-0086	Back Plate		Yes
9	13-0074	Connecting Screw	2	Yes
10	13-0085	Connecting Bar	1	Yes
11	13-0080	Retainer	1	Yes
12	N/A	Cylinder <sup>1,2</sup>		Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"	]	Yes

1. Specify finish

2. Specify cylinder size by keying requirements

Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 10 and item 11) Specify #41 cylinder (1 3/4") or #43 cylinder (2 1/4") for 8300 or 8900 3. Specify door thickness and device line

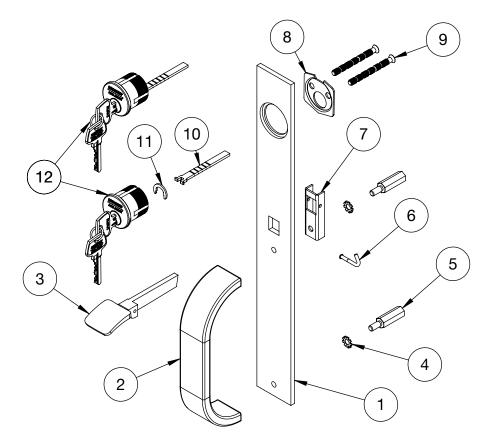

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

ltem	Part No.	Description	Qty	Sellable
1	98-0119	Plate <sup>1</sup>		Yes
2	21-0165	Grip <sup>1</sup>		Yes
3	97-0182	Thumb Piece, LHR <sup>1,3</sup>	1	Yes
5	97-0189	Thumb Piece, RHR <sup>1,3</sup>		Yes
4	01-0227	Lock Washer	2	Yes
5	97-0071	Thru Bolt Stud	2	Yes
6	97-0156	Oval Head Rivet		Yes
7	97-0131	Thumb Piece Backplate		Yes
8	13-0074	Connecting Screw		Yes
9	13-0086	Backplate		Yes
10	97-0060	Grommet Nut	1	Yes
11	13-0085	Connecting Bar	1	Yes
12	13-0080	Retainer		Yes
13	N/A	Cylinder <sup>1,2</sup>		Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"		Yes


1. Specify finish

2. Specify cylinder size by keying requirements

Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 11 and item 12)

Specify #41 cylinder (1 3/4") or

#43 cylinder (2 1/4") for 8300 or 8900 3. Specify door thickness and device line

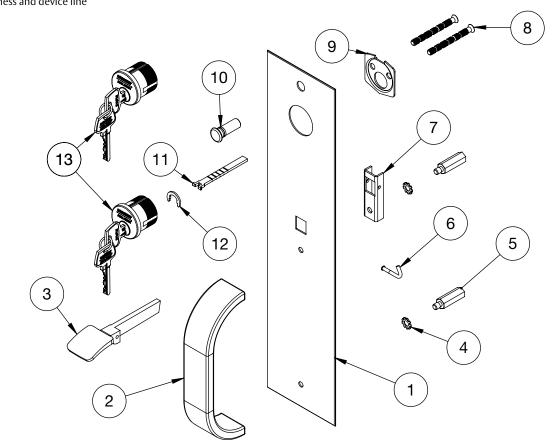

184

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

5


ltem	Part No.	Description		Sellable
1	97-0058	Grip <sup>1</sup> 1		Yes
2	97-0203	Thumbpiece, LHR <sup>1,3</sup>	1	Yes
2	97-0214	Thumbpiece, RHR <sup>1,3</sup>		Yes
3	98-0071	Thru Bolt Stud	2	Yes
4	01-0227	Lock Washer		Yes
5	13-0074	Connecting Screw		Yes
6	97-0156	Oval Head Rivet	1	Yes
7	13-0086	Cylinder Back Plate	1	Yes
8	13-0085	Connecting Bar	1	Yes
9	13-0080	Retainer	1	Yes
10	N/A	Cylinder <sup>1,2</sup>		Yes
	97-2953	Screw Pack, 1 3/4"	1	Yes
N/A	97-2954	Screw Pack, 2 1/4"		Yes

1. Specify finish

2. Specify cylinder size by keying requirements

Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 8 and item 9) Specify #41 cylinder (1 3/4") or #43 cýlinder (2 1/4") for 8300 or 8900

3. Specify door thickness and device line

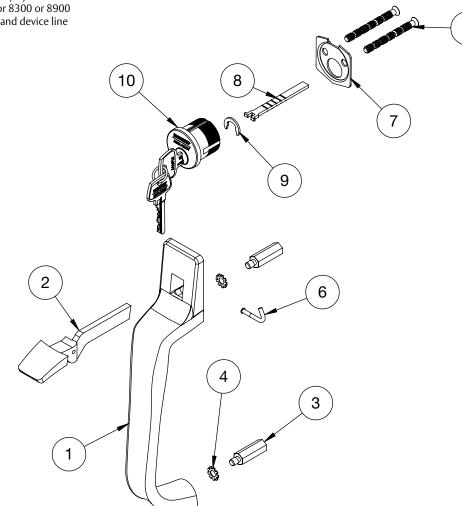


Experience a safer and more open world

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

ltem	Part No.	Description		Sellable
1	97-0058	Grip <sup>1</sup>		Yes
2	97-0203	Thumb Piece, LHR <sup>1,2</sup>	1	Yes
2	97-0214	Thumb Piece, RHR <sup>1,2</sup>		Yes
3	97-0156	Oval Head Rivet		Yes
4	01-0227	Lock Washer		Yes
5	98-0071	Thru Bolt Stud		Yes
	97-2953	Screw Pack, 1 3/4"	1	Yes
N/A	97-2954	Screw Pack, 2 1/4"		Yes

1. Specify Finish

2. Specify Door Thickness and Device Line

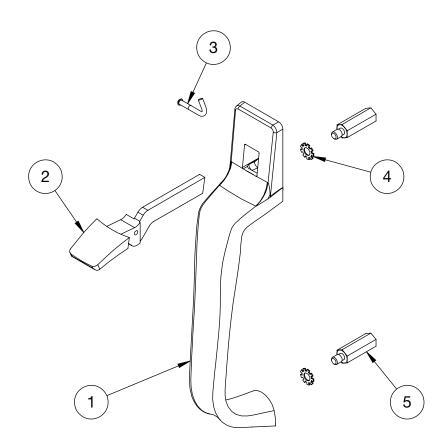

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

186 Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited.


Experience a safer and more open world

ltem	Part No.	Description		Sellable
1	97-0122	Plate <sup>1</sup>		Yes
2	21-0165	Grip <sup>1</sup>	1	Yes
3	97-0182	Thumb Piece, LHR <sup>1,3</sup>	- 1	Yes
5	97-0189	Thumb Piece, RHR <sup>1,3</sup>	] '	Yes
4	01-0227	Lock Washer	2	Yes
5	97-0119	Thru Bolt Stud	2	Yes
6	97-0156	Oval Head Rivet		Yes
7	97-0131	Thumb Piece Backplate 1		Yes
8	13-0074	Connecting Screw		Yes
9	13-0086	Backplate	1	Yes
10	13-0085	Connecting Bar	1	Yes
11	13-0080	Retainer	1	Yes
12	N/A	Cylinder <sup>1,2</sup>		Yes
	97-2955	Screw Pack, 1 3/4"	1	Yes
N/A	97-2956	Screw Pack, 2 1/4"	1	Yes

1. Specify finish

2. Specify cylinder size by keying requirements

Specify #34 cylinder for 8700 and 8800 (cylinder comes with item 10 and item 11) Specify #41 cylinder (1 3/4") or #43 cylinder (2 1/4") for 8300 or 8900 3. Specify door thickness and device line

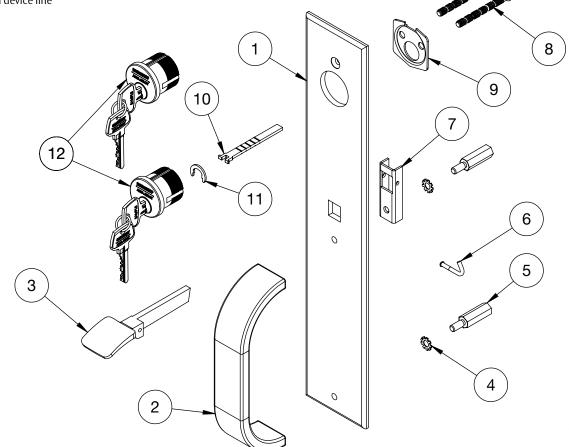

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Function	Assembly No.	Description	Sellable
Night Latch	94-2093*	Standard	Yes
Classroom	94-2094*	Standard	Yes
Night Latch	94-2426*	Cladding	Yes
Classroom	94-2427*	Cladding	Yes

ltem	Part No.	Description		Sellable
1	94-2089	Chassis Subassembly		Yes
2	94-0119	Cover*	1	Yes
3	94-2121	Turn Lever Assembly*	1	Yes
4	94-0110	Cam	1	Yes
5	94-0051	Lever Locking Plate	1	Yes
6	32-1254	#10-24 x 1/2 PHMS	1	Yes
7	94-0054	Lever Spring	1	Yes
8	97-0052	#8-32 x 5/16 Ohms W/ #6 Head	1	Yes
9	—	Cylinder & Key Assembly*	1	Yes
10	97-0350	Cylinder Collar*	1	Yes
11	13-0180	Cylinder Nut	1	Yes
12	01-3582	#6-32 x 3/8 RHMS	1	Yes
13	01-0204	#6-32 x 3/8 Flat Washer	1	Yes
14	94-0109	Extension Spring	1	Yes
15	94-0114	Locking Lever	1	Yes
	94-2249	Locking Lever & Pin Assembly	1	Yes
16	94-2087	Lever Assembly for 1-3/4" - 2" door thickness	1	Yes
10	94-2419	Lever Assembly for 2-1/4" door thickness	1	Yes
17	94-2448	H1 Aux Control Adapter Pack	1	Yes
18	94-2447	Wd Aux Control Adapter Pack	1	Yes


\*Specify finish

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world





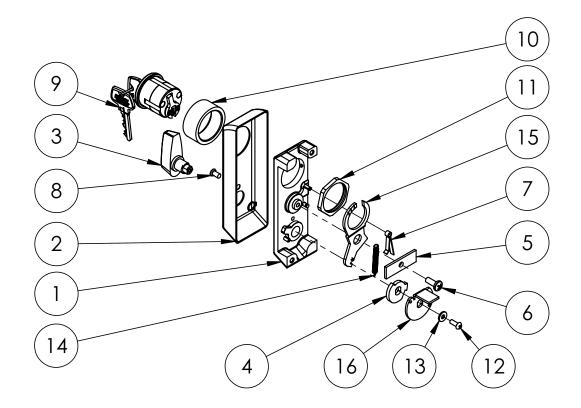

Experience a safer and more open world The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Auxiliary Controls 306 313 31-306 31-306

SARGENT
ASSA ABLOY

Function	Assembly No.	Description	Sellable
Night Latch	94-2091*	Standard	Yes
Classroom	94-2092*	Standard	Yes
Night Latch	94-2428*		Yes
Classroom	94-2429*	Cladding	Yes


ltem	Part No.	Description	Qty	Sellable
1	94-2089	Chassis Subassembly	1	Yes
2	94-0119	Cover*	1	Yes
3	94-2121	Turn Lever Assembly*	1	Yes
4	94-0110	Cam	1	Yes
5	94-0051	Lever Locking Plate	1	Yes
6	32-1254	#10-24 x 1/2 PHMS	1	Yes
7	94-0054	Lever Spring	1	Yes
8	97-0052	#8-32 x 5/16 Ohms W/ #6 Head	1	Yes
9	—	Cylinder & Key Assembly*	1	Yes
10	97-0350	Cylinder Collar*	1	Yes
11	13-0180	Cylinder Nut	1	Yes
12	01-3582	#6-32 x 3/8 RHMS	1	Yes
13	01-0204	#6-32 x 3/8 Flat Washer	1	Yes
14	94-0109	Extension Spring	1	Yes
15	94-0112	Le sking Lever	1	Yes
15	94-0114	Locking Lever		Yes
	94-2329			Yes
16	94-2088	Lover Assembly	1	Yes
10	94-2421	Lever Assembly		Yes
	94-2420			Yes
17	94-2448	H1 Aux Control Adapter Pack 1		Yes
18	94-2447	Wd Aux Control Adapter Pack	1	Yes

\*Specify finish

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world



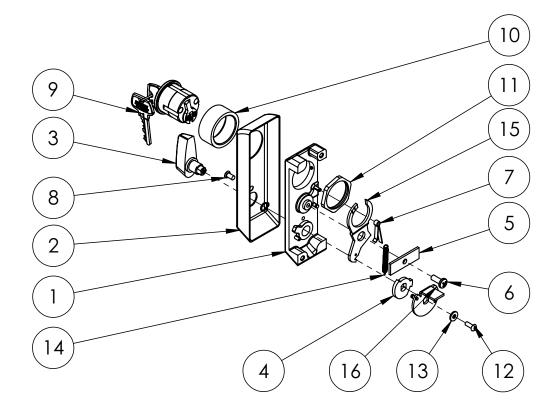

191

The warranty on SARGENT\* products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

SARGI	ENT®
ASSA AE	BLOY

Function	Assembly No.	Description	Sellable
Night Latch	94-2093*	NB	Yes
Classroom	94-2094*		Yes

ltem	Part No.	Description	Qty	Sellable
1	94-2372	Chassis Subassembly	1	Yes
2	94-0119	Cover*	1	Yes
3	94-2373	Turn Lever Assembly*	1	Yes
4	94-0185	Locking Hub	1	Yes
5	94-0051	Lever Locking Plate	1	Yes
6	32-1254	#10-24 x 1/2 PHMS	1	Yes
7	94-0054	Lever Spring	1	Yes
8	97-0052	#8-32 x 5/16 Ohms W/ #6 Head	1	Yes
9	_	Cylinder & Key Assembly*	1	Yes
10	97-0350	Cylinder Collar*	1	Yes
11	13-0180	Cylinder Nut	1	Yes
12	94-0114	Locking Lever	1	Yes
	94-2249	Locking Lever & Pin Assembly		Yes
13	94-0184	Tail Piece	1	Yes
14	94-0186	Space	1	Yes
15	01-4552	5/16 Retaining Ring	1	Yes
16	94-2448	H1 Aux Control Adapter Pack	1	Yes
17	94-2447	Wd Aux Control Adapter Pack	1	Yes


\*Specify finish

The warranty on SARGENT® products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

Auxiliary Controls NB-306 NB-313



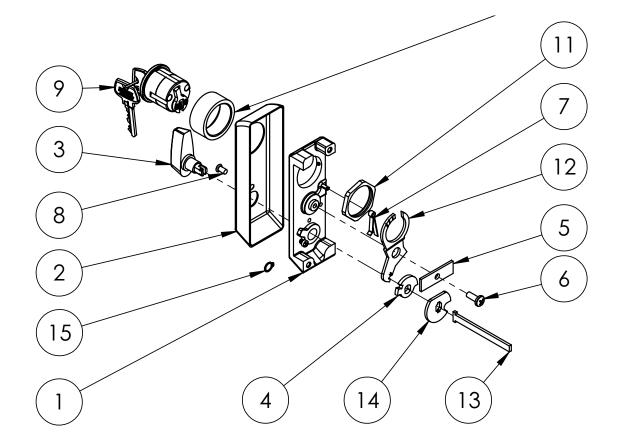

The warranty on SARGENT<sup>®</sup> products becomes void if the product is modified in any way, regardless of whether the modification causes or contributes to any alleged defect. If a SARGENT product is modified it may no longer meet industry certification and quality control standards applicable to the original product and is no longer a genuine SARGENT product.

Experience a safer and more open world

The ASSA ABLOY Group is the global leader in access solutions. Every day, we help billions of people experience a more open world.

ASSA ABLOY Opening Solutions leads the development within door openings and products for access solutions in homes, businesses and institutions. Our offering includes doors, frames, door and window hardware, locks, perimeter fencing, access control and service.



SARGENT Manufacturing Company 100 Sargent Drive New Haven, CT 06511 USA 800-727-5477 www.sargentlock.com

Founded in the early 1800s, SARGENT® is a market leader in locksets, cylinders, door closers, exit devices, electro-mechanical products and access control systems for new construction, renovation, and replacement applications. The company's customer base includes commercial construction, institutional, and industrial markets.

Copyright © 2017-2022, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloyds.com/patents.