


Sprinter Temic I gen Click'n Go Adapter

Works with MBProg Programmer. No soldering required.

Sprinter Temic I gen immobiliser with 908 Motorola processor
(Mask 1J35D OR 4J74Y).



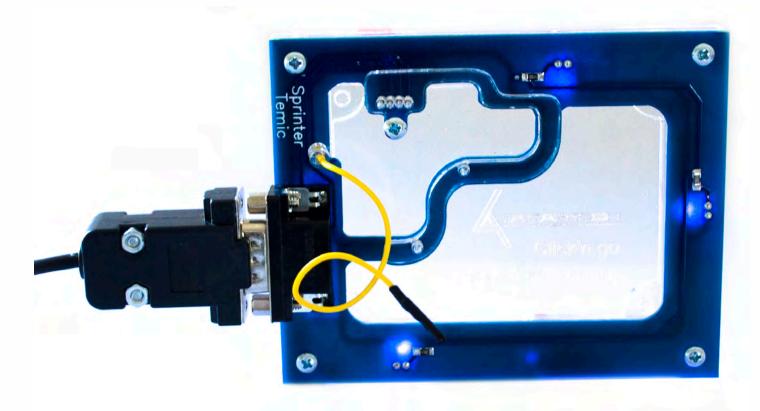





How to connect

Carefully open by pushing in the immo back body tabs. Recommended to use two or more tools to hold the body open.




Remove four screws in the immo board corners.




Match the immo board with Click'n Go adapter.


Immo connector should go over the "Connector" on the Click'n Go adapter.

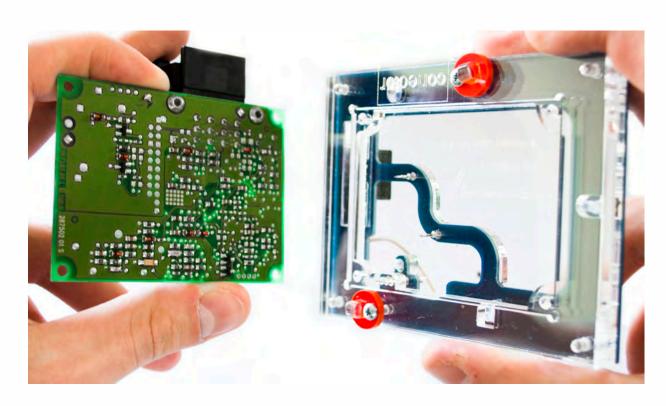


Mount immo board on the Click'n Go adapter.

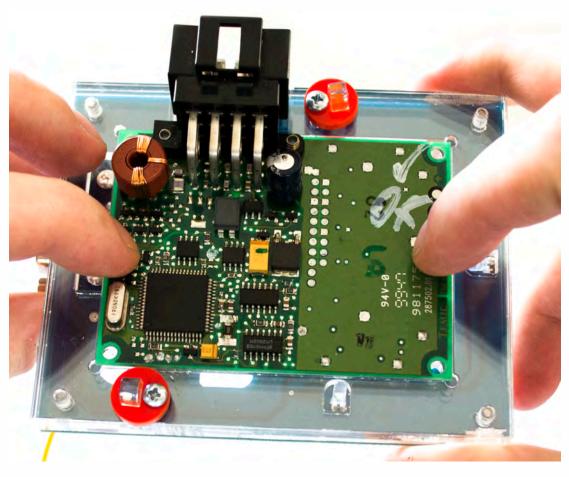


Push down the immo board on to the Click'n Go adapter. Make sure it's mounted correctly.

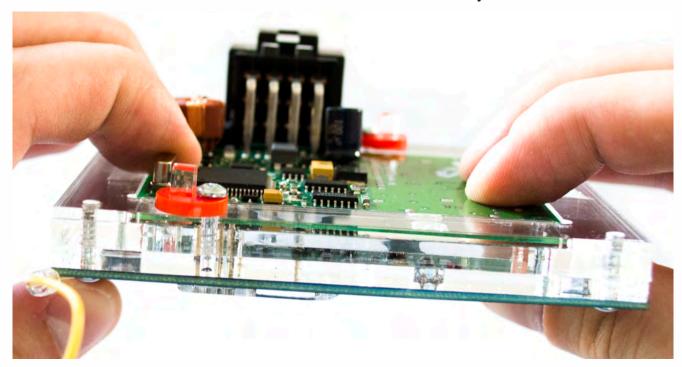

Secure immo by turning the Click'n Go safety locks over the immo board

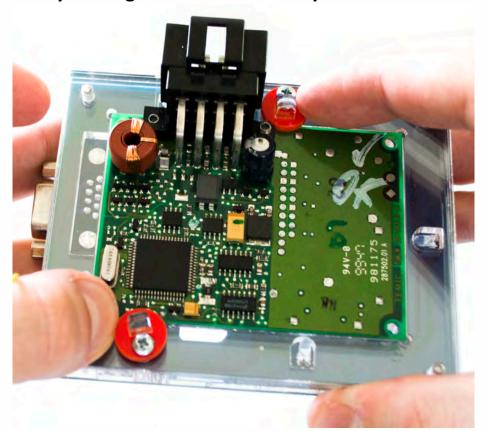

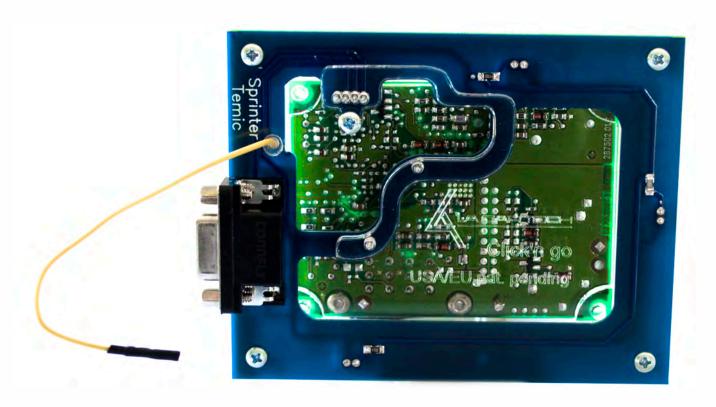


Connect MBProg 2 Click'n Go cable to Click'n Go adapter



Connect yellow Click'n Go cable to MBProg

Connect MBProg 2 Click'n Go cable to MBProg Connect MBProg USB cable to PC and MBProg

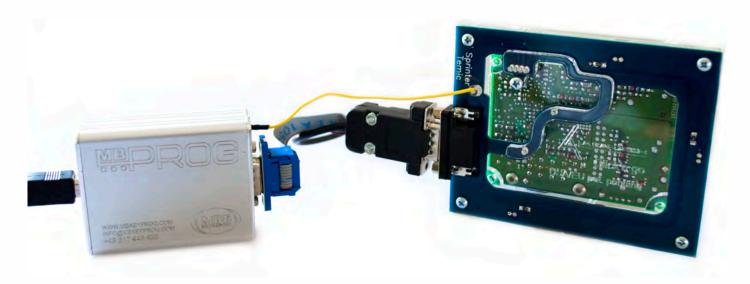




How to read

Open MBProg software.

Check bottom right corner if your device is correctly connected. Now click Chip button.

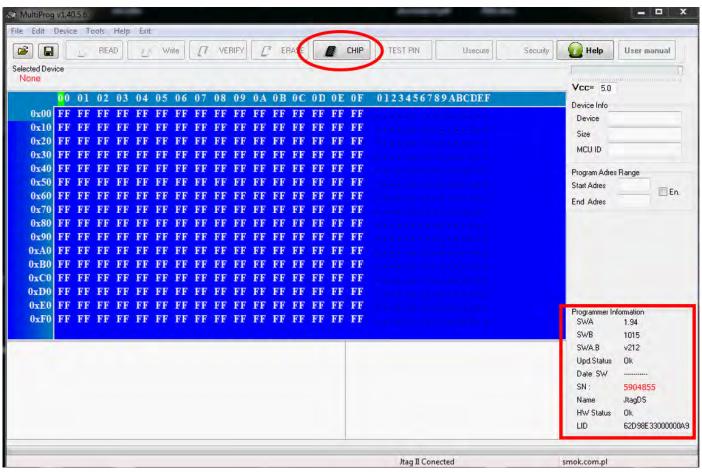


Make sure that JTAG is selected in programmer software.

Select MOTOROLA > MC > HC08 > SECURED > EEPROM


Double click on HC08AZ60 EE SEC option as seen in the red circle.


Choose the proper mask set for your EIS (1J35D) OR (4J74Y).

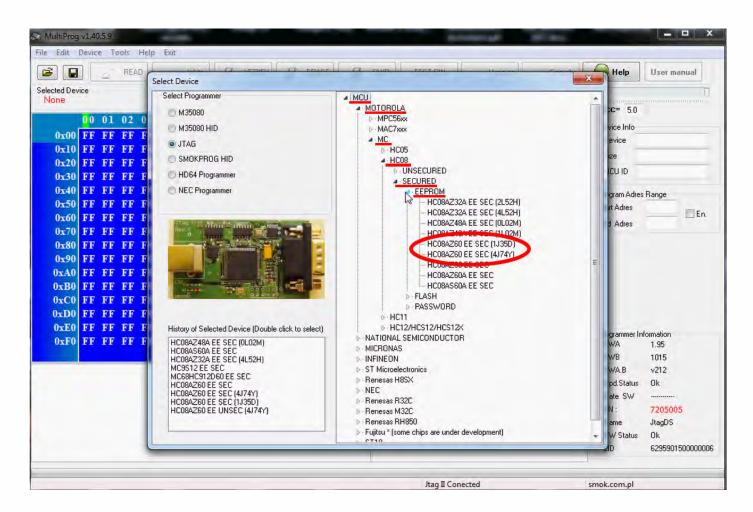



Now click on Read button.

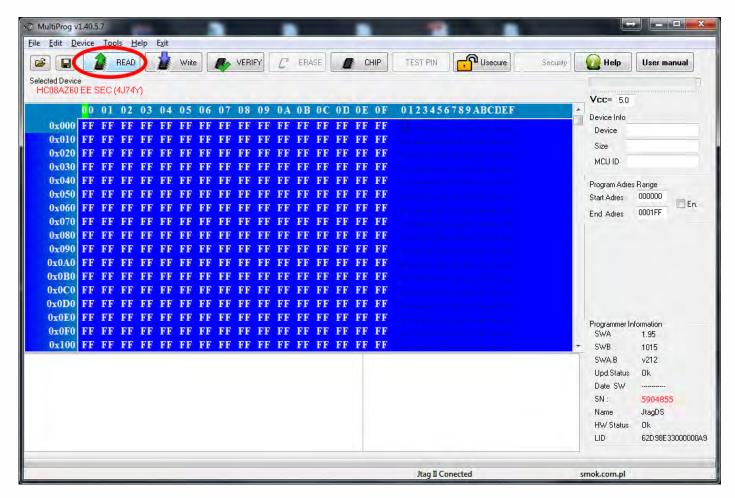





Immo reading process is done.

