



SUNNYFIT BIKE CADENCE CB110 USE MANUAL



WWW.SUNNYHEALTHFITNESS.COM

1. PRODUCT INTRODUCTION

We thank you for choosing our SunnyFit Bike Cadence. Our product is developed to help track your cycling performance. Please keep this user manual for future reference.

2. PRODUCT ACCESSORIES



SunnyFit Bike
Cadence



Rubber Mat
(Flat, Curved)



Band
(Large, Small)



Plastic Cable
Tie 6 pcs



User Manual


3. BASIC PARAMETERS

Product Size:	1.65 x 1.57 x 0.43 inches
Net Weight:	0.03 lbs
Battery type:	CR2032 220 mAh
Battery Life:	240 Hrs (based on 1 hour/day)
Color:	Black
COMM:	ANT+/785 inches BLE+/1181 inches
Water Rating:	IP67
Outer Case:	ABS



For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669) or scan QR code above to get the latest update.

4. REMOVE THE INSULATING SHEET BEFORE USING

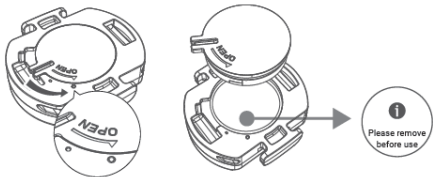

4.1 Turn the battery cover counter-clockwise toward big circle to open it. Please remove the insulating sheet before using it, then put the battery cover back and turn clockwise toward small circle to lock it.

Cadence mode
Blue light



Speed mode
Red light



4.2 Flashing Indicator Light


Power on:	Blue/Red light will flash once within 10 seconds after power on.
Wake up:	Blue/Red light will flash 6 times within 3 seconds after wake up.
Standby:	Blue/Red light will flash 2 times every 10 seconds.
Connect:	Blue/Red light will flash once every 15 seconds.

5. INSTALLATION


Attach the Flat Rubber Mat onto the back of the SunnyFit Bike Cadence then secure with Small Band or Plastic Cable Tie onto the pedal crank.




1

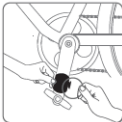

2

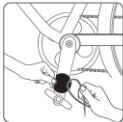

3

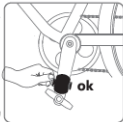

4

6. APP CONNECT INSTRUCTION

- 6.1 Scan the below QR code to download the SunnyFit APP.
- 6.2 You can also download the SunnyFit APP from the App Store or Google Play Store.



iOS/Android




SunnyFit




If you are unable to replicate these steps, or have any other issues with the SunnyFit app, please contact SunnyFit support at support@sunnyfit.com, or use the in-app "Contact Us" form to request support ("Me" tab -> "Contact Us").

6.3 Rotate the pedal crank and search for the SunnyFit Bike Cadence using ANT+ or Bluetooth device. Follow the steps on the SunnyFit APP choose the bike accordingly.

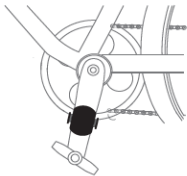

- 6.4 Go to the "Workout" tab, choose "Indoor" or "Outdoor" then click "Search". You should see the SunnyFit Bike Cadence (CB110) appear. Press "Select" and you will be prompted to choose your Bike.

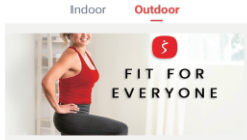

Searching For Equipment



Scanning...

- 6.5 For Indoor: Press "Select" to choose your Bike from the list, then press "Select" once more to bind.



SunnyFit Bike Cadence

Type: Indoor Bike

Model: CB110

Choose Your Bike

Please Choose Sunny Bike Model...



SF-B1970

Select



SF-B1970

Select



SF-RB4850

Select

- 6.6 For Outdoor: Press "Select" to choose your Outdoor Bike from the list, then press "Select" once more to bind.



SunnyFit Bike Cadence

Type: Indoor Bike

Model: CB110

Choose Your Bike


Please Choose Sunny Bike Model...



OUTDOOR BIKE

Select

NOTE: If you select the "OUTDOOR BIKE" on the SunnyFit APP, the SunnyFit Bike Cadence would change to Speed mode. Please remove the SunnyFit Bike Cadence from the pedal crank. Attach the Curved Rubber Mat onto the back of the SunnyFit Bike Cadence, then secure the SunnyFit Bike Cadence with Large Band or Plastic Cable Tie onto the flywheel axle.

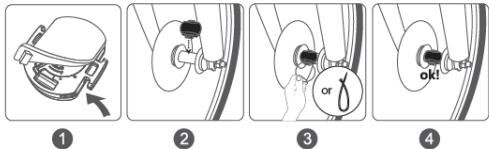

7. DISCLAIMER

- 7.1 The information on this manual is for reference only. This product may be subject to change based on manufacturer's research and development without notice.
- 7.2 We shall not make any statement or warranty about this manual or the product.
- 7.3 We shall not bear any legal responsibility for any direct or indirect, accidental or special damages, losses and expenses arising from or in connection with this manual or the product.

CONNECT WITH US

FOR FITNESS
ARTICLES, VIDEOS
& WORKOUTS



SUNNY[®]
HEALTH & FITNESS



@ SUNNYHEALTHFITNESS



@ SUNNYHEALTHFITNESS



@ SUNNYHEALTHFIT



/ SUNNYHEALTHFITNESS



/ SUNNYHEALTHFITNESS



@ SUNNYHEALTHFITNESS

WWW. SUNNYHEALTHFITNESS.COM