

Luna Fire™RX

USAGE INSTRUCTIONS

- >> To turn on, press and hold power button (1) for 2-3 seconds.
- >> Press repeatedly to cycle through modes. Double click the power button to activate strobe from any other mode. Single click to return to low mode.
- >> To turn off, press and hold power button for 2-3 seconds.



TO RECHARGE:

- >> Plug supplied USB cord in to a USB power source (500mA minimum) and then plug gently in to the covered charge port on the back of the unit. A red LED will light up to indicate charging is occurring and a green light indicates the Luna Fire RX is fully charged.
- >> Charge time is 3 hours for a fully depleted battery.
- >> When fully charged, unplug Luna Fire RX from USB power supply, return port cover gasket to original position and store charger cord until next use.








Luna Fire™RX

With included belt

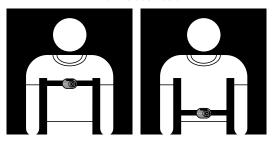



Change angle









IPX4

Weather Resistant





Cleaning and Drying









Lamp Precautions





Disposal



