

This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiPRO® MP900-BT, MaxiCheck® MX900-TS, MaxiCOM® MK900-TS, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiPMS® TS900. Ensure your Wi-Fi network is accessible and has a stable connection.

CONNECTING TO WI-FI



- Tap on the lower-right corner of the screen.
 The Quick Settings menu will appear.
- -A W



- . Make sure Wi-Fi is turned on.
- Select your local network.
- . Enter your network password to connect the Wi-Fi.



- A larger menu with additional options, including Wi-Fi, will appear.
- . Long press the Wi-Fi icon to adjust the Wi-Fi settings.



- The Wi-Fi icon will appear when a connection is established.

Android



• From the Android Home screen, select Settings.



. Enter your network password to connect the Wi-Fi.



- Make sure Wi-Fi is turned on.
- Select your local network.



Ensure you are connected to Wi-Fi: The Wi-Fi icon will appear in the lower-right corner.



This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiDAS® DS900-BT, MaxiDAS® DS900-BT, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiPRO® MP900-TS, and MaxiPRO® MP900-TS, and MaxiPROS® MP900-TS, and MaxiPRMS® TS900. Ensure your Wi-Fi network is accessible and has a stable connection.

TOOL REGISTRATION VIA PC



- · Visit https://pro.autel.com.
- Click Register to create your Autel ID.
- If you already have an Autel ID, log in and skip to Step 5.



• Enter your personal information. Fields marked with an asterisk (*) are mandatory.



- Enter your email address, then click Request.
- You will receive an email from Autel with your verification code. Open the email and copy the code into the proper input box.
- Set a password for your account, and enter the password again to confirm.
- Read the Autel User Service Agreement and Autel Privacy Policy, then check the box to accept the terms.
- After all the information is entered, click Register.



 Once your account is successfully registered, you will be redirected to the Product Registration screen.
 If not, click the button on the screen.



 Your product serial number and password are required to complete your registration. To find your serial number and password on the tablet: go to Settings > About.



- · Enter your tablet serial number and password.
- . Enter the CAPTCHA code as shown.
- Click Submit to complete your product registration.



This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiPRO® MP900-BT, MaxiCheck® MX900-TS, MaxiCOM® MK900-TS, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiPMS® TS900. Ensure your Wi-Fi network is accessible and has a stable connection.

TOOL REGISTRATION VIA TABLET



- Tap Autel User Center on the Job Menu.
- If you do not have an Autel account, tap Register on the Log-in screen.
- The Register screen will appear.
- If you already have an Autel ID, log in and skip to step 3.



- Once your account is successfully registered, you will enter the main menu of the Autel User Center.
- Select Device Management on the main menu.
- The Device Management screen will appear.



- Enter your personal information. Fields marked with an asterisk (*) are required.
- Input the verification code sent to your email address, then set and confirm your password.
- Read the Autel User Service Agreement and Autel
 Privacy Policy, then check the box to accept the terms.
- . After all the information is entered, tap Register.



- Tap the Link Device button on the upper-right corner of the Device Management screen.
- The serial number and password of the device will automatically appear on the Link Device screen.
- . Tap the Link button to complete the product registration.

DOWNLOAD SOFTWARE UPDATES

Software updates are available for FREE for the first year from date of purchase. Your tool must be registered as per the directions on Page 1 to download software updates. We recommend you update one app at a time. Selecting update all will take more time.



· Connect your tablet to Wi-Fi and plug it into a power source.



 Download the system update by tapping the Update icon on the right.



- If updates are available, the number of available updates
- will appear as a badge on the green **Update** button.

 Select the **Update** button to view a list of available updates.
- Topics of the control of the control

 Download any available updates for each vehicle manufacturer you service.




This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiDAS® DS900-BT, MaxiDAS® DS900-TS, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiPAS® MS900-TS, M




PRINT VIA PC



- Make sure your Windows PC and tablet are on the same Wi-Fi network.
 On your computer, go to www.autel.com, select Support > Downloads > Autel Update Tools.
- The commands have function (species and property of the command by the command by
- . Double click the setup.exe to install the program.

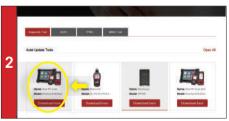

- . Locate the Maxi PC Suite software and click on the Download Here button.
- Open the .zip file.

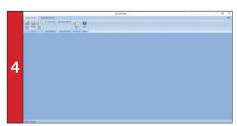

- Run PC Link on the computer. This was installed along with the installation of the Maxi PC Suite software.
- . Select MaxiSys Printer. Tap Quick Print or Print to start printing.



This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiPRO® MP900-BT, MaxiCOM® MK900-TS, MaxiCOM® MK900-TS, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiTPMS® TS900. Ensure your Wi-Fi network is accessible and has a stable connection.

PRINT VIA WI-FI



 On your tablet, tap Settings > Print Settings > Print via Wi-Fi.



 Select the file you want to print and tap the Print button on the top toolbar of the tablet.



Tap Select a printer on the top-left corner of the screen.
 The device will automatically scan for available printers.



· Select a printer and start printing.

VCI CONNECTION VIA BLUETOOTH



 Select the VCI Manager application from the Main Menu or from the bottom toolbar.



- . Choose VCI BT from the left side of the screen.
- Your tablet will automatically start scanning for available VCI devices. Found devices are listed on the right side of the screen.



 When a connection is established, the status of the connected device will read. "Connected."



 When the VCI is ready for use, a green badge will appear on the VCI button at the bottom of the screen.



This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiPRO® MP900-BT, MaxiPRO® MP900-BT, MaxiPRO® MP900-TS, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiPRO® TS900. Ensure your Wi-Fi network is accessible and has a stable connection.

VCI SOFTWARE UPDATE



 Connect the VCI to the tablet via Bluetooth.
 Connect the VCI to a power source to ensure update is installed correctly. Ensure the Internet connection is stable during update.



- Select VCI Update from the Connection Mode list on the left side of the screen.
- The current and latest version of the VCI software will appear.
- If available, tap the Update Now button to download any software updates.



Select the VCI Manager application from the Main Menu.



- The VCI update is now completed.

VCI FIRMWARE UPGRADE



 Connect the main cable to the diagnostics tablet and the test vehicle respectively.



• Select Firmware Upgrade from the left side of the screen.



· Select Settings from the Main Menu.



- The current and latest version of the VCI firmware will appear.
- If available, tap the Update Now button to download any firmware updates.

NOTE: Reconnect the main cable after the update is completed.



This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiPRO® MP900-BT, MaxiDAS® DS900-BT, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiPRO® MP900-TS, and MaxiPRO® MP900-TS. and MaxiPRO® MP900-TS. TS900. Ensure your Wi-Fi network is accessible and has a stable connection.

VID — VEHICLE IDENTIFICATION DETECTION AUTO VIN DETECT (COMPATIBLE WITH VEHICLES 2007 AND NEWER)



• Select Diagnostics from the Main Menu.



• Select Auto Detect from the drop-down menu.



• Select the blue VID button on the top-left of the screen.



- Once the vehicle is successfully identified, the Diagnostics Menu will appear.

AUTO-SCAN



· Select Diagnostics from the Main Menu.



• Select **Read** to acquire VIN automatically or type in the VIN manually.



- · Select the vehicle manufacturer.
- Select Automatic Selection.



- A System List of all faults will appear after the Auto Scan.
- Diagnostic Trouble Codes (DTCs) can be viewed by selecting Report at the bottom.
- Fault | #: Indicates faults are present; "#" indicates the number of detected faults.
- Pass I No Fault: Indicates the system was scanned and no fault was detected.
- -!-: Indicates the system was unresponsive.



This quickstart guide applies to the MaxiCheck® MX900, MaxiCOM® MK900, MaxiDAS® DS900, MaxiPRO® MP900, MaxiCOM® MK900-BT, MaxiDAS® DS900-BT, MaxiPRO® MP900-BT, MaxiPRO® MP900-BT, MaxiPRO® MP900-TS, MaxiDAS® DS900-TS, MaxiPRO® MP900-TS, and MaxiPMS® TS900. Ensure your Wi-Fi network is accessible and has a stable connection.

SUITE APPS

SERVICE





. Designed to provide quick access to the vehicle systems for various service and maintenance tasks.

DATA LOGGING





 Interactive recording sessions save vehicle testing data and enable direct contact with Autel technical support staff for first-hand troubleshooting of diagnostic bugs and errors.

REMOTE DESKTOP





• Enables you to authorize our tech-support specialists to remotely log into the tablet to solve your problems.

DATA MANAGER





. Designed to store all data files, including customer information, vehicle ID, and vehicle diagnostic records.