

SURFACE PREPARATION INSTRUCTIONS



1. SAFETY


WEAR NITRILE GLOVES AND GOGGLES BEFORE HANDLING COMPONENTS AND SOLUTION.



2. POWER OFF DEVICE

ENSURE THE DEVICE IS UNPLUGGED AND FULLY POWERED DOWN FOR AT LEAST 5 MINUTES.

DISMANTLE AND REMOVE ELECTRICAL COMPONENTS TO BE TREATED FROM DEVICE IF POSSIBLE.

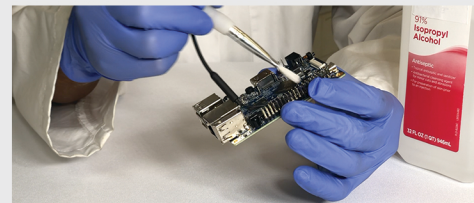

3. HAVE A CLEAN DEVICE

CLEAN ELECTRICAL COMPONENTS WITH 91% ISOPROPYL (RUBBING ALCOHOL) TO REMOVE DUST AND OILS.

WE RECOMMEND USING A SOFT BRISTLE TOOTHBRUSH AND/OR A LINT FREE MICROFIBER. ALLOW DEVICE TO DRY.



IMPORTANT

DO NOT SUBMERGE OR APPLY SOLUTION TO LCD SCREENS AND OPTICAL LENSES.


DIRTY COMPONENTS WILL PREVENT THE COATING FROM ADHERING TO THE SURFACE, RESULTING IN A INEFFECTIVE COATING.

NANOCOATING APPLICATION INSTRUCTIONS



1. FIND A CLEAN DIP TRAY

USE A CLEAN GLASS CONTAINER THAT WILL ALLOW THE COMPONENT TO SUBMERGE IN THE SOLUTION.

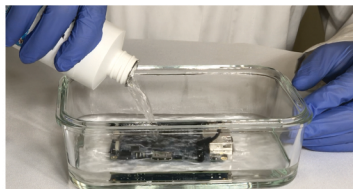


2. DIP DEVICE IN SOLUTION

PLACE ELECTRONIC COMPONENT IN THE GLASS CONTAINER, SLOWLY POUR THE SOLUTION COMPLETELY SUBMERGING THE COMPONENT FOR 5 SECONDS.



3. DRAIN EXCESS SOLUTION

REMOVE COMPONENT HANDLING BY IT'S SIDES ONLY IN A 45 DEGREE ANGLE. ALLOW EXCESS SOLUTION TO DRAIN FOR 5 SECONDS.

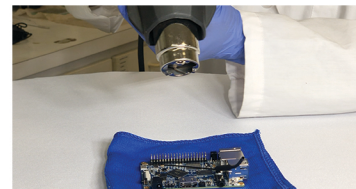

4. HEAT TO CURE COATING

SET ON A NON-CONDUCTIVE HEAT RESISTANT SURFACE. PLACE THE DEVICE INTO A CURE OVEN OR USE A HEAT GUN SET AT 176°F OR 80°C TO HEAT CURE THE SURFACE OF THE DEVICE (BOTH SIDES IF USING A HEAT GUN) FOR 1 MINUTE.

NOTE: WHEN USING A HEAT GUN, APPLY HEAT 3 INCHES AWAY FROM THE COMPONENT. DO NOT STAY IN SAME SPOT FOR MORE THAN 5 SECONDS. DEPENDING ON BOARD, HEAT CURING FOR UP TO 10 MINUTES MAY INCREASE DURABILITY. **UNUSED SOLUTION IN THE TRAY SHOULD BE RESEALED INTO THE ORIGINAL BOTTLE OR IN A AIR TIGHT CONTAINER TO PREVENT SOLUTION EVAPORATION.**



WARNING


ANY NEW SOLDER POINTS AND OR CONNECTIONS TO THE COMPONENT WILL REQUIRE TOUCH UP. (TOUCH UP INSTRUCTIONS ON THE BACK).

STORAGE AND HANDLING

- REMAINING SOLUTION IN GLASS CONTAINER SHOULD BE POURED THROUGH A STRAINER FILTER (190 MICRON) AND FUNNEL BACK INTO THE ORIGINAL BOTTLE FOR FUTURE USE.
- ENSURE CAP IS SECURED TIGHTLY AND STORE SOLUTION AT ROOM TEMPERATURE IN A COOL, DRY ENVIRONMENT, AND AWAY FROM DIRECT SUNLIGHT.


NOTE: WE RECOMMEND DIPPING CONNECTING CABLES TO ENSURE TWO COMPONENTS ARE COATED AND NOT JUST HALF OF A DEVICE. DIP, HEAT, CURE AND THEN CONNECT. OPTION 2 IS TO INSERT THE CONNECTOR AND THEN ADD A TOUCH OF SOLUTION ON TOP OF THE CONNECTOR TO SEAL THE CONNECTOR AREA

TOUCH UP INSTRUCTIONS

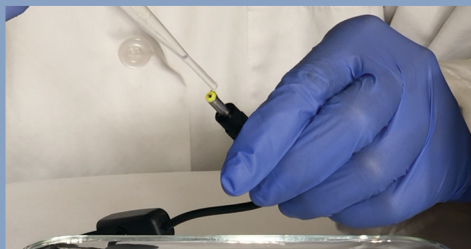


1. TOUCH UP CONNECTOR

USE A PIPETTE TO PUT DROPS ON THE HEADS OF MALE END OF CONNECTIONS/PLUGS THAT WILL BE DIRECTLY CONNECTED INTO THE TREATED COMPONENT. ENSURE THE CABLES ARE FULLY SATURATED WITH V1 SOLUTION AND HEAT CURE THE COMPONENT FOR 1 MINUTE.

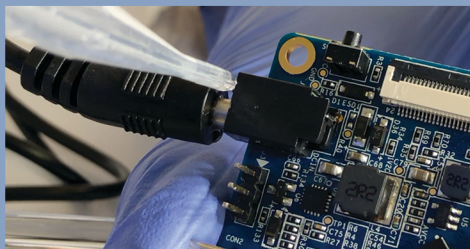

2. TOUCH UP CONNECTION AREA

ONCE THE CABLES HAVE DRIED, PLUG IN OR CONNECT THE CABLES INTO THE COATED COMPONENT AND ADD A FEW DROPS USING A PIPETTE TO THE SURROUNDING ATTACHED AREAS.

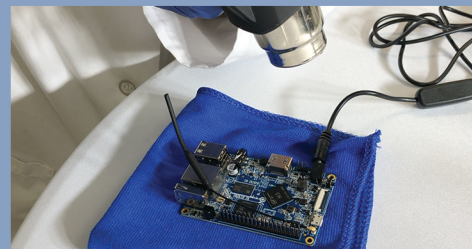

3. HEAT TO CURE

USE A HEAT GUN AT 176°F (80°C) TO HEAT THE CONNECTION POINTS FOR 1 MINUTE ON EACH SIDE OR 2-5 MINUTES IN A HEAT CURING OVEN. LET THE DEVICE COOL TO ROOM TEMPERATURE.

TOUCH UP COMPLETE.

SCAN FOR VIDEO INSTRUCTIONS



FOLLOW EACH PROCESS STEP BY STEP. SIMPLY SCAN THE QR TO LEARN MORE ON OUR APPLICATION VIDEO.



FIRST AID MEASURES

- **SKIN CONTACT:** IMMEDIATELY FLUSH THE CONTAMINATED CLOTHING AND FLUSH SKIN WITH WATER AND SOAP. IF SIGNS/SYMPTOMS DEVELOP, SEEK MEDICAL ATTENTION.
- **EYE CONTACT:** IMMEDIATELY FLUSH EYES WITH PLENTY OF WATER FOR AT LEAST 15 MINUTES AND THEN SEEK MEDICAL HELP. SEEK MEDICAL ATTENTION IF IRRITATION PERSISTS.
- **INHALATION:** FOR MASSIVE INHALATION. IMMEDIATELY TRANSFER THE PATIENT TO AN AREA WITH FRESH AIR. IF THE PATIENT STOPS BREATHING, PLEASE PROVIDE ARTIFICIAL RESPIRATION. IF BREATHING IS DIFFICULT, PROVIDE OXYGEN AND SEEK MEDICAL HELP.
- **INGESTION:** IMMEDIATELY OBTAIN MEDICAL ATTENTION. DO NOT INDUCE VOMITING.



DISCLAIMER

IN NO EVENT SHALL NANOFLOWX BE LIABLE FOR ANY DIRECT, INDIRECT, PUNITIVE, INCIDENTAL, SPECIAL CONSEQUENTIAL DAMAGES, TO PROPERTY OR LIFE, WHATSOEVER ARISING OUT OF OR CONNECTED WITH THE USE OR MISUSE OF OUR PRODUCTS.

OUR PRODUCTS AND ALL COMPONENTS ARE PROVIDED AS IS, WITH ALL FAULTS. NANOFLOWX MAKES NO WARRANTIES REGARDING OUR PRODUCTS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, ITS FITNESS FOR ANY PARTICULAR PURPOSE AND ANY STATUTORY WARRANTY OF NON-INFRINGEMENT, OTHER THAN THAT OUR PRODUCTS WILL MEET OR EXCEED ITS SPECIFICATIONS.