

## GOTRAX


## CHANGING YOUR HOVERBOARD'S BATTERY

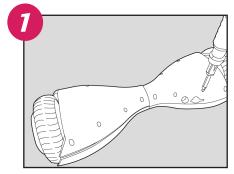


**STEP 1:** Flip over the hoverboard and unscrew all 8 screws (be sure to keep them in a safe place)

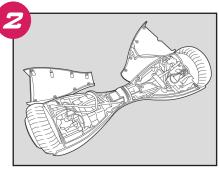


**STEP 2:** Carefully lay the covers down being careful to not remove the wires from the cover.

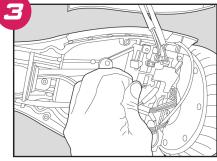


**STEP 3:** Unplug the cable with the yellow cap. (this is the side of the board that has the cable connected to the cap)

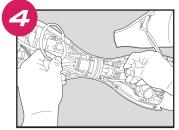

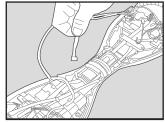


**STEP 4:** Pull the cable out from under the cover/case.








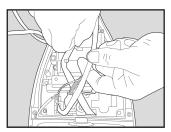

**STEP 6:** The battery has cables clipped so that wires are not loose in the hoverboard. Unhook the cables from the clip on the battery.

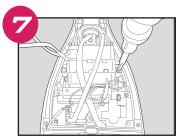

and out of the hoverboard.



**STEP 7:** Unscrew the metal bracket holding the battery in place. Once it is unscrewed you can now connect your new battery!