

**EdenPURE**

# UV-C Guardian Light



**Model No.: 5989  
Owner's Manual**

---

PLEASE READ AND SAVE  
THESE INSTRUCTIONS

---

---


SAVE THESE INSTRUCTIONS

---

## WHERE TO USE THE EDENPURE® UV-C GUARDIAN LIGHT

The EdenPURE® UV-C Guardian Light can kill all kinds of bacteria and viruses in a very short time. It can be used on door knobs, car/home keys, cell phones, computer keyboards, jewelry, wallets, purses, shopping bags, toys, baby products, clothing, pillows, shoes and any articles that you want to disinfect.

### PRODUCT DIAGRAM

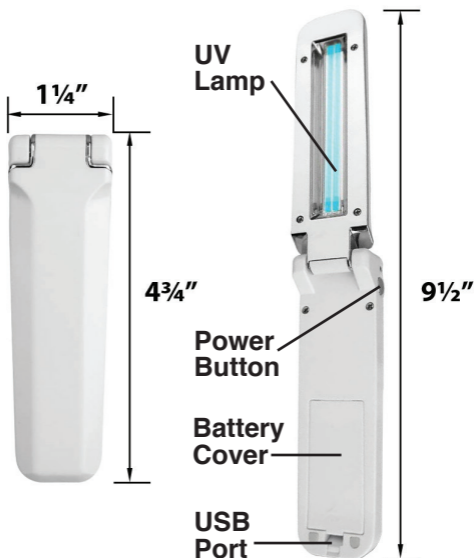

## HOW TO USE

1. Insert four “AAA” batteries (not included) into the battery compartment. Or use the included USB cable.
2. Press the power button for 3 seconds. The blue light by the power button will illuminate. The UV Light will come on only when the light is facing down or out away from your face. It will be off when it's facing up.
3. Point the UV Light toward the item(s) you want to disinfect. Keep the unit 1-2 inches from the item and move the UV Light slowly back and forth for 30 seconds. The longer the time, the better it disinfects.
4. To turn the unit off, click on the power button.

**Do not point the UV Light toward your face.**

**Keep away from children.**

**Clean the light with a damp cloth.  
Do not soak in water.**

## TECHNICAL SPECIFICATIONS

**Model:** 5989

**Voltage:** DC 5V

**Battery:** Four 1.5V AAA (not included);  
USB cable (included)

**Power:** 3W max

**UV Wavelength:** 254nm

**Product Size:** 4 ¾" x 1 ¼" x 1"

The EdenPURE® UV-C Guardian Light comes with a 1 year warranty. If your unit does not appear to be working properly, please contact our customer service center by calling 1-800-225-6595. Prior to your call, we encourage you to visit our service related website [www.edenpuresupport.com](http://www.edenpuresupport.com) for troubleshooting tips and service instructions if needed.

**EdenPURE®**

7800 Whipple Avenue NW

N. Canton, OH 44720

**800-225-6595**

**[custserv@edenpure.com](mailto:custserv@edenpure.com)**