

EdenPURE[®] 6 Whole House Air Purifier A 4647




INSTRUCTION MANUAL

BioTech Research
7800 Whipple Ave NW
Canton, Ohio 44767

Toll Free 1-800-466-7688

Control Panel

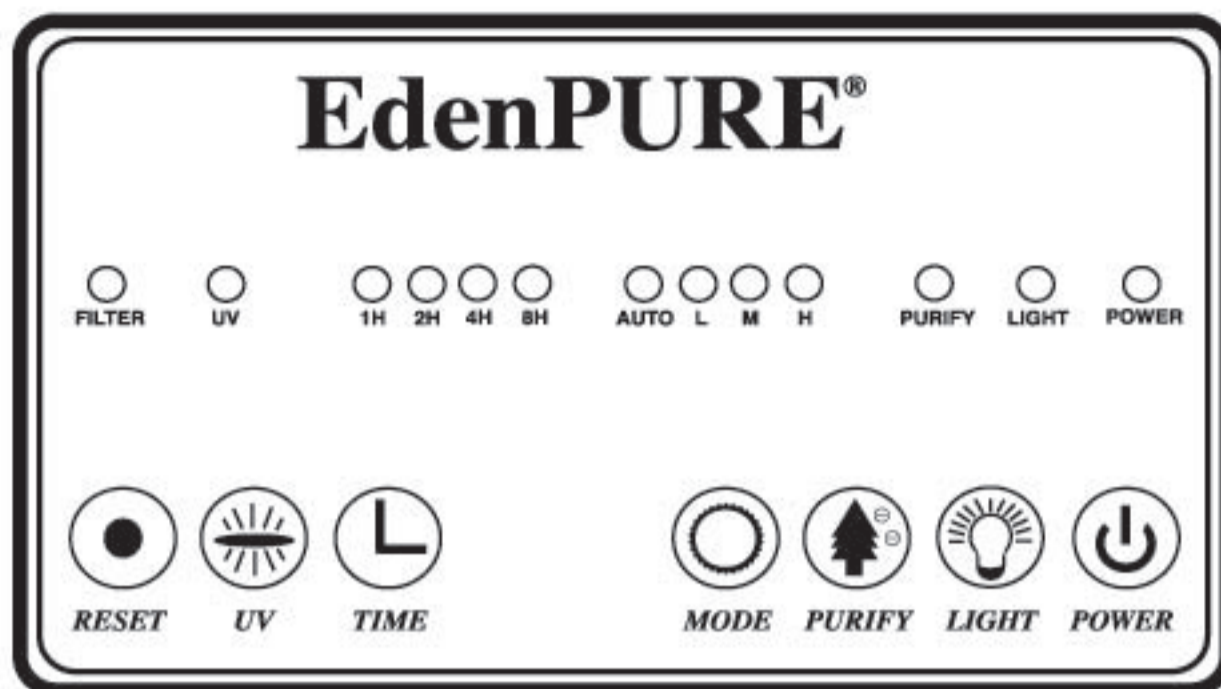

Operating Modes:

When operating modes are in use the corresponding light will illuminate.

Power – Plug unit into a standard 3 prong outlet. Once plugged in, the lights on the control panel will all light up for 1 second, then all the lights will be off except for the power indicator and the purifier will beep 3 times, indicating the unit is plugged in and in standby mode.

Light (Air Quality Sensor Light) – Once the power is turned on, pushing the “Light” mode button will turn the light sensor on and off. The sensor light will show air quality in 3 different levels; orange (fair), green (good) and blue (best).

Mode – Push the Mode button until the desired fan speed is achieved choosing between Auto, Low “L”, Medium “M” and High “H”. When the unit is set on Auto Mode, the unit will change fan speeds automatically depending on the air quality indicated by the air quality sensor light. When the air quality is poor, the orange light will be lit and the fan will switch to high speed automatically. As the air quality increases, the fan will switch to medium speed, green light lit then low, blue light lit.

Time – The timer mode can be set for the unit to automatically turn off or turn on after the desired number of hours (1 hour, 2 hours, 4 hours or 8 hours). Setting the unit to turn on: While the unit is in standby mode, press the Time button to the desired number of hours you would like to pass before the unit turns on. Setting the unit to turn off: While the unit is operating at your desired settings, press the time button to the desired number of hours you wish the unit to run then turn off.

Note: As time goes by, the light will show the time remaining (1h, 2h, 4h or 8h).

Purify – Pressing the Purify button once will turn the Purify Mode on or off. When operating in Purify mode, the unit will emit negative ions and a slight amount of activated oxygen to accelerate destruction of bacteria and odor clean-up.

UV - Pressing the UV button once will turn the UV light mode on or off. UV sterilizes the air, destroying bacteria, germs and viruses.

Note: The UV light indicator on the panel will keep blinking if the UV light could not be turned on (indicating malfunction). It will keep blinking until the UV light is replaced. UV bulbs can only be changed by a service center.


Reset – The Reset button is only used after replacing the filter. The Filter light will illuminate when the unit has accumulated up to 2000 operating hours, which means it is time to change to a new filter. Once the filter is changed, pressing and holding the Reset button for 8 seconds will restart the accumulating operating hours to zero again.

Instructions for cleaning and changing the filter:

Always unplug unit before removing the cover.

1. Remove front cover by gently tilting the top toward you to release the magnets that hold it in place then sliding out bottom clips.
2. Slide the pre-filter out by gently pulling the left side of the cover, the pre-filter can be cleaned with water and a mild soap.
3. Remove the HEPA/charcoal filter by using the attached tabs, it can be cleaned by using a vacuum attachment to clean any dust that has accumulated.

Allow pre-filter to dry completely.
Replace the HEPA/charcoal filter with a new filter and reassemble unit.

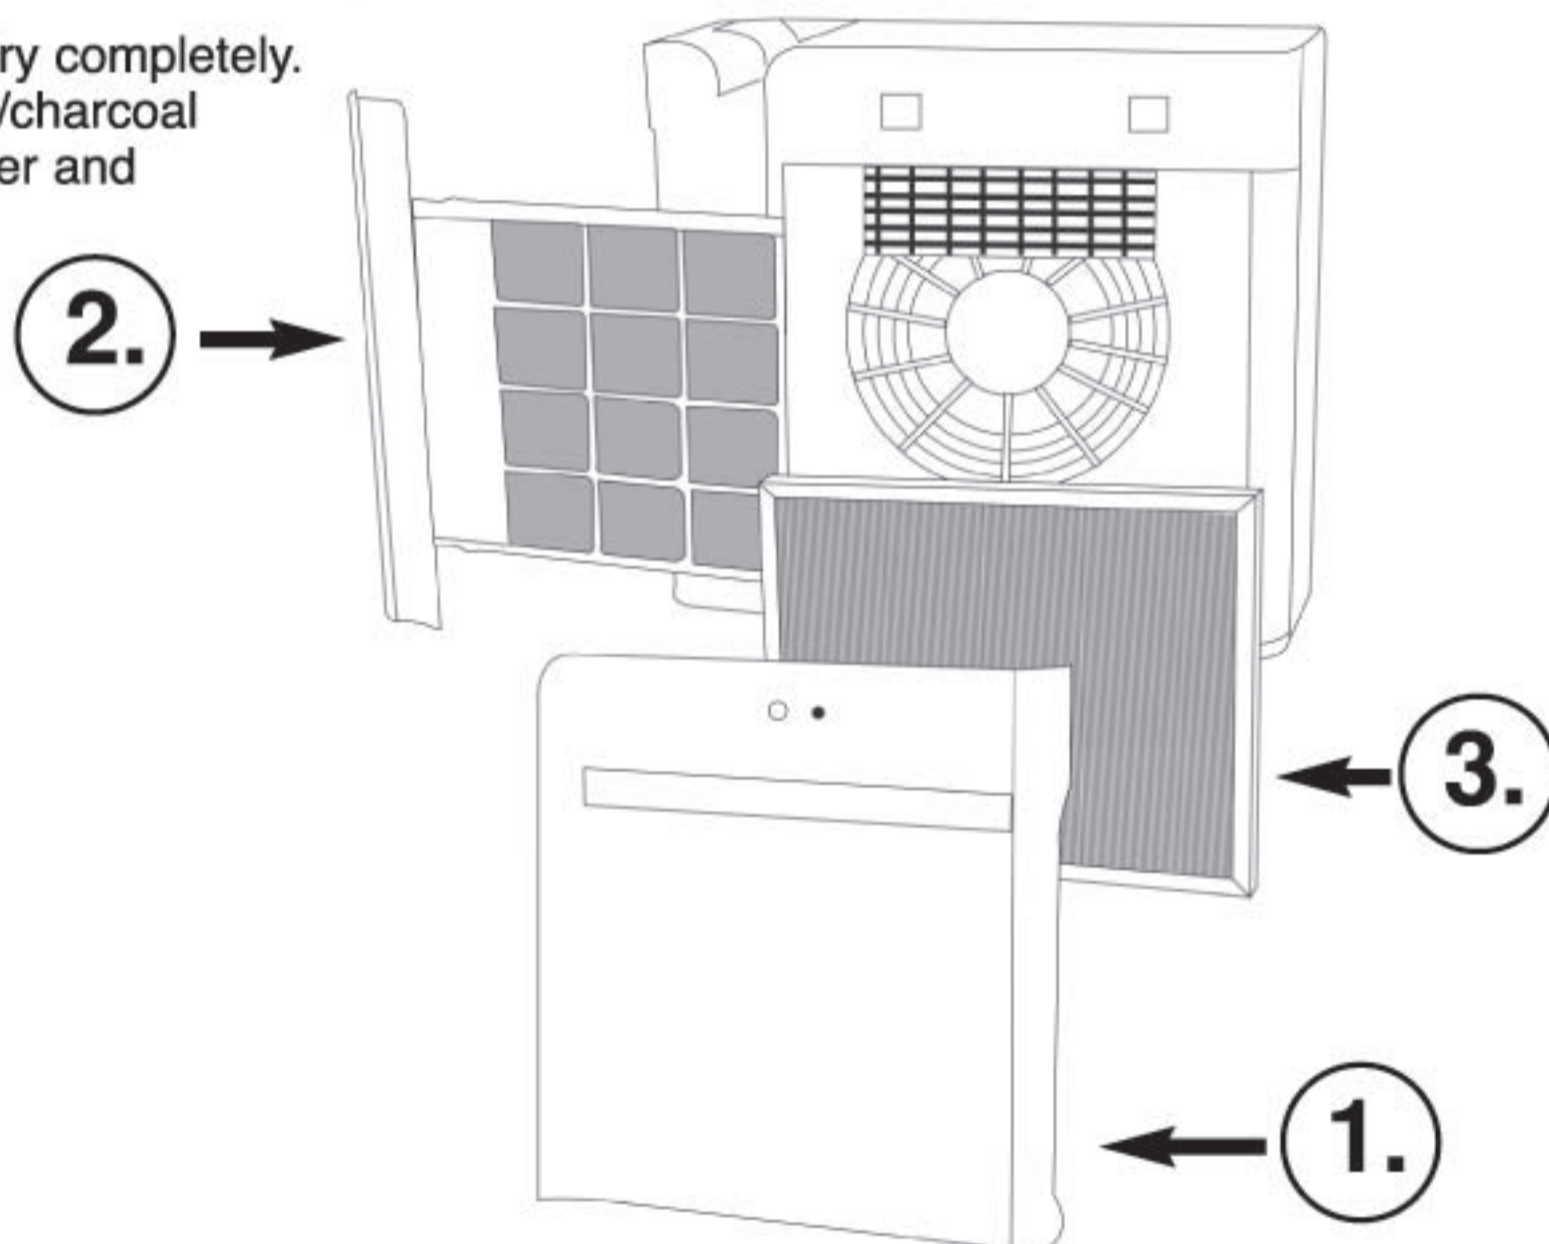

Placement of the Unit - For normal daily use, place the Purifier as high as possible in the room, near a cool air vent if possible.

Remote Control – All modes can be operated by the remote control. Slide open the battery compartment and insert the included 3V battery with the + side facing up.

Power Rated	120 v - 60 Hz
Power Consumption	50 Watts
Air Circulation	95 m ³ /hour
Fan Speed	High/Medium/Low
Remote Battery	CR2025 Lithium DC 3V
Noise Level	Below 45dB
Quartz Ultra Violet (UV) Lamp	
Input	AC 380V/160mA
Power Consumption	1.5 Watts
Length	100mm
Wave Length	365nm
Life Span	10,000 hours

Cautions:

1. To avoid possible damage and electric shock, do not insert metallic item into the purifier.
2. Keep the purifier away from flammable and explosive substances.
3. Avoid getting the purifier wet.
4. To prevent deformation to exterior, do not place the purifier under direct sunlight or too close to a heat source.
5. Keep at least 2 feet away from occupants in a room while in operation.

Mise en garde:

1. Ne pas insérer des éléments métalliques dans le purificateur d'éviter tout dommage ou choc électrique.
2. Keep le purificateur l'écart des matières inflammables et explosives.
3. Éviter d'obtenir le purificateur d'eau.
4. Ne pas placer le purificateur lumière directe du soleil ou trop près d'une source de chaleur pour éviter une déformation de l'extérieur.
5. Conservez au moins 2 mètres des occupants dans la salle pendant le fonctionnement.



For equipment having a grounding-type plug, the following instructions or the equivalent shall be provided. "To reduce the risk of electric shock, this equipment has a grounding type plug that has a third (grounding) pin. This plug will only fit into a grounding type power outlet. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet. Do not alter the plug in any way."

Attention:

Pour les équipements ayant une fiche de terre, les instructions suivantes ou l'équivalent doit être prévu: «Pour réduire le risque de choc électrique, Cet appareil a une fiche de type mise à la terre qui a un tiers (la terre) plug pin. This n'entre que dans une prise de courant mise à la terre type, Si la fiche ne rentre pas dans la prise, contactez un personnel qualifié pour installer le outlet. Do bon pas modifier la fiche de quelque façon. "



Conforms to UL STD. NO. 857
Certified to CSA STD. C22.2 NO. 187

Warranty

GUARANTEE

This product carries a 60-day satisfaction guarantee. If you are not totally satisfied, your purchase price will be refunded if you return your EdenPURE® unit within sixty (60) days. No questions asked.

ONE YEAR LIMITED WARRANTY

WARRANTY: The Company warrants this product, to the original purchaser or gift recipient, to be free from defects in workmanship and materials under normal use and service, for a period of one year from the date of purchase.

LIMITATIONS: ALL WARRANTIES IMPLIED BY LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. Some jurisdictions do not allow limitations on the length of the implied warranty, so the above limitation may not apply to you. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFIT OR MEDICAL EXPENSES CAUSED BY ANY DEFECT, FAILURE, MISUSE, OR MALFUNCTION OF THE PRODUCT.

Some jurisdictions do not allow the exclusion or limitation of incidental damages, so the above limitation or exclusion may not apply to you. The Company will not be responsible for damages or losses, direct or indirect, caused by misuse, abuse, accident, negligence, conditions of transportation or storage, or failure to follow instructions. The Company will not be responsible for any statements that are made or published, written or oral, that are inconsistent with this written warranty, or which are misleading or inconsistent with the facts as published in the literature or specifications by the Company.

WARRANTY CLAIM PROCEDURE: Any product that proves defective within the warranty period will, transportation charges pre-paid, be repaired or replaced at the option of the Company, free of charge. Simply include your purchase receipt and deliver to the address below.

For more information, or for assistance, please call or write:

BioTech Research
7800 Whipple Ave. NW
Canton, OH 44767
1-800-466-7688