



M Y S T E R Y V I B E

YOUR PLEASURE, PERSONALIZED

CRESCENDO
USER GUIDE

LONDON • NEW YORK • LOS ANGELES



M Y S T E R Y V I B E

YOUR PLEASURE, PERSONALIZED

CRESCENDO

**Crescendo is the first and only pleasure toy
that you can personalize to your body,
moods and desires.**

mysteryvibe.com




WARNING: Please consult with your physician before using our product. Never disregard professional medical advice or delay in seeking medical treatment. This product is not intended to diagnose, treat, or cure. Our raw materials are manufactured solely for industrial, not medical, purposes. People who are allergic to durian, tree nuts and tree nut derivatives or musk thistle seed should avoid contact with this product. We make no warranties, express or implied, with respect to the merchantability, fitness, or suitability of our material for use in medical applications. We make not warranties or representations that our material is manufactured in accordance with quality standards that may be necessary for materials intended for use in medical device applications. We have not sought or received any rulings from the US. Food and Drug Administration as to the safety or effectiveness of our product for medical purposes. We do not have expertise in the field of medical devices or other medical products. Persons using our product must solely rely on their own judgment, and such persons shall be solely responsible for the suitability of our product for any medically-related applications.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


FCC ID: 2AHVA-6900

Press any button firmly for 1-sec & release to Turn ON

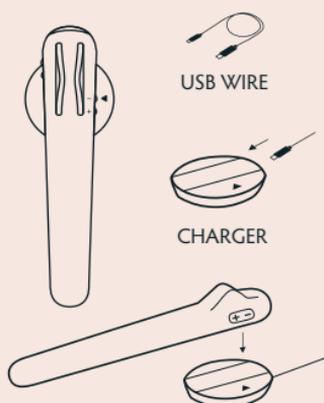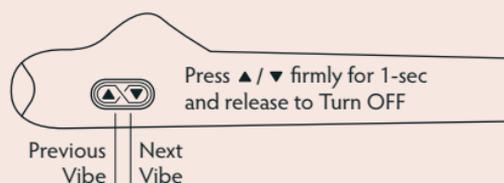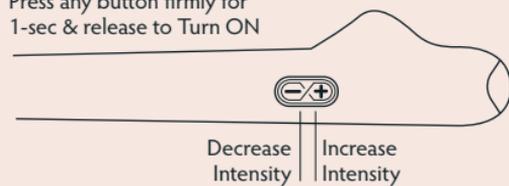


CHARGING CRESCENDO

Connect the small end of the USB cable to the port at the back of the charger. Plug the larger end of the USB cable into any USB plug or computer. Place Crescendo with its ⊖ button next to the ◀ on the charger. Charger light will blink green to indicate charging and go solid green when fully charged. For faster charging speed use a USB3 port or wall adapter.

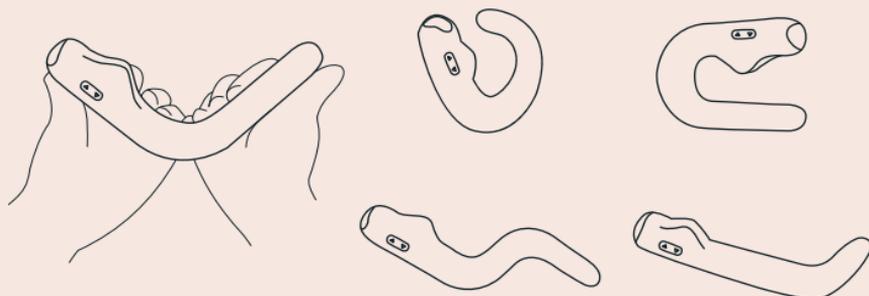

ONE SHAPE DOES NOT FIT ALL

Crescendo is designed to be all about you - your body, your pleasure, your way. Simply bend Crescendo with your hands to take any shape your body desires. Use it for solo play or duo play. Reach that special spot or many spots at once. Explore and discover new heights of pleasure.

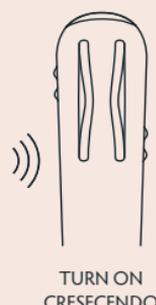

MYSTERYVIBE APP

Download the App from the Apple App Store. Find your favourite Vibes and create your pleasure playlist, lie back and enjoy. Turn on Bluetooth on your phone and turn on Crescendo. The App will then automatically find and connect to your Crescendo.



SAFETY

Make sure to clean Crescendo with soap and water before and after every use. To avoid any injury only insert Crescendo at the TIP end and not the BASE end. For more details please read our FAQs and T&Cs at MysteryVibe.com.

Register your Crescendo on MysteryVibe.com to activate your 1 year warranty and get exclusive discounts and offers.

DETAILED INSTRUCTIONS

1 CRESCENDO CONTROL

1.1 MODES OF OPERATION

Crescendo can be controlled in two modes.

- **Standalone Mode:** Control is solely by the buttons on the device and the device only runs vibes that are stored on the device.
- **Smartphone Control Mode:** Control is achieved via Bluetooth from a smartphone using the MysteryVibe app. The app is available to download for free on the Apple and Google App stores.

1.2 STANDALONE OPERATION

In the standalone mode, users can: (i) turn Crescendo on / off; (ii) Select 1 of 12 Vibes stored on Crescendo; (iii) increase / decrease intensity of each Vibe.

1.3 SMARTPHONE OPERATION

In the smartphone mode, users can: (i) connect to Crescendo from their iOS or Android phone using the MysteryVibe App; (ii) Preview Vibes offline and in connected mode; (iii) Add / Remove Vibes on Crescendo; (iv) Download new Vibes from the VibeStore; (v) Update Crescendo firmware.

2 USER INTERFACE

This sections describes the user interface and controls currently implemented.

2.1 OPERATION

CURRENT STATE	ACTION	SWITCH OPERATION	WHAT TO LOOK OUT FOR
Device Off	Power On	Press any button for 2 seconds.	Side lights will turn on and stay on for 5s. Crescendo will run the last played Vibe.
Vibe Running	Next Vibe	▼	Move to next Vibe.
Vibe Running	Previous Vibe	▲	Move to previous Vibe.
Vibe Running	Increase Intensity	⊕	Increases vibe power (1-16 levels).
Vibe Running	Decrease Intensity	⊖	Decrease vibe power (1-16 levels). If - is held down, the power will reach minimum intensity and then turn Crescendo off.
Vibe Running	Power Off	Hold the ▲/▼ for 2 seconds	Vibe stops and side lights turn off to indicated Crescendo has powered off. If Crescendo is connected to the App, it will stay on until Bluetooth is disconnected.

2.2 CHARGING

To charge Crescendo, connect the charger base with the supplied USB wire to a USB plug. The light on the side of the charger will flash Red – Green – Orange to indicate correct power.

Place Crescendo so that its ⊖ button is next to the ◀ on the charger. Crescendo will start charging and any running Vibes will stop. The side lights on Crescendo will breathe to indicate charging. The light on the side of the charger base will blink green. When charging is complete, the green light will stop blinking and go solid.

For optimum charging use a USB plug supplying 800mA or a USB3 port on your computer. Charging time will vary depending on the power supplied by the USB port used. If the Crescendo battery is completely depleted so it doesn't turn on at all, it will take longer to charge as it will need to restore battery voltage first to get onto fast charging.

If Crescendo is placed on the charger while still connected to the app, the Bluetooth will continue to operate and take longer to charge. Make sure to disconnect from the app before putting Crescendo on charge. If you see a solid or flashing red on the charger light, this indicates a foreign object detection. Disconnect the USB wire from the charger and wait for 10s before plugging it back in.

3 DEVICE SAFETY INSTRUCTIONS

1. Keep away from children.
2. Crescendo should only be charged with the supplied charger base.
3. Clean Crescendo before and after use. Crescendo can be washed under water with normal soap.
4. Crescendo should not be used if there are any signs of damage to the outer silicone.
5. Only use water based lubricants with Crescendo.
6. DO NOT apply any chemicals to the product.
7. DO NOT throw the product into flames.
8. DO NOT use near heat sources such as radiators or stoves.
9. DO NOT expose the charger base to moisture.
10. Crescendo must not be used while driving or operating machinery.
11. DO NOT force open any part of the product.
12. DO NOT pierce any pointed objects into the product.
13. Crescendo contains an internal SD Card and Lithium Polymer battery. These are sealed inside the unit and cannot be replaced.
14. DO NOT leave the product in direct sunlight.
15. DO NOT extinguish with water in case of ignition or fire.
16. After extended periods of storage, it may be necessary to charge and discharge Crescendo multiple times to regain optimum performance.
17. Store the product in an environment which maintains the temperature between -10 and 35°C.
18. Store the product in an environment free of dust.

4 DISPOSAL

Disposal of old electronics devices according to the special waste directive, in compliance with the valid regulations in the European Union and other European countries or general national regulations. Please observe the disposal regulations specific to your country and ask your retailer about the disposal options in case of doubt.

5 DEVICE COMPLIANCE DECLARATION

5.1 EMC

Crescendo and the charger base have been tested and evaluated by an independent accredited certification firm and found to be compliant with all applicable EMC, RF and safety requirements as per standards:

EN 55014-1:2006 + A1/2009 + A2/2011

EN 301489-3 V1.6.1

EN 301 389-17 V2.2.1

EN 55014-2:1997 + A2/2009

EN 55014-2:2015

5.2 FCC

5.2.1 CRESCENDO

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



FCC ID: 2AHVA-6900

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

5.2.2 CHARGER BASE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful

interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



FCC ID: 2AHVA-6900DK

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The charger should not be used within 20cm of the human body with RF enabled. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.