

**ERGO**  **PEDIC**®  
*Comfort in Motion*

# USER MANUAL



### 1:FORWARD:

Dear Customer;

The team from Ergo Pedic would like to thank you for the confidence you've placed in our Patent US 9642 757 B2 Tilt Function adjustable bed.

You have received a product designed with a high degree of functionality, quality and safety. The team is committed to thoroughly test, inspect and carefully package your product before leaving our factory. The bed you received left our care in perfect condition. When you accept delivery of the Tilt Function adjustable bed, you are responsible for the proper and safe use according to it's intended purpose.

We ask that you read this document carefully before using and mind the safety notes listed. Any failure, loss of use caused by ignoring or improper use as noted in this document, will void the warranty.

### PLEASE KEEP THIS DOCUMENT FOR FUTURE

### REFERENCE:

If you have any questions or concerns about the content of this document or the installation and operation of the Tilt Function adjustable bed, please contact your retail dealer for assistance.

### 2: SAFETY NOTES:

This product complies with all relevant safety regulations.

2.1: Please read this document carefully before using the bed for the first time. This document contains important information regarding installation, use and safety of your Tilt Function adjustable bed.

2.2: The manufacturer does not accept liability if these instructions are not followed.

2.3: Please contact an authorized technician or your retail dealer if any part or component of the bed needs repair or replacement; in particular any electrical components. Do not attempt to open or repair any electrical components except to replace batteries.

2.4: Please keep all documents in a safe place for future reference.

2.5: Do Not Overload the bed. All weight limits include the mattress

Weight limits: Twin 450 lbs., Full 650 lbs., Queen 750 lbs.

2.6: When setting up the bed please make sure all electrical cables and wires are routed so they clear all parts and are not damaged during the operation of the bed.

If any cables or wires are damaged the bed should not be operated and should be disconnected from all power sources. Immediately contact your retailer for service.

2.7: The Tilt Function adjustable bed is designed for NON commercial, indoor use only.

2.8: Operating conditions.

1) Ambient temperature 50-105 degrees F.

2) Relative humidity non condensing less than 95%.

2.9: Never let children play or tamper with the motorized functions of the bed. Keep pets away from the bed when operating to prevent entrapment.

### 3:SET-UP

Please check the contents of the carton for completeness.

The carton contains the pre-assembled bed (1); a carton with 4 legs, the remote control and the power supply(2) ; the mattress retainer bar(3).



Fig.3.1 Bed packed for transportation.

3.1: Open carton with the 4 legs and screw the legs into the threaded holes as shown.



3.2: Cut the plastic ties holding the power supply. Set power supply and hand control aside.

3.3: Remove the Tilt Function adjustable bed from its carton and place on its legs. Locate the chrome mattress retainer bar at the foot of the bed. For transportation reasons the bar was installed upside down. Remove the secure pins from both ends and remove the bar from the plastic holders. Turn bar around and insert into the plastic holders. Snap these secure pins in place. Position the bed in the room as desired and double check to ensure that all cables and wiring are completely free of all moving parts.

3.4: Remove the hand control from its carton note 3 AAA batteries are included. Open the back cover on the hand control and insert the batteries as indicated.


3.5: Plug the power supply into a standard household wall socket. A small green light should appear to indicate that the power is on.

3.6: Install the Motosleep mobile APP.

## IOS

---



- Open APP Store on your IOS device.
- Tap the Magnify Glass Icon  and search with the keyword **MOTOSLEEP**
- Tap on **GET** and **INSTALL** to install the APP.
- Wait for the download/installation to be complete.

## Android

---




- Open [www.motosleep.com](http://www.motosleep.com) from your browser.
- Scroll down to the bottom of the page and press download.
- In the download page, tap the download button to download the APP.
- Open the download file and install the APP.

## 4.operation


# REMOTE control function




### SELECT BUTTON


 Press these two button to select head, foot or tilt zone.


### ADJUST

 This button lifts the Head/Foot/ Tilt section of the foundation.

 This button lowers the Head/Foot/ Tilt section of the foundation.

### MESSAGE FEATURES

 Turn on the head massage. Cycle through 3 massage intensities.

 Turn on the foot massage. Cycle through 3 massage intensities.

**STOP** Turn off the head/foot massage.

### SETTING PROGRAMMABLE POSITION

**M1**  
**M2** One touch programmable positions.

### UNDER BED LIGHTING

 Under bed LED lighting on/off.

### ONE TOUCH BUTTON

 One touch **ANTI-SNORE** preset position.

 One touch flat position.

**TV** One touch **TV** preset position.

**ZG** One touch **ZERO G** preset position. **ZERO G** adjusts your legs to a higher level than your heart, helping to relieve pressure of the lower back and promote circulation.



### 4.1: PAIRING REMOTE

The original remote that comes in the box is already paired to the foundation. No further action is required. In the event when the remote is not paired with the foundation, follow the pairing instructions below.

STEP 1: Make sure the batteries are good. Replace them when needed.




STEP 2: Unplug the power cord from the power source. If 9V backup batteries were installed in the power supply, remove them.

STEP 3: Press and hold Select buttons  and  until the LCD screen of the remote control shows PAIR.

STEP 4: Plug the power cord back into the power source. You will hear an activation sound in 2 seconds, indicating the remote is paired to the power foundation.


### 4.2: SETTING PROGRAMMABLE POSITION

STEP 1: Adjust the head, foot and neck to your desired position.

STEP 2: Press and hold the LED button  for about 5 seconds until the screen shows **SAVE**, then press programmable buttons **M1** or **M2**, until you hear 2 beep sounds.

STEP 3: To save a new position, repeat step 1 and 2 and the new position will be saved.

### 4.3: BATTERY LEVEL

 The battery icon in the upper-right corner shows the battery level, replace the batteries when the battery level is low.

#### 4.4: Synchronizing Two Foundations with Sync Cord


If simultaneous operation of two foundations is desired, please follow the steps listed below.

STEP 1: Unplug foundations from the power source.

STEP 2: Connect the male ends of the sync cord to the female sync plugs of the control boxes (Refer to Fig.5.2).

STEP 3: Plug foundations back into the power source.

STEP 4: Check to ensure all cords are securely attached. Either remote will operate both foundations simultaneously.

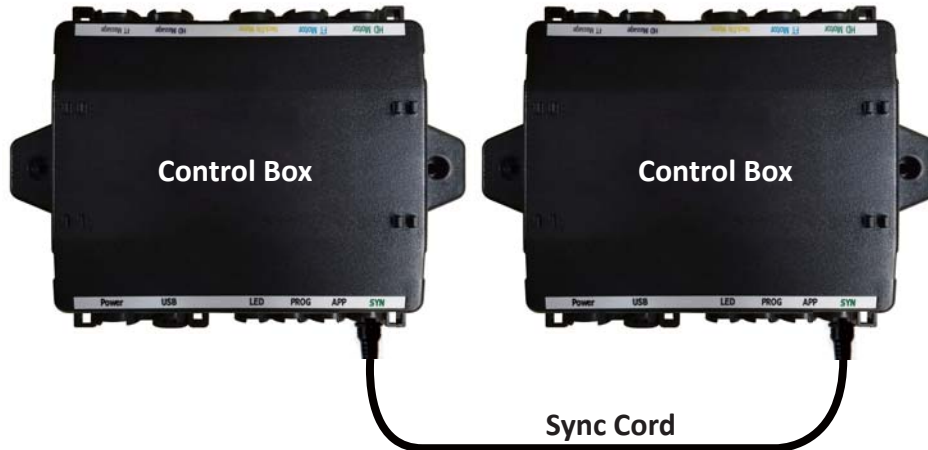

**5: TROUBLE SHOOTING:**

**5.1: If the bed does not operate at all.**

Double check to make sure the bed is plugged into an active household outlet. The green indicator light on the power supply box should be on. If the light is not on, then the bed is not receiving power. Double-check all connections and make sure the bed is plugged into a working power outlet.

**5.2: A single function does not operate.**

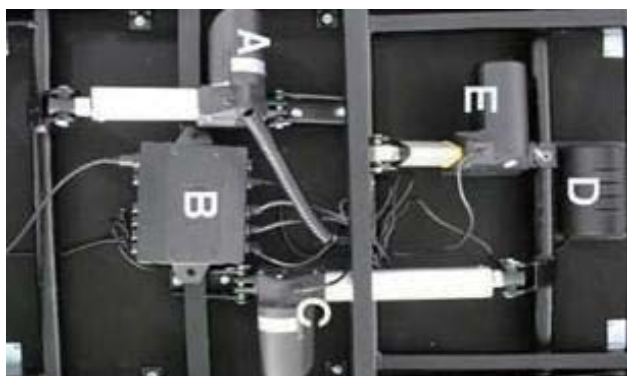


Fig.5.1 Electrical components

- (A) Foot rest motor
- (B) Control box
- (C) Back rest motor
- (D) Massage motor (head end, foot end not shown)
- (E) Tilt Motor

Double check all cable and wiring to ensure everything is firmly connected as shown in Fig. 5.

**5.3: The hand control does not work.**

Double check to make sure the protective plastic strip has been removed from the batteries as described in 3.4. If the hand control does not light up when any button is pressed, the batteries need replacing. Replace the batteries with 3 AAA. Open the battery compartment and replace batteries maintaining the polarity as indicated.



Fig.5.2 Control Box (B)

- (a1) cable connection massage motor foot end
- (a2) cable connection massage motor head end
- (b) Plug back rest motor
- (c) Plug foot rest motor
- (d) Plug bed lift motor (optional)
- (e) Power plug
- (f) USB charger plug
- (g) LED light plug
- (h) APP
- (i) Syn cord plug





The team from Ergo-Pedic would like to thank you for your purchase of our Patent US 9642 757 B2 Tilt-3 Power Adjustable Foundation.

M.B. & G. MARKETING  
P.O. BOX 2787 INDIO, CA. 92202, U.S.A.  
TOLL FREE SERVICE: 844-347-7322  
[WWW.ERGOPEDIC.NET](http://WWW.ERGOPEDIC.NET)