

# Lilitab Wall Basic Mount

Assembly Instructions

v3.0

## TABLE OF CONTENTS

Assembly Preparation and Packing List.....	2
Assembly Instructions .....	3

### TO ASSEMBLE YOUR LILITAB YOU WILL NEED:

- ✓ Apple iPad power adapter that came with your iPad

### TO MOUNT YOUR LILITAB YOU WILL NEED:

- ✓ 4 x flat-head mount screws suitable for your wall surface




← Scan to watch  
assembly videos on  
our YouTube Channel!


### GOT QUESTIONS? WE'RE HERE TO HELP!

**EMAIL** [support@lilitab.com](mailto:support@lilitab.com)    **PHONE** 888.705.0190

## PACKING LIST

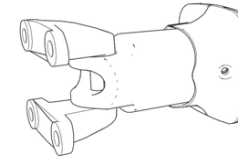

1 x Wall Basic Mount

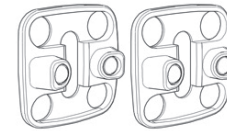


2 x Bumper Plate



1 x Silver L Key

# ASSEMBLY INSTRUCTIONS

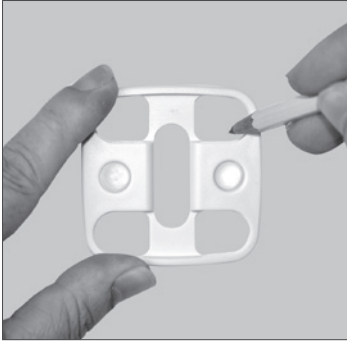

- 1. Use the bumper plate appropriate to your deployment to mark screw locations on your wall.**

**NOTE:** If you are routing the charge cable through your wall substrate, trace the oval opening in the center of the bumper plate to mark the area that you will need to cutout to pass the cable through.




- 2. Thread charge cable** that came with your kiosk through the top of the wall mount. Cable can run down/along wall or through wall substrate.



- 3. Attach Wall Basic Mount** to bumper plate using **four (4) flathead screws** appropriate for your wall substrate (not included).

**NOTE:** Ensure the bumper plate is positioned between the mount arm and wall in the desired orientation to prevent the unit from hitting the wall when positioned.

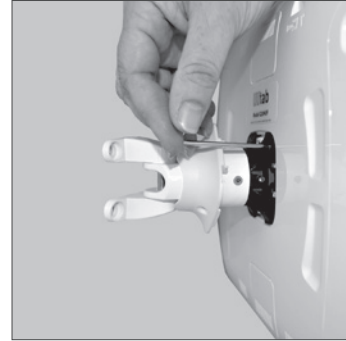

- 4. Attach the Head Unit** using the **four (4) M3x7mm Head Mount Security Screws** and **Silver L Key**.

**NOTE:** Rotating the neck security cover 90° will make access to the screw openings easier to access.



- 5. Neck Security Cover.** After you attach the Head Unit, slide the security cover up and secure in place using the **two (2) M3x10mm Security Cover Screws** and **Silver L Key**.



Refer to your lilitab Head Unit owner's manual for tablet installation instructions.