## PHRAMO Suzuki DL1050 Headlight Guard Instructions


Kit Includes:

<b>1X</b>	Clear Guard	C09005
<b>2X</b>	Brackets	CFK09005A & CFK09005B
2X	M8 X 40mm Bolts	CBOLM80012
<b>4</b> X	M5 X 16mm Bolts	CBOLM50007
2X	Spacers	CSPAM80004
<b>4</b> X	Rubber Anchor Nuts	CNUTM50001
<b>8X</b>	Washers	CWASM60004

- Assemble the Pyramid headlight guard as shown in the diagram below. Don't over tighten.
- Remove the two bolts on each side of the headlight.
- Fit the Pyramid headlight guard using the M8 X 40mm bolts & spacers on each side.
- Start by fitting loosely on each side. Once happy with the positioning, tighten the side mountings.

## Note: The slotted mounting holes in the brackets allow for any small adjustments backwards and forwards.

Check fixings periodically.

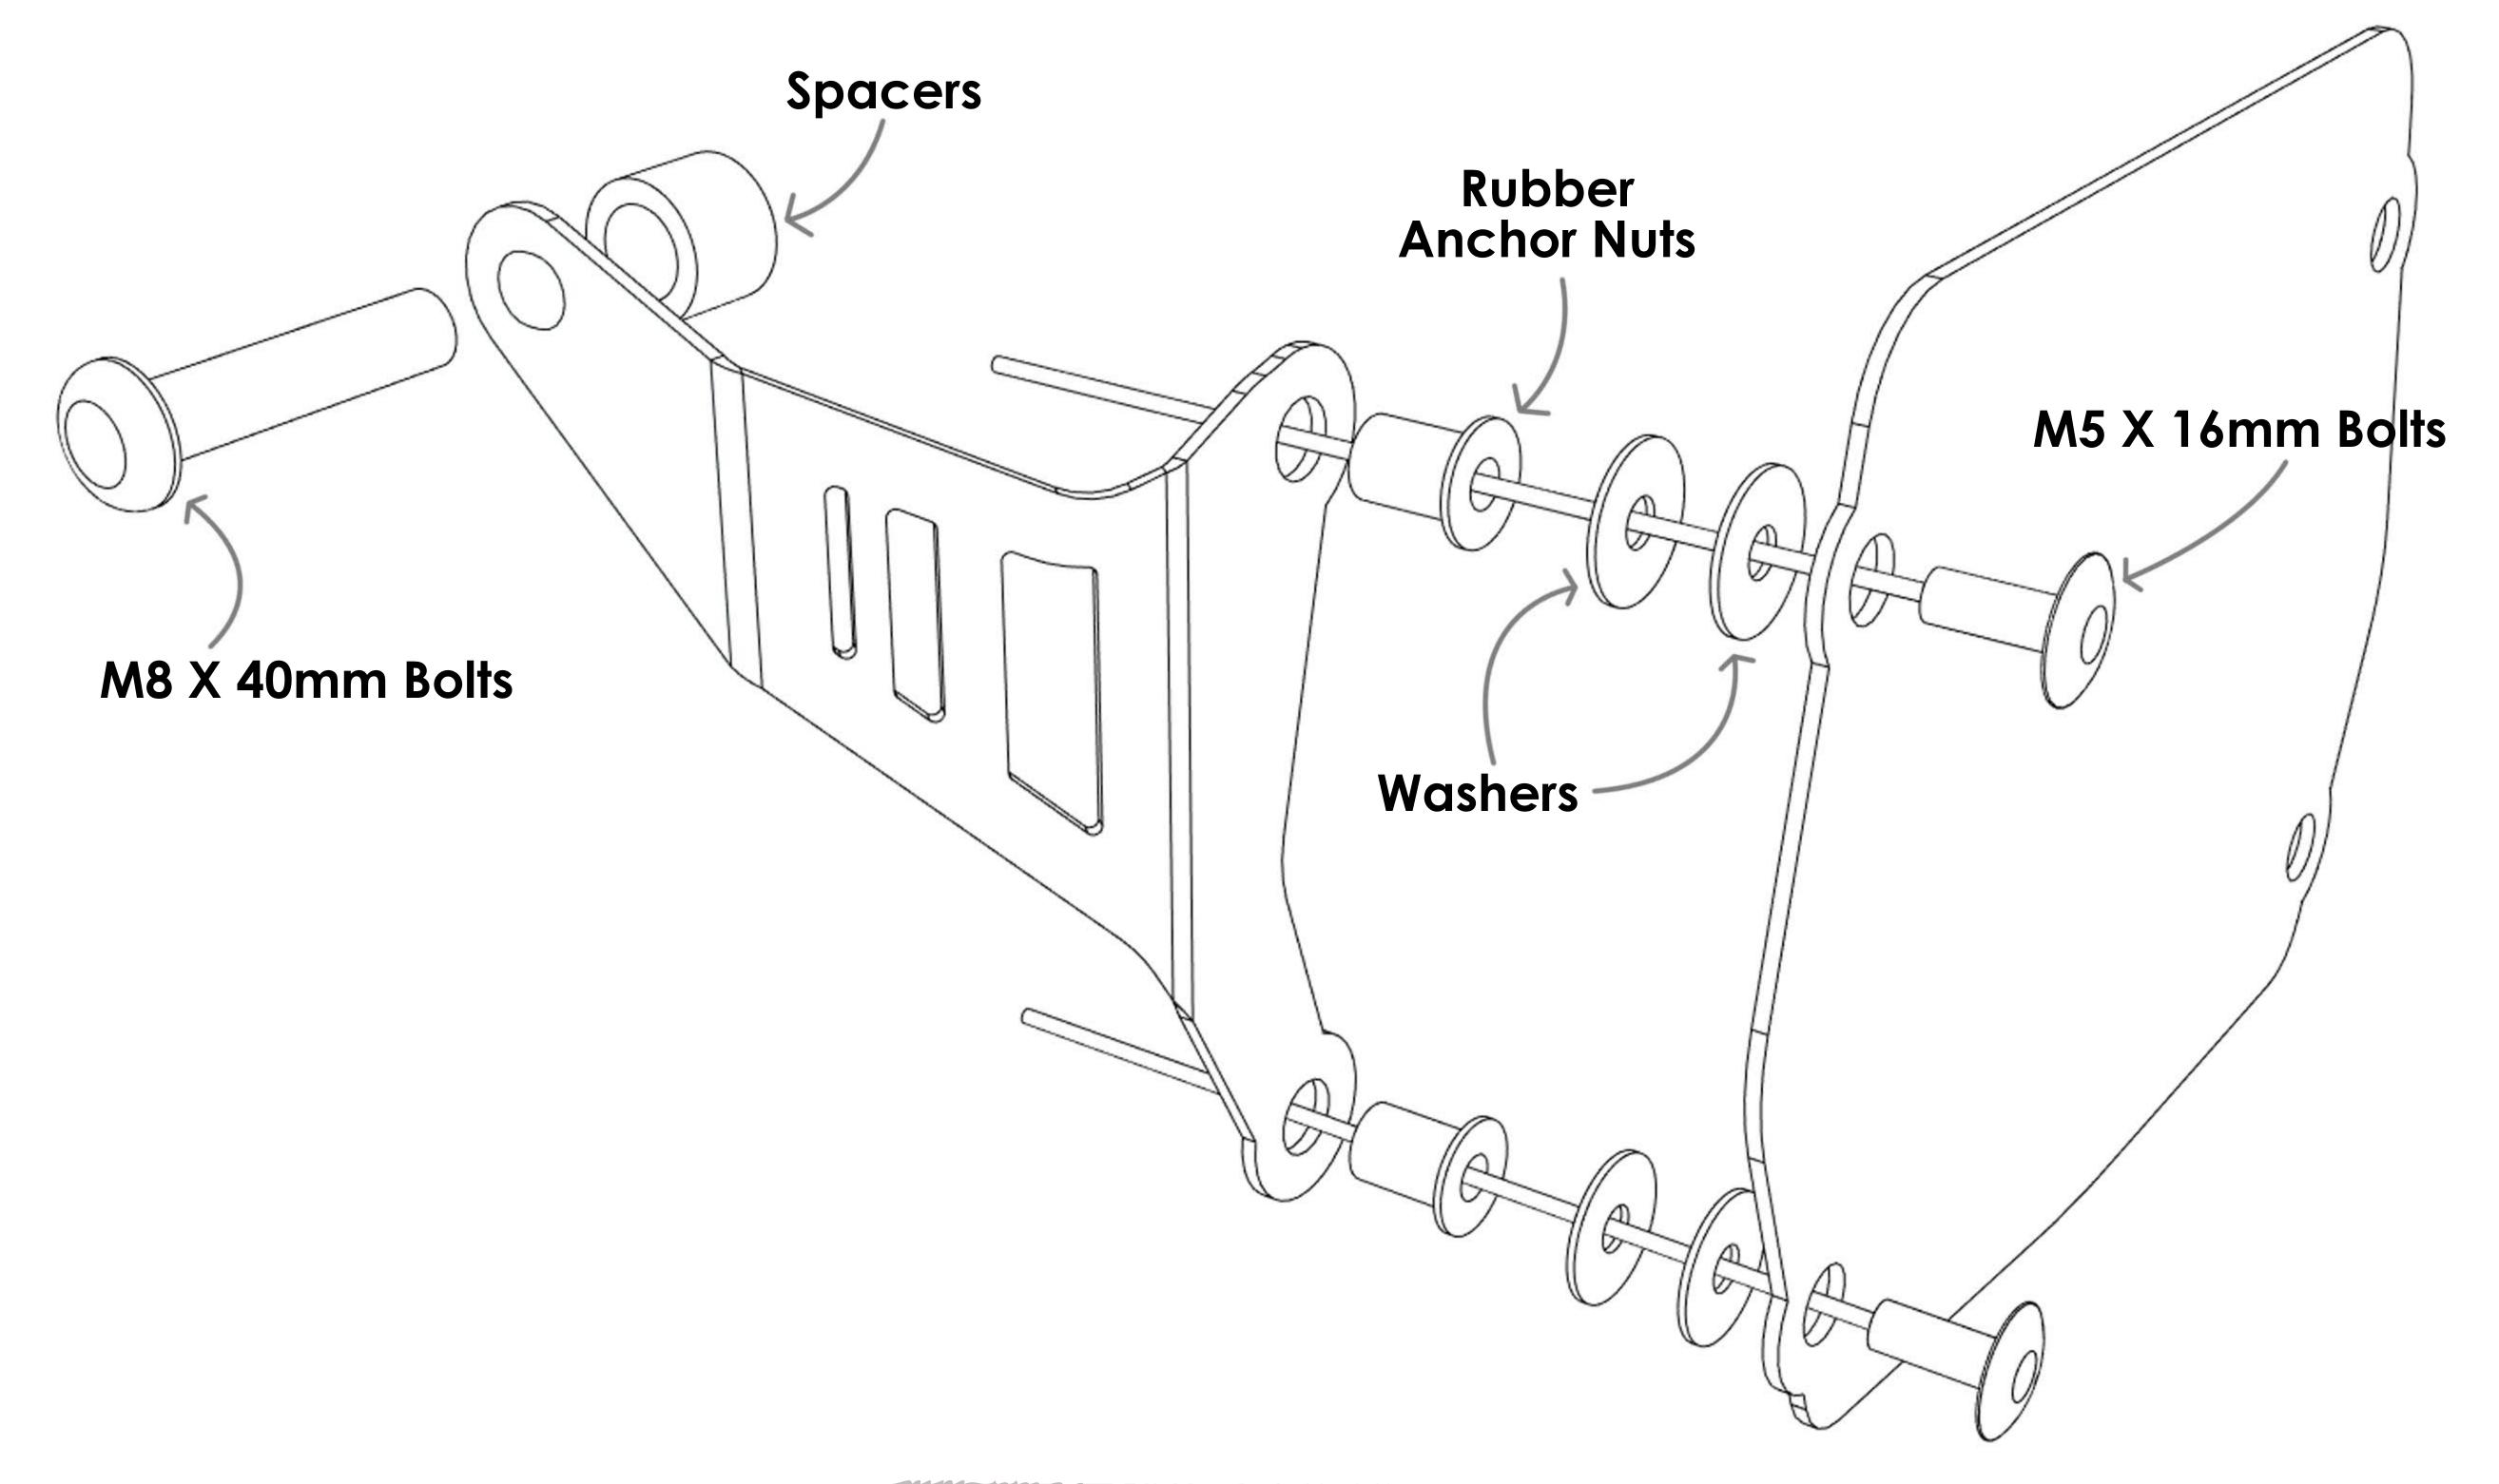



sales@pyramid-plastics.co.uk +44 (0)1427 677990 www.pyramid-plastics.co.uk



