



Microwave Steam Sterilizer

04528

Instruction Manual



HOW TO USE



Remove lid.



Place the thoroughly washed bottles and accessories into the tray upside down.



Fill the tray with 100ml of clean water.



Cover with the lid.



Ensure that tray and lid are securely fastened by the two locks.



Put the sterilizer into the microwave oven and sterilize for 7 minutes. Do allow the unit to cool down for at least 5 minutes before taking it out.

WARNING


Do not sterilize for more than 7 minutes. After each sterilization, allow it to cool down for at least 5 minutes before use. Keep away from children.

TIPS

Please use clean / purified water. Do wash all bottles and accessories thoroughly before sterilizing. Clean sterilizer after each use.

For All Sizes of Feeding Bottles

- Accommodates 5 standard-sized bottles or Wide Neck Bottles
- Fast 7 minutes sterilizing cycle

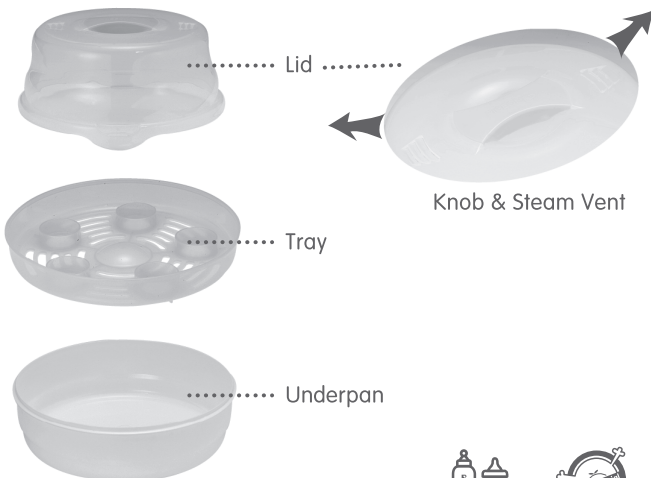

Thank you for selecting PIGEON Microwave Sterilizer. For safety use, kindly read and adhere to the stated instructions.

WARNING

Use of Microwave

- Please ensure that holding tray has 100ml of water before placing sterilizer into the microwave oven. (You may use the feeding bottle to gauge water level. Insufficient or no water will cause product to be deformed.)
- Do not use kitchen detergent or antiseptic substances to cleanse the sterilizer. Use only clean water to wash the sterilizer.
- Avoid over-heating the equipment lest it becomes deformed. (Maximum - 7 minutes.)
- Do not attempt to sterilize metal parts in the sterilizer. Allow equipment to be aired for at least 5 minutes for cooling down before next round of usage.
- Do not use the Automatic feature on the microwave oven. (Different models may activate baking, roasting temperature intermittently.)
- Use only manual timing to perform heating to avoid the sterilizer from being deformed.
 - * Our product is designed for home-use microwave oven (700W - 1000W.)
 - * A microwave oven that comes without a holding tray can still be adjusted to emit 700W - 1000W for appropriate use.
 - * Suitable for use in microwave oven measuring at least 27.5cm in width and at least 19cm in height (from holding tray to top.)
- Refrain from placing sterilizer in an unclean microwave oven. If the sterilizer is soiled, do not place it in the microwave oven. (Please clean dirt or grease from equipment before use.)
- Do not place the sterilizer directly on the metal holding tray. Place a porcelain or glass medium in between to avoid deforming the sterilizer.

Safety Precautions

- Keep sterilizer away from babies and children.
- Please be careful of hot surface after heating the sterilizer to prevent scalding.
 - * Allow sterilizer to cool for at least 5 minutes before removing it from the microwave oven.
- Hold equipment with both hands and keep water levelled when moving the sterilizer around. (Spilled hot water from the sterilizer can cause burns.)
- Please lock the sterilizer before use. (A heated sterilizer may induce steam or hot water to spill from the outlets and cause burns.)
- Be careful of hot surface of sterilizer and interior of microwave oven when removing from or placing into microwave oven.
 - * Please note that a heated feeding bottle may still be hot after some time.
- Please add or discard water only at the sink.
- Be careful when handling hot water to prevent burns.

Care for Sterilizer

- Do not refrigerate or freeze the product.
- Keep product away from heat sources.
- Do not brush or scrub the product. (This will create scratches on the surface of the sterilizer.)

Material	Heat Resistance	Emit	Sterilizing Time (100ml clean water)	Cooling Time
Polypropylene	120°C	(700W - 1000W)	7 minutes	5 minutes