



Dial Table

An adaptable and playful piece with a central table base that allows for unrestricted seating arrangements, particularly for casual areas.

Design
DBT Studio & Owen Rodgers

Material

Solid/veneer timber or laminate/compact laminate top with powder coated steel base.

Warranty

5 year warranty based on observance of product maintenance procedures. Excludes fair wear and tear, improper use or vandalism.

Weight

40-60kg

Standard Top Finishes



Ash

Oak

Laminate

Compact
Laminate

Standard Base Colours



Blue

White

Pink

Grey

Black

Options

Custom colours and finishes available upon specification
Please contact info@designbythem.com for details

Table Box Options

In desk data and power option available upon specification



Dimensions

Dial Tables are available with a conical or cylindrical base

Cone - 900/1200/1500/1800 Ø x 720 H mm, Base 550-750 Ø mm

Cylinder - 900/1200/1500/1800 Ø x 720 H mm, Base 350-750 Ø mm

Custom height and diameter available upon specification

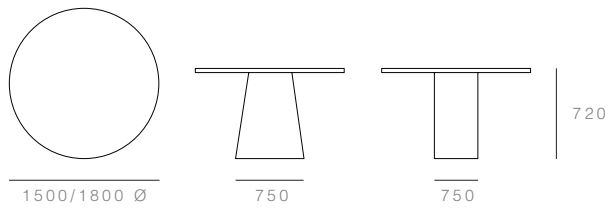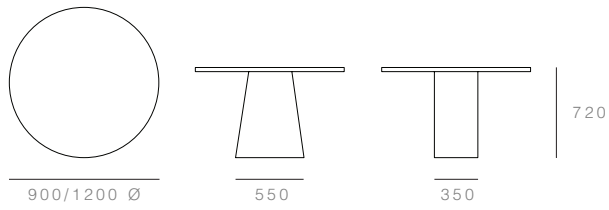

Cleaning Instructions

Clean surfaces with a damp, lint free, non abrasive cloth and then wipe dry after cleaning. For more stubborn stains use a non abrasive timber furniture cleaner. Ensure all cleaning solutions do not contain any bleaching agents, abrasives or solvents. Make sure to test on underside of product first to ensure cleaner is compatible with material. Ensure that all the cleaning solution is wiped off the surface of the product and is not allowed to sit for any extended period of time. Where possible try to prevent any cleaning solution getting into contact with the fasteners on the underside of the product.

Maintenance Instructions

Check that no fasteners have become loose from freight, handling or heavy use. If there are any loose fasteners this can be seen by a gap appearing between the leg flap and the side of the product. Ensure any loose screws are tightened with a phillips head screw driver. Tighten until there is a slight resistance. Please ensure that any fasteners are not overtightened.

End of Life

This product should be returned to us at the end of its useful life or arranged to be collected by DesignByThem at a negotiated transport fee for product repair, reuse or recycling as part of our product stewardship program. We will ensure that the product will be recycled in its entirety without any material contributing to landfill.

