

KAHUNA  CHAIR®

KAHUNA MASSAGE CHAIR

HM-078 **HUBOT**
MANUAL





KAHUNA MASSAGE CHAIR®

BEST 3D ZERO GRAVITY MASSAGE CHAIR®





CONTENTS

Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating an electrical appliance.

| | | |
|-------------------------------|-------|----|
| Safety Instructions | | 2 |
| Product Components | | 5 |
| Chair Installation | | 7 |
| The adjustment before massage | | 14 |
| Remote Controller | | 15 |
| Manual control | | 16 |
| Operation Guide | | 22 |
| Troubleshooting | | 23 |
| Product Specifications | | 24 |



SAFETY INSTRUCTION

- Thank you for purchasing the HUBOT massage chair.
 - Please read this manual thoroughly before using.
 - Please keep this manual for further use.
 - Please pay attention to the safety precaution.





NOTE

Right to make changes: We reserve the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication here of. The picture is for reference only. Please adhere to the original products in case of any mistake.

- Two parts for safety precaution: warning and attention.

| | |
|---|--|
|  Warning | Alarm for serious accident as hurt or death. |
|  Attention | Alarm for hurt or damages for goods. |

- Presentation from below symbols.

| | |
|---|---|
|  | The activities which were forbidden to do. |
|  | Request user to follow the instructuins. |
|  | Self-dismount was forbidden. |
|  | The correct operating way to pull out power plug. |

- Carefully read and follow this instruction book to assemble and operate.







Warning

| | | |
|--|--|--------------------------|
| | <ul style="list-style-type: none"> • Patients with serious hyherostosis. • Swollen lump and patient of thrombosis.Patients with serious heart troubles. • Women are pregnant or may become pregnant. • Children or people who over drunk. • Do not sleep on this machine. | Not recommended |
| | <ul style="list-style-type: none"> • Before using this machine, please confirm there has enough space for chair reclining. • Any uncomfortable feeling from massage is suggested to consult with doctor. • Do not offer hard massage for head. • Do not massage the abdominal region and knee cap. • Special care while massaging neck. • Do not allow the kids using or playing near the chair, especially at working. • Need keeper, if the user is mobility impaired or has communication barrier. | Accident or hurt |
| | <ul style="list-style-type: none"> • Just allow to connect the power cable of this machine on suitable socket. • Confirm fully pushed the plug in the socket. • Plug out after massage. • Stop all the massage functions and power switch before plug the cord out. | Fire or electric shock |
| | <ul style="list-style-type: none"> • Please do not store the cushion of this machine under folded. | Accident |
| | <ul style="list-style-type: none"> • Do not disconnect or connect the plug to the socket with a damp hand,which may result in electrical shock or mechanical trouble. • Please make sure that power plug is completely inserted into the socket without attachingany pin or rubbish, for which may cause electrical shock,short circuit or fire. | Fire or electric shock |
| | <ul style="list-style-type: none"> • If this machine is not operating correctly, or broken, or damaged from other reasons, please contact service department first at service@kahunachair.com. • If the plug or power cable is broken, please contact with maintenance worker to repair. • Do not dismount any parts of this machine privately. • Please check carefully over the cushions and coverings to confirm they are under good condition. | Dismount and maintenance |

SAFETY INSTRUCTION

Attention

| | | |
|---|--|---|
|  | <ul style="list-style-type: none"> Do not place or stock this machine near particularly damp place as swimming room, bathroom and so on. | Avoid from electric leakage or shock |
|  | <ul style="list-style-type: none"> Must confirm it is under good earth connection. Do not use plug adaptor. | Avoid from electric accident |
|  | <ul style="list-style-type: none"> Stop power supply, before cleaning. | Avoid from sudden accident |
| | <ul style="list-style-type: none"> Stop power supply, after massage. | |
| | <ul style="list-style-type: none"> Pull out the plug, if there has any electric problem. | |
| | <ul style="list-style-type: none"> While stop power supply, do not directly pull from the power cable. Separate the power plug from the socket at once, after electricity fails. | |
|  | <ul style="list-style-type: none"> Do not use this chair in over hot, damp, or corrosive environment. | Avoid from damages to the machine cover |
| | <ul style="list-style-type: none"> Do not use electric blanket on the machine. | |
| | <ul style="list-style-type: none"> Do not place near the stream over, or directly expose to sunshine. Do not use it outdoors. | |




Grounding
Unable to
connect these
space

Gas pipe : may cause electrical shock, short circuit or fire.

Telephone lines and Lightning rod : may cause electrical shock, short circuit or fire
conduit : on plastic can't have function

PRODUCT COMPONENTS

| Main body diagram (front) |

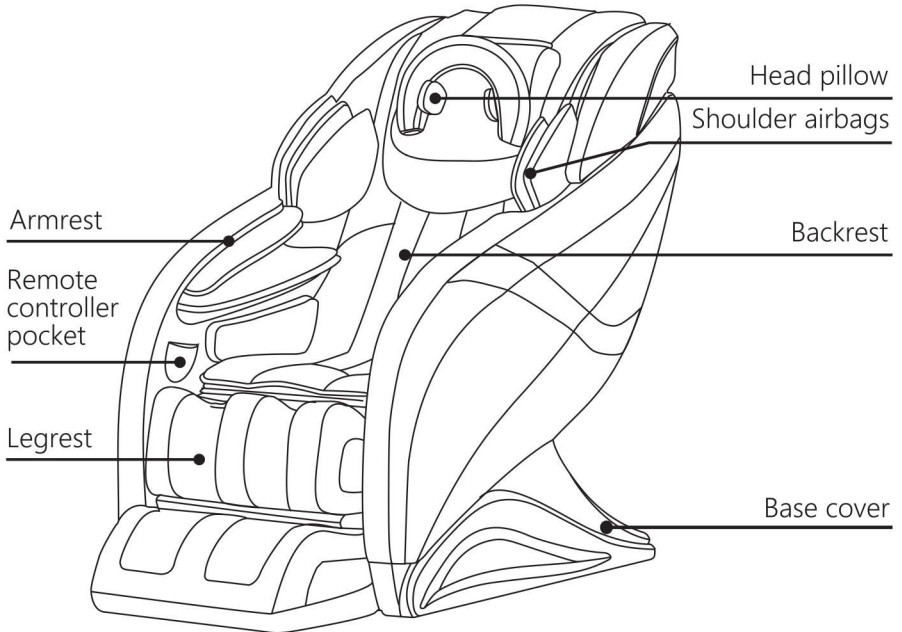


Built in Premium Bluetooth Speakers



PRODUCT COMPONENTS

| Main body diagram (rear) |

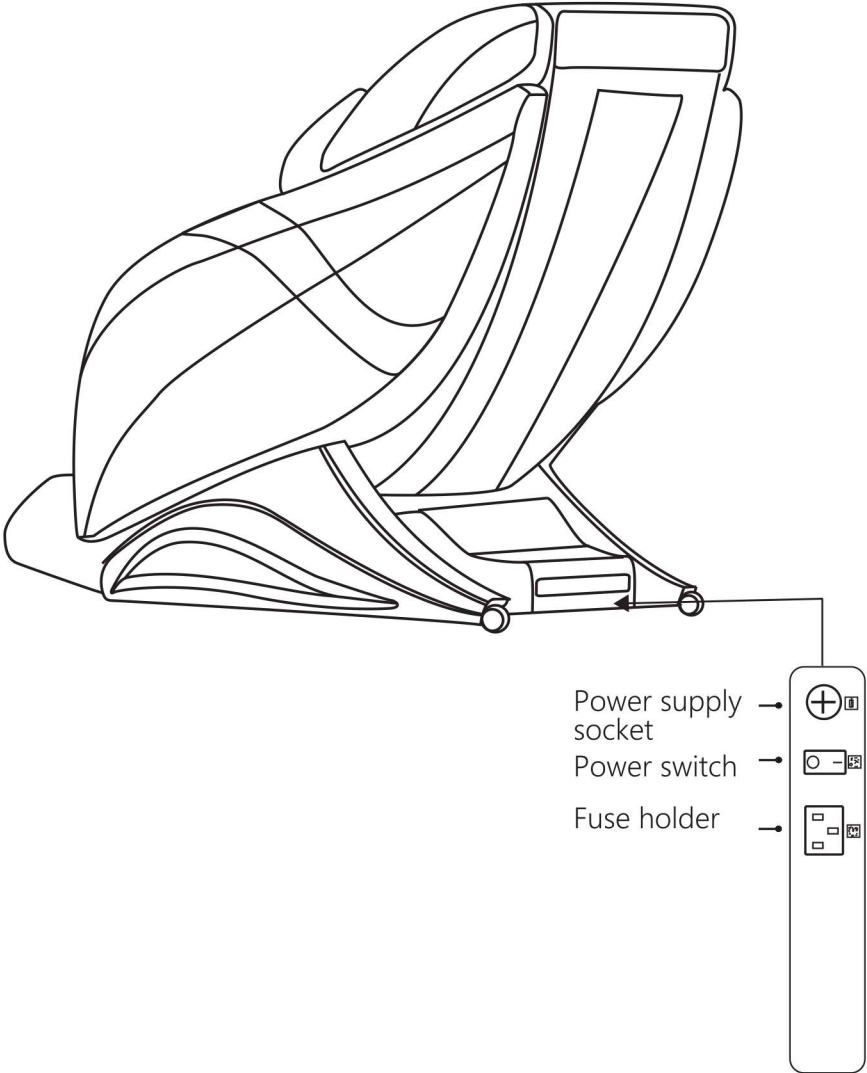


| Step 1. Unpack the box |

Box 1 : Carry out the main body, leg part and accessory box. When carrying out the main body, we suggest at least two people to help.




Box 2 : Take out the armrest and base cover.

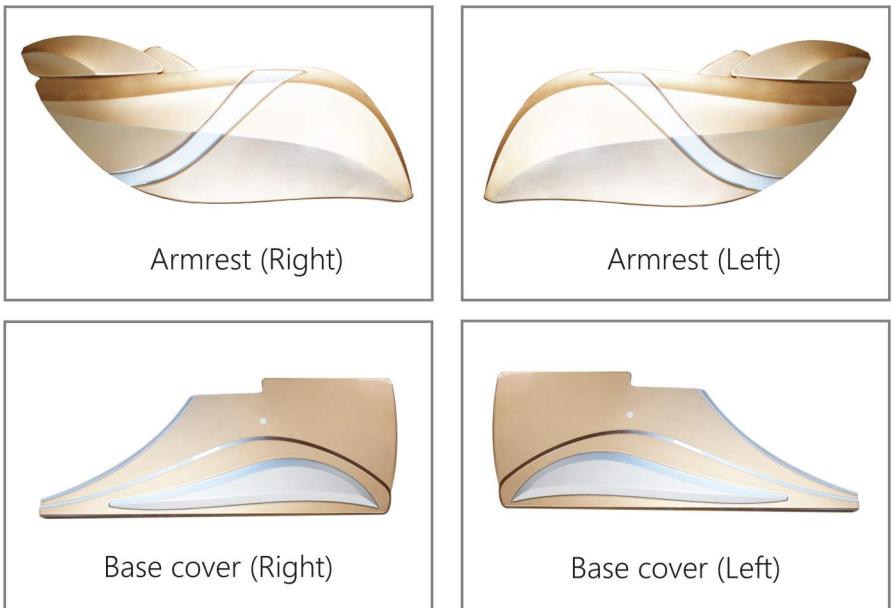


CHAIR INSTALLATION

| Step 3. Connect the leg part |


- 1 Connect the power cord and air hose to the main body.

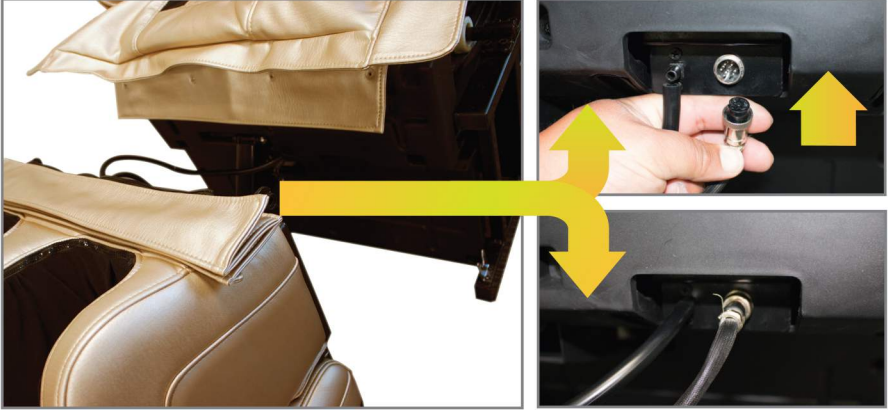

- 2 Hang the leg part as shown in the picture to the leg part adapter of the main body, fix it with pins and bolt.

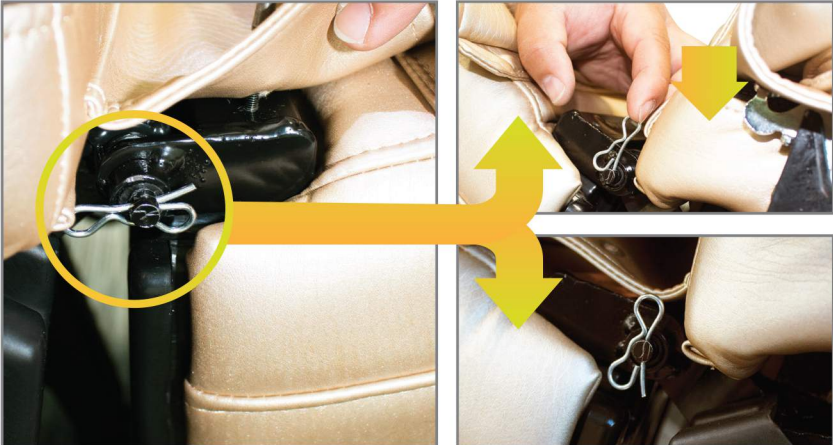


- ③ Zip up the leather case between the leg part and seat cushion.

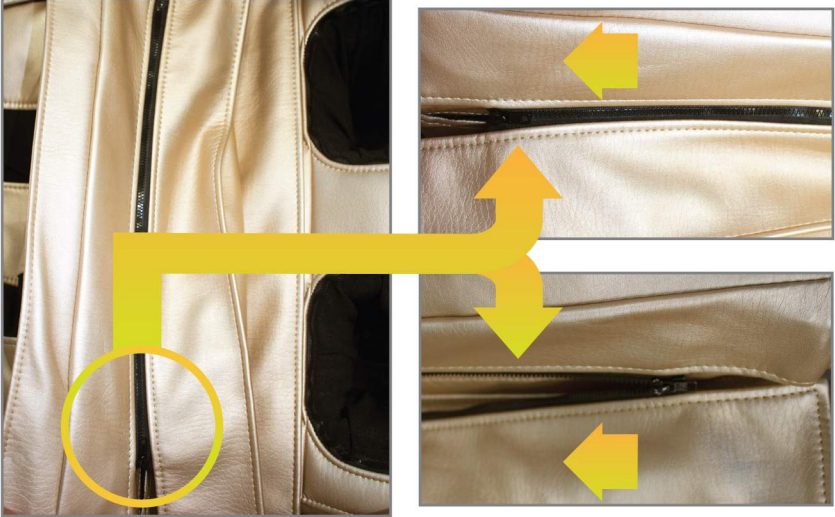


CHAIR INSTALLATION

| Step 3. Install the base cover |

- 1 Insert the bottom of the base cover to the connector on the base frame of the main body from top to bottom.

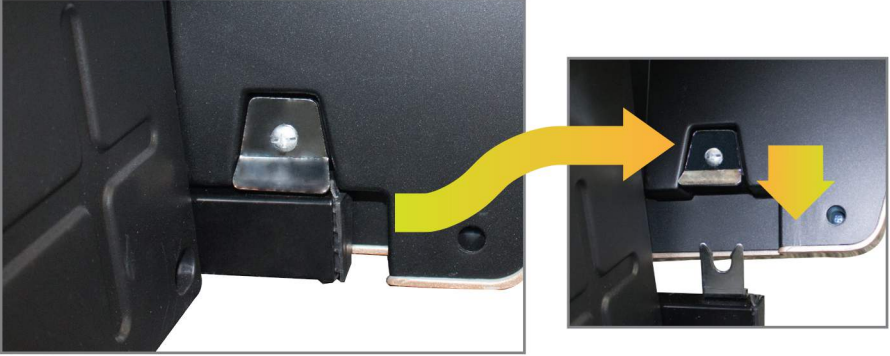


- 2 Fix it with screws.

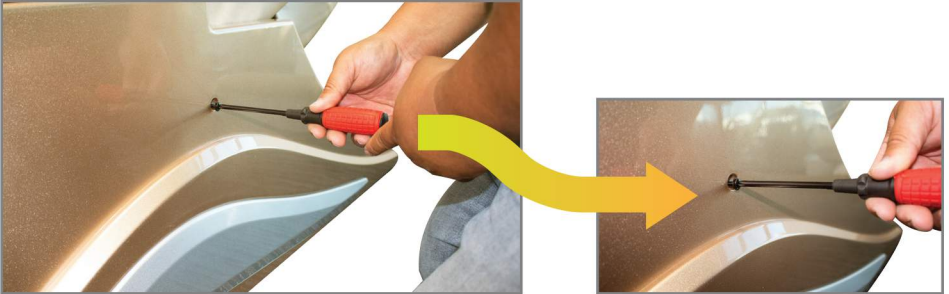


| Step 4. Install armrest |

- ① Lift the front of the side panel while positioning the cone-shaped latch towards the slot on the main body.
- ② Pull the string on the slot to release the lock and push the side panel in, connecting the cone-shaped latch into the slot while applying pressure.

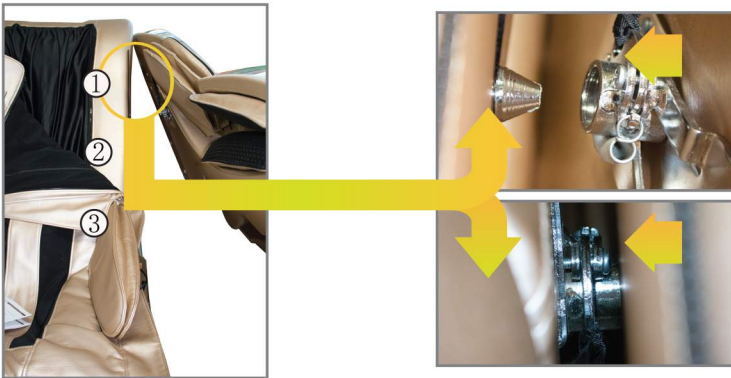

- ③ Set the armrest closely to the main body (as picture 2). Insert the parts card into intermediate shaft of the main body from the top to the bottom slowly.

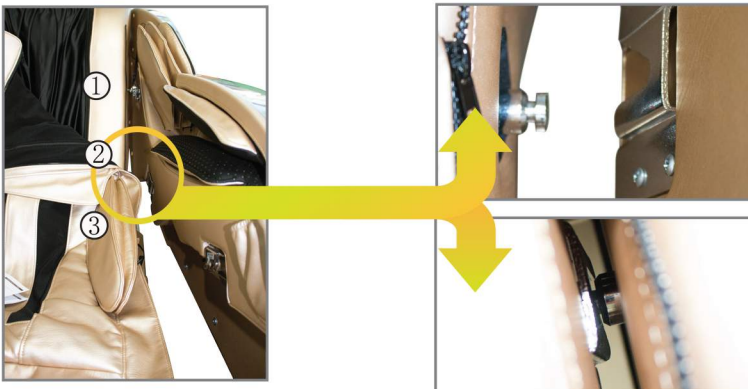

CHAIR INSTALLATION

④ Connect the air hose and power cord to the main body.



⑤ Finally, insert the fixed block (as shown in picture 3) into the fixed axis of the main body from the top to the bottom.




[o]



The correct method

[x]

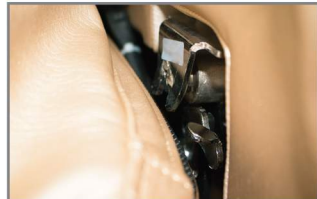

The fault method

| Step 5. Install the back cushion and remote |

- 1 Lay the back cushion flat on the main body (as shown in the photo above), then close the zipper at the top.



- 2 Connect the remote cord to the cord on the main body.




THE ADJUSTMENT BEFORE MASSAGE

| How to move the chair |

The chair can be easily moved with the wheels on the lower back. While moving, please raise the front part of the chair as the picture shows, and move the chair to any suitable place.

Tips


1. Remove the power cord before moving.
2. While moving, never shake the chair, never pull the leg part, never release the backrest suddenly and let the chair hitting the floor.
3. If the floor is wooden or other materials which is easy to be scratched, please don't use the wheels, lift it up by at least 4 people.
4. As the chair is heavy, we suggest at least two people to help while moving.
5. Never move it when the chair is in a reclining position.
6. Add a thick cloth (like a carpet) at the bottom to help to drag the chair.

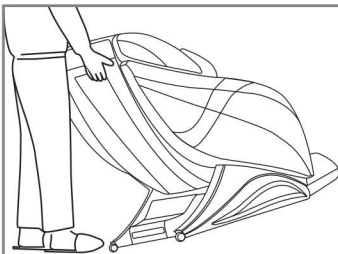

Attention

Never move the chair when the chair is working. (To prevent an accident or a damage)

REMOTE CONTROLLER

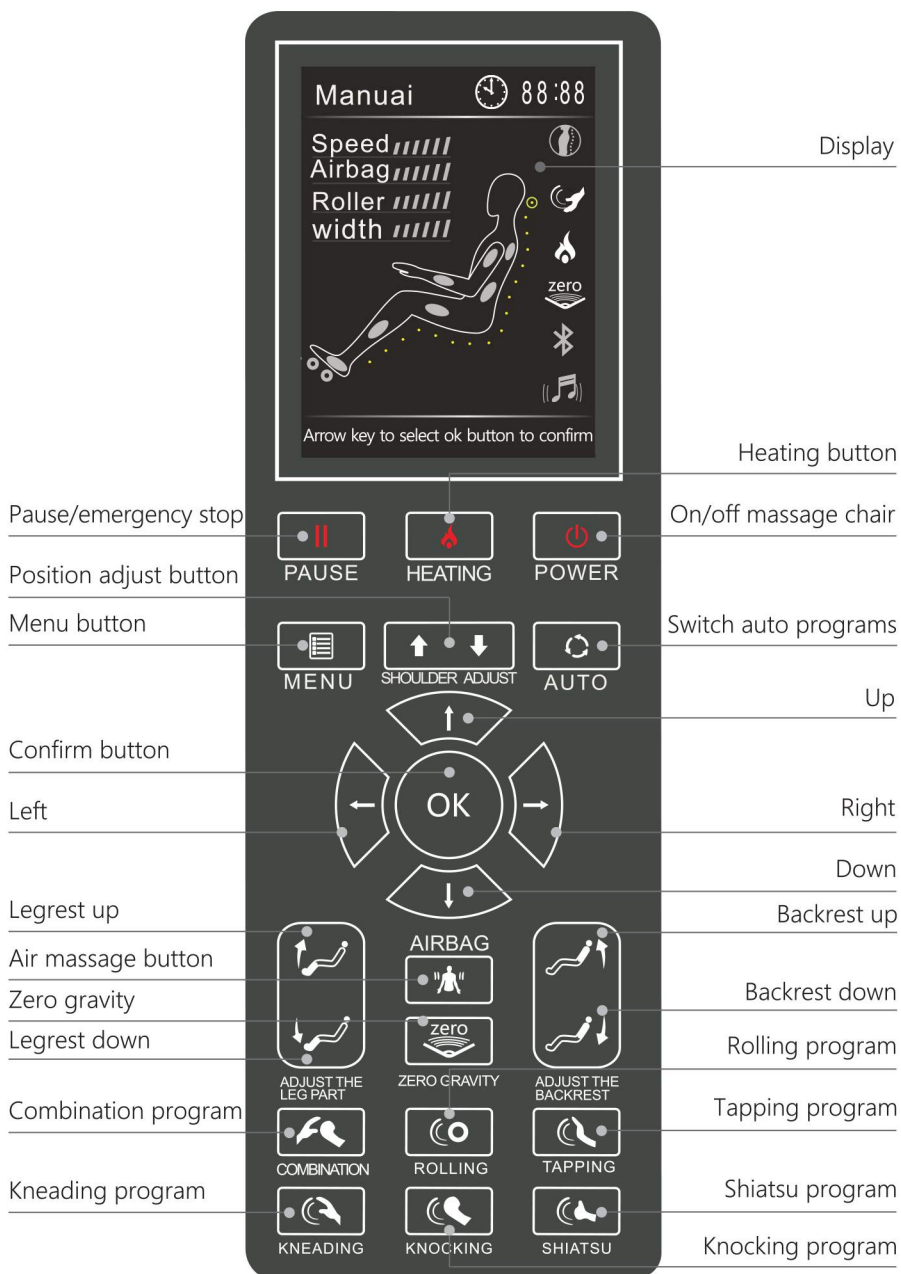

MANUAL CONTROL

| Manual mode |



Power : On/off key of the whole chair.
- Press this key, the chair will start to work.
- press it again, the chair will shut down and go back to the reset position.



Pause : When the chair is working, press this key, all actions will be suspended, press it again, all the actions will recover.



Menu : You can choose programs, massage methods, setting functions by pressing this key.



Shoulder position adjustment : Adjust the height of the back rollers by holding down button for either direction.



Auto program switch : Press this key to choose and switch full body program.



Direction : You can press the up/down key to choose, and press right key to enter sub-directory, press left key to back parent directory, the OK key is for confirm selections.

Leg extension position adjustment :



— Leg will manually extend the length

— Leg will manually shorten the length



Zero gravity : Press this key to enter zero gravity position, the zero gravity icon on the display will be light up, and will turn off when you adjusting the backrest / leg part angle by manual, which will make the chair out of Zero gravity position.



Position up the legrest : By long press this key, the leg part will lift up.



Position down the legrest : By pressing this key for a while , the legrest will put back down.



Position up the backrest : By pressing this key for a while , the backrest will lift up.



Position down the backrest : By pressing this key for a while , the backrest will put back down.



Air bag : Turn on/off the air bag massage system by press this key.



Heating : Pressing this key, the heating system will be turn on, and the heating icon on the display will be light up, press it again the heating system will be turned off, and the icon turn into grey.

| Auto programs |

Press "Power" button to enter "Auto program" when the power is ready. In the auto program menu.




-  **Renew**
-  **Kahuna Yoga-Stretching**
-  **Twist Yoga-Stretching**
-  **Active Yoga-Stretching**
-  **Kahuna SV-Chiro**
-  **Twist SV-Chiro**
-  **Rocking**
-  **Anti-Stress**
-  **Deep Tissue**
-  **Sleep Aid**
-  **Special Sports Massage**
 - Dynamic Sports
 - Golfer Mode
 - Athletic Mode
 - Fast Recovery
-  **All Air mode**

* Please check the detailed function of auto programs on the homepage.

MANUAL CONTROL

| Air cell |

This subdirectory is for managing the air bag system, contains part and intensity option.

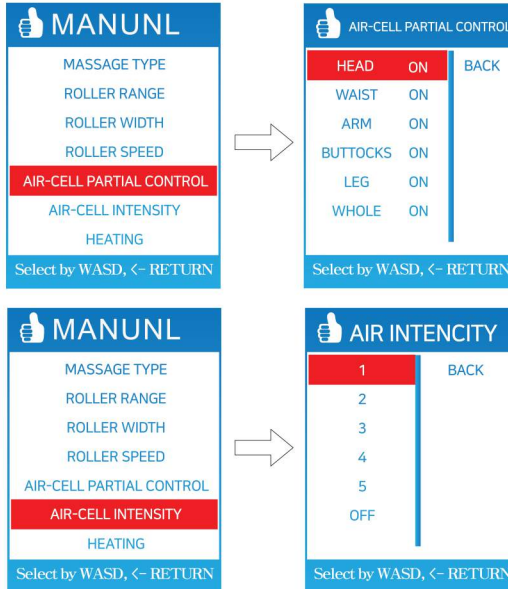


Partial : In this subdirectory, you can turn on / off some air bags by choose it and select the off / on button.

Intensity : This is for adjusting the air pressure intensity, offer 5 degree for option.

| Foot roller |

Choose roller, in the subdirectory, you can adjust the roller speed, offer 3 grades for option.

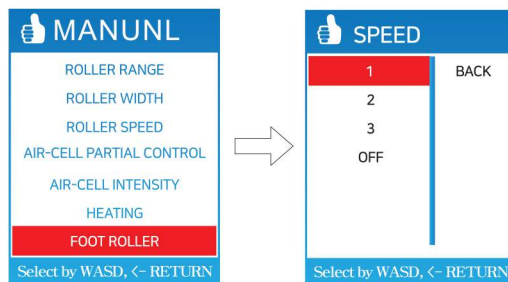


| Manual mode |

Click the "Menu" button, then choose the "Manual" to start manual program. Use up/down key to choose, OK to confirm.



Message method : In this subdirectory, you can use up / down key to choose. There are six massage methods: Kneading, Tapping, Knocking, Shiatsu, Rolling, Combination.

Part : This subdirectory is for back roller massage range, us up/down to choose. Offer 3 options : Full, partial, point.

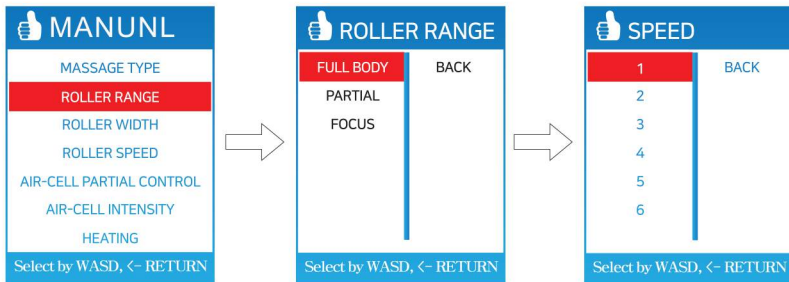


Width : This subdirectory is for adjusting the massage width of the back rollers. Offer wide, middle, narrow for option.

Speed : This subdirectory is for adjusting the massage speed of the back rollers. Offer 6 degree for option.

| Setting |

Press "Menu" key, choose "Setting", enter the subdirectory.

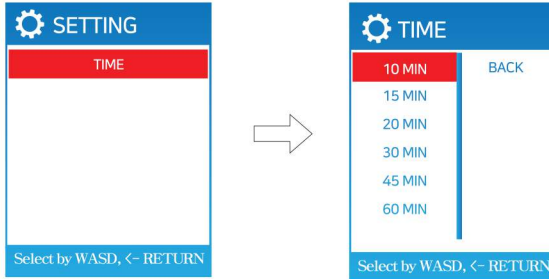

Time : Set time for massage programs.

| Tips |

1. Under auto / manual mode, the display will switch to the home page after 10 seconds without any operation.




Home page while under manual mode



Home page while under manual mode

- During working, press "Menu" twice, it will go back to the home page immediately.
- In the home page, under manual / auto program, press shoulder position key to adjust the highest position of the back rollers.
- Press "auto" key to choose auto program.

2. Before running auto program, it will detect shoulder position first. After the detection, it will switch to the auto program.

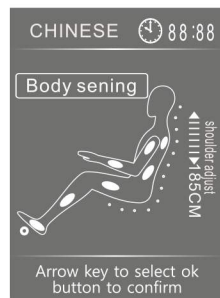


| Connect speaker via bluetooth |


To connect speaker, you must enable the audio function on Bluetooth by going in to Bluetooth setting on your phone or device.

Please turn on the Bluetooth of your device, and connected with the device named "HM-078", then the audio system of the chair will be able to work.


After connect to bluetooth, please go to bluetooth setting and enable the auto option.

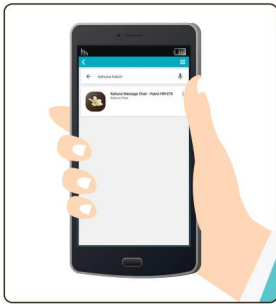

1 Search for an app called "KAHUNA HUBOT" This is a free, small-size application that you can download. Tap on the app when you find it.

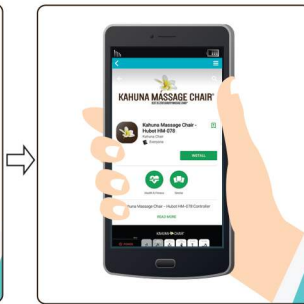

2 Install the app. Tap on "Install" to download and install "KAHUNA HUBOT" onto your phone or tablet.

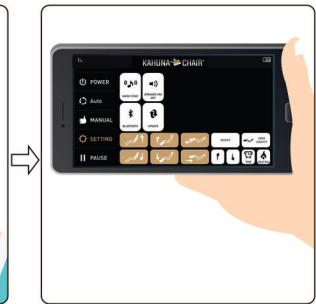


3 After installing, launch the program by tapping the shortcut icon on your app screen. Once open, you will see all the applications currently installed and active apps on your device.



4 In the list of connectable Bluetooth devices, tap on the name of your HUBOT.



5 It should say something along the lines of "Connection to the device message" (the actual message depends on your device).

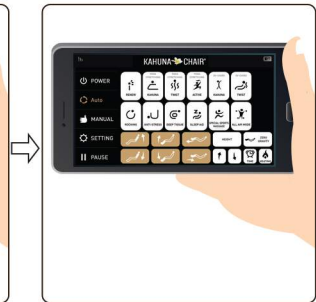


6 Go to the main screen and enjoy a massage.

TROUBLESHOOTING

855.646.9500 / 1.714.388.2625, service@kahunachair.com

| Trouble | Possible reasons | Troubleshooting |
|---|--|---|
| Can not work after supplied power | Didn't turn on the power switch. | Turn on the switch |
| | Didn't choose massage program. | Choose a massage program |
| | Bad connection between plug and socket. | Connect again |
| | Power cord or plug damaged. | Replace the power cord |
| | The fuse burned up. | Replace the fuse |
| | A fault in the controlling circuit. | Contact with the maintenance department of supplier |
| Working with tap-tap-tap or hum sounds | Sounds from air pump, motor or other mechanical parts. | Normal phenomenon |
| Different hight for the massage rollers | Rollers under alternately work. | Normal phenomenon |
| Abnormal sounds suddenly occurred while working | If after long time works. | Cut down the power and check after 30 minutes. |
| | Cause from long time work. | Contact with the maintenance worker. |
| Suddenly stopped working | If after long time works. | Supply power again. |
| | Auto programmed time is up. | Cut down the power and use after 30 minutes. |
| Can not recline | Obstrucater there ; work overloaded automatically stopped work for protecting machine. | To move the obstrucater ; stop work and use after 30 minutes. |
| Can not restore after relined | Problem on electromotion pole or plug-ing under bad connection. | Contact with the maintenance worker. |
| Control panel overheat seriously | Cause from long time work. | Cut down the power and call the maintenance worker. |
| Abnormal overheat from power wire and plug | Work overloadingly. | Cut down the power and use after 30 minutes. |
| | Causes from other resons. | Cut down the power and call the maintenance worker. |

 *Note: If problems all are not from above reasons, please stop power supply and contact us for maintenance.*

PRODUCT SPECIFICATIONS

| Description | Specifications |
|--------------------------|---|
| Product Name | Kahuna Massage Chair HM Series |
| Model No. | HM-078 HUBOT |
| Rated Voltage | 110-120V~ |
| Rated Frequency | 50/60Hz |
| Rated Power Consumption | 220 W Max. |
| Dimension (LxWxH) Inches | 49.6 x 52.3 x 35.4 inches |
| Weight (LBS) | Net Weight :305 lbs Gross Weight :418 lbs |



KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION
<https://www.kahunachair.com/services/>



Product Massage Chair

Model HM-078 HUBOT


Developed by AJX Distribution LLC

11125 Knott Ave, Suite D

Cypress, CA 90630

Tel 1-855-646-9500

Email INFO@KAHUNACHAIR.COM

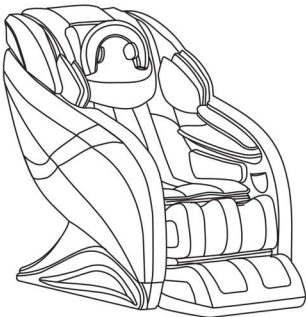

You must register warranty at www.kahunachair.com/services/

INSTRUCTION MANUAL
MODEL:HM-078 HUBOT

Please read this user manual thoroughly prior to operating the massage chair. Store this booklet for future reference.