

Nautilus[®] Instinct[®]

▪ **Leg Press / Calf Raise**

OWNER'S MANUAL



TABLE OF CONTENTS

Introduction	4
About This Manual	4
Safety Instructions	5
Assembly and Setup	6
Parts and Materials	6
Siting Requirements	6
Unpacking	6
Assembly.....	7
Anchoring	12
Exercise Guidelines	12
General Guidelines.....	12
Product Use and Maintenance	12
Preventive Maintenance	13
Maintenance Schedule	13
Maintenance Procedures.....	14
Labels and Placards	16
Warranty and Disclaimer	17

Copyright 2016. Core Health and Fitness, LLC. All rights reserved, including those to reproduce this book or parts thereof in any form without first obtaining written permission from Core Health and Fitness, LLC.

Every effort has been made to keep this information current; however, periodically, changes are made to the information herein, and these changes will be incorporated into new editions of this publication. All product names and logos are trademarks of their respective owners.



INTRODUCTION

Thank you for choosing the *NAUTILUS INSTINCT LEG PRESS / CALF RAISE*. This unit has been designed to provide the user the most rewarding experience based upon the carefully planned features it possesses. The design elements of this product will provide you with a comfortable, intuitive, safe and reliable experience, guiding you to a habit-forming lifestyle. Our mission is to provide products to mold lifelong habits for health and fitness, and the *INSTINCT LEG PRESS / CALF RAISE* will provide the path to meet your goals.

ABOUT THIS MANUAL

This manual is applicable to the *INSTINCT LEG PRESS / CALF RAISE*. The manual is divided into eight sections, as follows:

Introduction

Provides an overview of each section within the manual.

Safety Instructions

Provides guidelines for safely operating the *INSTINCT LEG PRESS / CALF RAISE*.

Assembly and Setup

Provides instructions for unpacking, assembling and setting up the *INSTINCT LEG PRESS / CALF RAISE*.

Exercise Guidelines

Provides general guidelines to be followed when using the *INSTINCT LEG PRESS / CALF RAISE*.

Preventative Maintenance

Describes the preventative maintenance measures required to keep the *INSTINCT LEG PRESS / CALF RAISE* in top condition.

Labels and Placards

Provides illustrations and part number information for labels and placards used on *NAUTILUS INSTINCT* products.

Regulatory Information

Provides warranty and servicing information for the *INSTINCT LEG PRESS / CALF RAISE*.

SAFETY INSTRUCTIONS

Read this Owner's Manual carefully before assembling, servicing or using your **NAUTILUS INSTINCT LEG PRESS / CALF RAISE**.

WARNING: SERIOUS INJURY MAY OCCUR IF THESE SAFETY PRECAUTIONS ARE NOT OBSERVED. UNDERSTANDING EACH AND EVERY WARNING TO THE FULLEST IS IMPORTANT. IF ANY OF THESE WARNINGS ARE UNCLEAR, CONTACT NAUTILUS PRODUCT SUPPORT FOR CLARIFICATION.

1. Do not use any equipment in any way other than designed or intended by the manufacturer. It is imperative that weight stack machines as well as any other **NAUTILUS INSTINCT** equipment is used properly to avoid injury.
2. Make sure there is enough room for safe access and operation of the **INSTINCT LEG PRESS / CALF RAISE**.
3. Keep hands, feet, head, limbs, fingers and hair clear at all times from moving parts to avoid injury. Use appropriate positioning, speed and controlled movements.
4. DO NOT use any equipment that is damaged and or has worn or broken parts. Use only replacement parts supplied by **NAUTILUS**.
5. DO NOT wear loose or dangling clothing while using the **INSTINCT LEG PRESS / CALF RAISE**. Keep away from all moving parts.
6. Obtain a medical examination prior to beginning an exercise program.
7. If at any time during exercise you feel faint, dizzy or experience pain, STOP IMMEDIATELY and consult your physician before continuing.
8. Children must NOT be allowed to operate the **INSTINCT LEG PRESS / CALF RAISE**. Adolescents must be supervised when using the **INSTINCT LEG PRESS / CALF RAISE**.
9. DO NOT attempt to fix a broken or jammed unit. Notify authorized personnel.
10. Use the **INSTINCT LEG PRESS / CALF RAISE** only for the intended use. Obtain instruction on proper use of the unit. It is the purchaser's sole responsibility to properly instruct end users and supervising personnel as to the proper operating procedures of all **NAUTILUS INSTINCT** equipment. DO NOT modify the unit.
11. Load plates evenly and carefully to avoid tipping equipment and possible crushing injuries.
12. DO NOT use the **INSTINCT LEG PRESS / CALF RAISE** if guards or shrouds are missing or damaged.
13. USE A SPOTTER.
14. DO NOT add incremental weights, except those provided by **NAUTILUS**.
15. MAINTAIN PLACARDS AND LABELS: Do not remove labels for any reason; they contain important information. If illegible or missing, contact the NAUTILUS Parts Department for replacement.
16. SECURING EQUIPMENT: The **INSTINCT LEG PRESS / CALF RAISE** MUST be secured to the floor to stabilize and eliminate rocking or tipping over. This must be performed by a licensed contractor. DO NOT use the UNIT if it is not set up and located on a solid level surface.
17. Make sure that each machine is set up and operated on a solid level surface. DO NOT install equipment on an uneven surface.
18. MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to ensuring smooth and reliable operation of the **INSTINCT LEG PRESS / CALF RAISE**, as well as keeping your liability to a minimum. Inspect the unit prior to use. Give particular attention to the areas most susceptible to wear. DO NOT use if the unit is damaged or inoperable.
19. Ensure that adjustment, maintenance and/or repair of the **INSTINCT LEG PRESS / CALF RAISE** is performed by qualified personnel ONLY. Immediately replace worn or damaged components. If unable to immediately replace worn or damaged components then remove the **INSTINCT LEG PRESS / CALF RAISE** from service until repairs are made.
20. Keep a repair log of all maintenance activities.
21. Routinely inspect all accessory clips that join attachments to weight belts or cables, and replace at the first sign of wear.
22. Use only weight selector pins supplied by **NAUTILUS** on weight stacks. Substitutes are forbidden.
23. Cables and belts pose an extreme liability if used when frayed. Always replace any cable or belt at first sign of wear (consult **NAUTILUS** Product Support if uncertain).
24. Fully insert the weight selector pin when selecting the desired weight. Partially inserted pins can cause weights to fall unexpectedly. NEVER remove the weight selector pin if any weights are suspended. NEVER attempt to release jammed weights or parts.
25. DO NOT use Lat Pulldown Bars on Multi-jungle Crossover cable systems or any other pulley systems. These bars are designed for lat pulldown machines ONLY. If improperly used, the Lat Bar could fall unexpectedly, striking the user when weight selector pin is removed.
26. Lat Pulldown Machines pose a danger if used with worn or damaged cables and connecting links. The user can be struck in the head if the cable or related parts break during use.
27. When adjusting any seat, knee hold down pad, range of motion limiter, foothold pad or any other type of adjuster, make certain that the adjusting pin is fully engaged in the retainer hole to avoid injury.

NOTE: *It is the sole responsibility of the user/owner or facility operator to ensure that regular maintenance is performed.*

ASSEMBLY AND SETUP

PARTS AND MATERIALS

The following parts are included with the *NAUTILUS INSTINCT LEG PRESS / CALF RAISE*:

1	Frame, Weight Stack	1	29	Support, Weight Stack	2
2	Frame, Main	1	30	Belt	1
3	Frame, Footrest	1	31	Belt	1
4	Frame, Seat	1	32	Weight, 15lb	15
5	Crossbeam, Lower	1	34	Cap, Rubber	2
6	Crossbeam, Weight Frame / Footrest	1	35	Selector Pin	1
7	Post, Seat (factory installed)	1	36	Guide Post, Weight Stack	2
8	Flywheel, Range-of-Motion	1	37	Retainer, Belt	4
9	Bracket, Mounting, Flywheel Cover (factory installed)	1	38,	Nut, Tapped Hole	6
			39	Washer	2
12	Crossbeam, Weight Frame / Main Frame	1	54	Screw, Button Head Socket Cap, 10X130M	8
13	Cover, Flywheel	1	55	Screw, Button Head Socket Cap, 10X80M	12
14	Guide Post, Seat	2	56	Screw, Button Head Socket Cap, 10X63M	2
16	Plate, Top, Weight Stack	1	57	Screw, Button Head Socket Cap, 10X35M	4
17	Pulley (factory installed)	6	58	Screw, Button Head Socket Cap, 10X30M	2
18	Handle, Left	1	59	Screw, Button Head Socket Cap, 10X25M	1
19	Handle, Right	1	61	Screw	4
23	End Cap	4	63	Screw, Button Head Socket Cap, 8X20M	6
24	Cushion, Seat	1	66	Screw, Retaining	4
25	Cushion, Back	1	68	Lock Nut, Nylon Insert, 10M	20
26	Shroud, Lower, Rear	1	70	Washer, 11M	49
27	Shroud, Lower, Front	1	72	Washer, 9M	6
28	Shroud, Upper	2	73	Washer, Spring, 10M	1

TOOLS REQUIRED

Most *NAUTILUS INSTINCT* machines can be assembled using the following tools:

- Metric Hex Key Wrenches - 2.5mm, 5mm, 6mm, 8mm, 10mm
- Metric Open-End Wrenches - 10mm, 15mm, 17mm
- Metric Ratchet Socket Wrench Set (including 17mm socket)
- Torque Wrench
- Channel Lock Pliers
- Vice Grip Pliers
- Rubber Mallet
- Phillips Head Screwdriver - #2

Your *INSTINCT LEG PRESS / CALF RAISE* includes a hex key set and combination open-end wrench.

SITING REQUIREMENTS

Your *INSTINCT LEG PRESS / CALF RAISE* requires approximately 32 square feet of floor space to ensure safe operation of the unit.

UNPACKING

Your *INSTINCT LEG PRESS / CALF RAISE* is shipped in one or more shipping cartons. Each carton will generally contain one subassembly of the entire unit. To unpack:

- Remove the shipping straps from the outside of each shipping carton.
- Open the top of each carton and fold back all four flaps.
- Remove the packing materials, foam inserts, and ALL parts from each shipping carton. Keep the contents of each carton in a *separate area* to facilitate assembly. To ensure personal safety during assembly, place all packing materials *outside* the assembly area.
- Verify that all parts listed above are included in your shipment.

Take time now to enter your *INSTINCT LEG PRESS / CALF RAISE* serial number in the space below. If parts are missing, or if you have any operational questions, please call Nautilus's Service department at (800) 503-1221; have your serial number ready.

Serial No. _____

ASSEMBLY

1. Assemble the Frame

Align the two drilled holes in the lower crossbeam (5) with the mating holes in the bottom of the weight stack frame (1). Secure the crossbeam to the weight frame using two screws (54), four washers (70), and two lock nuts (68). Tighten the nuts securely.

Align the two drilled holes in the weight frame / footrest crossbeam (6) with the mating holes in the side beam of the weight stack frame (1). Secure the crossbeam to the weight frame using two screws (55), four washers (70), and two lock nuts (68). Tighten the lock nuts securely.

Align the two drilled holes in the weight frame / main frame crossbeam (12) with the mating holes in the side beam of the weight stack frame (1). Secure the crossbeam to the weight frame using two screws (55), four washers (70), and two lock nuts (68). Tighten the nuts securely.

Position the main frame (2) so the two drilled holes in the lower crossbeam (6) and the two drilled holes in the weight frame / main frame crossbeam (12) are aligned with the mating holes in the main frame.


Secure the main frame to the lower crossbeam using two screws (54), four washers (70), and two lock nuts (68). Tighten the nuts securely.

Secure the main frame to the weight frame / main frame crossbeam using two screws (54), four washers (70), and two lock nuts (68). Tighten the nuts securely.

Position the footrest frame (3) so the two drilled holes in the weight frame / footrest crossbeam (6) and the four drilled holes in the main frame (2) are aligned with the mating holes in the footrest frame.


Secure the footrest frame to the weight frame / footrest crossbeam using two screws (55), four washers (70), and two lock nuts (68). Tighten the nuts securely.

Secure the footrest frame to the main frame using four screws (55), eight washers (70), and four lock nuts (68). Tighten the nuts securely.

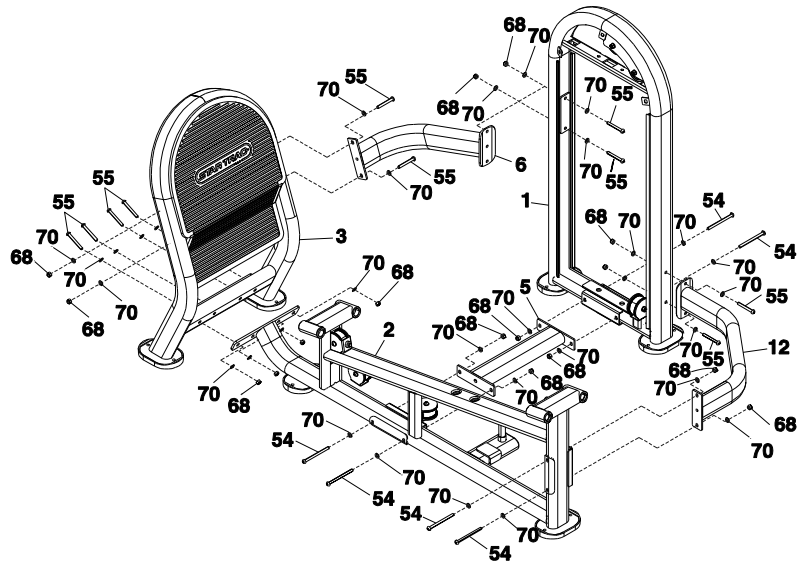

2. Install the Range-of-Motion Flywheel



Place the range-of-motion flywheel (8) onto the support shaft on the main frame (2).

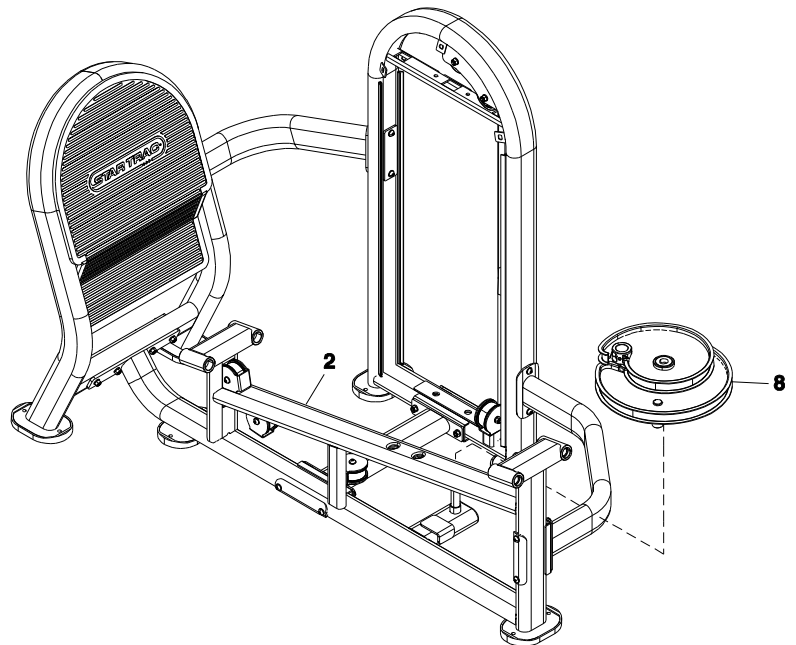

5. Install the Weight Belts

NOTE: The Leg Press uses two weight belts; one weight belt (31) is attached to the top plate (16) and the range-of-motion flywheel (8), and one weight belt (30) is attached to the range-of-motion flywheel (8) and the seat frame (4). Each belt is attached using cinch fasteners (see detail below). Two people may be required to properly install and tension the weight belts.

Remove the retaining screws (66) and belt retainers (37) from the belt clamps on the weight stack top plate (16), range-of-motion flywheel (8) (two places) and seat frame (4).

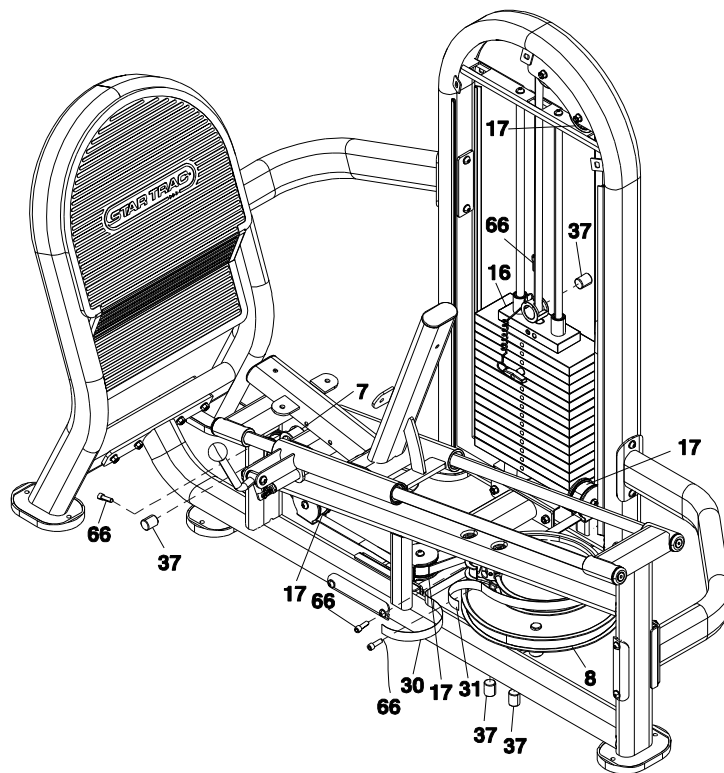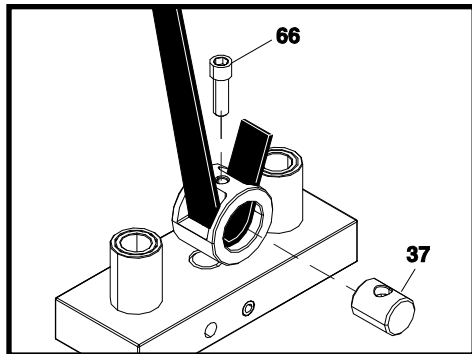

Insert one end of the weight belt (31) through the slot in the top plate belt clamp until approximately one inch of the free end of the belt protrudes from the slot in the opposite side of the clamp.

While holding the free end of the belt, press down on the opposite side of the belt so it lays flat against the inside of the clamp.

Insert the belt retainer (37) into the belt clamp. BE SURE the tapped hole in the belt retainer is aligned with the mating hole in the belt clamp.

CAUTION: BE SURE to keep the weight belt straight when installing the retaining screw (66) in the belt retainer (37). Misalignment of the weight belt may bias the top plate, which can cause excessive contact of the top plate shaft with the weights, resulting in excessive noise during use, and potential hazards to the user or other bystanders.

Thread the retaining screw (66) through the belt clamp and into the belt retainer (37). Tighten the retaining screw to 400 inch-pounds.

Route the weight belt (31) over three pulleys (17) (factory installed) and around the range-of-motion flywheel (8), as illustrated.

Insert the free end of the weight belt (31) through the slot in the range-of-motion flywheel belt clamp, and pull through the opposite slot just until force is applied against the top plate (16). This will eliminate any slack in the belt and ensure proper tensioning.

While maintaining tension on the weight belt, press down on the free end of the belt so it lays flat against the inside of the belt clamp.

Insert the belt retainer (37) into the belt clamp. BE SURE the tapped hole in the belt retainer is aligned with the mating hole in the belt clamp.

Thread the retaining screw (66) through the belt clamp and into the belt retainer (37). Tighten the retaining screw to 400 inch-pounds.

Check for proper tensioning of the weight belt by applying lateral pressure to the belt at a point midway between two pulleys. Deflection of the weight belt should be less than 25 mm. Loosen the retaining screw (66) and adjust belt tension as needed.

Insert one end of the weight belt (30) through the slot in the range-of-motion flywheel belt clamp until approximately one inch of the free end of the belt protrudes from the slot in the opposite side of the clamp.

While holding the free end of the belt, press down on the opposite side of the belt so it lays flat against the inside of the clamp.

Insert the belt retainer (37) into the belt clamp. BE SURE the tapped hole in the belt retainer is aligned with the mating hole in the belt clamp.

Thread the retaining screw (66) through the belt clamp and into the belt retainer (37). Tighten the retaining screw to 400 inch-pounds.

Route the weight belt (30) around the range-of-motion flywheel (8) and over three pulleys (17) (factory installed), as illustrated.

Insert the free end of the weight belt (30) through the slot in the belt clamp of the seat post (7) (factory installed), and pull through the opposite slot until resistance is felt. This will eliminate any slack in the belt and ensure proper tensioning.

While maintaining tension on the weight belt, press down on the free end of the belt so it lays flat against the inside of the belt clamp.

Insert the belt retainer (37) into the belt clamp. BE SURE the tapped hole in the belt retainer is aligned with the mating hole in the belt clamp.

Thread the retaining screw (66) through the belt clamp and into the belt retainer (37). Tighten the retaining screw to 400 inch-pounds.

Check for proper tensioning of the weight belt by applying lateral pressure to the belt at a point midway between two pulleys. Deflection of the weight belt should be less than 25 mm. Loosen the retaining screw (66) and adjust belt tension as needed.

6. Install the Seat Cushions, Handles and Flywheel Cover

Hold the back cushion (25) in place on the main frame (2). Secure the back cushion to the main frame with two screws (57), one screw (55), and three washers (70). Tighten the screws securely.


Hold the seat cushion (24) in place on the seat frame. Secure the seat cushion to the seat frame with two screws (57), one screw (55) and three washers (70). Tighten the screws securely.

Align the two drilled holes in the left handle (18) with the mating holes in the seat frame (4). Insert two screws (54) with washers (70) through the handle and seat frame to maintain the parts in position. Slide the right handle (19) onto the two screws (54), and secure the frame and handgrips together using two washers (70) and lock nuts (68). Tighten the nuts securely.

Place the flywheel cover (13) with mounting bracket (9) (factory installed) on the range-of-motion flywheel (8).

Align the two drilled holes in the mounting bracket (9) with the mating holes in the main frame (2). Secure the mounting bracket to the main frame using two screws (56), four washers (70) and two lock nuts (68). Tighten the nuts securely.

Secure the flywheel cover (13) to the range-of-motion flywheel (8) using one screw (59), spring washer (73) and washer (70). Tighten the screw securely.

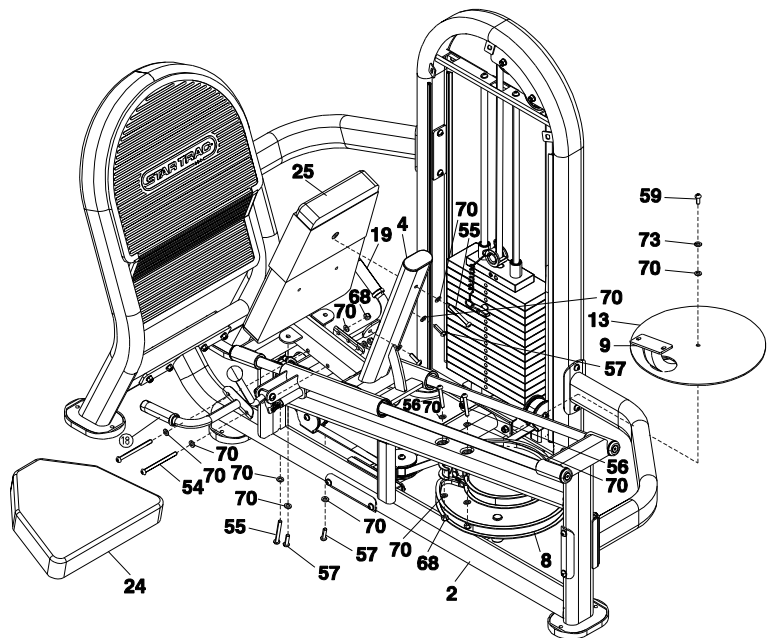

ANCHORING

IMPORTANT: The *INSTINCT LEG PRESS / CALF RAISE* must be secured to the floor to stabilize and eliminate rocking or tipping over. This must be performed by a licensed contractor. Failure to anchor the unit will void the warranty. NAUTILUS shall not be liable for damage or injury caused by unanchored or improperly anchored units.

The *INSTINCT LEG PRESS / CALF RAISE* must be anchored to the floor using through bolts or anchoring studs. Each foot pad on the unit provides two anchoring holes that will accommodate bolts of up to 12mm (7/16") diameter. Only one hole in each foot pad is required during anchoring. The holes used for anchoring may be selected based on installation site requirements or customer preference.

Anchoring bolts/studs must meet the following requirements:

- Anchor bolts shall be Grade 8.8 or Grade SAE 5.
- Anchoring bolts or studs shall have a minimum size of 6mm (1/4") diameter; 8mm (5/16") diameter bolts/studs are recommended.
- Pull-out force shall be 100kg (220 lbs) minimum for any single anchor. This will ensure a secure anchoring system and safe operation of the unit by all users.

EXERCISE GUIDELINES

GENERAL GUIDELINES

As with any exercise program, strength training involves an element of risk. The information provided in this section will help you and/or your members make safe and productive use of your *NAUTILUS INSTINCT LEG PRESS / CALF RAISE*.

- ALWAYS consult a physician before beginning any strength-training program. This is particularly important for persons with known health conditions and/or persons that are not familiar with the risks involved with weight training.
- All training sessions should be supervised by trained personnel.
- BE SURE that all warning labels and placards affixed to the *INSTINCT LEG PRESS / CALF RAISE* remain on the unit. DO NOT alter warning labels and placards. BE SURE that each user reads and understands the information shown on all labels and placards (safety, instructional and/or other).
- Instruct all users on the proper use of the *INSTINCT LEG PRESS / CALF RAISE*, as well as those actions that should be avoided.
- Your *INSTINCT LEG PRESS / CALF RAISE* has been designed to accommodate a wide variety of body types. Prior to use, mount the unit and adjust the seat height to ensure comfortable operation of the leverage arm.

To minimize user and/or bystander injury:

- Do not lean the against framework, weight stack or any component, regardless of whether it is dynamic or static.
- Stay clear of all components while in a dynamic state of motion. Keep hands and feet away from cables, belts, cams and pulleys and/or any converging action. The convergence of these transmission-based components can cause serious injury.
- Exercising on free weight and selectorized products should be performed with the assistance of a spotter.


PRODUCT USE AND MAINTENANCE

Repair of the *INSTINCT LEG PRESS / CALF RAISE* should be performed only by authorized persons.

NEVER modify the *INSTINCT LEG PRESS / CALF RAISE* or attempt to make adjustment(s) to, or the repair of, the unit equipment without first calling NAUTILUS Product Support. Always notify authorized personnel to make such repairs.

Instruct all users to report any equipment or training irregularities to supervisory personnel IMMEDIATELY.

CAUTION: Do not "high pin" and/or "double pin" a weight stack. This action is considered to be dangerous to users, and bystanders, and may damage your *INSTINCT LEG PRESS / CALF RAISE*. Aside from the mechanical damage that may result, such action(s), in part, may cause the weight stack to crush or pinch fingers, hands and/or extremities. **DO NOT** use the unit if the top plate is elevated and/or pinned in a raised position. Seek assistance from authorized personnel to correct such a condition.

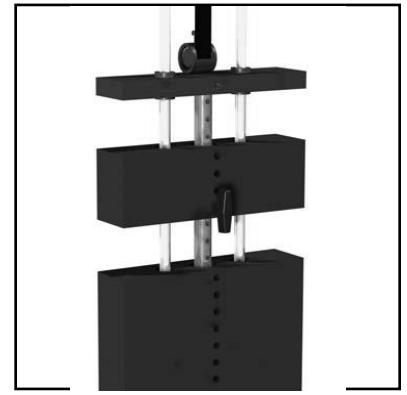

PREVENTIVE MAINTENANCE

MAINTENANCE SCHEDULE

Nautilus strongly recommends performing regular preventive maintenance on your *NAUTILUS INSTINCT LEG PRESS / CALF RAISE*. Without regularly scheduled maintenance, normal wear and tear may cause cumulative effects, such as misalignment or premature wear, resulting in downtime. For this reason, we highly recommend following the maintenance schedules. Additionally, unusual symptoms, such as excessive noise during use, stiffness or free play in moving parts, etc., should be investigated and necessary corrective actions (adjustment or parts replacement) should be performed. If any components are found to be worn or damaged, the unit should be removed from service until repairs can be made. Only components supplied or approved by Nautilus shall be used to maintain and/or repair the unit.

DAILY MAINTENANCE

- Wipe down and inspect the framework and other structural components (see **FRAMEWORK MAINTENANCE** on page 14 for requirements). Check all attaching hardware for security. Tighten as needed.
- Clean and inspect the upholstered cushions and the hand grips (see **UPHOLSTERY MAINTENANCE** on page 14 for requirements).
- Clean and lubricate the weight stack and seat frame guide rods using a cotton cloth and break-free lubricant. Apply the lubricant to the cloth, then wipe up and down the guide rods as needed.
- Inspect weight belt for excessive wear or other damage. Check weight belts for proper tension (weight belt deflection at any point should not exceed 25 mm); adjust as needed. (See **WEIGHT BELT INSPECTION REQUIREMENTS** on page 15 for requirements.)

WEEKLY MAINTENANCE

- Check the retainer screws at the weight stack top plate, range-of-motion flywheel and seat post for security (retainer screws should be torqued to 400 inch-pounds). Tighten as needed.
- Check all labels and placards affixed to the unit for legibility and security. Replace illegible labels and placards as needed (see **LABELS AND PLACARDS** on page 16 for illustrations and part numbers of standard labels and placards used on *NAUTILUS INSTINCT* products).

MONTHLY MAINTENANCE

- Clean tops of bearings at weight stack top plate. Check for heavy buildup on guide rods below top plate (lift half of weight stack to perform a visual inspection and clean as necessary).

QUARTERLY MAINTENANCE

- Apply wax to powder-coated areas of the framework and other structural components.

MAINTENANCE PROCEDURES

FRAMEWORK MAINTENANCE

CAUTION: DO NOT use lacquer thinner, acetone, or other solvents to clean powder-coated finishes on the framework or other structural components. Solvents will dull the finish, and contain components that may remove the epoxy-based powder from the frame.

Framework and other structural components should be wiped down on a daily basis using a moistened with water. This will increase the longevity of protective powder-coat finishes. The framework should be inspected while cleaning for evidence of fatigue cracks, scratches or chips in the finish, loose hardware, worn or damaged weight belt, and other areas that may require attention.

Apply easy-application car wax to all powder-coated surfaces quarterly. Regular waxing will aid in preventing premature rusting due to corrosives found in perspiration, and will allow loose particles to be removed more easily when performing the daily wipe-down.

Procedures to repair scratches and chips depend on the severity of the damage:

- Surface scratches can generally be repaired by polishing with an automotive rubbing compound.
- Deep scratches and chips must be repaired by filling the damaged area using a “touch-up” bottle of color-matched paint (available through the *NAUTILUS* Parts Department). Fill the damaged area sparingly, using two or more coats. Allow the area to dry thoroughly between coats. Once the touch-up is complete, it can be left “as is”, or it can be blended and color-sanded to the surrounding surface.

NOTE: *The process of blending and sanding repaired areas to the surrounding surface is difficult. It should be attempted ONLY by persons knowledgeable in this area.*

The weight stack shrouds are made of PETG (glycol-modified polyethylene terephthalate). Proper cleaning is necessary to preserve the appearance of the shrouds. The following cleaners are compatible with PETG: Original Dawn®, Freon® T.F., Palmolive Liquid®, Top Job® and Windex® with Ammonia D.

CAUTION: Use ONLY recommended cleaning agents and procedures when cleaning the weight stack shrouds:

- DO NOT use abrasive or highly alkaline cleaners to clean the shrouds.
- DO NOT use scrape the shrouds with squeegees, razor blades or other sharp instruments. DO NOT scrub or use brushes on the shrouds.
- DO NOT use Benzene, gasoline, acetone or tetrachloride to clean the shrouds.
- DO NOT clean the shrouds in hot sun or at elevated temperatures.

Wash the shrouds using a clean sponge or soft cloth, and a solution of mild soap or detergent and lukewarm water. Rinse well with clean water, and dry thoroughly with a chamois or moist cellulose sponge to prevent water spots.

Remove stubborn accumulations (paint, grease, scuff marks) before drying by rubbing lightly with Isopropyl alcohol. Remove labels, placards or other adhesive residue using kerosene. If solvent does not penetrate the adhesive, heat the area using a hand-held blow dryer to soften the adhesive and aid in removal.

Clean all areas treated with solvent using a clean sponge or soft cloth, and a solution of mild soap or detergent and lukewarm water. Rinse thoroughly with clean water.

UPHOLSTERY MAINTENANCE

CAUTION: DO NOT use cleaners such as Lysol®, Armor All®, Windex®, or other abrasive detergents to clean upholstered surfaces. These products will remove moisture from the Naugahyde® upholstery, resulting in premature cracking.

Upholstered cushions should be cleaned on a daily basis to prevent damaged due to corrosives found in perspiration.

Wipe the top and sides of upholstered cushions using a cloth moistened with a solution of one part lanolin hand cleaner to nine parts water. After cleaning, wipe down using a dry towel to remove any residue.


WEIGHT BELT INSPECTION REQUIREMENTS

WARNING: REPLACE WORN WEIGHT BELTS IMMEDIATELY. FAILURE TO COMPLY CAN RESULT IN HAZARDOUS CONDITIONS FOR USERS OR OTHER BYSTANDERS.


Inspect all weight belts for evidence of excessive wear or other damage. Give particular attention to the following conditions:



n Torn or cracked belt

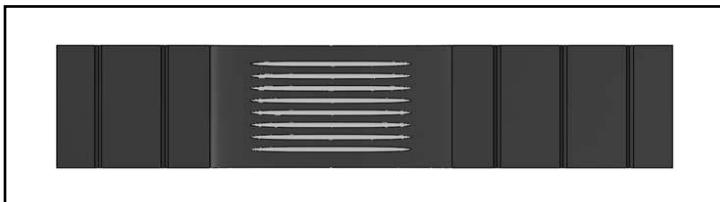

n Exposed belt cords

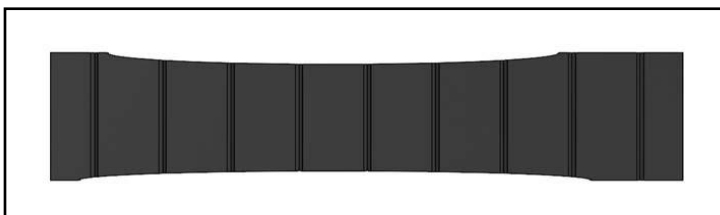

n Worn edges

LABELS AND PLACARDS


DUAL LEG PRESS / CALF RAISE

LEG PRESS




- 1 PLACE FEET SHOULDER WIDTH ON PLATE, ADJUST SEAT FOR COMFORTABLE START POSITION
- 2 PRESS SEAT BACKWARD, RETURN SLOWLY

CALF RAISE



- 1 PLACE BALLS OF FEET ON UPPER EDGE OF PLATE, HANG HEELS OVER RECESSED SPACE ON PLATE
- 2 LEGS STRAIGHT, PRESS SEAT BACKWARD EXTENDING ANKLES, RETURN SLOWLY

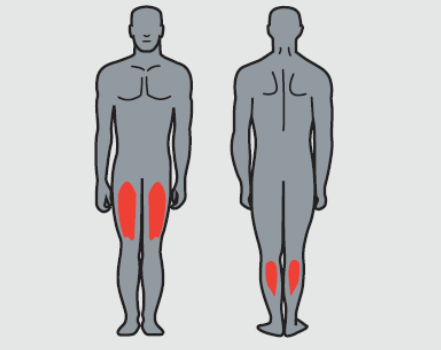

LEG PRESS **CALF RAISE**

NAUTILUS INSTINCT

WARNING
Read and follow all safety instructions before using the equipment. Always use proper form and technique. Do not use the equipment if you are injured or if you are under the influence of alcohol or drugs. Do not use the equipment if you are pregnant or have any medical conditions. Do not use the equipment if you are wearing loose clothing or jewelry. Do not use the equipment if you are wearing shoes that are not designed for the gym. Do not use the equipment if you are wearing any type of footwear that is not designed for the gym. Do not use the equipment if you are wearing any type of footwear that is not designed for the gym.

ATTENTION
Lisez et suivez attentivement toutes les instructions de sécurité avant d'utiliser l'équipement. Utilisez toujours une bonne technique et ne vous précipitez pas. Ne vous servez pas de l'équipement si vous êtes blessé ou si vous avez consommé de l'alcool ou des drogues. Ne vous servez pas de l'équipement si vous êtes enceinte ou si vous avez des problèmes médicaux. Ne vous servez pas de l'équipement si vous portez des vêtements amples ou des bijoux. Ne vous servez pas de l'équipement si vous portez des chaussures qui ne sont pas conçues pour la salle de sport. Ne vous servez pas de l'équipement si vous portez des chaussures de type chaussures de ville.

ACHTUNG
Lesen Sie die Anweisungen und alle Sicherheitsanweisungen vor dem Gebrauch des Gerätes. Verwenden Sie immer die richtige Technik und vermeiden Sie es, sich zu beeilen. Benutzen Sie das Gerät nicht, wenn Sie verletzt sind oder wenn Sie Alkohol oder Drogen konsumiert haben. Benutzen Sie das Gerät nicht, wenn Sie schwanger sind oder wenn Sie irgendwelche gesundheitlichen Probleme haben. Benutzen Sie das Gerät nicht, wenn Sie lockere Kleidung oder Schmuck tragen. Benutzen Sie das Gerät nicht, wenn Sie Schuhe tragen, die nicht für den Sport geeignet sind. Benutzen Sie das Gerät nicht, wenn Sie Schuhe tragen, die nicht für den Sport geeignet sind.



CAUTION
Pinch Points.
Keep hands away from moving parts.

WARNING
THIS MACHINE SHOULD BE PERMANENTLY SECURED TO THE FLOOR

WARRANTY & DISCLAIMER

NAUTILUS warrants all frameworks for a period of 10 years. All moving parts are warranted for 1 year. 10 year limited warranty on structural frame not including coatings. 90 days on upholstery stitching only, cables and belts. Warranty is for parts only. Warranty is good and available to the original purchaser only as noted by **NAUTILUS** invoice and is not transferable nor assumable. **NAUTILUS** cannot warrant products that have been abused, neglected and or poorly maintained. All equipment should be reviewed at the time of delivery for damage, breakage, loosening of nuts and bolts, components and or any other moving parts. Any and all claims for warranty must be received in writing within 70 days of defect. Do not alter, modify or redesign any **NAUTILUS** products or use any replacement parts or materials other than those components original to **NAUTILUS** as it will limit the warranty and liability of **NAUTILUS**. **NAUTILUS** reserves the right to change, replace or modify products, parts, accessories and or design without notice. Deposits on cancelled orders will be subject to handling and restocking charges.

WHAT IS COVERED

This **NAUTILUS INSTINCT LEG PRESS / CALF RAISE** is warranted to be free of all defects in material and workmanship.

WHO IS COVERED

The original purchaser or any person receiving the Product as a gift from the original purchaser.

WHO PAYS TRANSPORTATION & INSURANCE FOR SERVICE

If the Product or any covered part must be returned to a service facility for repairs, We, **NAUTILUS**, will pay all transportation and insurance charges for the first year. You are responsible for transportation and insurance charges for all subsequent years.

WHAT WE WILL DO TO CORRECT COVERED DEFECTS

We will ship to you any new or rebuilt replacement part or component, or, at our option, replace the Product. Such replacement parts are warranted for the remaining portion of the original warranty period.

WHAT IS NOT COVERED

Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, debris resulting from any construction activities in the Products environment, rust or corrosion as a result of the Product(s) location, alterations or modifications without our written authorization or by failure on your part to use, operate and maintain the Product as set out in your Owners Manual.

OWNERS MANUAL

It is VERY IMPORTANT THAT YOU READ THIS MANUAL before operating the Product. Remember to perform the periodic maintenance requirements specified in the Manual to assure proper operation and your continued satisfaction.

HOW TO GET PARTS & SERVICE

Simply call Customer Support Services at (800) 966-3539 or (951) 600-3800, Monday through Friday from 8:00 a.m. to 5:00 p.m. Pacific Standard Time, and tell them your name, address and the model number of your Product. They will tell you how to get a replacement part, or, if necessary, arrange for service where your Product is located or advise you on how and where to ship the Product for service. You can also contact us via Fax at (951) 600-1706 or e-mail us at

Before shipping:

1. Obtain a Return Authorization Number (RA#) from Customer Support Services
2. Securely pack your Product (use the original shipping carton, if possible)
3. Write the RA# on the outside of the carton
4. Insure the Product, and
5. Include a letter explaining the defect or problem and a copy of your proof of purchase if you believe the service is covered by warranty.

EXCLUSIVE WARRANTY

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART. We neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall we be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental or consequential damages of any nature arising out of the use of or inability to use this Product. Some states do not allow the exclusion or limitation of implied warranties or of liability for incidental or consequential damages, so the above limitations or exclusions may not apply to you.

CHANGES IN WARRANTY NOT AUTHORIZED

No one is authorized to change, modify or extend the terms of this limited warranty.

EFFECT OF STATE LAWS

This warranty gives you specific legal rights and you may have other rights, which vary, from state to state.

OUR PLEDGE TO YOU

Our Products are designed and manufactured to the highest standards. **NAUTILUS** wants you completely satisfied with our Products and will do everything possible under the terms of this warranty to keep you secure in knowing you have bought the best!



MANUFACTURER

4400 NE 77th Avenue, Suite 300, Vancouver, WA 98662 USA

Tel +1 (888) 678-2476

www.corehandf.com

CUSTOMER SUPPORT

Contact your local distributor, or Core Health & Fitness directly at:

Tel +1-800-503-1221

www.support@corehandf.com

Part Number: 730-7237