

• ABOUT US •

Driven by the passion for innovation, we at Dr Trust endeavour to provide our customers with the latest medical inventions with an objective to promote good health and wellness all around the world. All the medical devices and health monitors provided by Dr Trust are supported by accurate, latest and ground breaking technologies, innovated at our headquarter in NY, USA. All our products adhere to the most stringent CE and FDA guidelines and are strongly recommended by doctors and health practitioners. Our products are designed in the utmost exemplary ways to ensure that their accuracy and convenience are unrivalled. The ease of their use and operation makes them even more suitable for users of all age groups.

Dr Trust strives to enhance the quality of lifestyle by providing with the most trusted and innovative health care and wellness products. Being a renowned global leader in health care products, Dr Trust ensures that our technically efficient team works dynamically and tirelessly to provide the best of the medical devices to our clients. The products that we have to offer are suitably designed for use at homes, laboratories and hospitals.

Our ground breaking solutions allow you to monitor your health in the easiest ways possible. In today's era when all of our lives are too hassled to handle, it becomes a bit difficult to pay attention to our health. But it has now become easier with the coming of the monitoring devices which can be conveniently used at homes and even on the go.

We bring to you a variety of best self medical devices, trusted and used by Doctors, medical professionals and home users all over the world.

Dr Trust


Electronic Kitchen Scale - 508

• QUICK START GUIDE •

Step 1

Check the battery and place the scale on a flat and hard surface.


Step 2

Press  button to turn the scale on.

Step 3

Press the 'Unit' button to select measuring modes.

Step 4

Press  to zero out the weight of a container.

Step 5

Place the item to be measured onto the scale.




• OVERVIEW •


Dr Trust electronic kitchen scale 508 is one of the best digital kitchen scales. Precise readings and superior accuracy ensured as it weighs from 1 gram to 5000 grams with perfect precision. This is a compact size easy-to-use scale that has a large LCD display and 2 buttons- a power button and a Unit button for switching the units between pounds (lb), ounces (oz), grams (g), milliliter (ml) and fluid ounce(floz). It also comes with a bowl which makes it easy to weigh any kind of ingredients hassle-free. It has a compact design and has many useful features like tare calculation, auto OFF, and low battery indicator, etc. to make kitchen ingredients weighing easier for all.

• TO INSTALL OR REPLACE BATTERY •

- Remove the battery cover.
- Insert 2XAAA batteries inside the battery compartment.
- Make sure to put the batteries in the correct polarity.
- Close the battery cover tightly.

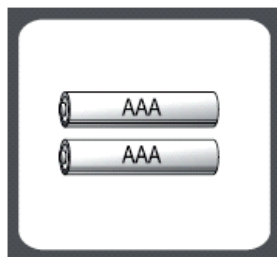

• LCD •

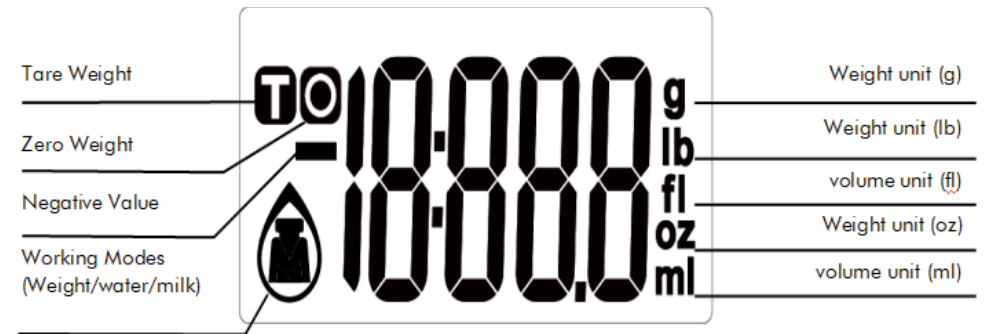

• BUTTON ILLUSTRATION •



Button


Press for mode conversion and unit conversion (long press)



Button

Press to switch on, Zero and Tare Functions.


• WORKING MODES •

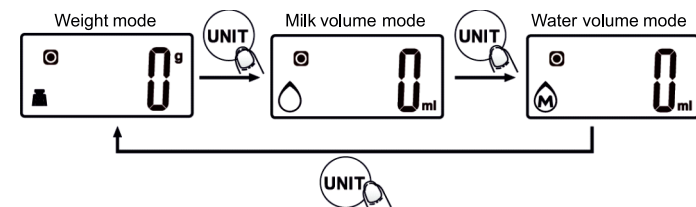

• TO CONVERT WEIGHT UNIT •

If the scale is with both measuring systems of Metric (g, ml) and Imperial (lb, oz, fl' oz), you can press "UNIT" to convert between two systems during weighing.

1. Press the "UNIT" button to choose the working mode.
2. Long press the "UNIT" to convert between weight mode & volume mode.

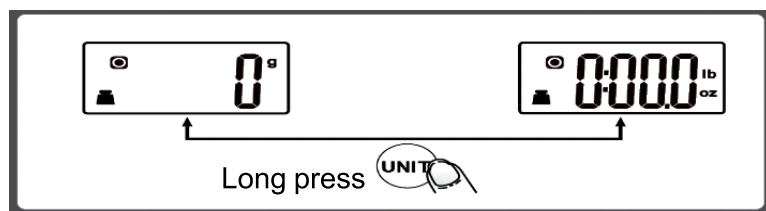

Note:


- When setting gram as weight unit, the default volume unit is ml.
- When setting lb:oz as weight unit, the default volume unit is fl' oz.

• START WEIGHING •

Weighing Mode


- A. Place the scale on a solid and flat surface.
- B. Place bowl (if used) on the scale before turning on the scale.

- Press button to turn on the scale.
- Wait until LCD shows "0" to start weighing.
- Press button to convert to weight mode if needed.
- Load weighing object on scale (or bowl) to start weighing.
- LCD will show the weight reading.
- If the weighing object is liquid (water or milk), press button to choose volume mode and view the volume of weighing object.

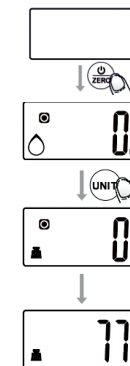


Volume Indication Mode

- Place the scale on a solid and flat surface.
- Press button to turn on the scale
- Wait until LCD shows "0", and press button to choose "Water" or "Milk" mode.
- Put a liquid container onto the scale platform.
- Press button to rest LCD to "0".
- Pour liquid (water or milk) into the container, LCD shows the volume of the liquid.
- Press button to choose "Weight" mode and view the weight of liquid.



• "ZERO" OR "TARE" FUNCTION •


To weigh different loads consecutively without removing loads from the scale, put first Load on the scale, get weight reading. Press  button to reset the LCD reading to "0" before adding next load. You can repeat this operation.


Condition 1:

"ZERO" function

When sum of all total loads on scale \leq 4% of scale's max. weight capacity.

(4%=200g when capacity is 5000g)

LCD will show "-----" or "0g" each time  is pressed. "-----" means not stable, please wait for a moment. "0g" and meanwhile an icon "o" on the left side of LCD mean ZERO function is activated. Max. Weight capacity remains unchanged.

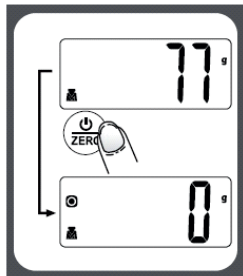


Condition 2:

"TARE" function


When total sum of all loads on scale $>$ 4% of scale's max. weight capacity.

(4%= 200g when capacity is 5000g)

LCD will show "-----" or "0g" each time  is pressed. "-----" means not stable, please wait for a moment.


"0g" and meanwhile an icon "T" on upper left corner of LCD mean TARE function is activated.

Max. Weight capacity is reduced by total weight of all loads.

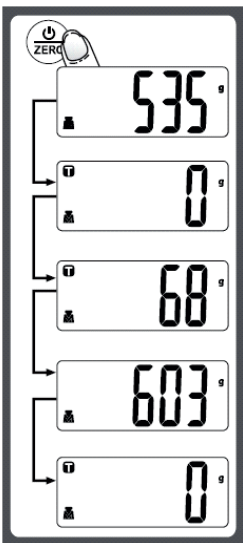


• AUTO SHUT OFF •


Auto shut off occurs if display shows "0" or shows the same weight reading for 2 minutes.

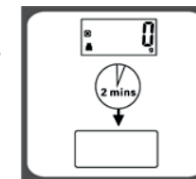

• MANUAL SHUT OFF •


To maximize battery life, always press  again to turn off the scale after using.



Note: When display shows "0", press  to turn off the scale. When display shows weight reading, press  for 3 seconds to turn off the scale.

• WARNING INDICATORS •

1. Battery is low. Replace it.
2. Maximum Capacity is exceeded. Remove items to prevent damage.

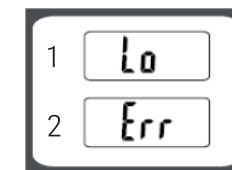

• CARE AND MAINTENANCE •

1. Always use the scale on a hard and flat surface. DO NOT use on carpet.
2. DO NOT strike, shake, or drop the scale.
3. The scale is a high precision device. Please keep it dry and take care of it.
4. Please check whether the battery is installed or at a high level, if scale cannot be turned on.
5. The scale is for family use only. Avoid using it for commercial purposes.
6. Clean the scale with a slightly damp cloth.
7. DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.
8. All plastic parts should be cleaned immediately after contact with fats, spices, vinegar, and strongly flavored/colored foods. Though avoid contact with acids citrus juices.

• CUSTOMER SUPPORT •

CONTACT ADDRESS

USA

Nureca INC.USA
276 5th Avenue, Suite 704-397,
New York (NY) - 10001, USA

INDIA

Corporate Office (Mumbai)

Nureca Limited
128 Gala Number Udyog Bhavan,
1st Floor Sonawala Lane, Goregaon East
Mumbai City Maharashtra 400063

Contact us

India: +91-7527013265 /+91-9356658436

Website: www.drtrust.in

Corp Website: www.nureca.com

Email: customercare@nureca.com

Connect with us on social networks

Facebook: @drtrust

Instagram: @drtrustisin

Youtube: NurecaUsa

COPYRIGHT©2021 NURECA LTD ALL RIGHTS RESERVED



Scan to View
Product Demo Video
www.drtrustusa.com/508