

## Automatic Adjustment Type Release Movement Alteration Kit Installation Manual [IMPREZA GDB]





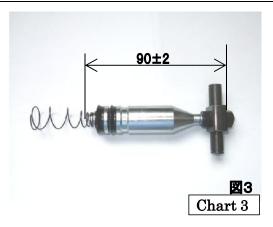

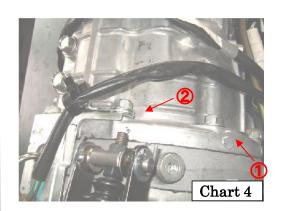

## Enclosed Items

- Fork Set (Preassembled Chart 1)
- Fork, Release Sleeve Bearing, Sleeve Pin, Fork Pin ( $\phi$ 10), 2 x Circlip for  $\phi$ 10 Pin, 2 x Washer
- Cylinder Set (Preassembled Chart 2)

Release Cylinder, Piston Rod, Piston Rod Pin, 2 x Circlip for  $\phi$  10 Pin, 2 x Washer, 2 x Fork, 2 x Connection Shaft

## Installation

- •Install enclosed Fork Set and Cylinder Set refering to Chart 1 and 2. (At this time, adjust piston rod in the cylinder at 90mm.)
- •Move the stay from Point 1 to Point 2 to prevent cables from touching the release movement alteration kit. (Refer to Chart 4)
- •After the installation of the release movement alteration kit, please check if it operates soothly

## General Warning

- XCheck to see if all the parts are enclosed. €
- Please be aware of potential risks and hazards when installing our products. We do not take any responsibility for any loss and/or injury occurred when our products are modified, re-used and/or ill-fitted.
- \*Spray aerosol lubricant to the appropriate surface of the moving parts.

Periodical lubrication is recommended.

- \*The clutch release movement alteration parts are expendables. When excessive wear or damage is found, all concerning parts should be replaced at the same time.
- XAII information on this sheet is based on Japanese Domestic Model vehicles and may not be applicable in your country.
- \*Specification may be changed without notice.