



ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE

Your ClimaStand will ship in two boxes. They may arrive at different times although shipped at the same time. The larger box will contain the case and the smaller box will contain the base. Our wall mounted version, the ClimaCase, is the ClimaStand minus the base. If you choose to convert your ClimaStand to a ClimaCase you can do so by simply removing the base and mounting to the wall. You can visit our Document Download page by scanning the QR code on page four to access key documents for all Acoustic Remedy products.

PLEASE NOTE: If there are any damages to either component of the ClimaStand, please retain all items including the box and packaging material. Photograph damage and email us at acousticremedycases@gmail.com. We will file a claim and get another case shipped out ASAP at no cost to you.

Assembly should take ~ 10-15 minutes and setting up for use ~ 5 minutes. Inside this booklet, you will find a ClimaStand Component ID call out, introducing you to key components. All screws are self-tapping, meaning no pre-drilling into the bottom of the case. There are pre-drilled holes on the bottom of the base, which the screws go through and into the case[^]

Packing List

- (1) Case
- (1) Base
- (7) - 1 1/4" self-tapping screws
- (1) - Caliber IV Digital Hygrometer
- (4) - Boveda 49% 2-Way Humidity Control Packets
- (2) - Boveda Cedar 2-Packet Holders^{^^}
- (1) - LED battery powered light and batteries
- (6) - 1/2" Wood Plugs: (2) per top of case, bottom of case, and sides of base

[^] - certain species of wood, especially exotic species, tend to be very dense and require holes to be pre-drilled into the bottom of the case to avoid screws breaking during insertion. This will be done at the shop prior to shipping and will not require you to do so. For the vast majority of species, the self-tapping screws are sufficient

^{^^} - Acoustic Remedy has discontinued the packet shelves in mid-2019; however, inventory still remains and your case may have those already installed. Simply place the Boveda holders on top of the three wood strips in the lower corners of the ClimaStand.

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE

ClimaStand Component ID Call Out:



• Battery powered LED light

• String Swing cradle locations (top two) and ClimaCase mounting (bottom)

• Top latch (accepts small padlock)

• Durable 3/4" hardwood construction

• Routed finger pull

• Neoprene gasket behind door frame provides Guaranteed Seal System

• Bumper pad[^] on back, between guitar & back piece of case

• Bottom latch

• Boveda cedar packet holders standard storage location in lower corners^{^^}

• Hygrometer location (inside lower corner)

[^] ClimaStands for electric guitars will have a matching wood bumper block

^{^^} Standard location is the lower corners; however you can mount with velcro/magnets anywhere you desire

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE

Assembly Instructions:

1. Open large box first and remove the glass protection foam first. Next, remove the side foam pieces to make removal easier. Make sure the latches are snapped shut. Stand the box up on end and grab onto the case back just below the top foam end cap. Gently pull forward and the top foam end cap should start to come out of the box. Once the top end cap has come completely out, grab it and toss aside. Next, lift the case out of the bottom end cap and place glass side up on a padded surface.
2. Open the door and remove the small box above the String Swing. This box will include all components in the Packing List.
3. Re-latch the door and flip the case glass side down on a flat, stable, padded surface. It helps to have the bottom of the case near the edge of an elevated, padded surface to properly mount the base.
4. Remove one of the 1 1/4" screws and insert the tip of the drill bit into the head of the screw. Set the drill/screw aside.
5. Open the small box and remove the base. Unfold the base and set aside.
6. Line up the base with the lightly drawn pencil lines on the bottom of the case. Place the base onto the case with the top, thinner portion (cross support) on the back of the case.
7. Insert the first screw through the bottom of the base in any of the four pre-drilled holes while applying pressure to the base pressing it against the case. Repeat with remaining 3 screws through bottom.

8. Insert three screws through the top cross support of the base into the back of the case.

10. Once all screws are secure, carefully place the ClimaStand upright on the floor.

11. Vacuum out any dust, debris, or other material in the inside and outside of the ClimaStand. Using standard glass cleaner, clean the glass inside and out. Note: We have an additional document titled "Acoustic Remedy Care and Cleaning Guidelines" which highlights how to care for your ClimaStand.

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE

ClimaStand Use:

1. Place the included Boveda 2-Way Humidity packets into the packet holders. The holders are designed to hold either one or two packets. Nearly every ClimaStand gets the Cedar 2-packet holders, with the exception being the ukulele/mandolin/violin ClimaStands which get the Brushed Aluminum 1-packet holders. Place the packet holders in the lower left and right corners or utilize the included magnetic/velcro mounting accessories by Boveda to mount along the left and right side of the ClimaStand. Please take precaution if using the packet holders on the left and right side. In the event the adhesive were to be compromised in some way and the packet holders let loose, there is risk of them falling onto your guitar.

Acoustic Remedy is not liable for any damages to your instrument if the packet holders were to fall onto it by foregoing the recommended storage location in the lower left/right bottom.

2. Install the Caliber IV hygrometer in any location you see fit in the ClimaStand. There is one permanently affixed magnet on the back side of the hygrometer and another separate "loose" magnet with adhesive. Expose the adhesive while the loose magnet is on the permanently affixed magnet, determine location, and press firmly against the wood surface. Note: see additional photos page for the preferred location.

3. Place the LED light onto the pre-installed magnet at the top of the ClimaStand.

4. Utilize the back side of the base for storage of straps, capos, tuners, extra strings, small books, cables, remotes, or extra packets! Note: see additional photos page for reference.

ClimaStand Use (Continued):

4. Place your guitar into the ClimaStand to determine desired alignment and positioning. The String Swing can be twisted left to right, moved up and down, and the **yoke can be adjusted by squeezing or prying gently on each side to accommodate thinner or wider headstocks.** We recommend unthreading the String Swing to make adjustments to the yokes.

5. To maximize the life span of the Boveda packets, it's imperative to keep the door shut and the latches engaged at all times except when removing or inserting your instrument.

6. The Boveda 2-Way Humidity Control Packets should give you many months of reliable humidity control depending on several factors, including interior home humidity levels, the starting RH of your instrument humidity, and the number of times you exchange exterior air with interior air. If the packets become stiff, this means they've emitted all the moisture available and need to be replaced. Simply remove the packets, discard, and replace. Acoustic Remedy recommends checking the packets every week or so to determine if they require replacement.

7. We offer a subscription program to deliver replacement sets of the Boveda packets directly to you every 3 months. This program gives you the peace of mind knowing that you will not have gaps in your humidity control regimen. Please scan the QR code or visit the website link below the code to learn more.



<https://www.acousticremedycases.com/pages/packet-renewal-program>

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE

How to Use Upgrade/Options:

Powered LED Light Strip

- Locate the white cord terminating through the lower right corner of the ClimaStand and taped to the bottom of the case portion. This white cord is the end of the remote sensor and has a circular barrel connector on the end of it. Carefully remove the tape and free the cord.
- Locate the black power adapter in the accessories box. Insert the male barrel connector into the female barrel connector on the end of the remote sensor.
- Plug the power adapter into a 110V outlet and the light strip should power on.
- Use the included remote to control the light level, turn the light on/off, and re-pair (if necessary).
- Although the remote and remote sensor should be pre-paired, re-pairing may be necessary. To do so simply unplug the power adapter, plug in and hold the 100% and 60% simultaneously for 5 seconds. The re-pairing process should be complete.

Keyed Cam Lock

- To operate the keyed cam lock, use the provided key and turn counter clockwise to lock the case. Reverse the process to unlock.
- The lock operates by swinging an arm, or "cam", into a receiving plate on the backside of the door frame.
- There should be very little resistance when locking/unlocking. If there is excessive resistance, please contact us to determine reasons and solutions to this unlikely scenario.

UV Blocking/Safety Glass

- The glass is professionally installed and can be used immediately
- Normal glass cleaner can be used safely on this glass

How to Use Upgrade/Options:

Storage Compartment

- Once the base is mounted to the case, a small storage compartment is formed between the back of the case and section of the base between the uprights
- This pocket is great for storing small music accessory products such as straps, tuners, capos, and extra strings and Boveda packets

Neck/Bout Rest Storage System

- If you elected to rest your instrument instead of hanging it from the String Swing, the components of the Neck/Bout Rest Storage System function using high strength neodymium magnets
- On the floor of the ClimaStand, there will be powder coated black bars that attract the magnets on the underside of the bout rails. The rails are adjustable left to right to accommodate a variety of lower bout sizes
- The neck wedge will have two locations at the top of the ClimaStand that allow for different length instruments. The goal is to have the neck entering the neck wedge around the 3rd-5th fret.
- Once the proper Bout Rail width and Neck Wedge locations have been determined, place your instrument into the ClimaStand and allow the back of the instrument to rest on the cork bumper pad.
- Finish by placing the small black powder coated bar onto the magnets on the Neck Wedge

Bumper Block Set

- If changing between electric and acoustic guitars, use the right size bumper block. Thicker for electrics and thinner for acoustics
- Lock the proper block onto the magnets on the back of the case

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE INSTRUCTIONS

Other Important Documents:

Supporting documents can be found on our Document Download page.

**SCAN THIS QR CODE TO ACCESS
ACOUSTIC REMEDY DOCUMENT
DOWNLOADS:**



**ALTERNATIVELY, YOU CAN VISIT THIS
WEBSITE TO ACCESS THE SAME
INFORMATION:**

[https://www.acousticremedycases.com/
pages/document-downloads](https://www.acousticremedycases.com/pages/document-downloads)

Questions/Comments/Concerns:

You can contact us via phone or email. In addition, some answers to common questions may be found on our FAQ page.

Adam, Co-Owner: 608-406-9860

Ryan, Co-Owner: 651-341-9955

Email: acousticremedycases@gmail.com

FAQ: You can scan the code below or visit <https://www.acousticremedycases.com/pages/faq>



Other Acoustic Remedy Products:

- ClimaCase: floor mounted, single instrument humidior
- ClimaCab: multi-instrument humidior
- Open Air Stands: DualStand, DualStand Deluxe, and String Stand
- String Racks: available in Petite (32"), Traditional (48"), and Grand (64")
- Wood Guitar Picks: explore your tone options with handmade picks in a variety of hardwoods
- Pedal Boards: hardwood pedal boards are a unique option to add some class to your music space.
- Musician Seating: stools and stairs to sit and strum on

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE INSTRUCTIONS

Additional Photos:




Standard location of the Boveda Packet Holders & Caliber IV Hygrometer



Coved Finger Pull



Storage Pocket on Backside of Base

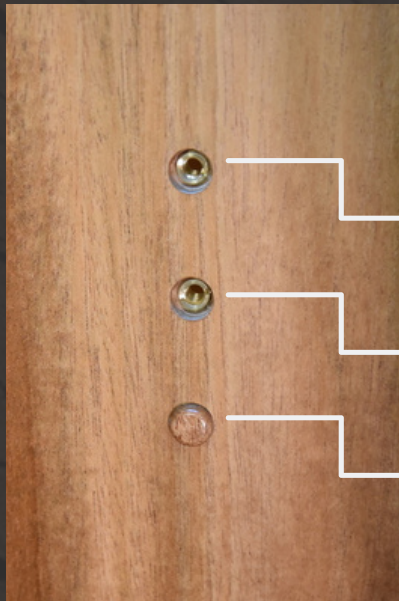

Upper String Swing Location

Lower String Swing Location

Mounting Hole (if converting to a wall mounted version)





LED Battery Powered Light

ACOUSTIC REMEDY

CLIMASTAND ASSEMBLY & USE INSTRUCTIONS

Additional Photos:

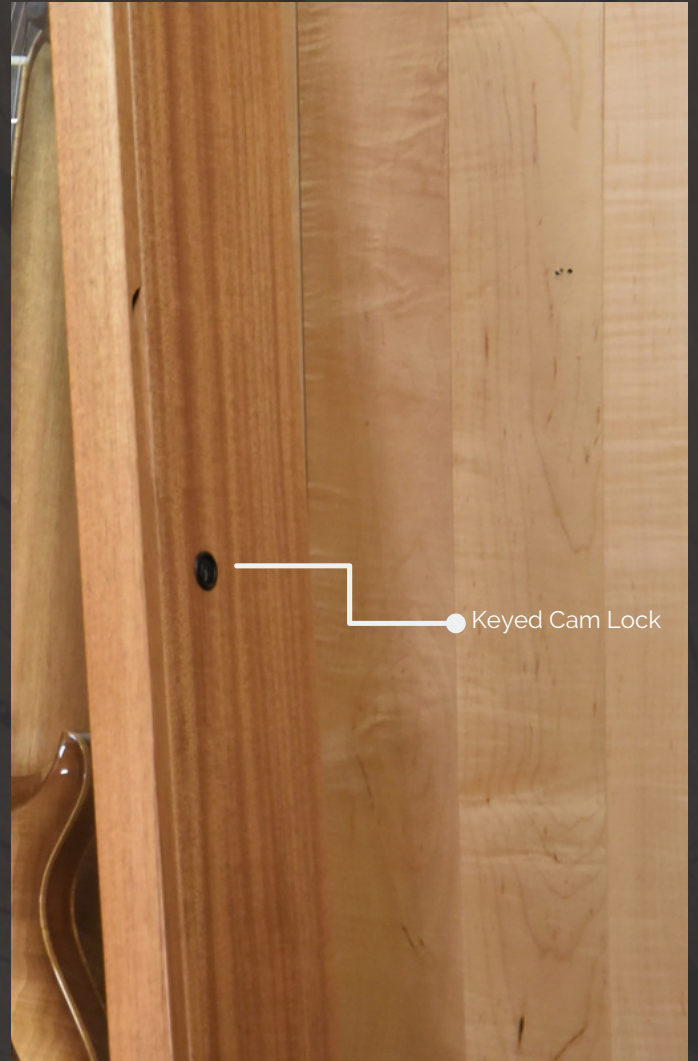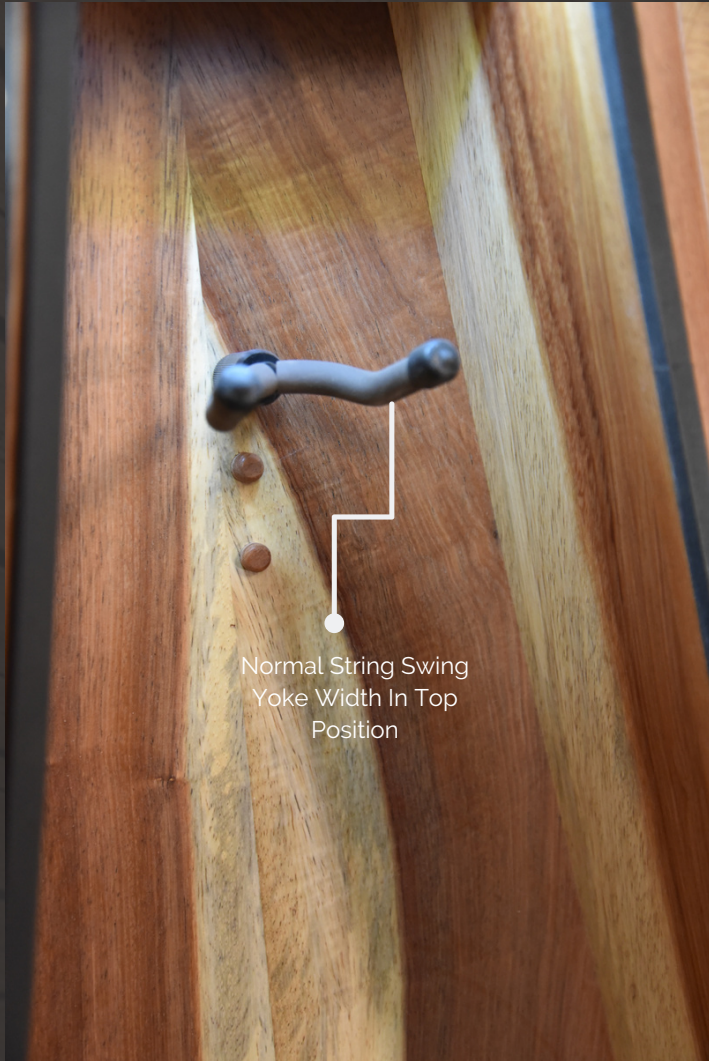



WWW.ACOUSTICREMEDYCASES.COM