


# — SELLE — ANATOMICA

## Tension Slide Replacement Procedure


1. Loosen tension bolt by screwing bolt clockwise until it disengages from nose piece.

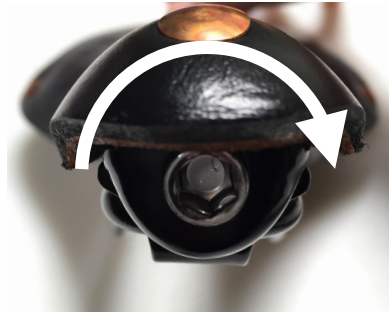

2. Remove tension bolt and tension nut from Tension Slide.




3. Tension slides have a front and a back. The shorter ears face the front of the saddle frame. The taller ears face the rear.

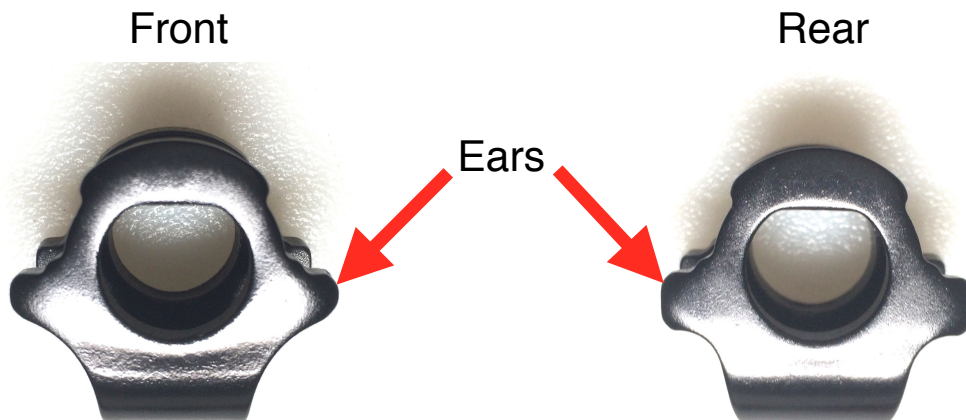

# SELLE ANATOMICA

4. Place Tension Slide on Rail with wider ears in the center.

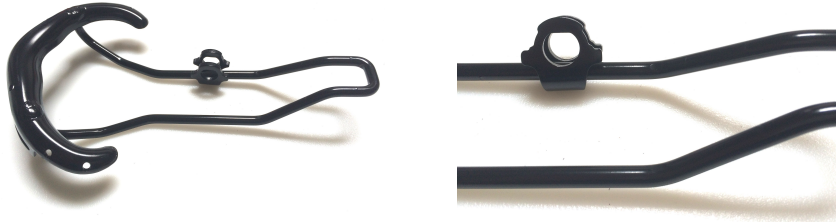

5. Slide Tension Slide to front of rail.



6. Reinsert Tension Nut and Bolt



7. Tighten Tension bolt

