



FOCUS V CARTA 2 USER MANUAL


Welcome and thank you for being part of the FOCUS V Family. The FOCUS V CARTA 2 is an amazing device and we want to help you get the full experience. Please take a few minutes to read through this user manual and don't forget to share your experience on social media with #cartagang!

START UP

To power on the device, press the POWER (O) button five times. Your FOCUS V CARTA 2 will then display the startup animation and load your previous settings. To power down your FOCUS V CARTA 2, press the POWER (O) button five times. The OLED screen will automatically turn off after two minutes of inactivity. Your FOCUS V CARTA 2 will then enter into standby mode. Press any button to wake from standby mode. Your device will automatically power down after ten minutes of inactivity.

Once powered ON
the display will show the
following indicators:

- 1 Set Temperature
- 2 Current Temperature
- 3 Battery Life
- 4 Timer
- 5 Cycles Count
- 6 Detected Atomizer
- 7 Current Presets Selected

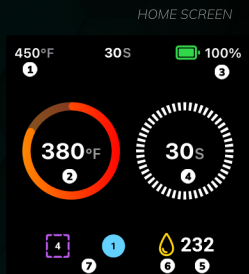

TIME & TEMPERATURE SETTINGS



From the home screen of your FOCUS V CARTA 2, you can press the DOWN (-) button to adjust the desired temperature setting. Now you can press the UP (+) or DOWN (-) to adjust the value. The OLED screen will display your setting accordingly as you increase or decrease the temperatures. Confirm the correct selection and let the device return to the home screen to automatically save your settings.

To enter the Time Settings mode, press the UP (+) button from the home screen of your FOCUS V CARTA 2. The OLED screen will display the Time Settings screen, and now you can press the UP (+) or DOWN (-) to adjust the duration of your session's time. Let the device return to the home screen to automatically save your settings.

TEMPERATURE RANGE

HERB
300°F - 460°F
MIN - MAX

CONCENTRATE
380°F - 620°F
MIN - MAX

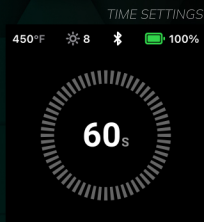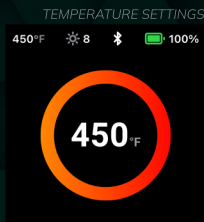

START YOUR SESSION

After you have set your desired session settings, press the POWER (O) button two times to start your session. Your FOCUS V CARTA 2 will vibrate and the OLED screen will show the atomizer temperature increase. Once at the desired temperature setting, your device will vibrate and the countdown sequence will begin. NOTE: During the countdown sequence, you can double click the POWER (O) button to extend the session by 10 seconds. To cancel your session, press the POWER (O) button once anytime during the countdown sequence.



LED AND SESH PRESETS

Your FOCUS V CARTA 2 comes with five default SESH presets as well as a custom user setting. Press the POWER (O) button once to show the SESH preset screen. Press the UP (+) or DOWN (-) buttons to cycle between the preset configurations. Preset 0 will apply user settings.

Out of the box, your FOCUS V CARTA 2 has five LED presets available to select from. Press the POWER (O) button three times to show the LED preset screen. Press the UP (+) or DOWN (-) buttons to cycle between the preset LED configurations. The "OFF" setting will turn off all LEDs.

