



# CAUTION

This product contains small parts in its unassembled state.  
Adult assembly is required.

**PLEASE KEEP THIS OWNER'S MANUAL FOR FUTURE REFERENCE, AS IT CONTAINS IMPORTANT INFORMATION.**

WE WANT YOU TO BE HAPPY AND SAFE USING OUR PRODUCT SO PLEASE READ AND FOLLOW THE USERS MANUAL CAREFULLY. FIT THE BOARD ON THE STROLLER/PRAM ACCORDING TO THE USER GUIDE. MAKE SURE YOU HAVE FITTED THE BOARD SECURELY TO THE STROLLER/PRAM. TEST INDOORS AND IF YOU DON'T UNDERSTAND ANY OF THE FOLLOWING, DO NOT HESITATE TO CONTACT YOUR RETAILER OR OUR HELPLINE.

**WE ARE ALWAYS HERE TO HELP!**

HELP LINE:0871 2880873

Email: [baby2travel@gmail.com](mailto:baby2travel@gmail.com)

THIS PRODUCT HAS BEEN TESTED TO COMPLY WITH BS EN 1888:  
2012 Safety Requirements for Wheeled Child Conveyance




## **WARNING**

- YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY!
- NEVER LEAVE YOUR CHILD UNATTENDED WHILE USING THIS PRODUCT.
- FOR USE BY ONE CHILD ONLY. FROM 2 YEARS OF AGE UP TO MAXIMUM 20KG (APPROX 6 YEARS).
- SUITABLE FOR CHILDREN THAT CAN STAND CONFIDENTLY UNAIDED.
- TAKE EXTRA CARE WHILE USING THE BOARD AND KEEP BOTH HANDS ON YOUR STROLLER HANDLES WHEN THE CHILD IS STANDING ON THE BOARD.
- ENSURE THAT YOUR CHILD IS ALWAYS STANDING WITH BOTH FEET ON THE BOARD AND THAT THEY ARE HOLDING WITH BOTH HANDS ON TO A SAFE PART ON THE STROLLER AT ALL TIME.
- EXTRA CARE SHOULD BE TAKEN AS THE STROLLER'S PARKING BRAKE MAY NOT BE ACCESSIBLE WHILE YOUR CHILD IS STANDING ON THE BOARD.
- CHECK AND SHOULD CHECK BEFORE EACH USE. THE CONNECTORS AND ALL JOINTS TIGHTEN IF NECESSARY.
- DO NOT USE THIS PRODUCT IF ANY PARTS ARE DAMAGED/BROKEN OR MISSING.
- NEVER LEAVE YOUR CHILD PLAY WITH THIS PRODUCT.
- NEVER ATTACH THE BOARD TO ANY OTHER TYPE OF CONVEYANCE OR VEHICLE.
- CHILDREN MUST DISMOUNT THE BOARD WHEN CROSSING CURBS OR OTHER OBSTACLE.
- THIS PRODUCT IS NOT SUITABLE AND SHOULD NOT BE USED FOR RUNNING/SKATING/OFF ROAD/UNEVEN GROUND/FIELDS/MUD.
- THE BOARD SHOULD NOT BE USED WHILST GOING UP OR DOWN STEEP HILL/ROAD OR STAIRS.


# PARTS DELIVERED

#	DESCRIPTION	QUANTITY
1	Board	1
2	Board attachment assembly LHS	1
3	Board attachment assembly RHS	1
4	Board supporting arm assembly LHS	1
5	Board supporting arm assembly RHS	1
6	Wheel swivel assembly	2
7	Storage strap	1


1

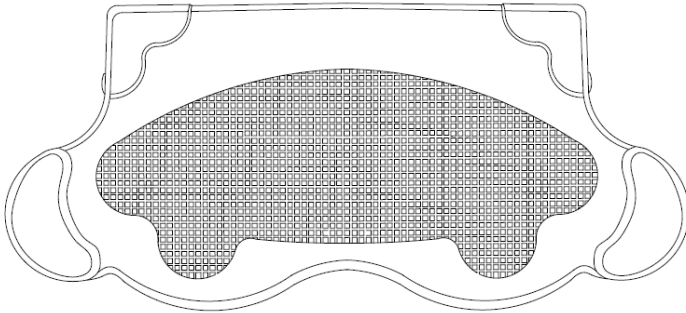

2

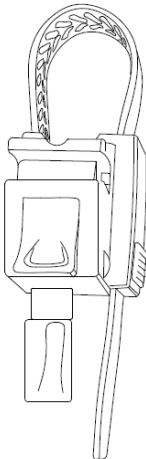


3

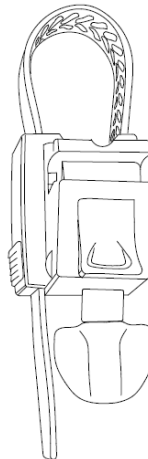


\* TO IDENTIFY THE LHS AND RHS – the PRESS button should be face on face.

# PARTS DELIVERED

4

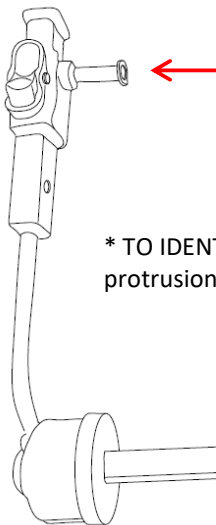


5

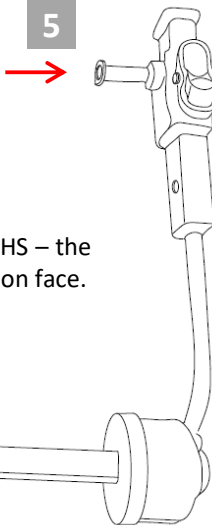


\* TO IDENTIFY THE LHS AND RHS – the protrusion bar should be face on face.

6


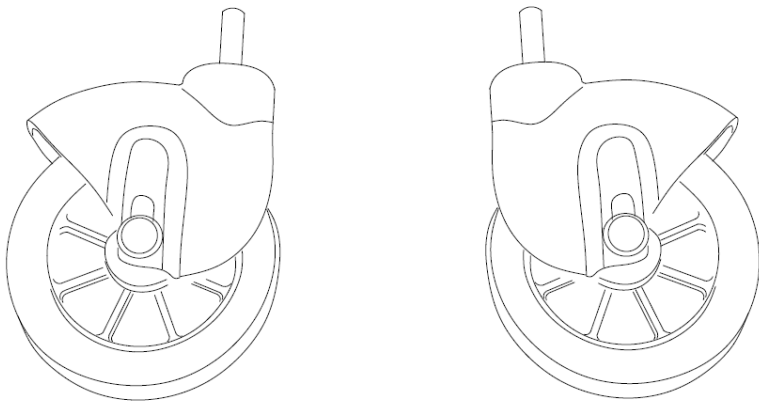


7


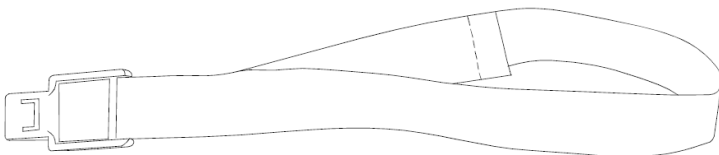


# ASSEMBLY INSTRUCTIONS



## **STEP 1**

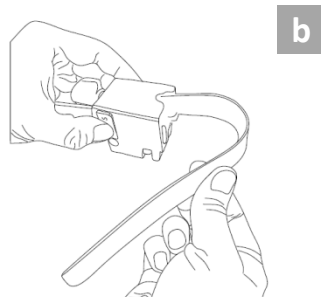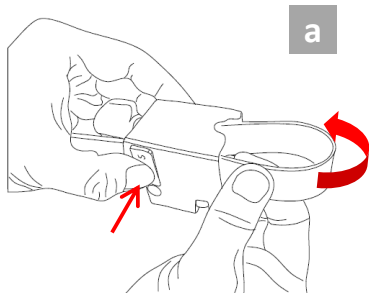

- a – press the PRESS button by thumb;  
b – pull the plastic strap out of the attachment housing.

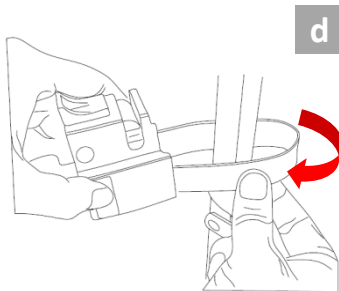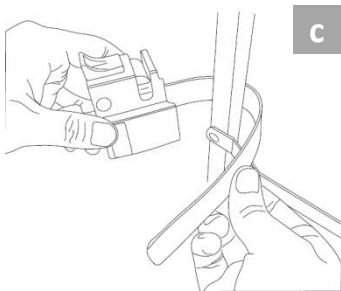


- c – attach the plastic strap around the rear leg tube;  
d – press the PRESS button and insert the plastic strap into the socket of the attachment housing.

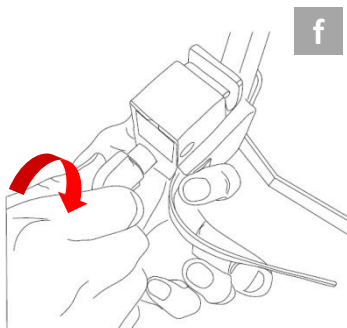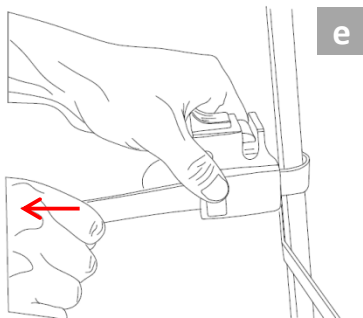

- e – press the PRESS button and pull the plastic strap to the end;  
f – tighten the nut until the whole attachment is fixed tightly against the rear leg tube.

# ASSEMBLY INSTRUCTIONS


## **STEP 2**

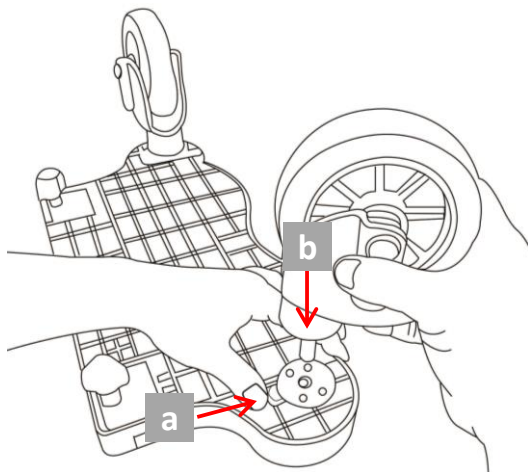

a – press the button ;

b – insert the PIN of wheel swivel assembly in to the hole. Make sure it is locked by the latch properly.

## **STEP 3**

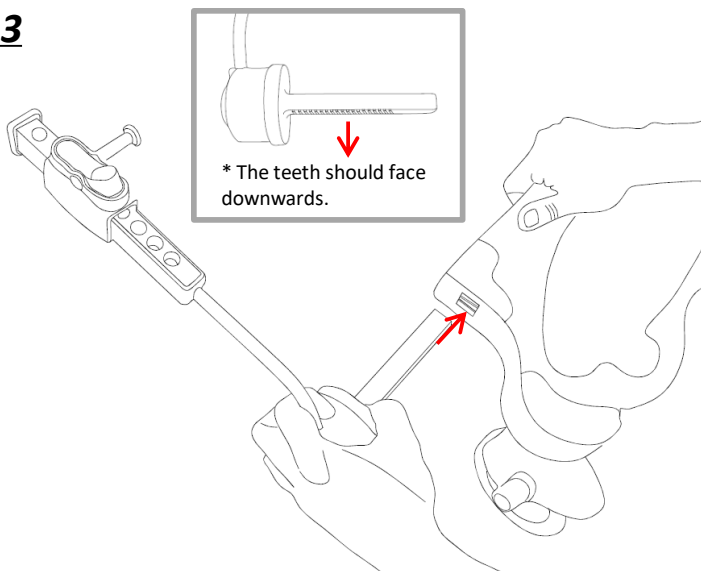


Assemble the Board supporting arm LHS into the socket of the board;


\* Repeat the same action for RHS.

# ASSEMBLY INSTRUCTIONS

## STEP 4

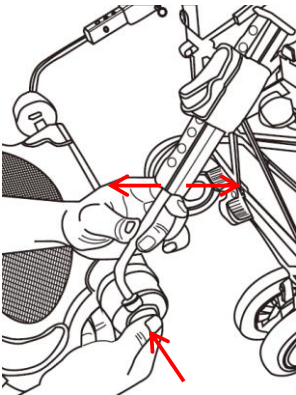


a

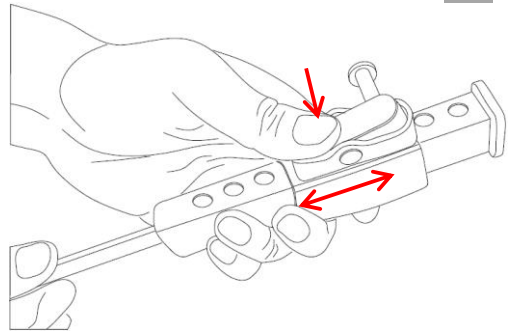


b

a – press the button by thumb to adjust the angle of the supporting bar;  
b – press the button and move the housing up /down to adjust the length. Make sure the board is behind the brakes and wheels.

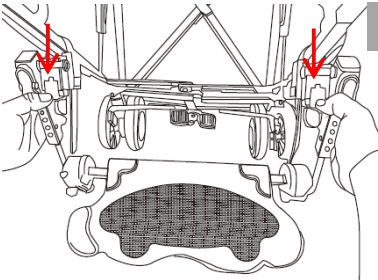


c

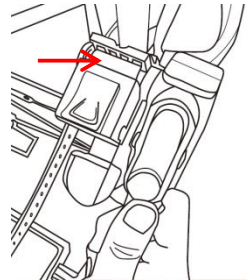


d

c – pull the latch by thumb backwards and fit the protrusion bar into the socket of bracket;  
d – make sure the protrusion bar is latched properly.

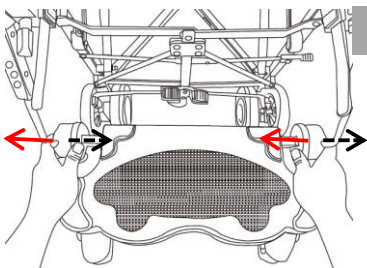

e

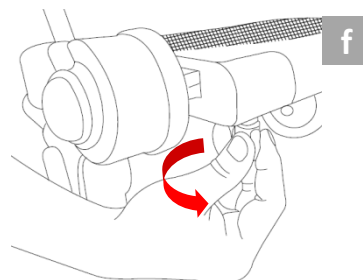


f

e – adjust the width of the supporting arm to fit with the width of the chassis;  
NOTE: make sure board is parallel with the ground. If not, please repeat action a & b.  
f – tighten the nut underneath the board, make sure the extending bar is locked properly.

# ASSEMBLY INSTRUCTIONS


## **STEP 5**

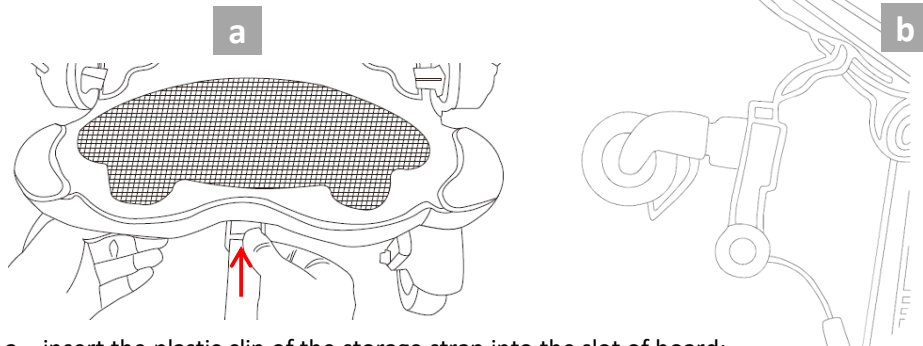

a – insert the plastic clip of the storage strap into the slot of board;

b – Now you can raise and stow the board by securing the strap to the chassis of the stroller.

## **STEP 6**

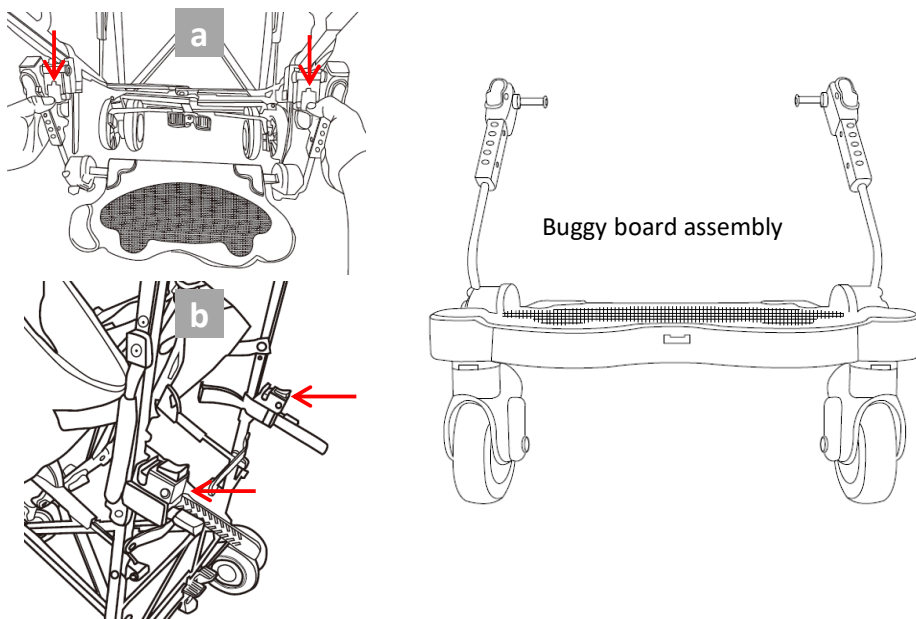

a – REMOVING the product: pull the latch by thumb backwards and remove the whole Buggy board assembly;

b – The board attachment assembly LHS and RHS can be left on the chassis.



## CARE AND MAINTANCE

FOR CLEANING USE ONLY A MILD DETERGENT AND WARM WATER  
DO NOT USE ANY ABBASIVE SUBSTANCES  
DO NOT EXPOSE TO HEAT  
REGULARLY CHECK THE BOARD FITTINGS FOR A WEAR AND TEAR OR  
ANY BROKEN PARTS  
FROM TIME TO TIME LUBRICATE THE WHEEL AXELS AND THE SWIVEL  
AXEL WITH WD40  
OR ANOTHER LIGHT OIL LUBRICANT AND CLEAN WITH MILD WATER TO  
PREVENT DUST AND DIRT FROM GATHERING

**PLEASE USE WITH CARE, AND ENJOY!**

IMPORTED AND DITRIBUTED BY  
BABY TRAVEL  
Unit 30 Watery Lane Ind. Est.  
Willenhall, West Midlands  
WV13 3SU  
United Kingdom  
TEL: 0871 2880873