


GRIPPS®

GRIPPS® Technical Specification Sheet.

GRIPPS® GrippAir
Model: H01315-90

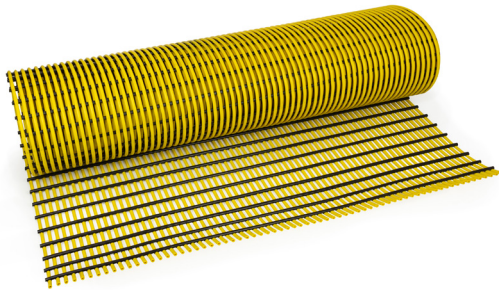

H01315-90
GrippAir - Soft Tread Containment Matting
Size: 90cm x 10m / 3.0' x 33'

FOR PRODUCT SUPPORT CONTACT:

support@gripps.com | +61 3 8383 9458

WWW.GRIPPS.COM

GRIPPS® GrippAir

SAFETY INFORMATION

⚠️ WARNING Before using the GRIPPS® GrippAir, read all provided safety information pertaining to the use of your Dropped Tool Prevention (DTP) device. FAILURE TO DO SO COULD RESULT IN INJURY OR DEATH.

The user of a DTP device bears the responsibility of reading all safety information contained herein. Keep this manual for future reference.

Intended Use:

When used properly, the GRIPPS® GrippAir can prevent workplace hazards resulting from dropped tools. These may include personal injury and material damage.

GRIPPS® does not approve use of this device for any activities not described in the User Instructions. This device is not intended to be used in any recreational activity, as a personal fall-arrest device or in any other manner not described herein.

⚠️ WARNING Misuse of this device could result in serious injury or death.

Adhere to all manufacturer recommendations regarding the operation and maintenance of this device. For additional information, contact GRIPPS® customer support.

Read and adhere to the following in order to ensure correct operational functionality:

- Your DTP should never be used as a personal fall-arrest device or restraint system.
- Do not use this device with tools that exceed the specified maximum load/weight.
- A DTP device used in applications that exceed the limits of operation specified by the manufacturer should be considered unsafe and should be replaced.
- Do not tether a tool over 2.5kg/5.5lbs directly to your clothing or person.
- Inspect your DTP device before each use.
- Ensure the DTP device is securely connected to a load rated surface using all available anchor points before use.
- Inspect any tool connector point before it is connected to the DTP device.
- Modification of the DTP device voids all warranties and violates manufacturer recommendations.
- Do not use a tool that cannot be connected to your DTP in the manner specified by GRIPPS®.
- Do not use this product if it will create an unsafe working environment.
- Ensure tethers do not become entangled with other workers, yourself or surrounding objects. Leave enough space between yourself and any hazards so that a tool on a fully extended tether can swing unobstructed should it fall.
- Avoid contact between tethers and rough or sharp edges.
- Use extra precaution around moving machinery, moving parts, electrical hazards, extreme temperatures, chemical hazards, or combustion hazards.
- All connected tools and equipment, including connection points, must be compatible for use with this DTP device.

- Always wear appropriate personal protective equipment.
- If a tether has arrested a dropped tool or object, it should be taken out of service and replaced.
- All procedures shown in this instruction are for GRIPPS® GrippAir only.

GENERAL USE AND CARE


The GRIPPS® GrippAir is designed and manufactured in Australia from non-toxic food grade PVC tubes, providing excellent longevity as well as comfort and support underfoot.

Constructed in a grid formation, GrippAir is both flame and chemical resistant and can be installed in minutes on even or uneven surfaces. Easy to roll up and clean, GrippAir is reusable and can be cut to any size or shape.


Before Use:

Thoroughly inspect your GRIPPS® DTP device before each use. Do not use any component that presents deformities or deterioration. Inspect all material including the carabiner and tether.

HOW TO USE / INSTRUCTIONS:

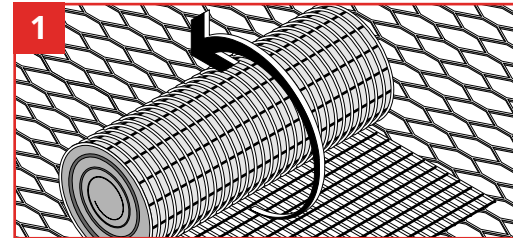

Place roll of GrippAir on gridmesh floor in desired location. Roll out matting and cover length of desired area. Ensure matting is flat without raised bubbled spots.

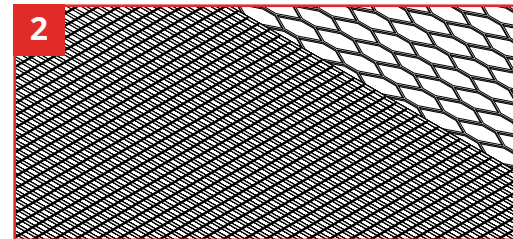

Fasten GrippAir using zip ties or similar fasteners in corners and along edging. Remove ties and roll back up for re-use when finished.

After Use Care:

Clean and inspect GrippAir. For tougher stains, use warm water and a mild soap or detergent. Store in a clean and dry environment.

GRIPPS®



linkedin.com/company/grippsglobal



facebook.com/grippsglobal



youtube.com/@gripps3480grippsglobal



instagram.com/grippsglobal