

# GRIPPS®

## GRIPPS Technical Specification Sheet:

### GRIPPS® Gripp Shrink

Models: H03000, H03001, H03002, H03005



**H03000**  
Gripp Shrink  
20mm x 50mm | 0.79" x 1.97"  
Quantity: 25pcs

**H03002**  
Gripp Shrink  
40mm x 50mm | 1.57" x 1.97"  
Quantity: 25pcs

**H03001**  
Gripp Shrink  
25mm x 50mm | 0.98" x 1.97"  
Quantity: 25pcs

**H03005**  
Gripp Shrink  
75mm x 100mm | 2.95" x 3.94"  
Quantity: 10pcs

### FOR PRODUCT SUPPORT CONTACT:

support@gripps.com | +61 3 8383 9458

WWW.GRIPPS.COM

## GRIPPS® Gripp Shrink

### SAFETY INFORMATION

**⚠️ WARNING** Before using the GRIPPS® Gripp Shrink, read all provided safety information pertaining to the use of your Dropped Tool Prevention (DTP) device. FAILURE TO DO SO COULD RESULT IN INJURY OR DEATH.

The user of a DTP device bears the responsibility of reading all safety information contained herein. Keep this manual for future reference.

#### Intended Use:

When used properly, the GRIPPS® Gripp Shrink can prevent workplace hazards resulting from dropped tools. These may include personal injury and material damage.

GRIPPS® does not approve use of this device for any activities not described in the User Instructions. This device is not intended to be used in any recreational activity, as a personal fall-arrest device or in any other manner not described herein.

**⚠️ WARNING** Misuse of this device could result in serious injury or death.

Adhere to all manufacturer recommendations regarding the operation and maintenance of this device. For additional information, contact GRIPPS® customer support.

Read and adhere to the following in order to ensure correct operational functionality:

- Your DTP should never be used as a personal fall-arrest device or restraint system.
- Do not use this device with tools that exceed the specified maximum load/weight.
- A DTP device used in applications that exceed the limits of operation specified by the manufacturer should be considered unsafe and should be replaced.
- Do not tether a tool over 2.5kg/5.5lbs directly to your clothing or person.
- Inspect your DTP device before each use.
- Ensure the DTP device is securely connected to a load rated tool connector or anchor point before use.
- Inspect any tool connector point before it is connected to the DTP device.
- Modification of the DTP device voids all warranties and violates manufacturer recommendations.
- Do not use a tool that cannot be connected to your DTP in the manner specified by GRIPPS®.
- It is unsafe to extend the length of the DTP product by any means.
- Do not use this product if it will create an unsafe working environment.
- Use extra precaution around moving machinery, moving parts, electrical hazards, extreme temperatures, chemical hazards, or combustion hazards.
- Avoid contact between any connected tethers and rough or sharp edges.
- Regularly inspect the Gripp Shrink & connected tethers to ensure it is free from any dust, grime or debris.
- All connected tools and equipment, including connection points, must be compatible for use with this DTP device.

- Always wear appropriate personal protective equipment.
- If a tether has arrested a dropped tool or object, it should be taken out of service and replaced.
- All procedures shown in this instruction are for GRIPPS® Little Gripper Kit products only.


### GENERAL USE AND CARE

After using V-Gripp Tape and Tool Catch's to create an attachment point, Gripp Shrink can be used to create an even stronger connection that is extremely resistant to abrasive and harsh environments.


#### Before Use:

Thoroughly inspect your GRIPPS® DTP device before each use. Do not use any component that presents deformities or deterioration.


### HOW TO USE / INSTRUCTIONS:

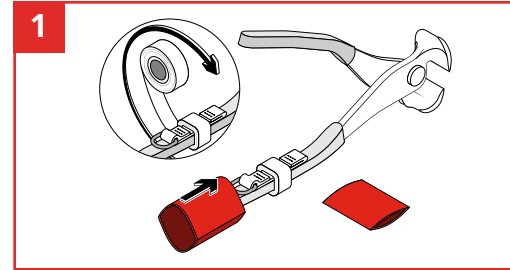

Slide Gripp Shrink over Tool Catch and V-Gripp Tape, ensuring that the D-ring is left exposed and accessible.

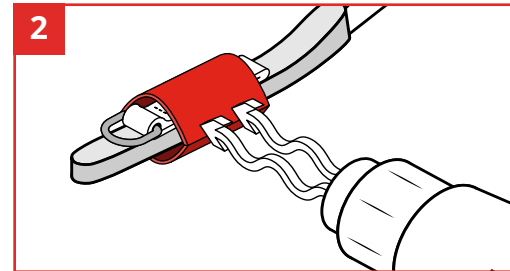

Apply a heat gun to the Gripp Shrink. This will cause Gripp Shrink to shrink in size and adhere to your Tool Catch/V-Gripp Tape. Use heat gun evenly and rotate tool continually whilst applying heat. Allow to cool.

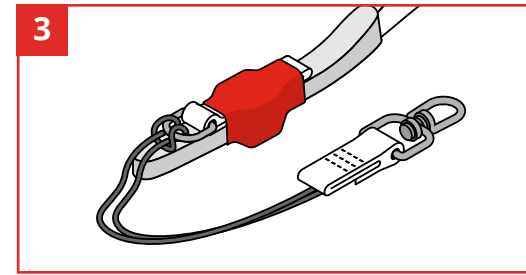

The D-Ring of your Tool Catch is now ready to be connected with a suitable GRIPPS tether or Swivel Catch.

#### After Use Care:

Clean and inspect the Gripp Shrink and any connected tethers. For tougher stains, use warm water and a mild soap or detergent. Do not use again until dry.

Store in a clean and dry environment. Proper care will help to ensure that it will operate effectively and extend its service.

# GRIPPS®



linkedin.com/company/grippsglobal



youtube.com/@gripps3480grippsglobal



facebook.com/grippsglobal



instagram.com/grippsglobal