






SWAPPING BRAKE CABLES

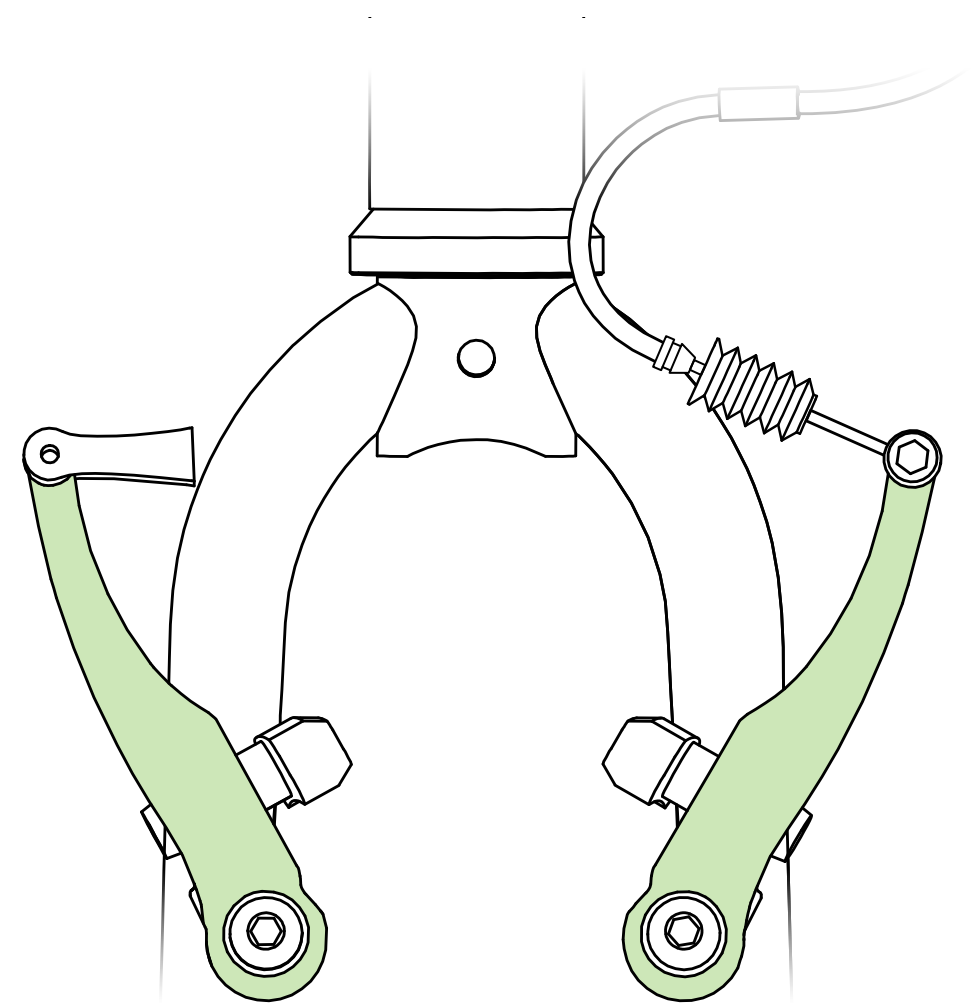


1 Follow the instructions on “disconnecting your v-brakes”

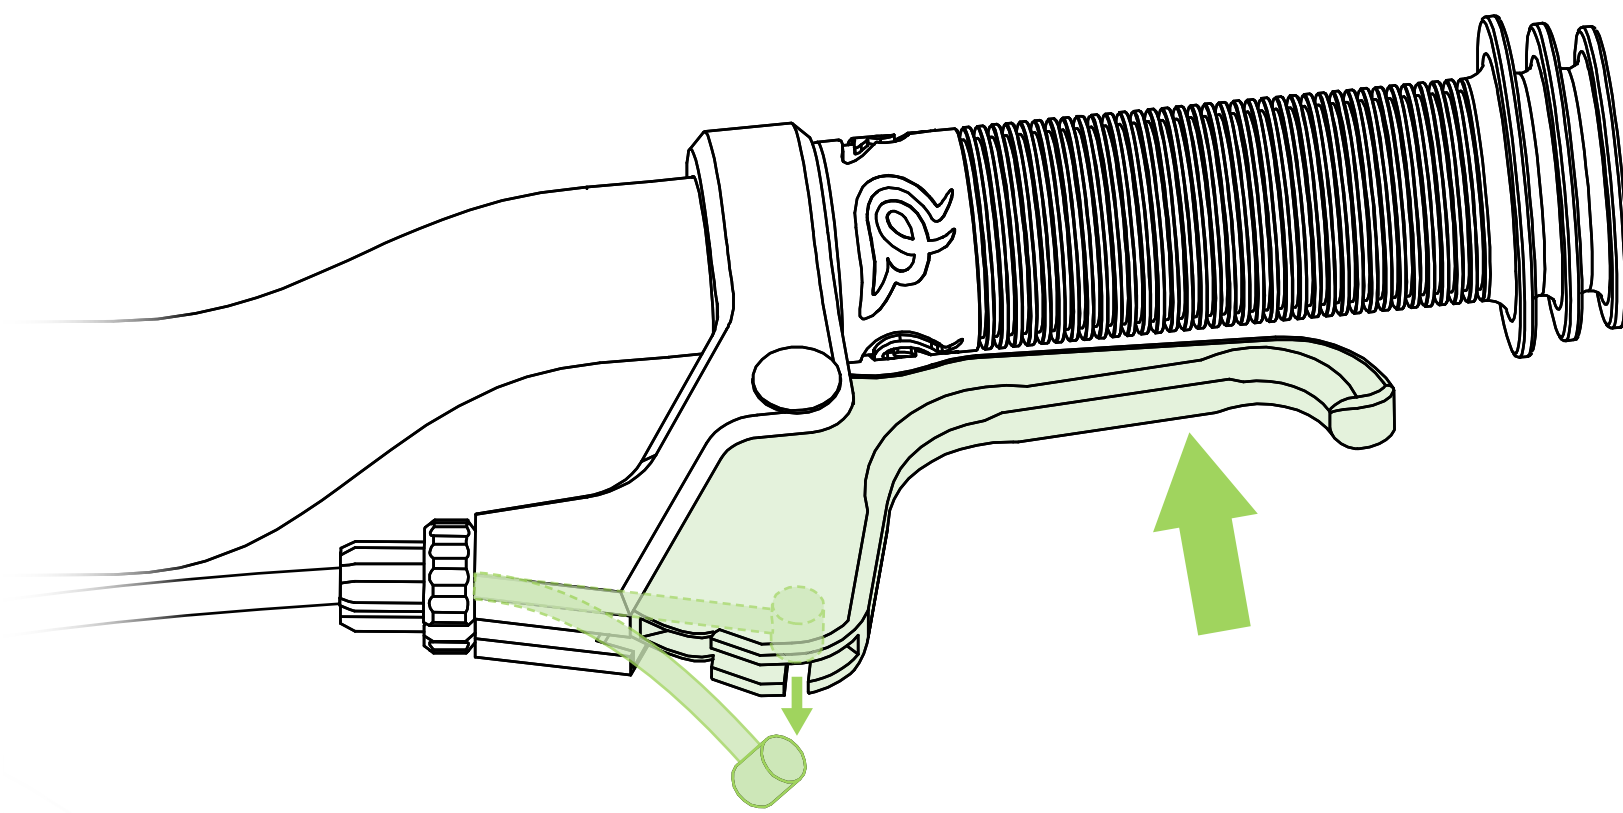

3 Squeeze the brake lever to expose the cable head. Remove the cable head from the slot in the lever and remove entire brake cable from the lever.

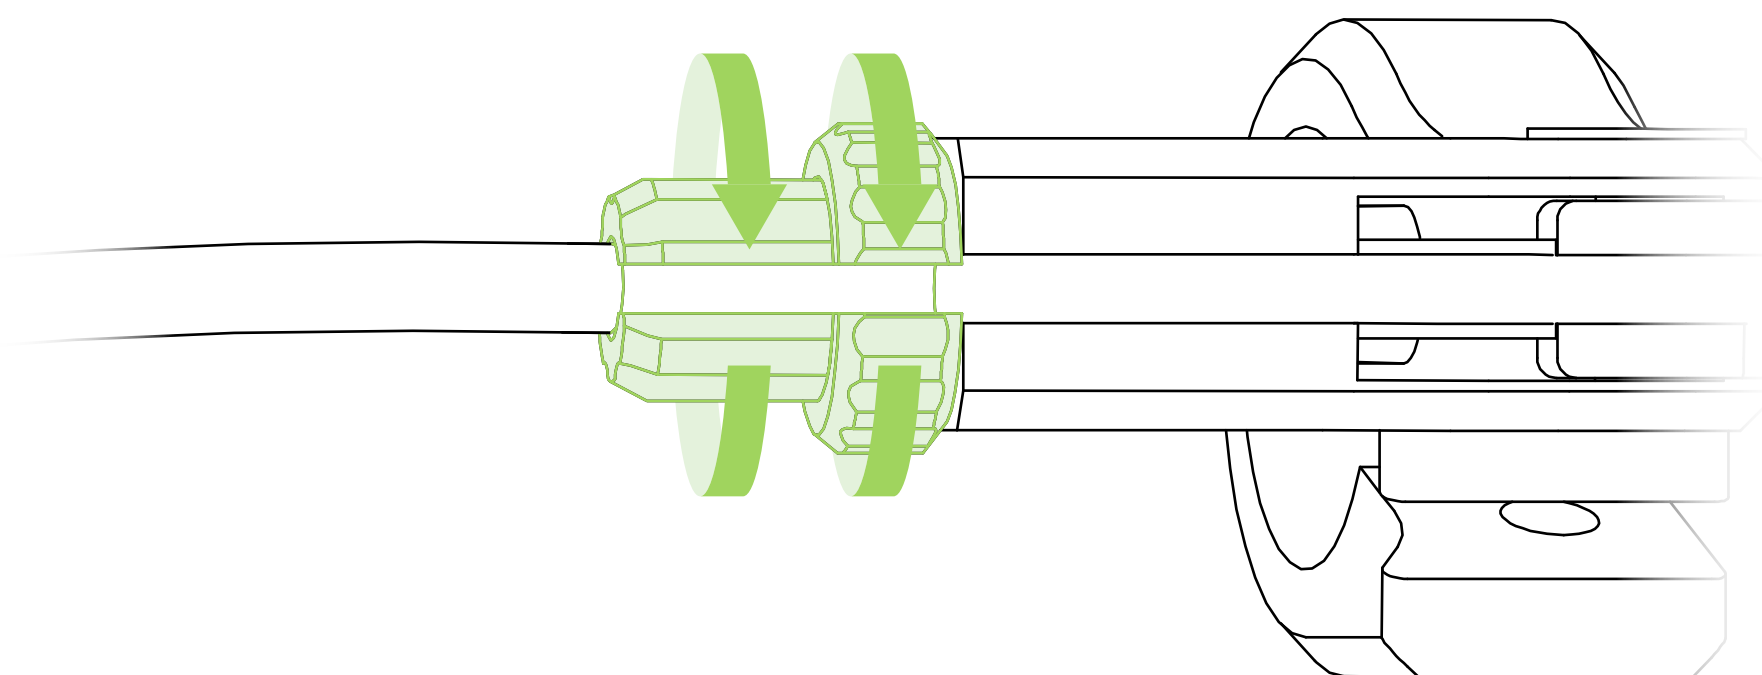

2 Ensure the barrel adjust is rotated so that the slot in the barrel adjust is aligned with the slot in the lever.

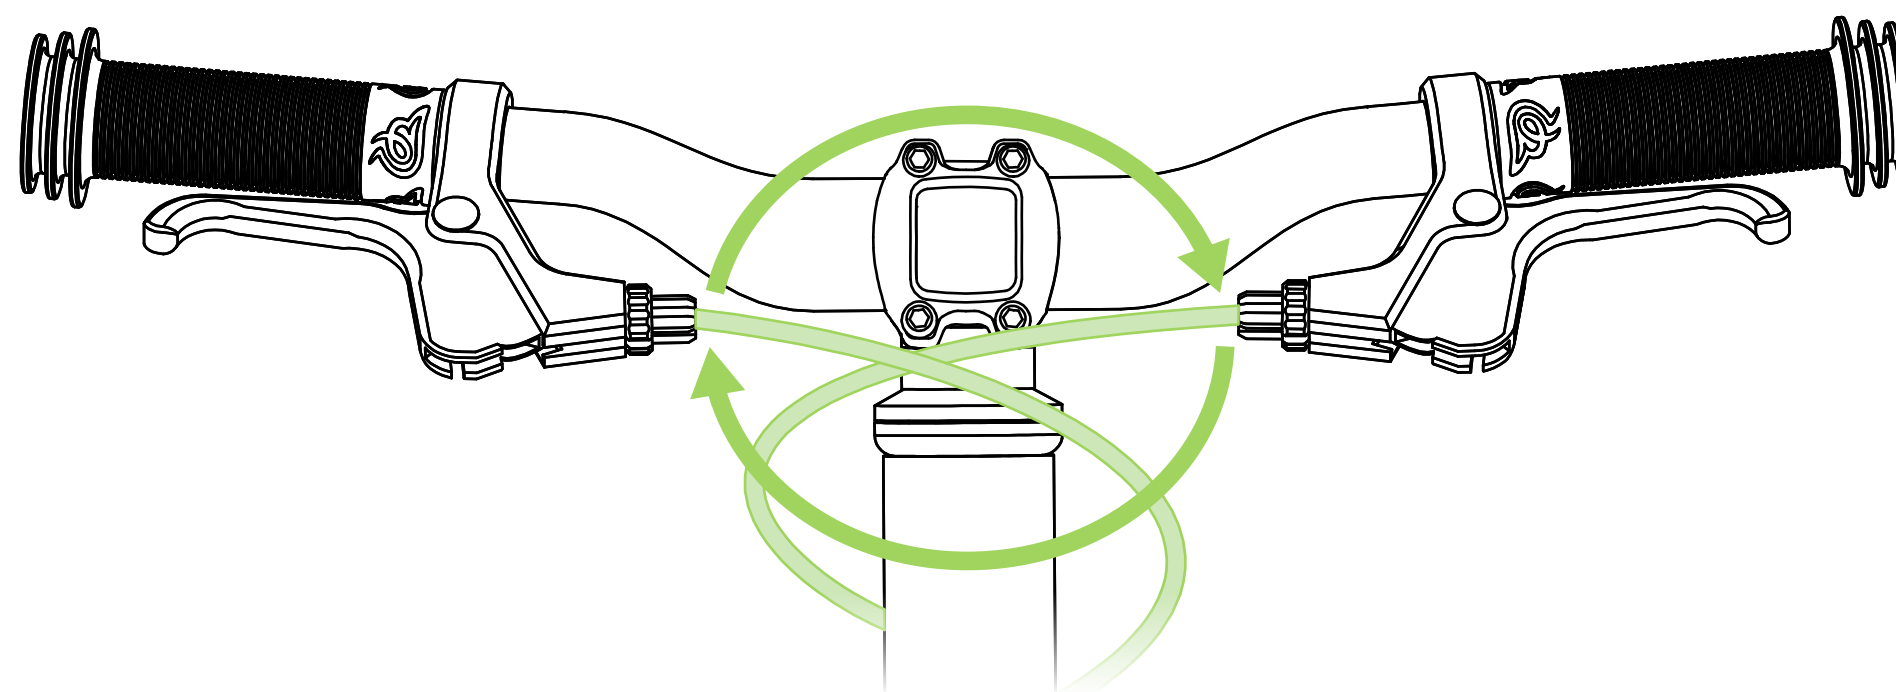

4 Repeat step 3 on the other brake lever. Once removed, swap the brake cables around to change which lever controls which brake.

IMPORTANT NOTICE

Make sure to read all instruction manuals included with the product.

Do not disassemble or modify the product other than as stated in the information contained in this manual. This manual is currently a draft document. It is not to be publically shared until it has been reviewed and added to an Early rider user manual.

If any part of the information on the manual is unclear to you, do not proceed with the installation. Instead, contact your place of purchase or a local bicycle dealer for their assistance. Users who do not consider themselves as a competent bicycle mechanic may want to visit an Early rider dealer for support during bicycle assembly. Early Rider is not responsible for any costs this may incur.

SAFETY WARNING

Be sure to follow the instructions provided in the manuals when installing the product.

It is recommended to use genuine Early Rider parts only.

If parts such as bolts and nuts become loose or damaged, the bicycle may suddenly fall over, which may cause serious injury.

In addition, if adjustments are not carried out correctly, problems may occur, and the bicycle may suddenly fall over, which may cause serious injury.


Be sure to wear safety glasses or goggles to protect your eyes while performing maintenance tasks such as replacing parts.

After reading the manual thoroughly, keep it in a safe place for later reference.


Make sure only to use the correct tools specified in this user manual.




SWAPPING BRAKE CABLES

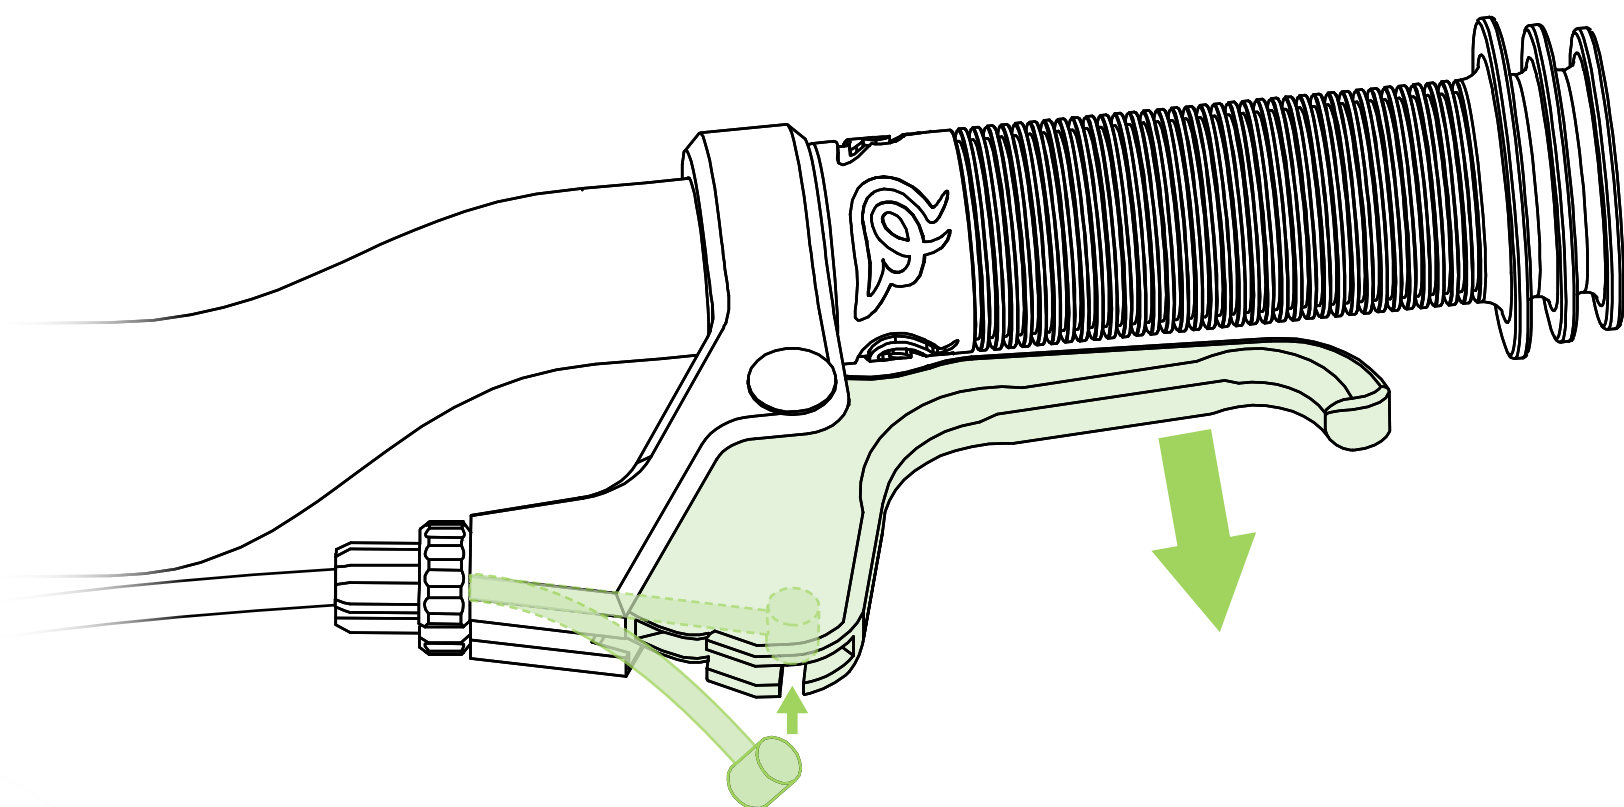


5 Re install the cable end into the slot in the brake lever and let the brake spring back to position.

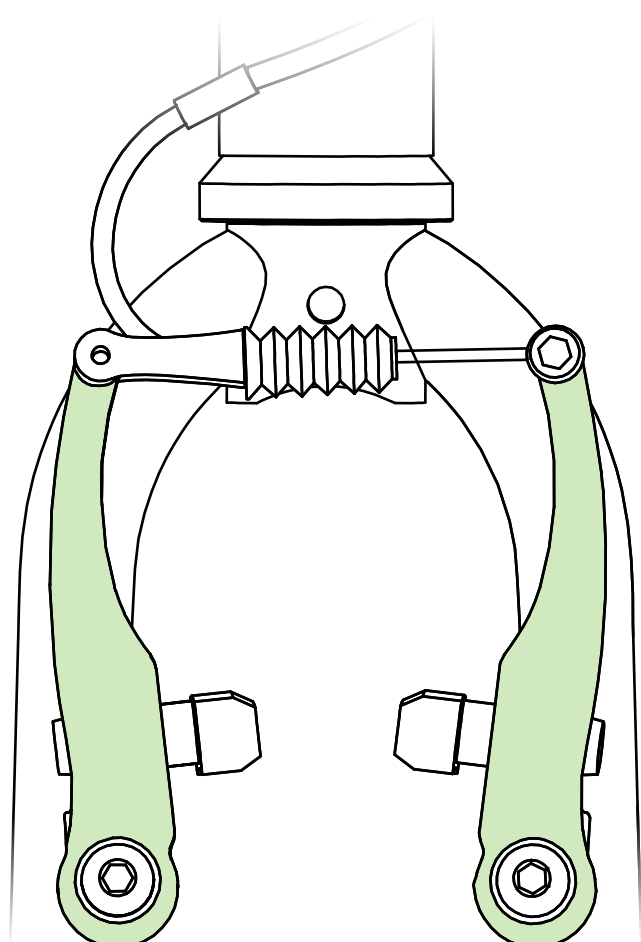

7 Follow the “connecting your v-brake” instructions to reconnect your brake.

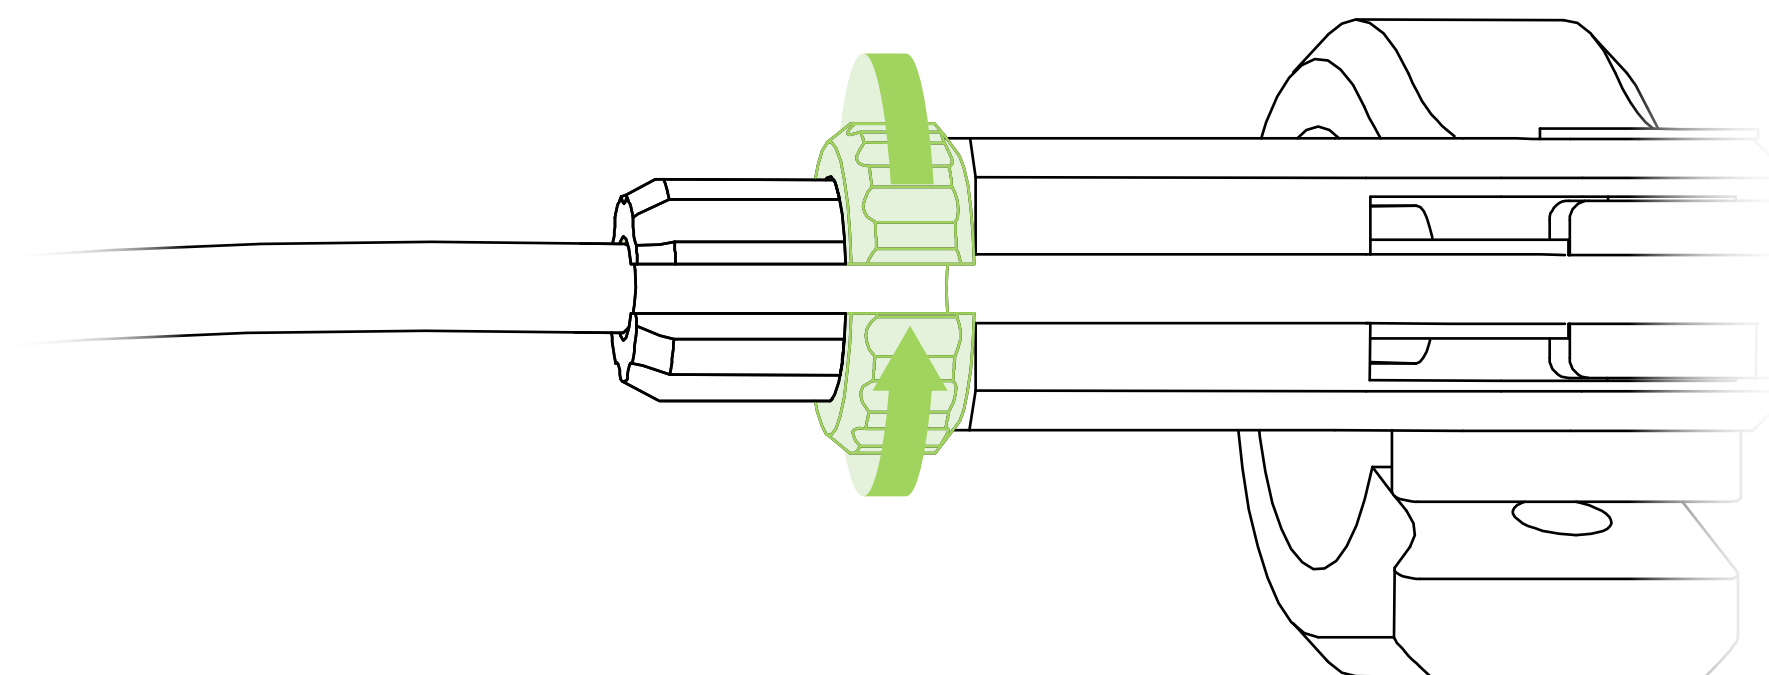

6 Rotate the locknut to ensure the security of the cable.

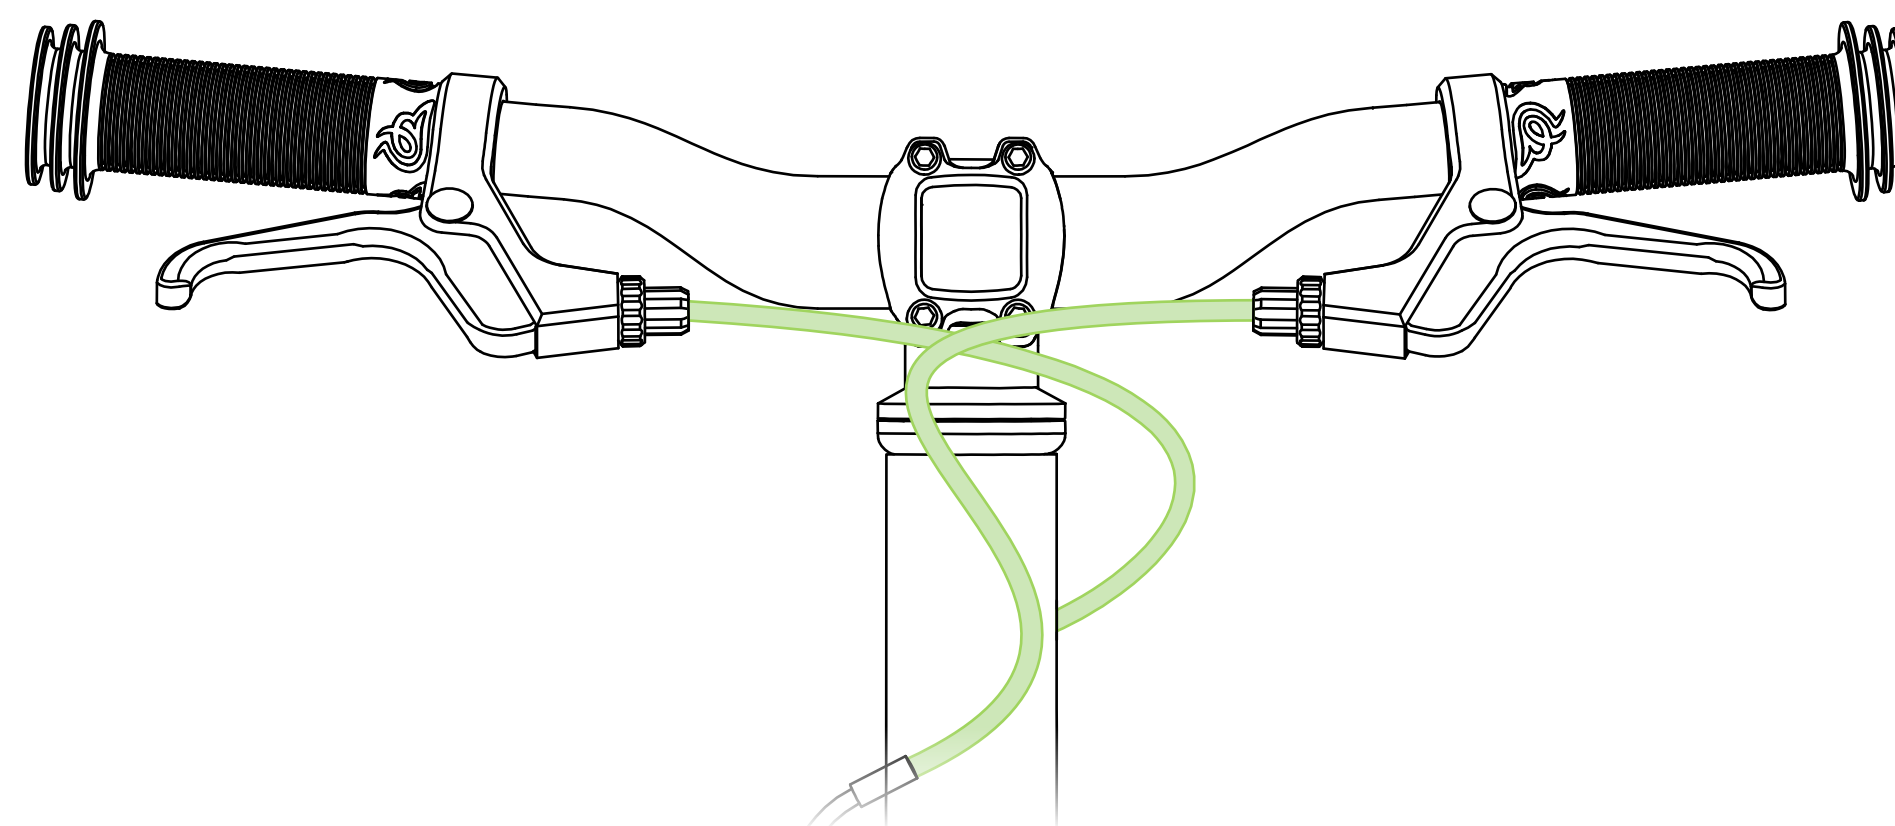

8 Make sure all cables are seated and that the brake functions correctly before allowing the bike to be ridden.