

CONTENTS	PAGES
Assembly instructions	2-8
Instructions d'Assemblage	9-15
Istruzioni di montaggio	16-22
Montageanleitung	23-29
Instrucciones de Asamblea	31-36
Instruções de Montagem	37-43
Montage-instructies	44-50

WWW.EARLYRIDER.COM



DEAR CUSTOMER,


CONGRATULATIONS ON YOUR PURCHASE OF AN EARLY RIDER. WE ARE CONFIDENT YOU WILL FIND YOUR EARLY RIDER TO BE THE HIGHEST LEVEL OF DESIGN, QUALITY AND WORKMANSHIP.

YOUR EARLY RIDER HAS BEEN PART ASSENBLED FOR YOUR CONVENIENCE, YOUR BIKE DOES REQUIRE THE ATTACHMENT OF HANDLEBARS, FORKS AND THE FRONT WHEEL FOR FINAL ASSEMBLY.


THESE INSTRUCTIONS ARE INTENDED TO GUIDE AN ADULT THROUGH THE FINAL ASSEMBLY AS WELL AS THE ADJUSTMENT OF THE BIKE TO ACCOMMODATE YOUR CHILD'S DEVELOPMENT. THESE INSTRUCTIONS INCLUDE INFORMATION PERTAINING TO THOSE COMPONENTS THAT ARE UNINSTALLED OR ARE INTENDED TO BE ADJUSTABLE.

FOR MORE INFORMATION PLEASE CONTACT EARLY RIDER LTD CUNSTOMER SERVICES <u>SUPPORT@EARLYRIDER.COM</u>

BOX CONTENTS

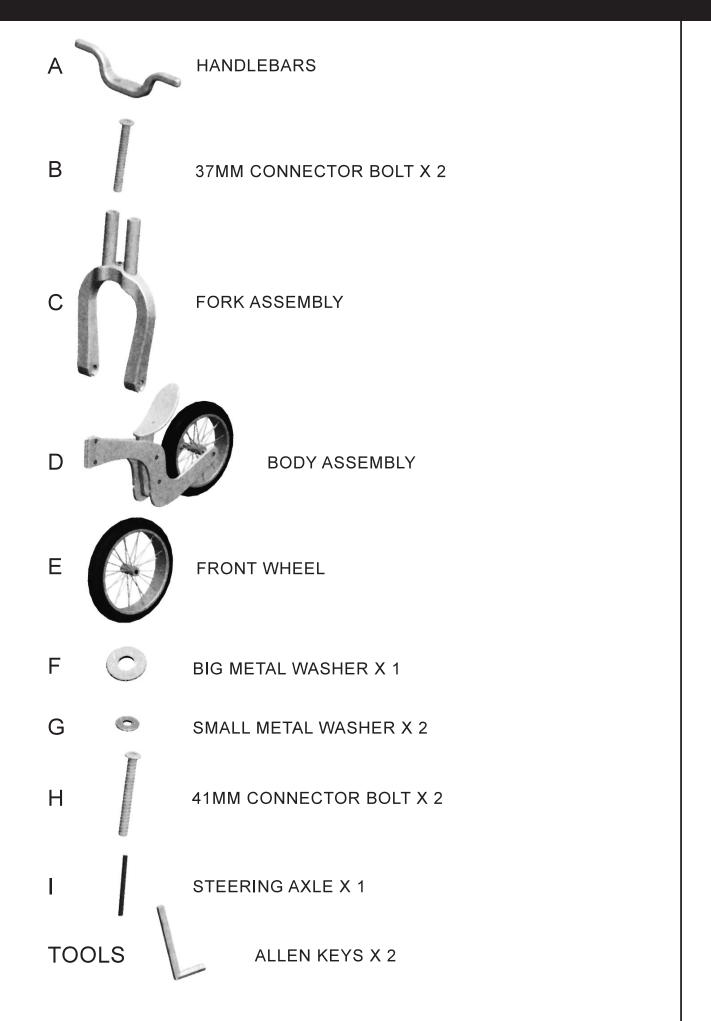


ASSEMBLY

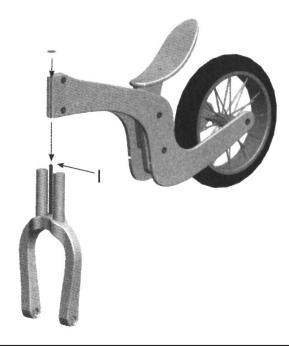


STEP 1 : PLACE STEERING AXLE(1) INTO FRONT HOLE ON WOODEN FORK TO COMPLETE FORK ASSEMBLY UNIT (C)

STEP 2: SLIDE BODY ASSEMBLY (D) ONTO STEERING AXLE(I) ON FPRK ASSEMBLY (C)

• NOTE: THE FORK ASSEMBLY 9C) SHOULD BE FLAT SIDE FACING FORWARD AS SHOWN

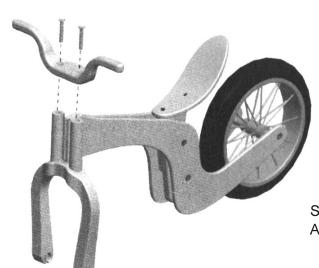

STEP 3: SECURE HANDLEBARS(A) TO FORK ASSEMBLY (C) USING THE 41MM BOLTS (H)

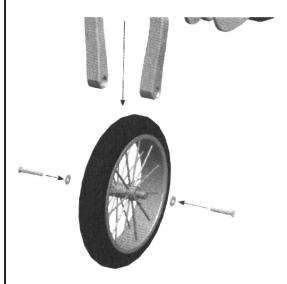


STEP 4: AFFIX FRONT WHEEL (E) BY FIRST LOOSELY INSERTING 37MM CONNECTOR BOLTS (B) INTO THE 2 SMALL WASHER (G) THEN INTO EACH SIDE OF THE WHEEL'S HUB

• NOTE: THE 37MM BOLTS SHOULD ONLY TRAVEL 2-3MM INSIDE THE HUB AT THIS TIME

STEP 5: SLIDE FORK ASSENBLY (C) ONTO THE 37MM CONNECTOR BOLTS (B) SITTING ON EACH SIDE OF THE WHEEL (E). ONCE FORK ASSEMBLY IS IN PLACE, TIGHTEN THE 37MM CONNECTOR BOLTS (B) SIMULTANEOUSLY USING BOTH ALLEN KEYS


ADJUSTING SEAT HEIGHT

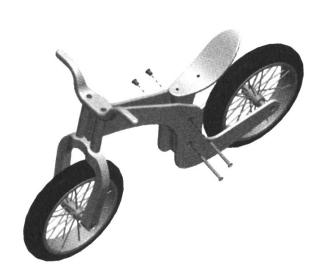

STEP 1: REMOVE THE 2 CONNECTOR BOLTS & CORRESPONDING SLEEVE NUTS FROM THE MAIN BODY AS SHOWN.




STEP 2: LIFT SEAT POST & REPOSITION AT DESIRED HEIGHT

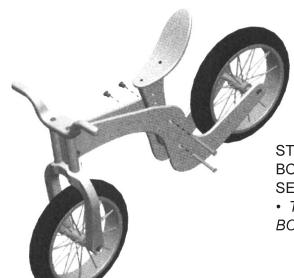

STEP 3: ALIGN HOLES IN SEAT POST WITH HOLES IN BODY PANELS. RE-INSERT CONNECTOR BOLTS & SECURE WITH SLEEVE NUTS AS SHOWN.


• TIP: DO NOT FULLY TIGHTEN THE BOLTS UNTIL BOTH BOLTS ARE LOCATED.

REMOVING STEERING RESTRICTIONS

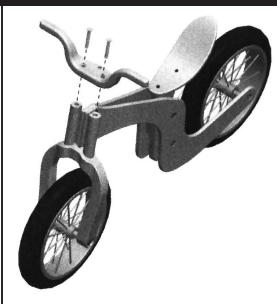

YOUR EARLY RIDER HAS TWO STEERING SETTINGS: RESTRICTED & UNRESTRICTED. THE UNRESTRICTED SETTING IS RECOMMENDED FOR EXPERIENCED EARLY RIDERS

STEP 1: REMOVE THE 41MM BOLTS (H), & REMOVE THE HANDLEBARS(A)

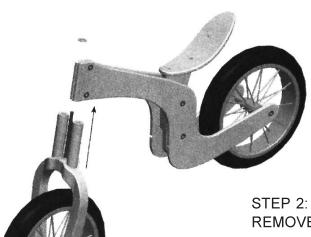



STEP 2: SLIDE BODY ASSEMBLY (D) UPWARDS TO REMOVE FROM AXLE (I)



STEP 3: UNSCREW AXLE (I) FROM FORK ASSEMBLY (C). REPOSITION AXLE (I) IN THE REARWARDS POSITION FORK HOLE, AS SHOWN, & TIGHTEN.

REMOVING STEERING RESTRICTIONS

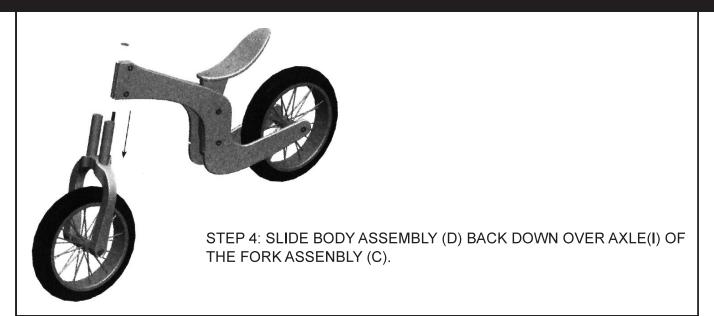

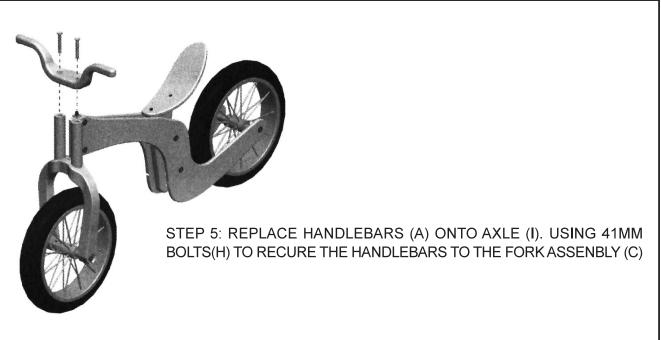

- ! ADULT ASSEMBLY ONLY
- ! REMOVE ALL PACKAGING BEFORE GIVING TO YOUR CHILD
- ! ALWAYS WEAR SUITABLE HELMET & APPROPRIATE CLOTHING WHEN RIDING YOUR EARLY RIDER
- ! CHILDREN SHOULD BE UNDER SUPERVISION AT ALL TIMES
- ! DO NOT USE NEAR SWIMMING POOL, BODIES OF WATER, NEAR STEPS, ON STEEP HILLS, ON STAIRWAYS & ON THE OPEN ROAD
- ! CHECK YOUR EARLY RIDER REGULARLY TO ENSURE ALL PARTS ARE SECURE & NO DAMAGE HAS BEEN SUSTAINED, IF BROKEN IN ANY WAY DISCONTINUE USE
- FAILURE TO DO SO MAY RESULT IN INJURY
- ! PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

MAINTENANCE & CARE INSTRUCTIONS

- YOUR EARLY RIDER IS FITTED WITH PILL BOTTLE SAFETY VALVE CAPS. TO REMOVE, PRESS DOWN & TURN IN ANTI-CLOCKWISE DIRECTION
- NEVER LEAVE YOUR EARLY RIDER OUTSIDE FOR PROLONGED PERIODS OF TIME
- AFTER RIDING, WIPE AWAY ANY WATER OR MUD WITH CLEAN CLOTH
- STORE YOUR EARLY RIDER IN A DRY PLACE WHEN NOT IN USE
- PERIODICALLY CHECK WHEELS & TYRES FOR DAMAGE
- MAKE SURE TYRES ARE KEPT AT THE CORRECT PRESSURE (PLEASE SEE TYRES FOR DETAILS)
- REGULARLY CHECK & TIGHTEN ALL BOLTS
- APPLYING A PERIODIC COAT OF BEESWAY WILL FURTHER PROTECT AND PROLONG THE LIFE YOUR EARLY RIDER
- THIS TOY IS DESIGNED FOR YOUNG CHILDREN AND WILL NOT WITHSTAND USE BY TEENAGERS OR ADULTS

EARLY RIDER LTD



EARLY RIDER LITE 18+ MONTHS



EARLY RIDER CLASSIC 24+ MONTHS



EARLY RIDER EVO 3+ YEARS

ASTM, CPSIA & EN71 Pts 1,2 & 3 ACCREDITED

FOR MORE INFORMATION PLEASE CONTACT EARLY RIDER LTD CUSTOMER SERVICES SUPPORT@EARLYRIDER.COM

POUR PLUS D'INFORMATIONS, VEUILLEZ CONTACTER LE SERVICE APRES-VENTE DE EARLY RIDER LTD <u>SUPPORT@EARLYRIDER.COM</u>

PER MAGGIORI INFORMAZIONI CONTATTARE IL SERVIZIO CLIENTI EARLY RIDER LTD <u>SUPPORT@EARLYRIDER.COM</u>

FÜR WEITERGEHENDE INFORMATIONEN WENDEN SIE SICH BITTE AN DEN KUNDENDIENST VON EARLY RIDER LTD UNTER <u>SUPPORT@EARLYRIDER.COM</u>

PARA MAS INFORMACIÓN CONTACTE AL SERVICIO DE ATENCIÓN AL CLIENTE DE EARLY RIDER LTD <u>SUPPORT@EARLYRIDER.COM</u>

PARA OBTER MAIS INFORMAÇÕES CONTACTE, POR FAVOR, O SERVIÇO A CLIENTES DA EARLY RIDER LTD <u>SUPPORT@EARLYRIDER.COM</u>

NEEM VOOR MEER INFORMATIE CONTACT OP MET DE EARLY RIDER LTD. KLANTENSERVICE <u>SUPPORT@EARLYRIDER.COM</u>



EARLY RIDER™ LTD.

INFO@EARLYRIDER.COM

WWW.EARLYRIDER.COM